


# Dodge Durango/Jeep Grand Cherokee Mid Muffler Delete Instructions

Professional installation recommended!

Tools needed:

Jack  
Jack stands  
13mm wrench  
15mm wrench  
Permanent marker  
Tape measure  
Preferred cutting tool

1. Raise vehicle and place jack stands under a safe location and lower onto stands
2. Use tape measure to measure 1" forward of flange on driver side and make mark for cutting location (see Yellow arrow for flange reference)

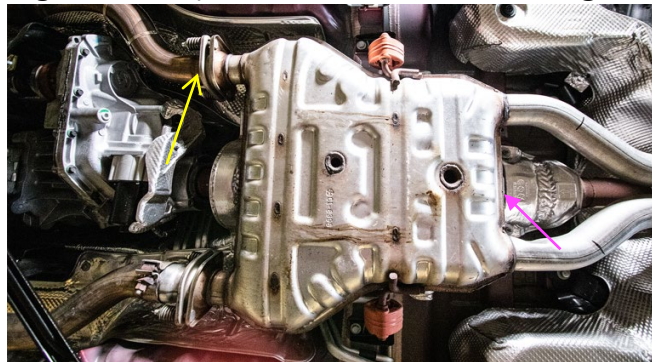

3. Remove the 2 nuts holding the springs against the flange on the driver side and cut on the previously made mark
4. Measure 10 inches rear of the muffler and mark with marker and cut on marks (see pink arrow for measuring point)
5. Remove clamp forward of the muffler on the passenger side
6. Carefully remove 2 13mm bolts holding hangers from the vehicle
7. Remove the individual hangers from the muffler and place them onto the new parts
8. Slide clamps onto delete parts
9. Slip delete parts onto the stock exhaust
10. Replace bolts to hold the hangers to the vehicle
11. Tighten the clamps
12. Lower vehicle and enjoy the new and improved sound