




Tools Needed:

- Safety Glasses
- Work Gloves
- Sawzall or cut off wheel
- 9/16" Wrench

Instructions

2007-2017 Chevy Silverado 1500 Muffler and Flapper Valve Delete

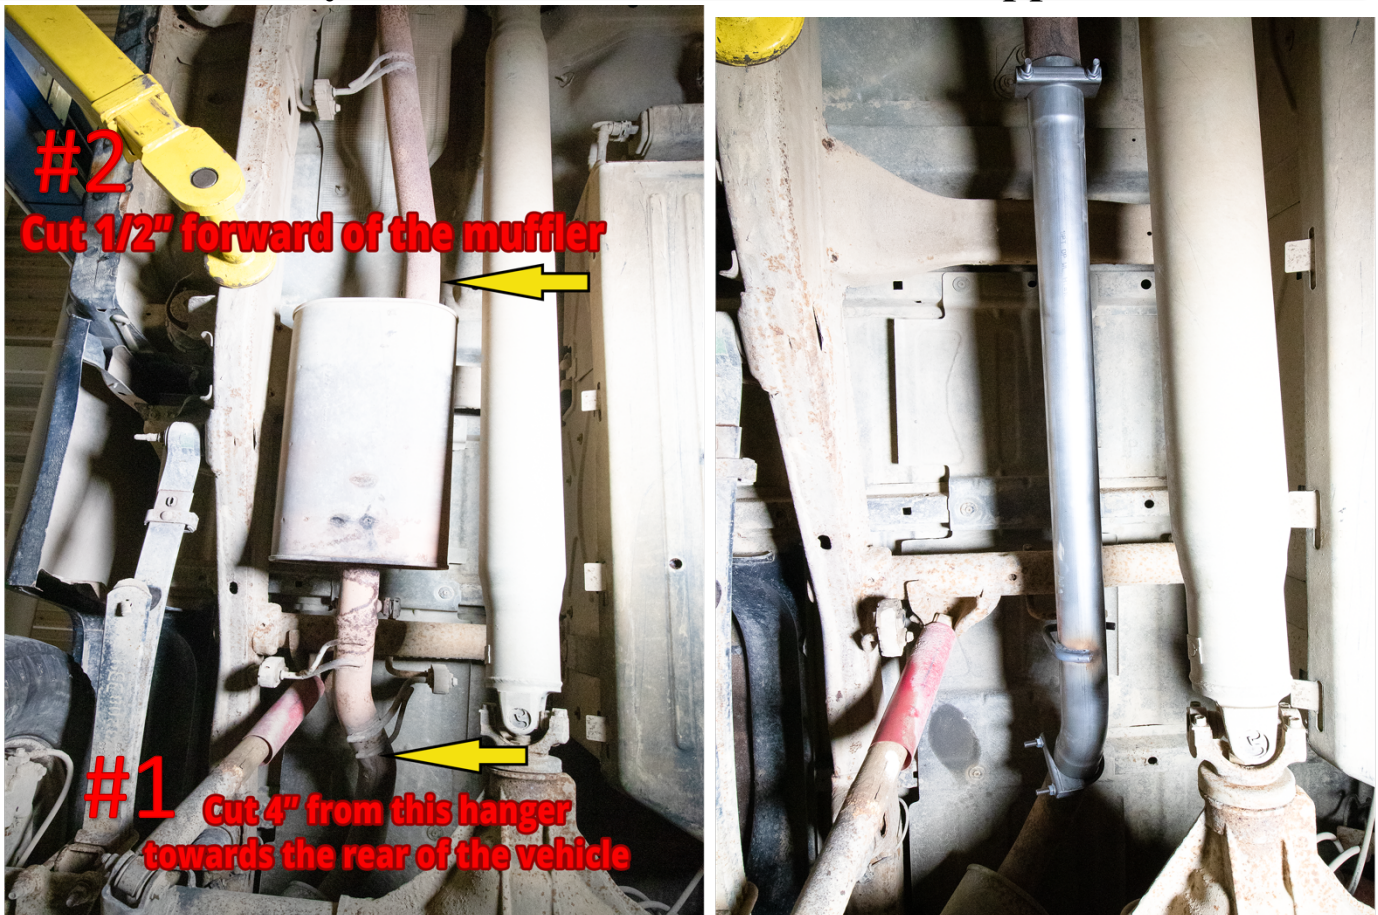

1. Cut 4" from this hanger towards the rear of the vehicle.
2. Cut 1/2" forward of the muffler.
3. Slip Clamps over the ends of pipe provided.
4. Slip Expanded ends over preexisting exhaust
5. Insert hanger.
6. Tighten clamps.
7. Check for leaks.