


84-88-90MM HEMI SPACER



Tools Needed:

- SAFETY GLASSES
- WORK GLOVES
- FLATHEAD SCREWDRIIVER
- 5/16 WRENCH
- 5MM ALLEN WRENCH

Instructions

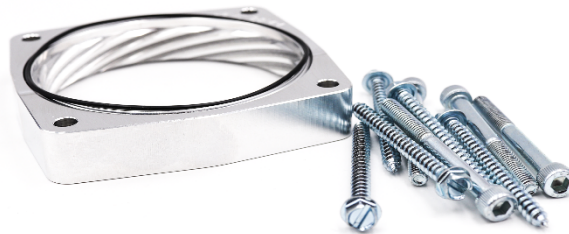

- OPEN HOOD AND REMOVE ENGINE COVER CAREFULLY
- LOOSEN HOSE CLAMPS ON INTAKE TUBE AND UNPLUG THE MASS AIR FLOWE SENSOR
- REMOVE INTAKE TUBE
- UNPLUG THROTTLEBODY AND TAKE A 5/16 WRENCH TO REMOVE THE 4 BOLS HOLDIN THROTTLE BODY TO INTAKE
- INSTALL PROVIDED O-RING INTO RECEIVER GROOVE IN SPACER (USE A LITTLE GREASE ON O-RING TO HELP KEEP IN PLACE IF NEEDED)
- USE PROVIDED HARDWARE (COURSE THREAD FOR PLASTIC INTAKE) (FINE THREAD FOR METAL) TO SANDWICH SPACER WITH O-RING TOWARDS THROTTLE BODY BETWEEN INTAKE AND THROTTLE BODY
- PLUG IN THROTTLE BODY AND REINSTALL INTAKE TUBE
- PLUG IN MASS AIR FLOW SENSOR
- TIGHTEN HOSE CLAMPS
- REPLACE ENGINE COVER CLOSE THE HOOD AND ENJOY

PROFESSIONAL INSTALLATION RECOMMENDED