

REAR STRUT TOWER BRACE

PROFESSIONAL INSTALLATION RECOMMENDED

KH-FTSHREAR-PLC

TOOLS REQUIRED

- 19MM WRENCH
- 15MM WRENCH
- TAPE
- RAZOR BLADE

WHAT'S INCLUDED

- STRUT BAR
 - CROSS BAR
 - CUTTING TEMPLATES
 - 1X LARGE NUT
 - 2X SMALLER WASHERS
 - 2X FLANGED NUTS
 - 1X LARGE THICK WASHER
 - 1X LARGE THIN WASHER
 - 2X BOLTS
 - VELCRO STRIPS
 - HOLE TRIM PIECE
1. OPEN TRUNK AND BOTH (REAR) DOORS
 2. PULL RELEASE HANDLE TO LOWER THE REAR SEAT-BACK AND DETACH THE SEAT-BACK COVER FROM THE SPARE TIRE COVER
 3. REMOVE THE SPARE TIRE COVER
 4. USE TAPE TO HOLD SUPPLIED TEMPLATES IN PLACE
 5. CUT OUT DESIGNATED AREAS OF CARPET AS WELL AS ANY INSULATION IN THE WAY OF THE STRUT STUDS

6. REMOVE NUT HOLDING SEAT DOWN



7. PLACE LARGE THICK WASHER OVER OTHER UNUSED STUD


8. SLIDE THE STRUT BAR OVER THE 2 SEAT STUDS AND THEN THE 2 STRUT STUDS

9. ADD ONE SMALL WASHER AND ONE FLANGED NUT PER STRUT STUD



10. ADD ONE LARGE THIN WASHER ON THE DRIVER SIDE SEAT STUD AND THEN THE LARGE NUT

11. REPLACE PASSENGER SIDE SEAT NUT

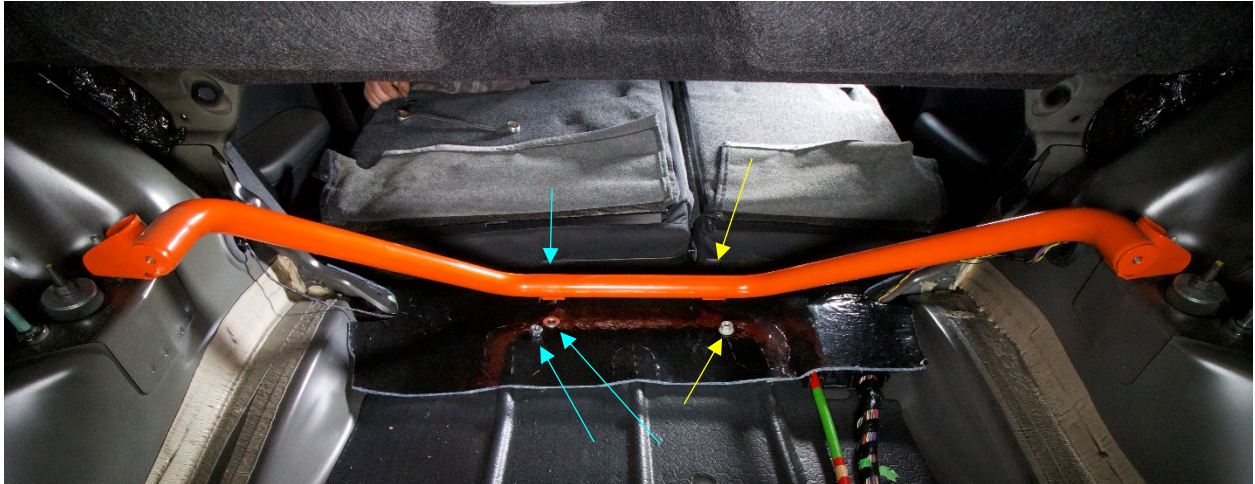

12. ADD CROSS BAR AND INSERT ONE BOLT ON EACH SIDE TO HOLD TO MAIN STRUT BAR



13. TIGHTEN ALL HARDWARE

14. PUT THE SPARE TIRE COVER ON A FLAT SURFACE

15. USE SUPPLIED TEMPLATE TO CUT FOR CLEARANCE FOR THE SEAT SIDE OF THE STRUT BAR

16. ADD VELCRO TO THE HOLE TRIM PIECES

17. BEND TRIM PIECES TO FIT AROUND THE STRUT BAR AND ALIGN TO HOLE AND STICK THE VELCO TO THE CARPET

18. REINSTALL SPARE TIRE COVER

19. ENJOY