


AARON

BIKE PARTS AND MORE

OPERATIONS MANUAL FOR SPORT ONE PUMP

1 Suitable for the following valves



Presta
(Sclaverand / French valve)



Dunlop
(Woods valve)



Schrader
(Auto / Car valve)

2 Functionality




PRESTA AND DUNLOP VALVE:
Place the pump head with the grey side marked „P“ on top of the valve. Twist the lever toward „P“.
Note: Unscrew the small knurled nut on the Presta valve before placing it on the pump head.

SCHRADER VALVE:
Place the pump head with the black side marked „S“ on top of the valve. Twist the lever toward „S“.
Note: Insert the valve very far into the pump head to open the fan pin.

3 Included equipment



Sandpaper

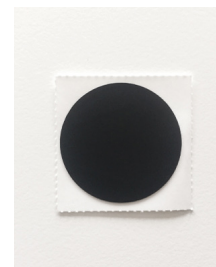

Tire patches



Ball needle



Adapter

4 Usage of tire patches

- A First pump the defective tube with your floor pump and tighten the valve so that the air cannot escape.
- B Then put the tube bit by bit into a bucket of water. You can see air bubble rising at the place where the hole is located.
- C Now you have to roughen the tube with sandpaper around the hole.
- D Remove the protection film of the patches and press the patch for at least 20 sec on the dry, clean and dust-free hole.

5 Reviews



Any problems mounting the pedals? If so please feel free to [contact](#) our support. Please don't forget to give us your [feedback / review](#).

Urban pedals, *City / Trekking bike*



City pedals, *City / Trekking bike*



Rock pedals, *Mountain bike*



Sport One floor pump



Newsletter



- Voucher campaigns
- Information about new AARON products
- Further AARON News

You can subscribe to our newsletter [here](#).

MM Commerce GmbH
Schlossermauer 30
86150 Augsburg
Germany

www.aaron-parts.com
hello@aaron-parts.com