

***AARON***

***BIKE PARTS AND MORE***

***MOUNTING INSTRUCTIONS FOR URBAN PEDALS***

## 1 Required tools



8 mm Allen key

## 2 Marking



Before mounting the pedals, you have to pay attention to the marking of the pedals. There is a right (R) and a left (L) pedal.


For an easy installation we recommend to use a little bit of mounting grease.

## 3 Left pedal




The pedal marked with the L belongs to the left side and is tightened counter clockwise at the pedal axis (torque 35 NM / 310 lbf. in).

## 4 Right pedal

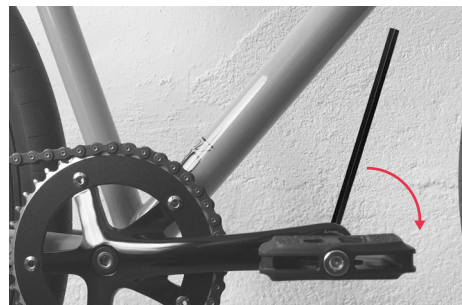

The pedal marked with the R belongs to the right side and is tightened clockwise at the pedal axis (torque 35 NM / 310 lbf.in).

## 5 After 30 miles

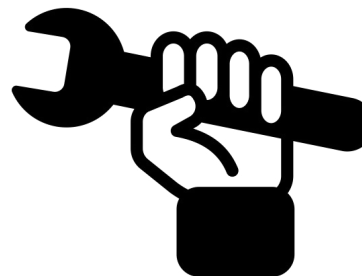

Our recommendation is to check the pedals after 30 miles and tighten them if necessary.

## 6 Review



Any problems mounting the pedals? If so please feel free to [contact](#) our support. Please don't forget to give us your [feedback / review](#).

Urban pedals, *City / Trekking bike*



City pedals, *City / Trekking bike*



Rock pedals, *Mountain bike*



Sport One floor pump



## Newsletter



- Voucher campaigns
- Information about new AARON products
- Further AARON News

You can subscribe to our newsletter [here](#).

MM Commerce GmbH  
Schlossermauer 30  
86150 Augsburg  
Germany

[www.aaron-parts.com](http://www.aaron-parts.com)  
[hello@aaron-parts.com](mailto:hello@aaron-parts.com)