




Steeda Pro-Flow Blow-Off Valve Adapter for Bronco and Ranger

Installation Instructions for Part #: 555-3230

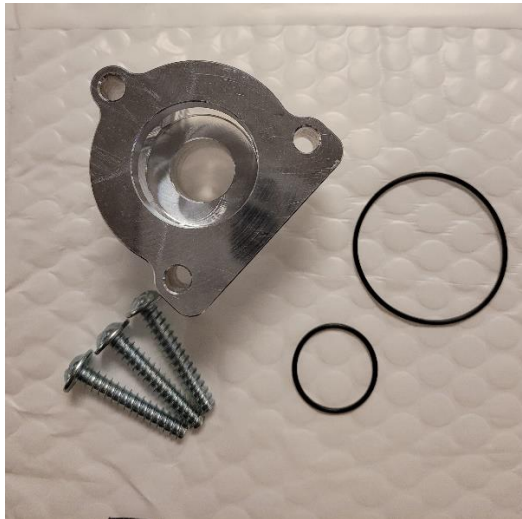

1. Locate the factory re-circulation/by-pass valve. (See below for more details on the location of this valve in your vehicle.)
2. Unplug the factory re-circulation/by-pass valve unbolt and remove it.
3. Place the Steeda Pro-Flow Blow-Off Valve Adapter in between the factory re-circulation/by-pass valve. It will only fit one way. Figure 1
4. Install the o-rings. (NOTE: The use of grease may be helpful to retain o-rings.)
5. Bolt in place using the bolts provided in the kit. Figure 2
6. Reconnect and enjoy!

