



**EVOTECH**®  
P E R F O R M A N C E



KTM 1290 Super Duke  
Crash Protection


Installation Instructions





## Kit Contents PRN011547


- (A) 1 x R/H Outer Bracket
- (B) 1 x R/H Inner Bracket
- (C) 1 x L/H Outer Bracket
- (D) 1 x L/H Inner Bracket
- (E) 2 x Bobbin Spacer
- (F) 2 x Large Bobbin Head
- (G) 2 x M10 x 70 Caphead
- (H) 2 x M12 x 150 Caphead
- (I) 2 x M12 Washer
- (J) 2 x Polyurathane Washer
- (K) 2 x Cable Tie
- (L) 4 x M10 x 35 Caphead

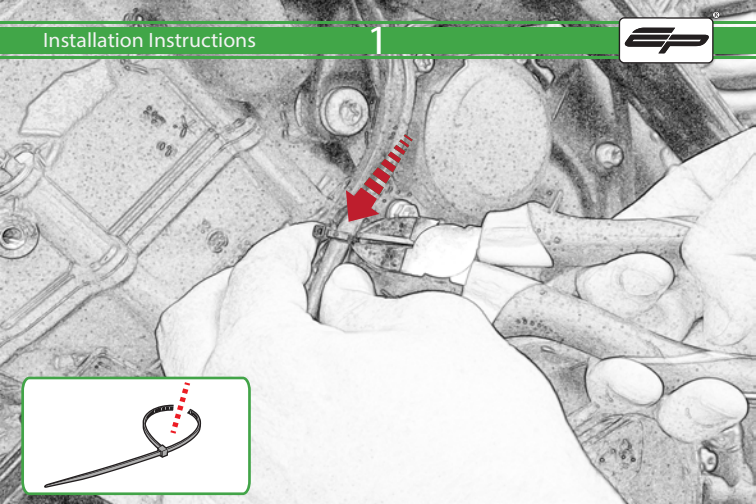


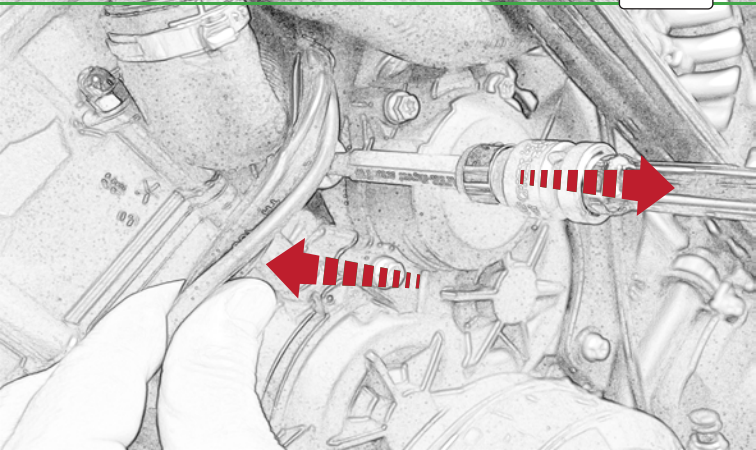

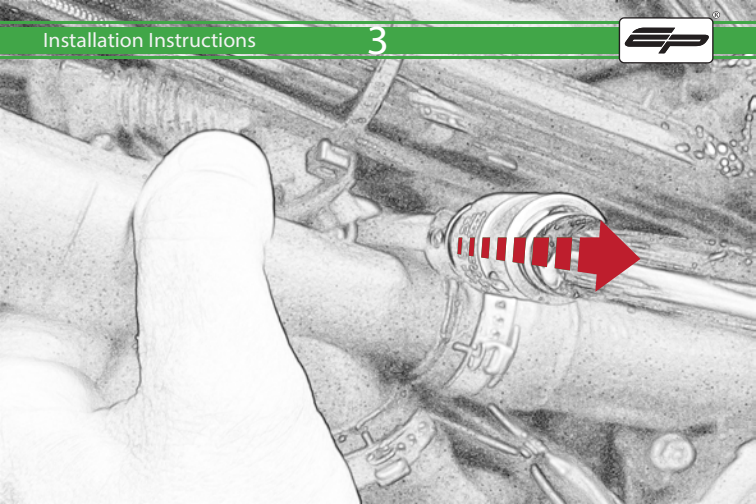


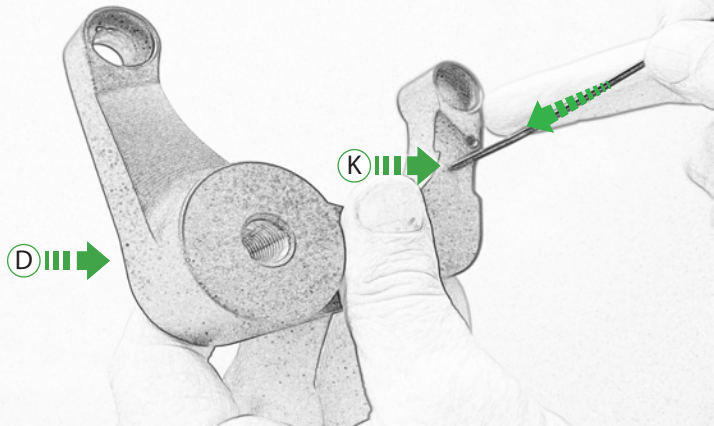


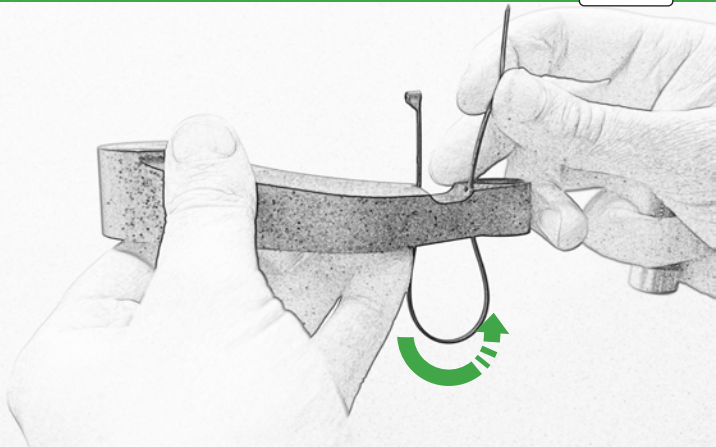

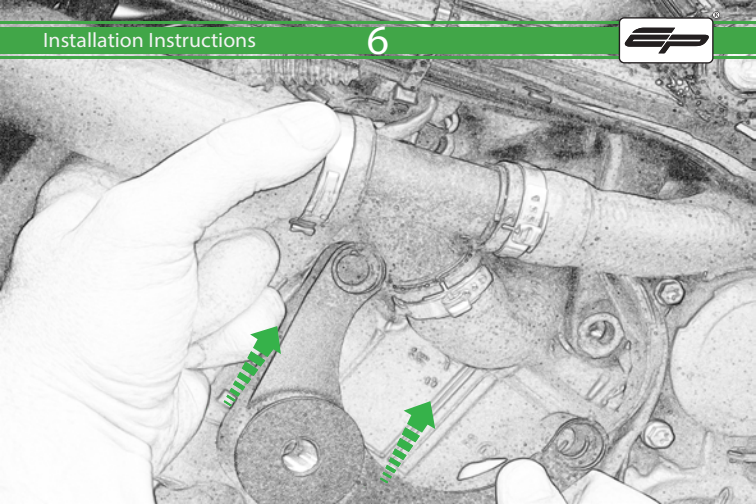






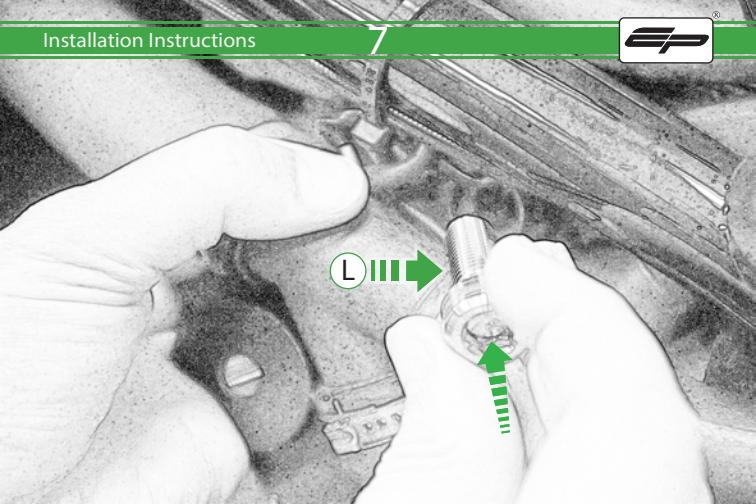



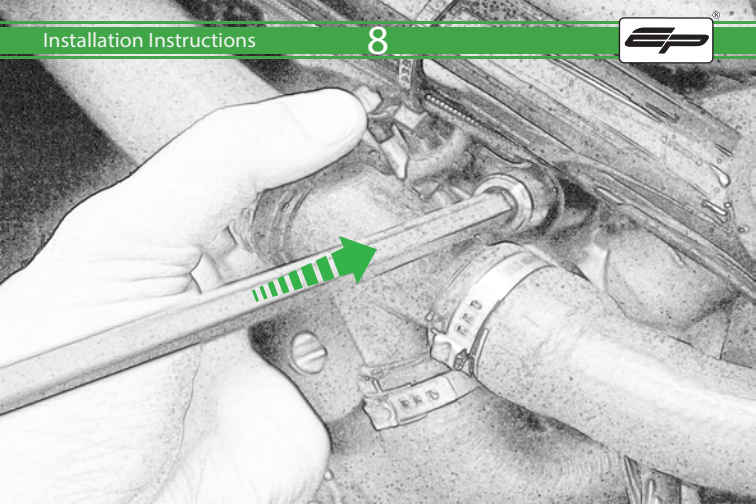






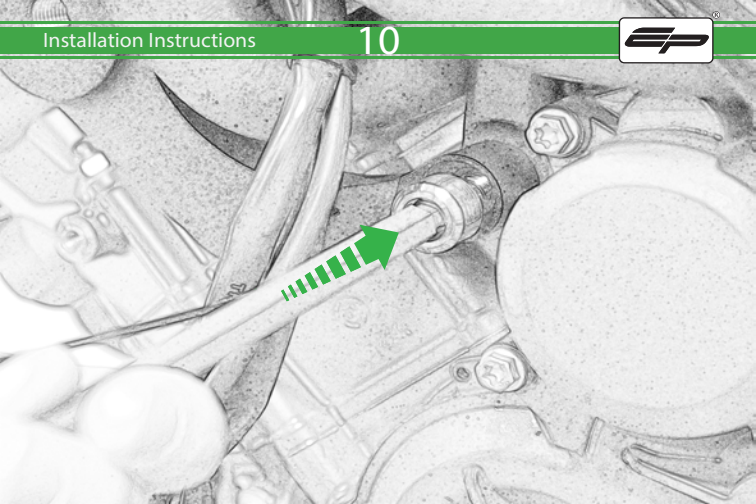

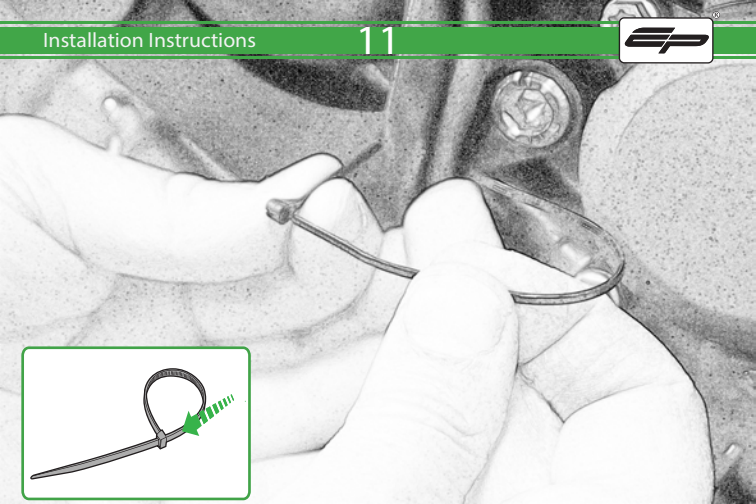


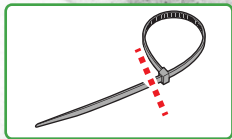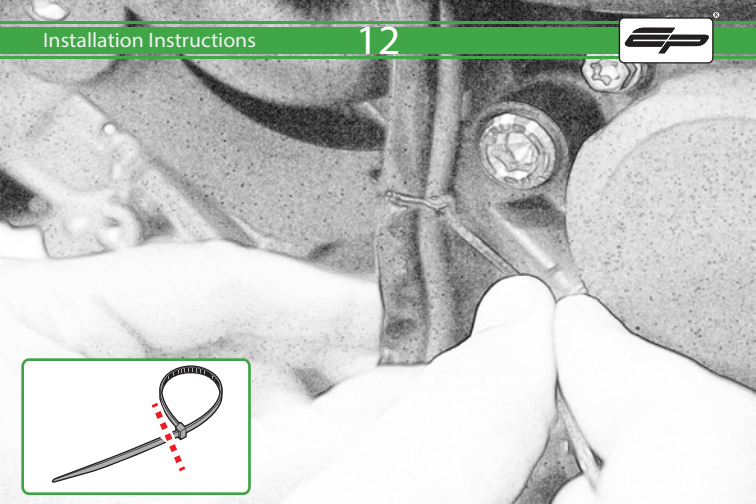


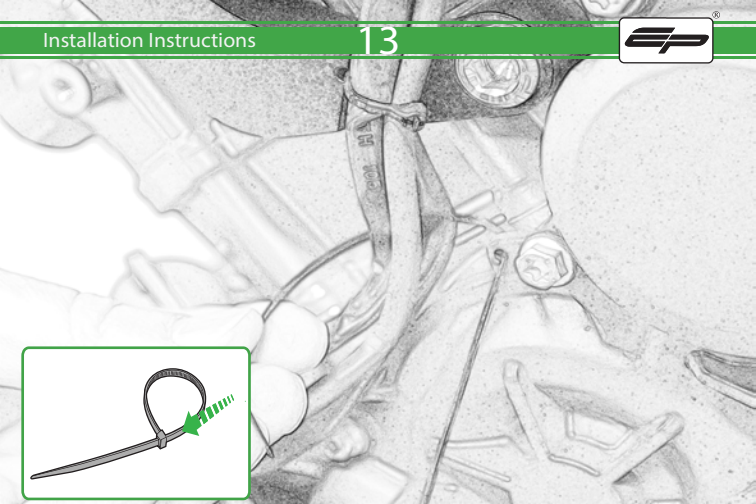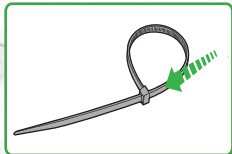


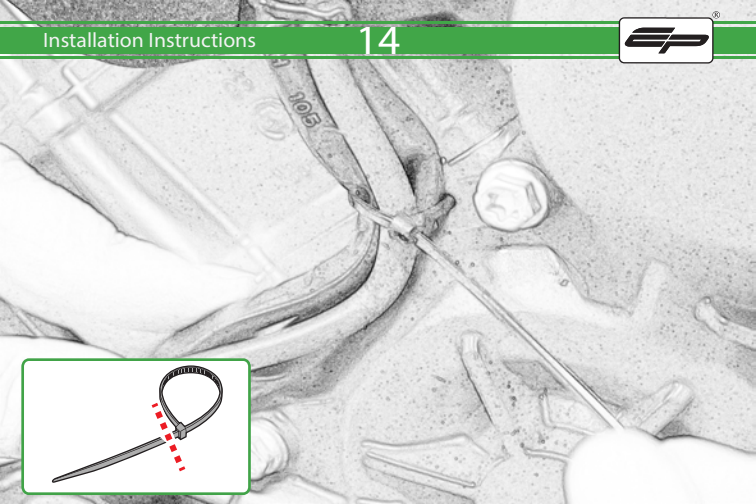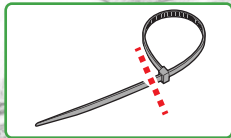




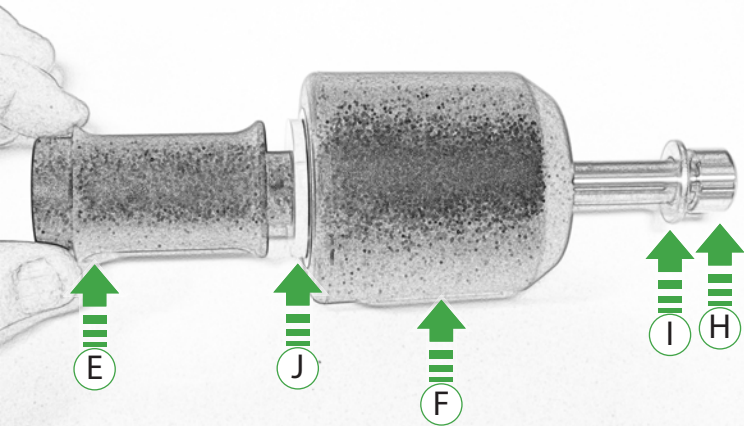


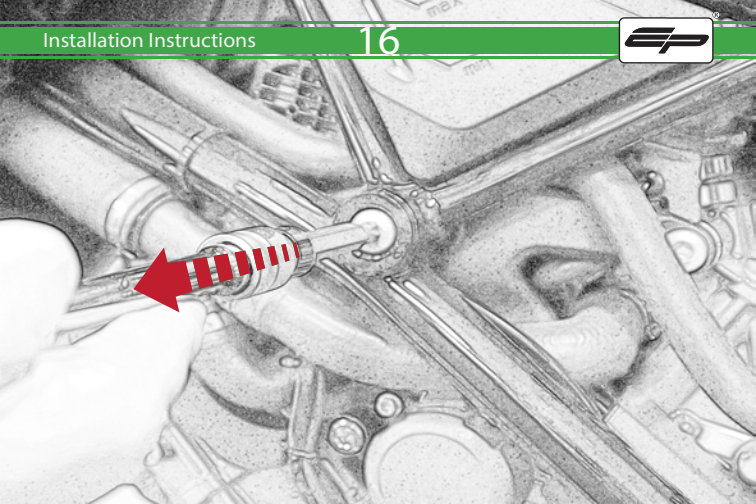


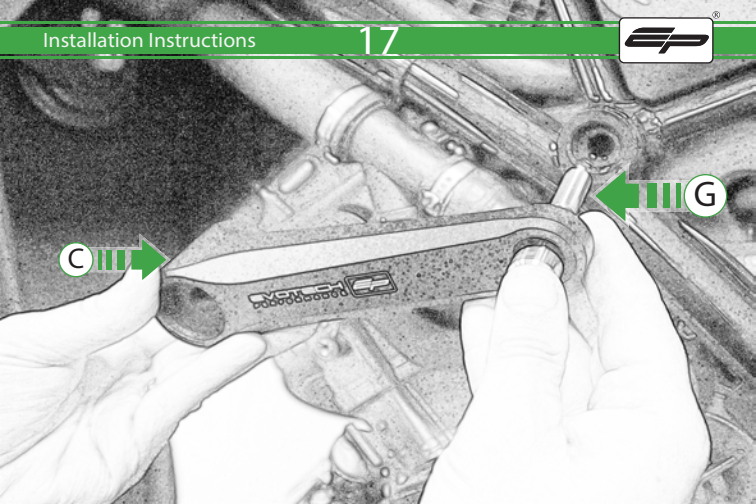

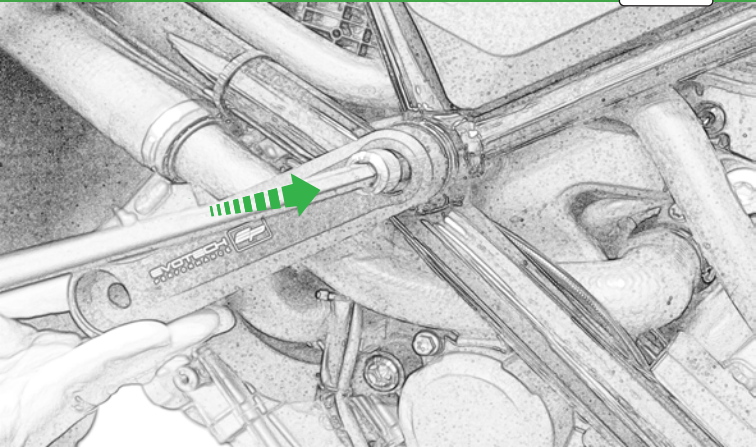



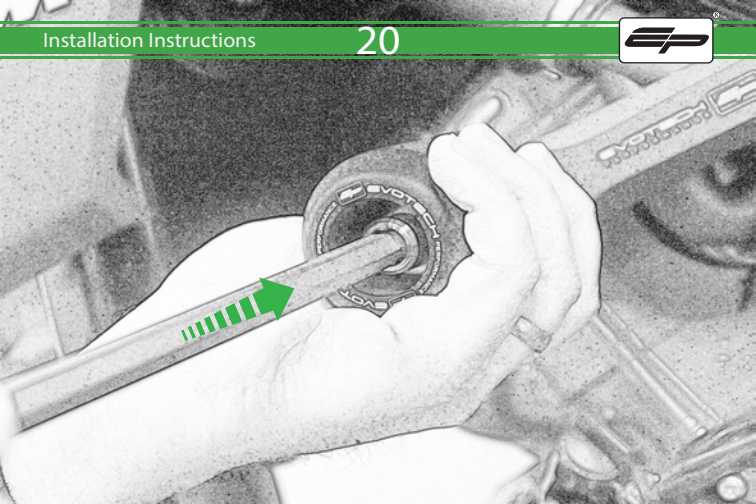

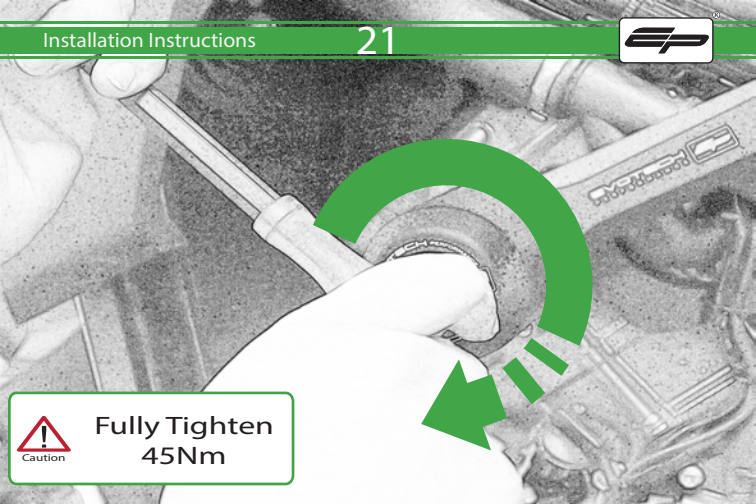

Caution

Fully Tighten  
45Nm




Caution


Fully Tighten  
45Nm






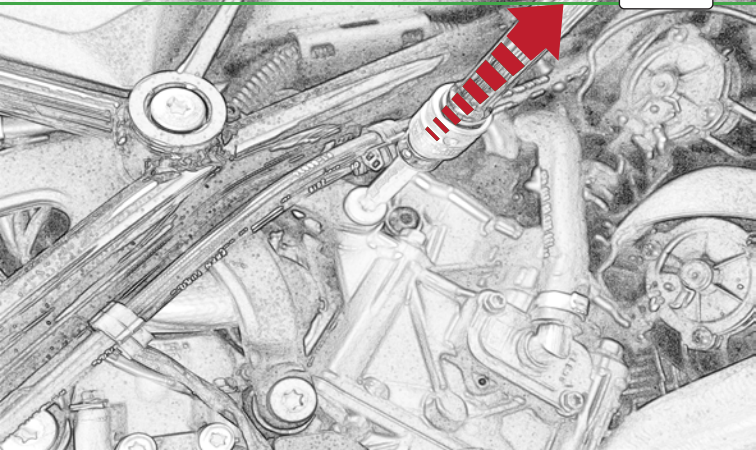



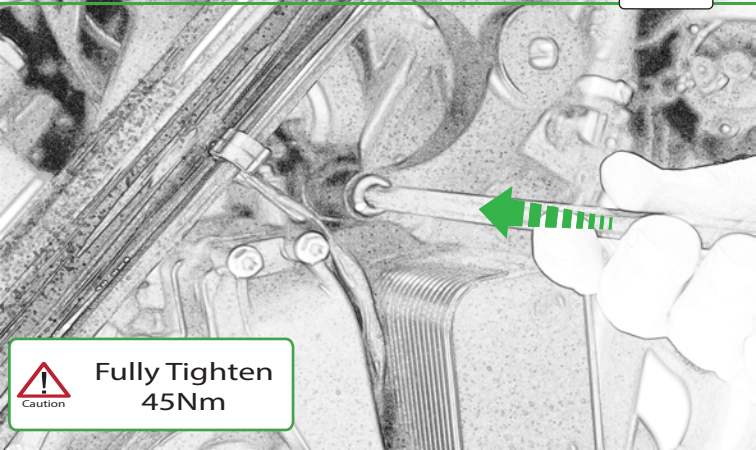



**Fully Tighten  
45Nm**

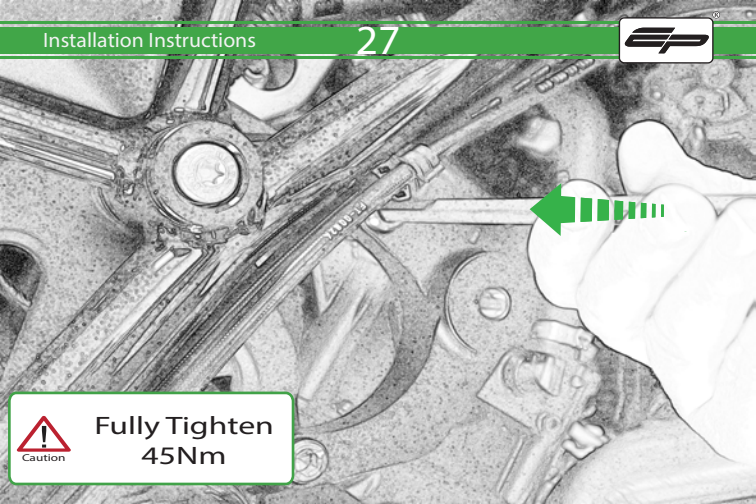

Caution


**Fully Tighten  
45Nm**

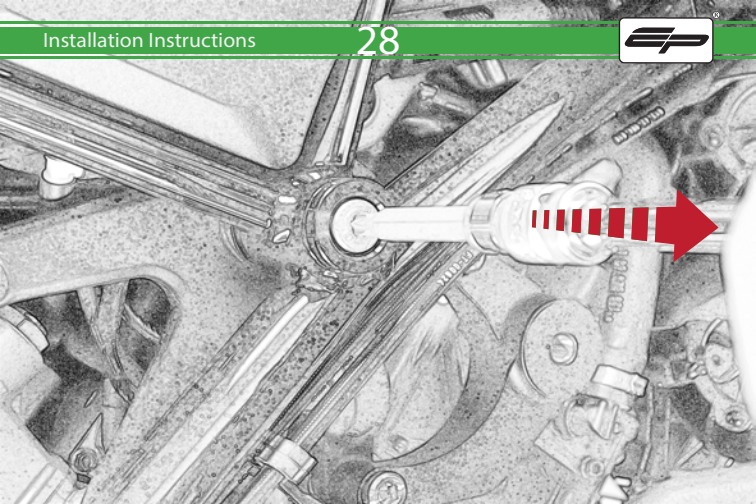

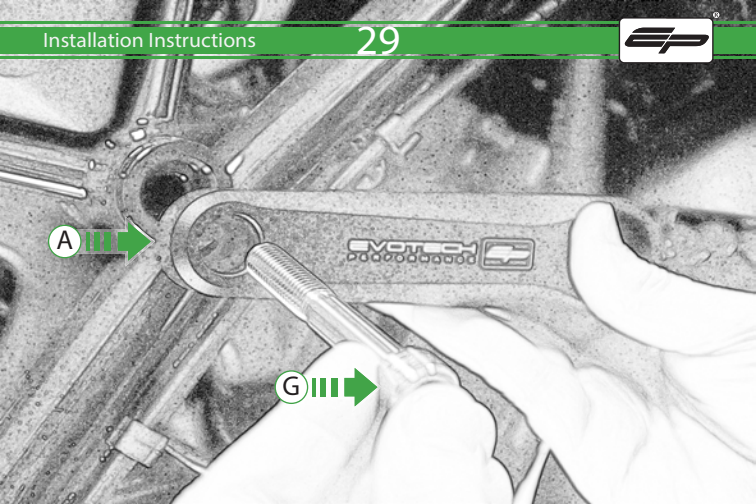


A

G

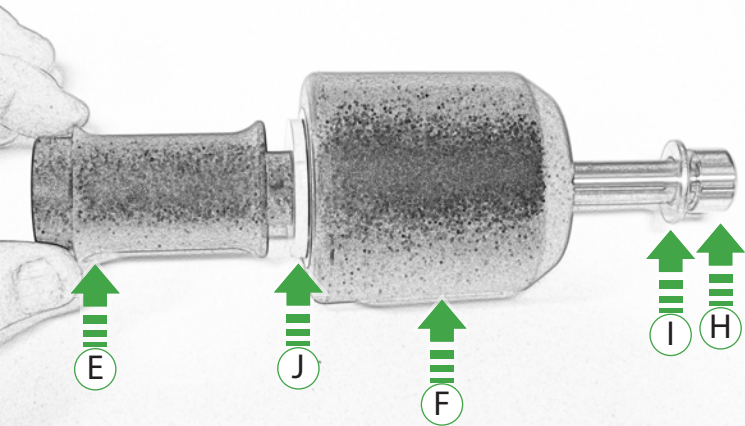




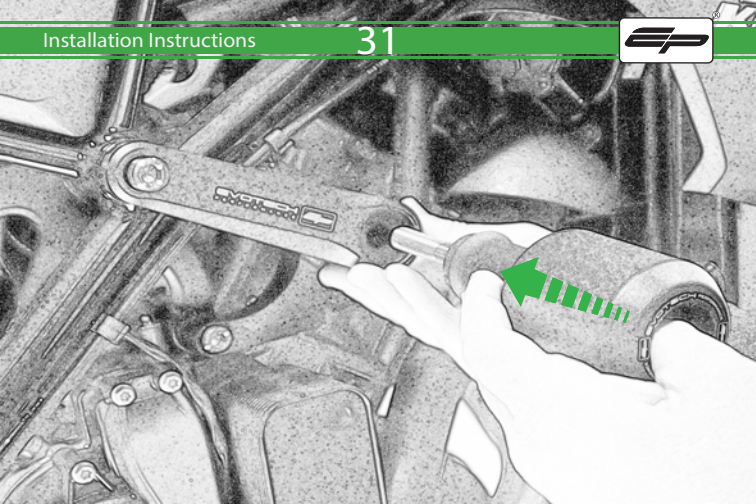



Caution

Fully Tighten  
45Nm

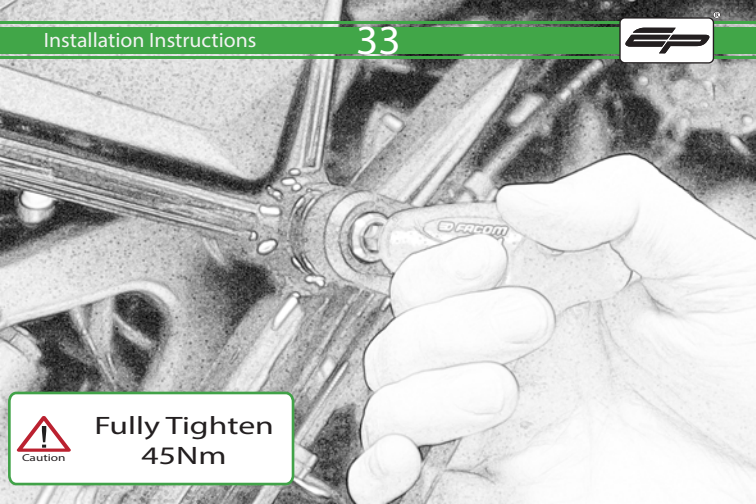

Caution

Fully Tighten  
45Nm



### ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)