



**EVOTECH**®  
P E R F O R M A N C E

**Installation Instructions**





## BMW S1000 XR CRASH PROTECTION


Product Reference - 12708

### Kit Contents

- |                                      |                                       |
|--------------------------------------|---------------------------------------|
| <b>A</b> 1 x RH Bobbin Spacer        | <b>F</b> 1 x M10 - 60 Cap Head Bolt   |
| <b>B</b> 1 x LH Bobbin Spacer        | <b>G</b> 1 x M8 - 25 Cap Head Bolt    |
| <b>C</b> 1 x LH Mounting Bracket     | <b>H</b> 2 x Bobbin Heads             |
| <b>D</b> 1 x M10 - 120 Cap Head Bolt | <b>I</b> 2 x Impact Absorbing Washers |
| <b>E</b> 1 x M10 - 80 Cap Head Bolt  | <b>J</b> 2 x M10 Washers              |

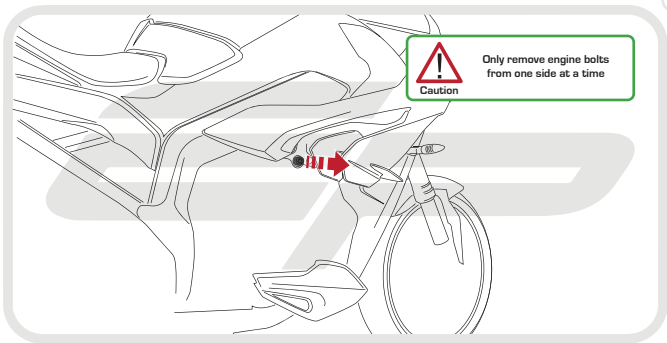

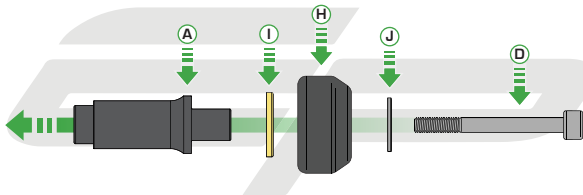


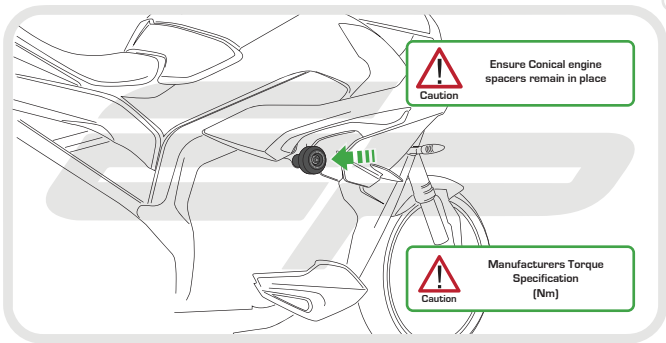





Caution


Only remove engine bolts  
from one side at a time

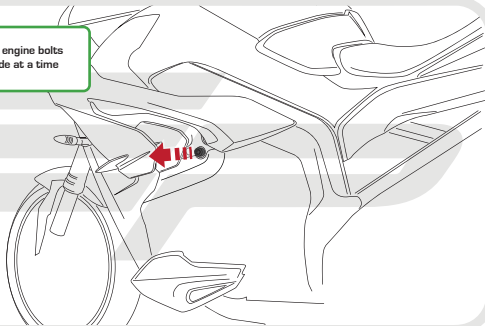

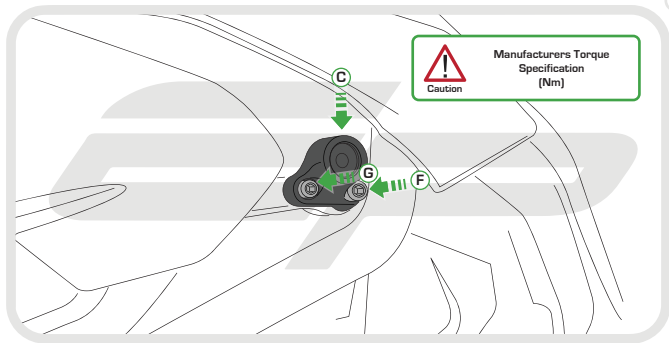

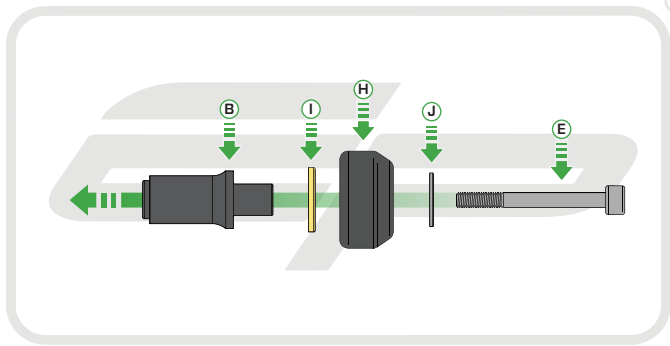



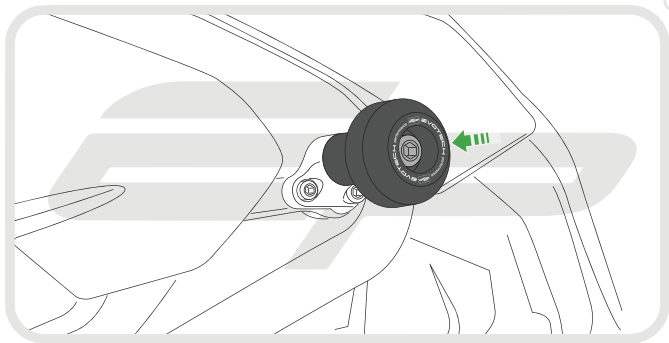



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)