



EVOTECH[®]
P E R F O R M A N C E



KTM 1290 Super Duke GT
Crash Protection


Installation Instructions





Kit Contents PRN013273

- (A) 1 x R/H Outer Bracket
- (B) 1 x R/H Inner Bracket
- (C) 1 x L/H Outer Bracket
- (D) 1 x L/H Inner Bracket
- (E) 2 x Bobbin Spacer
- (F) 2 x Large Bobbin Head
- (G) 2 x M10 x 70 Caphead
- (H) 2 x M12 x 170 Caphead
- (I) 2 x M12 Washer
- (J) 2 x Polyurathane Washer
- (K) 2 x Cable Tie
- (L) 4 x M10 x 35 Caphead

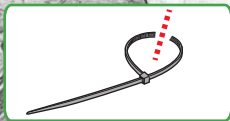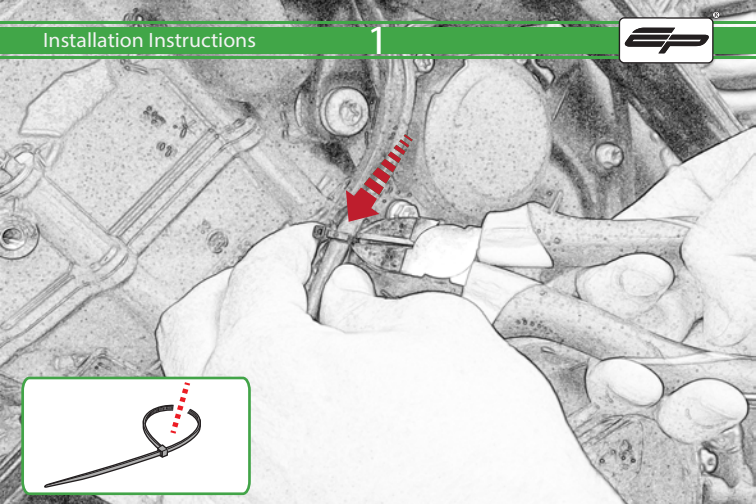


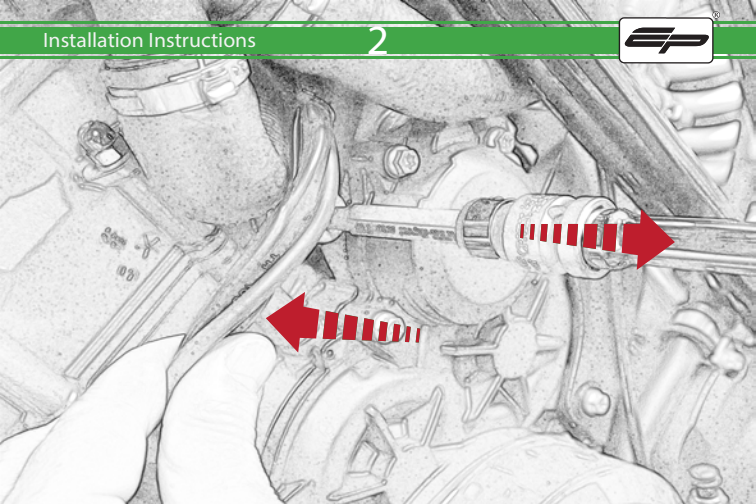


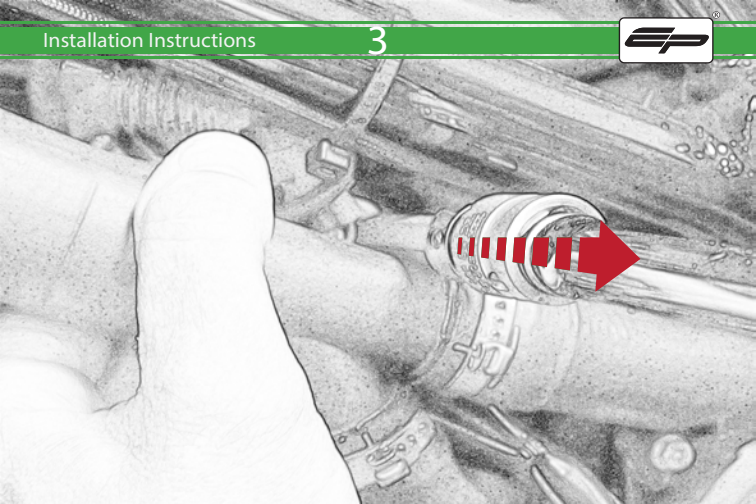


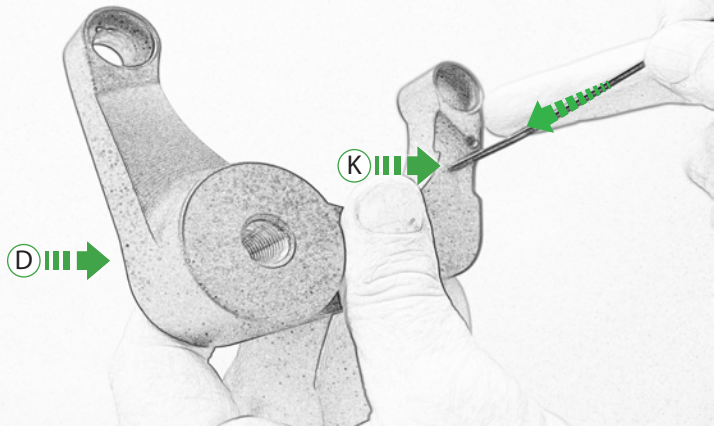




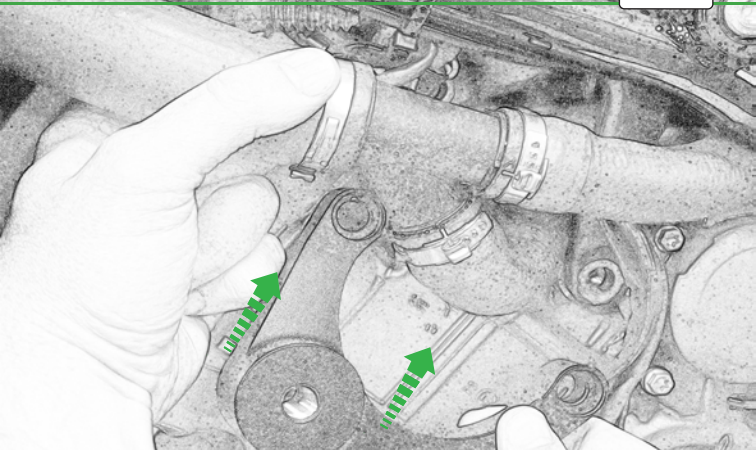



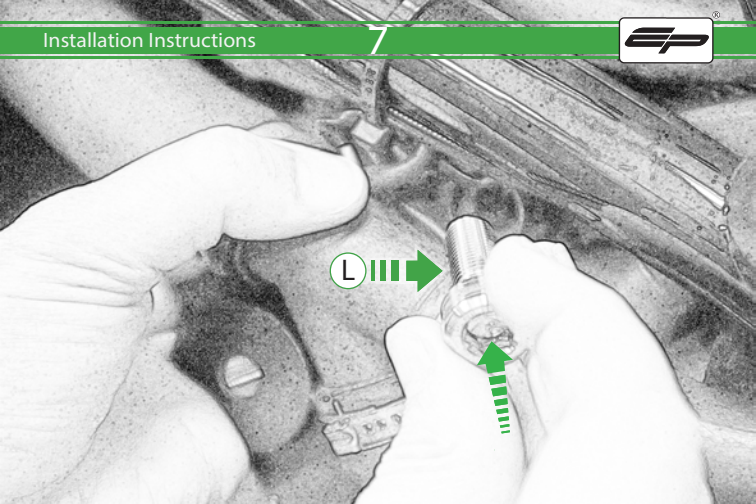



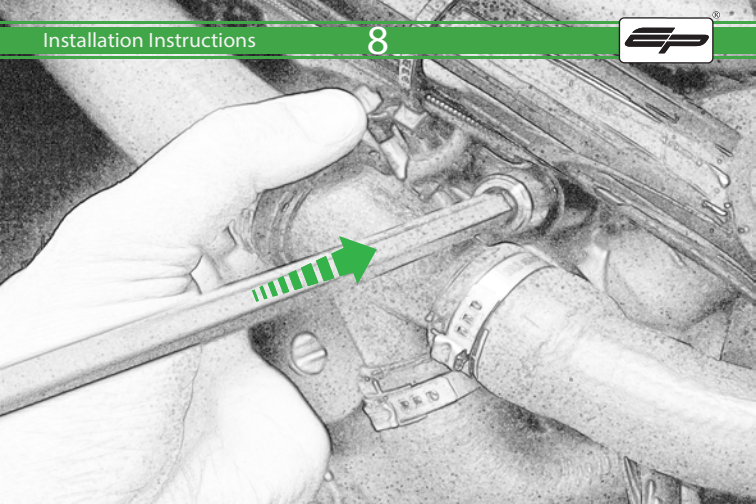






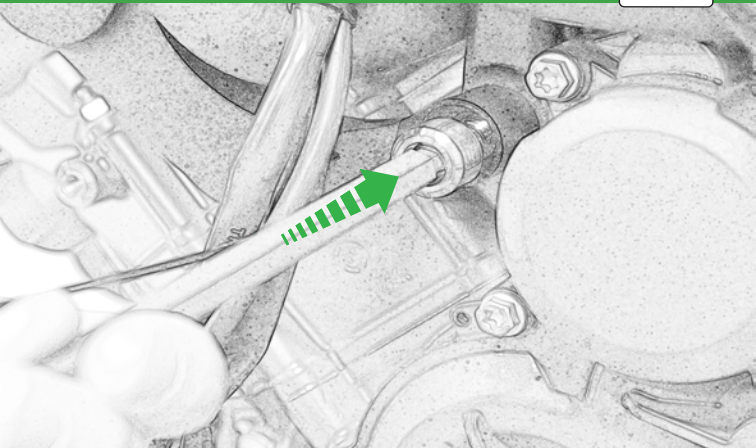


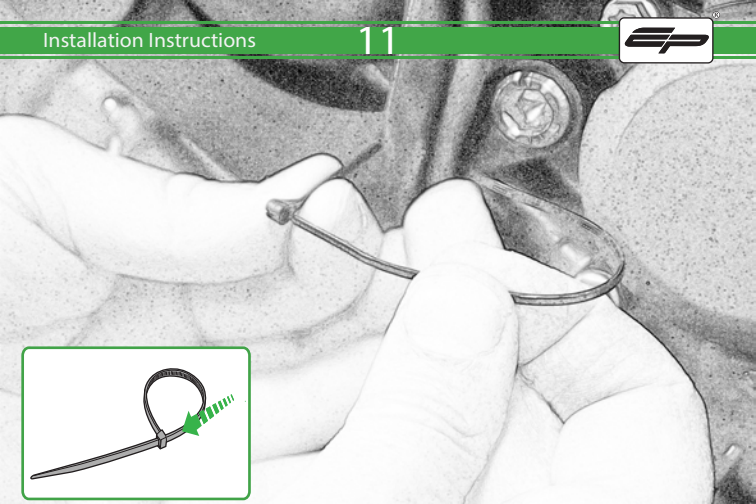


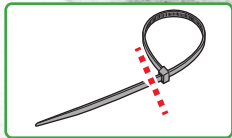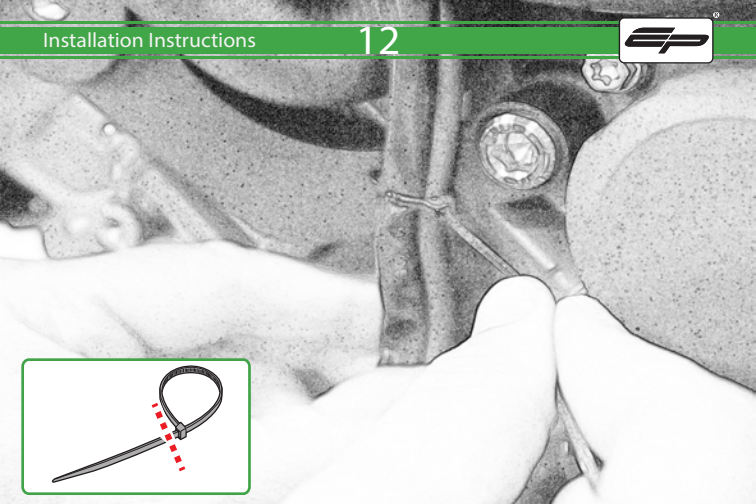


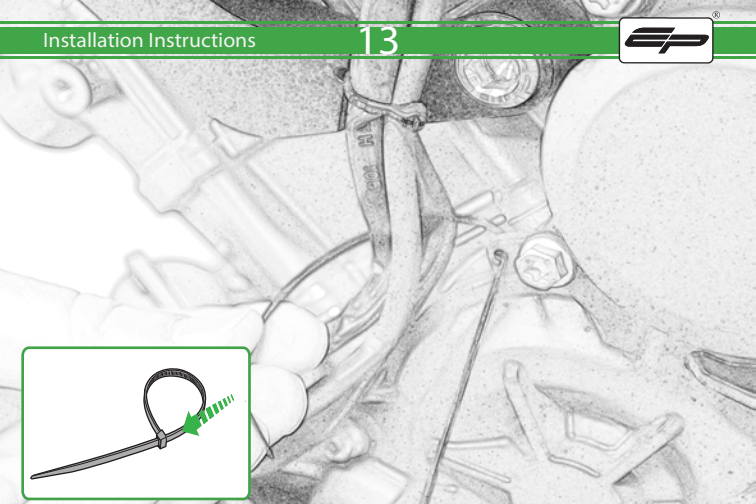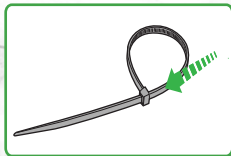


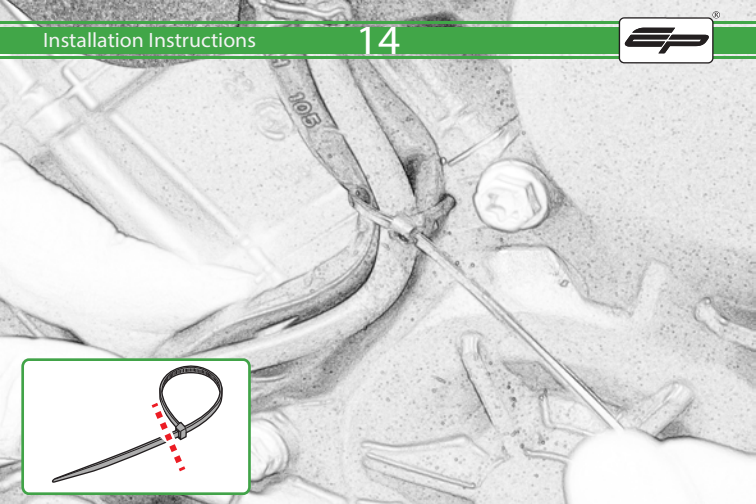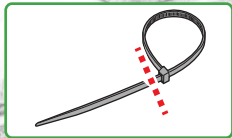

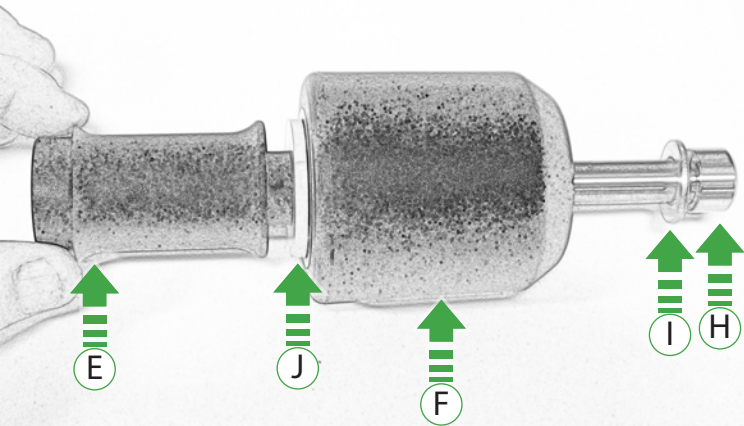


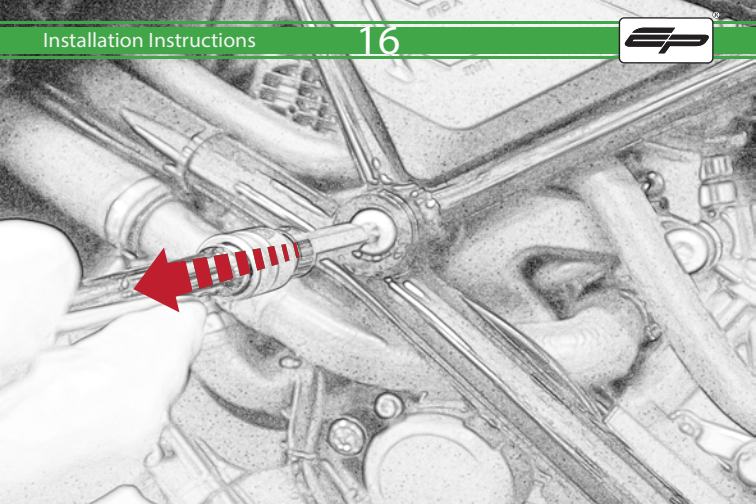


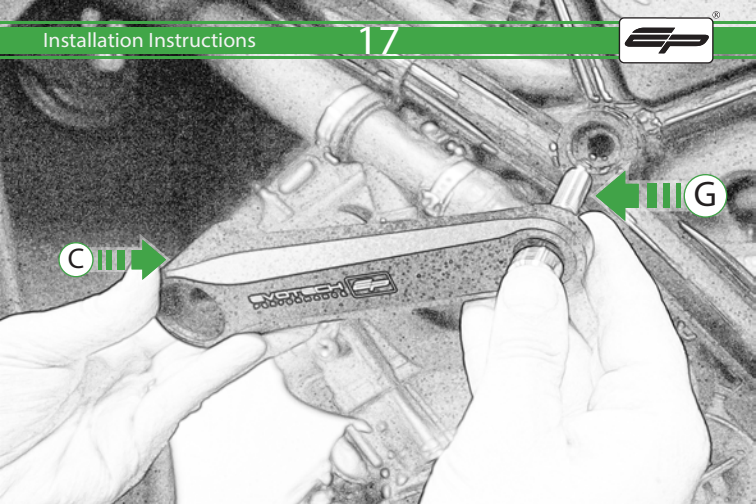

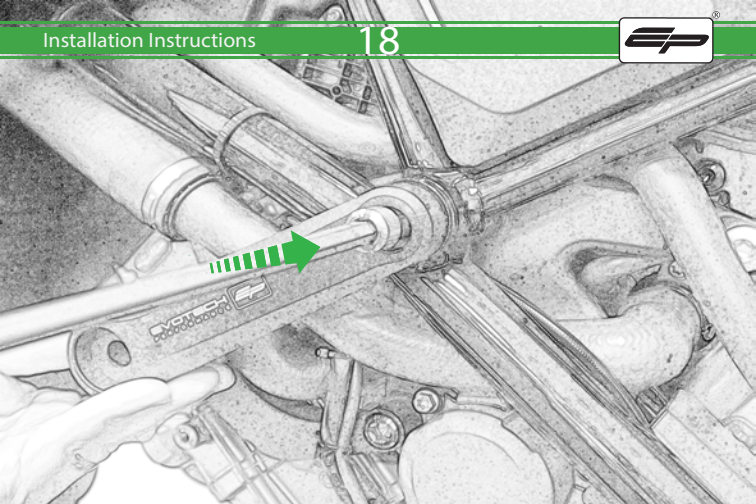



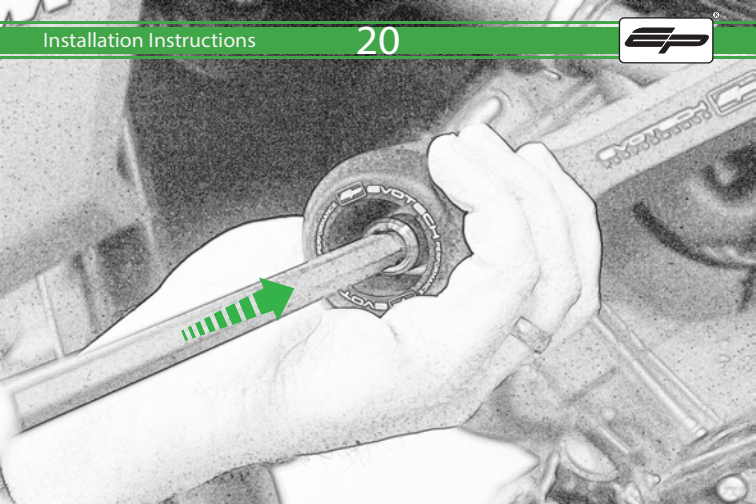

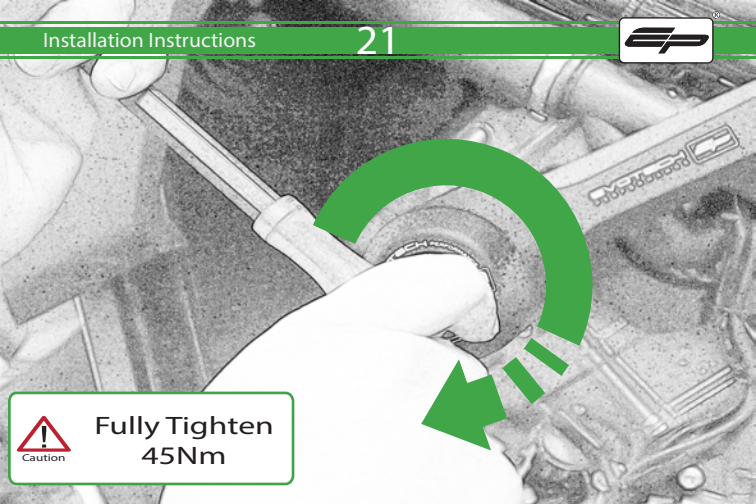


Caution


Fully Tighten
45Nm





Caution

Fully Tighten
45Nm

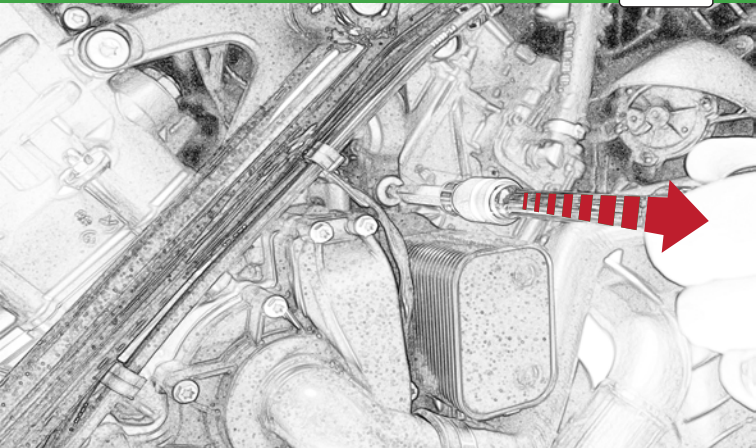

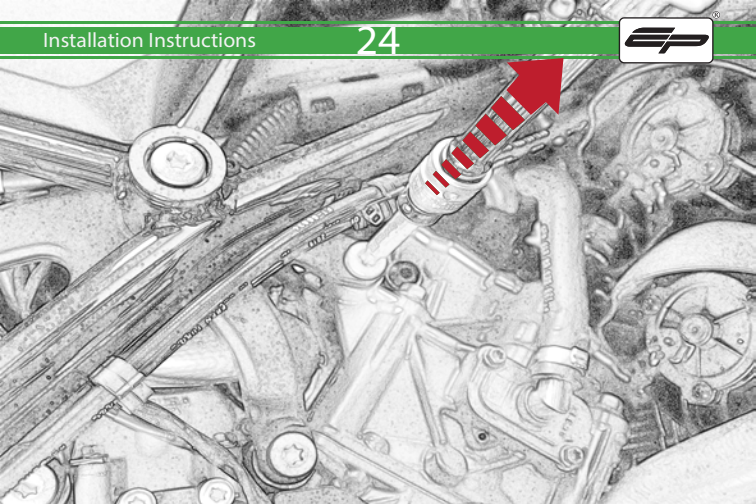


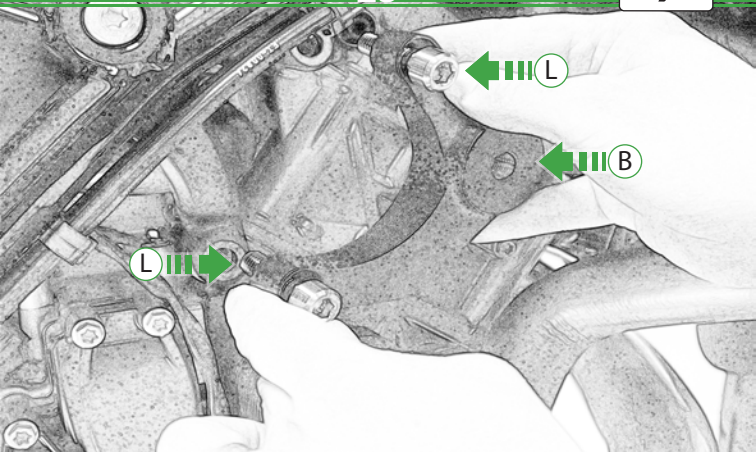

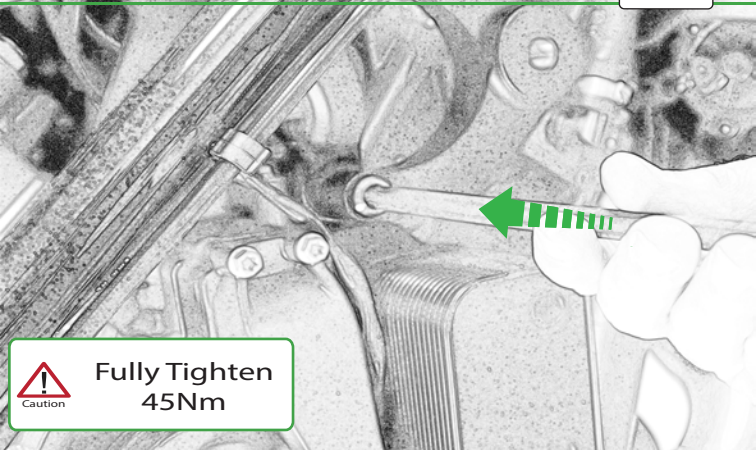


Caution


Fully Tighten
45Nm

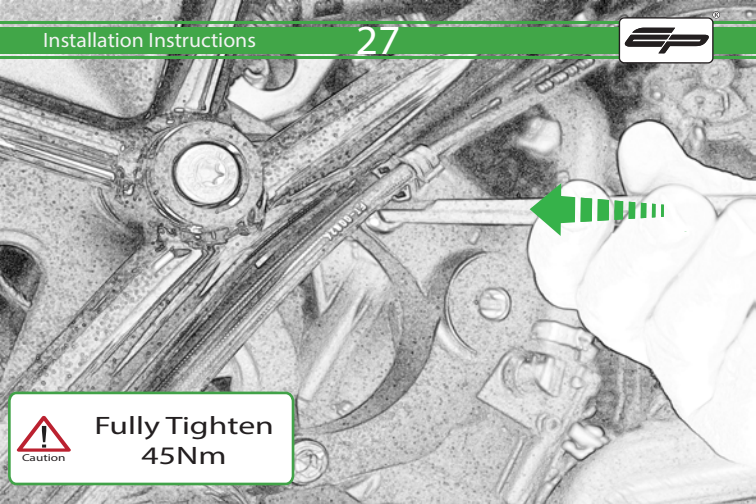



Caution

Fully Tighten
45Nm

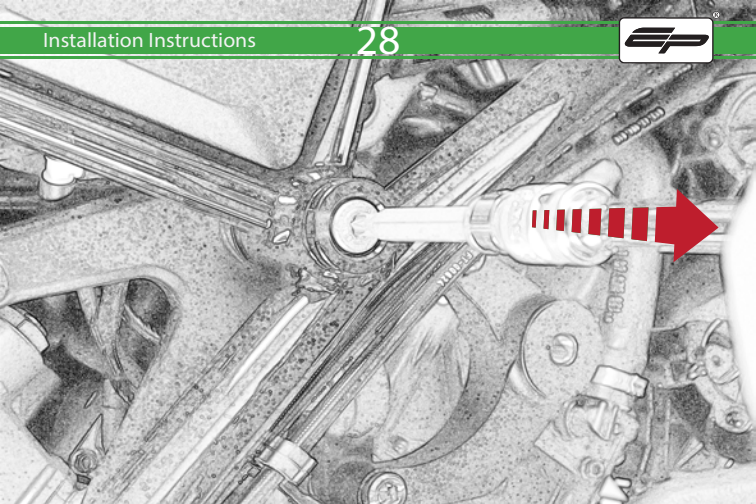

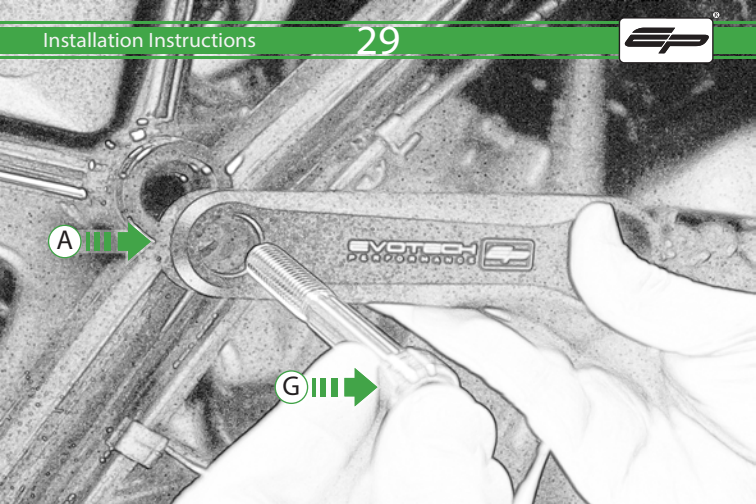

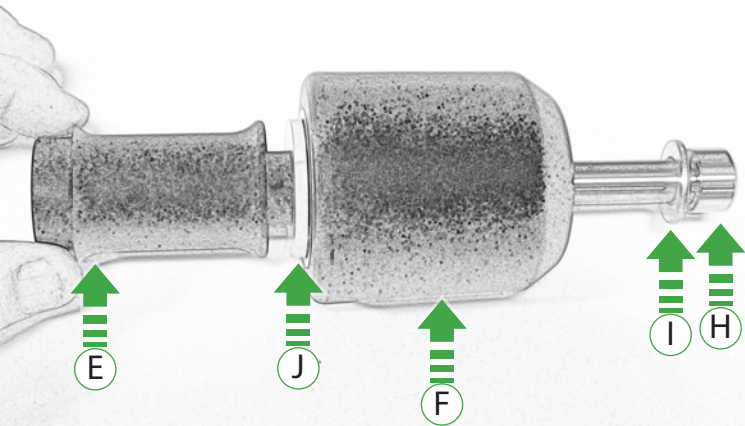


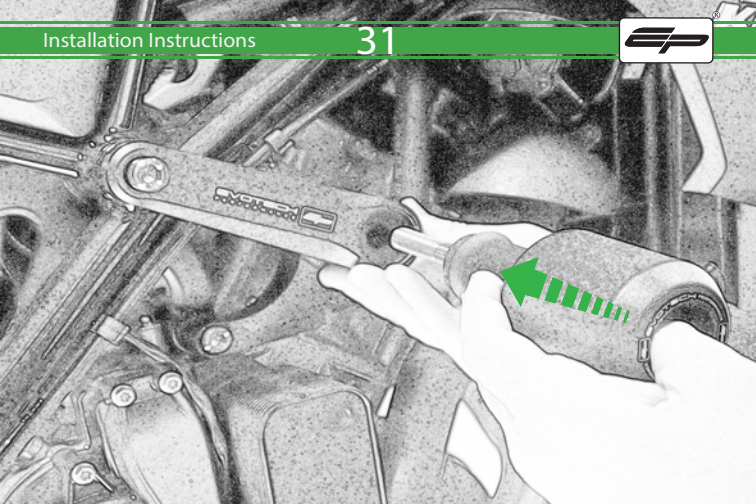



Caution

Fully Tighten
45Nm

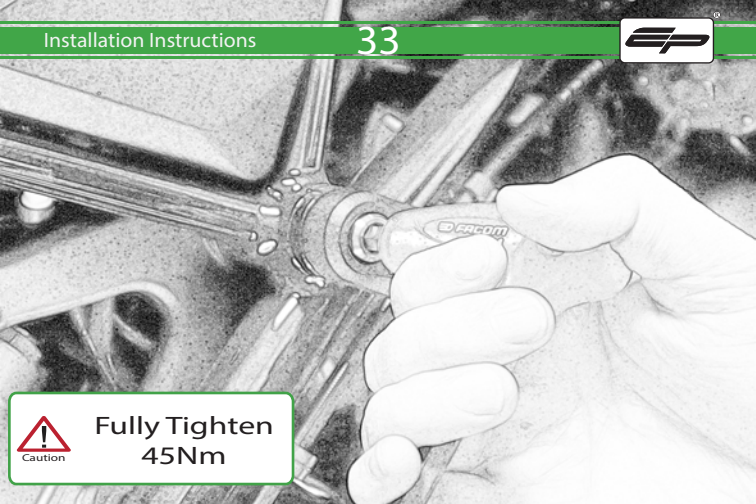

Caution

Fully Tighten
45Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com