



**EVOTECH**®  
P E R F O R M A N C E

**KTM Superduke 1290**


**Engine Guard**


**Installation Instructions**





## Kit Contents PRN013616


- A** 1 x Lower Bracket
- B** 1 x Upper Bracket
- C** 1 x M8 x 16 Black Button Bolt
- D** 1 x M8 Washer
- E** 2 x M6 Washer
- F** 2 x Spacer
- G** 2 x Grommet
- H** 4 x M6 x 12 Black Button Bolt

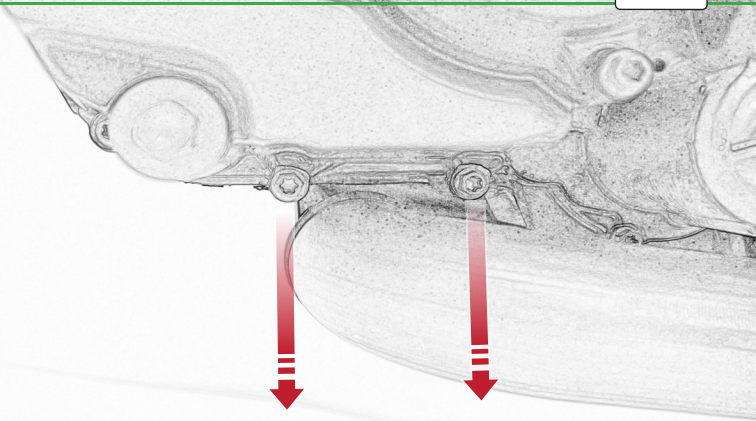


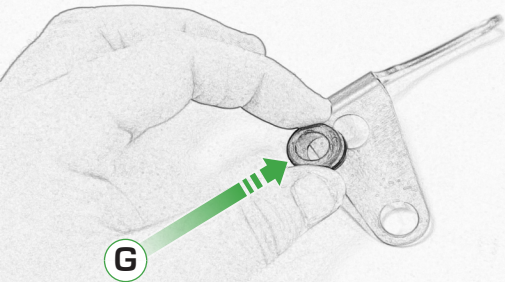

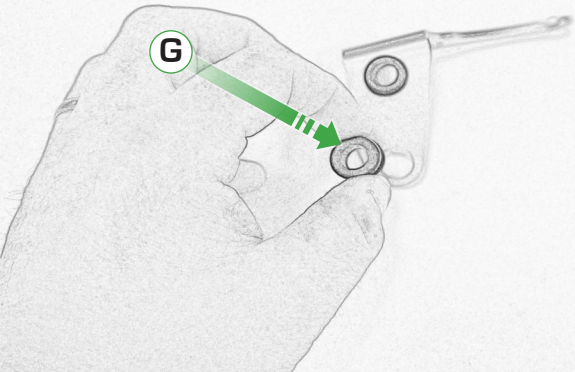


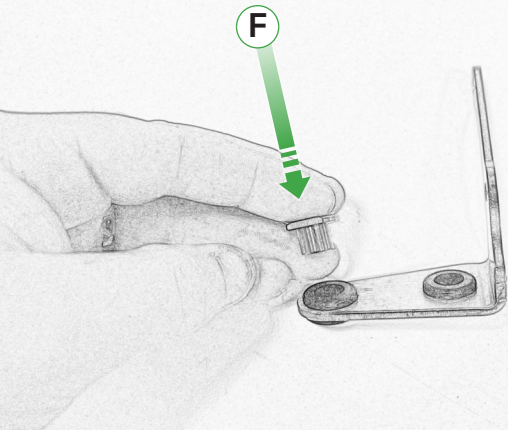

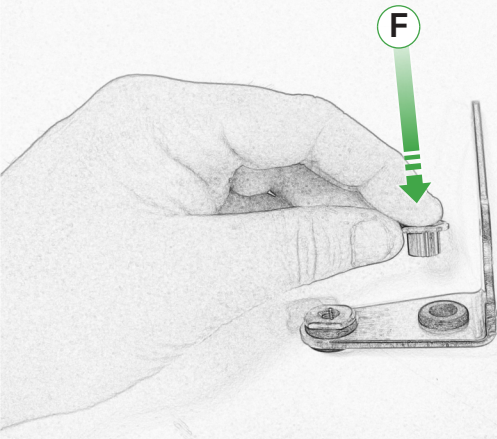


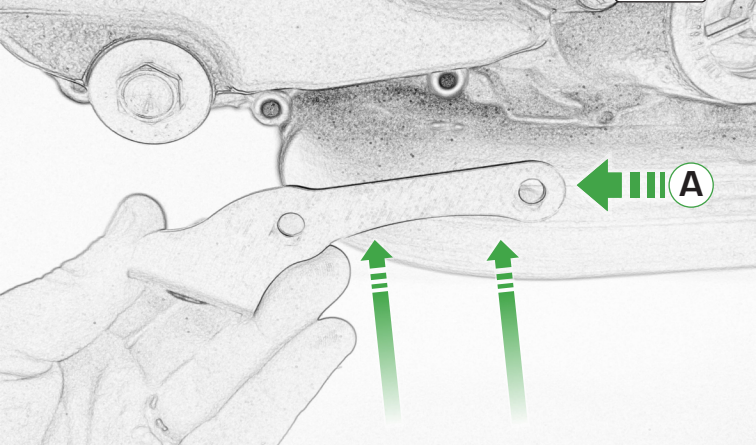




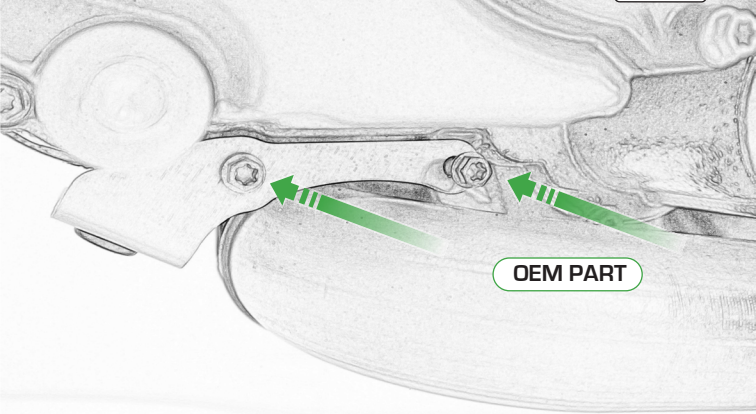


OEM PART

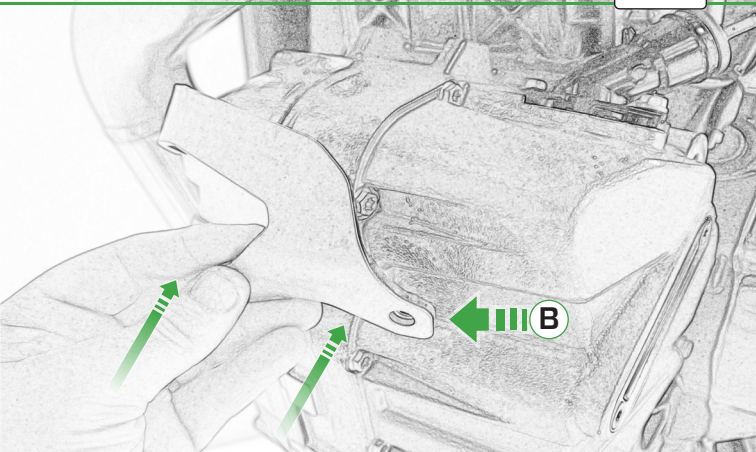

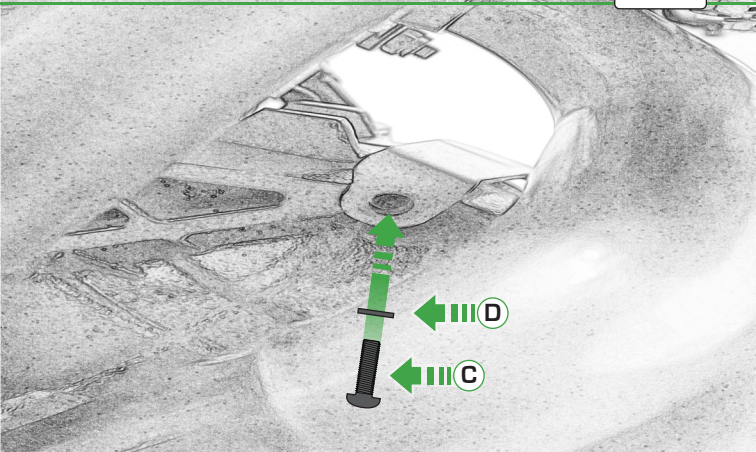



Do Not Fully Tighten

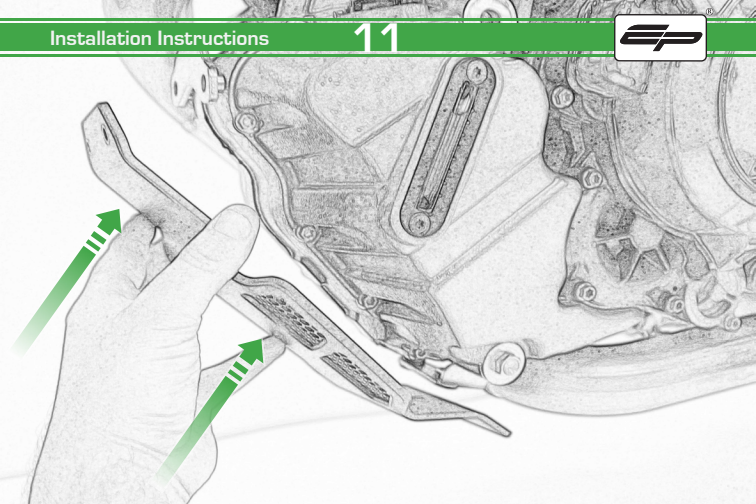




H






H



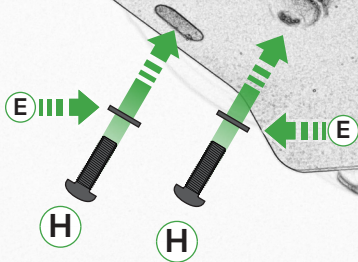


Do Not Fully Tighten




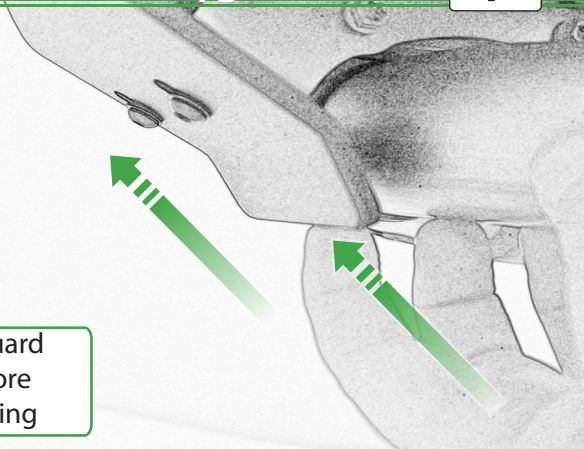

Push Guard  
Up Before  
Tightening

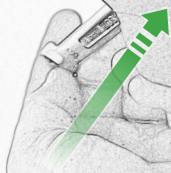

Fully  
Tighten

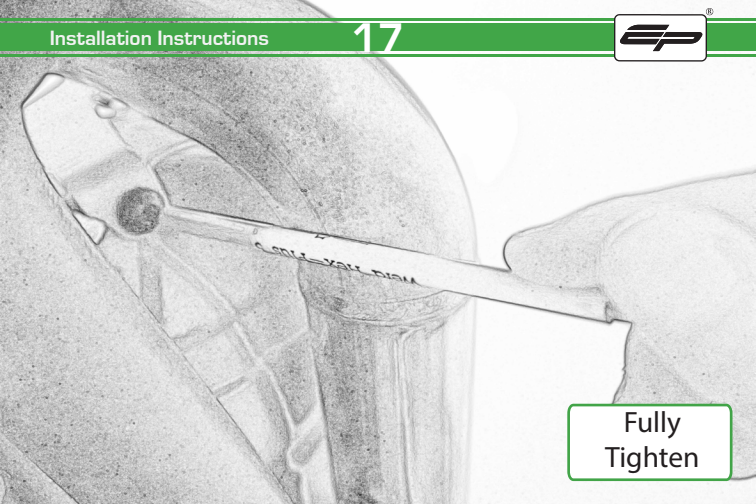

Fully  
Tighten



### ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)