

Installation Instructions





Kit Contents PRN013894-014234-014397-015383


- A 1 x Outer Cap
- B 1 x O-Ring
- © 1 x Middle Cap
- D 1 x Blade
- **(E)** 1 x Bar End Outer
- F 2 x Bar End Inner
- © 2 x M6 x 25 Caphead Bolt

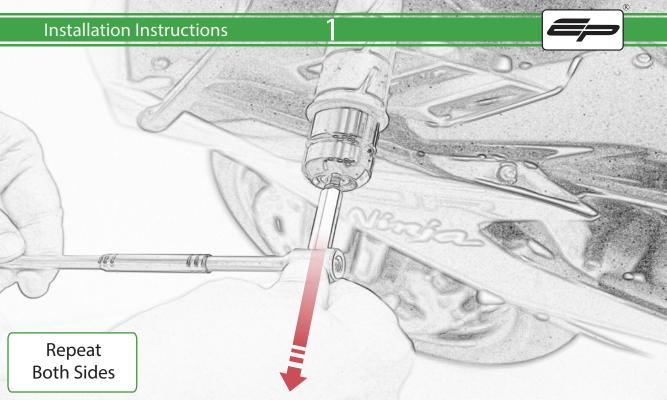


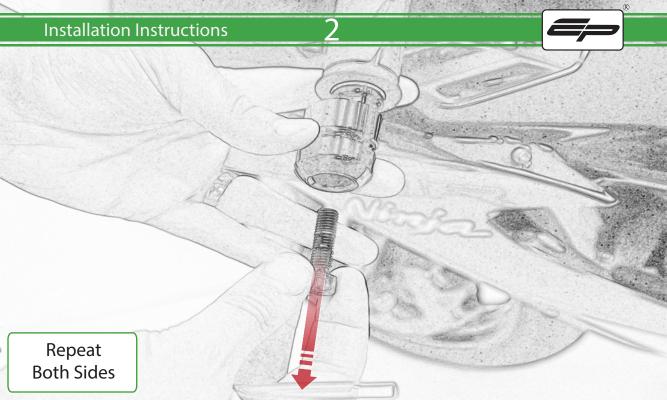


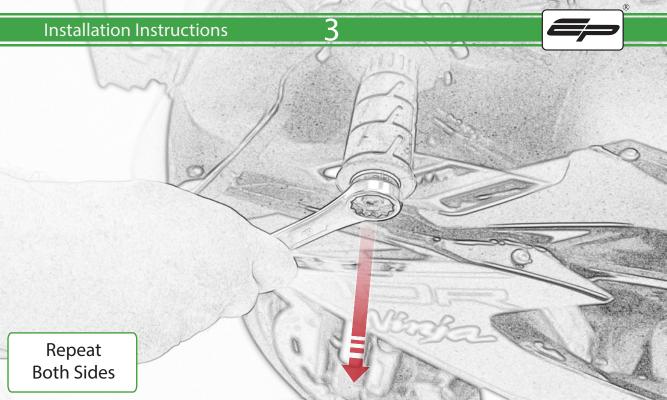


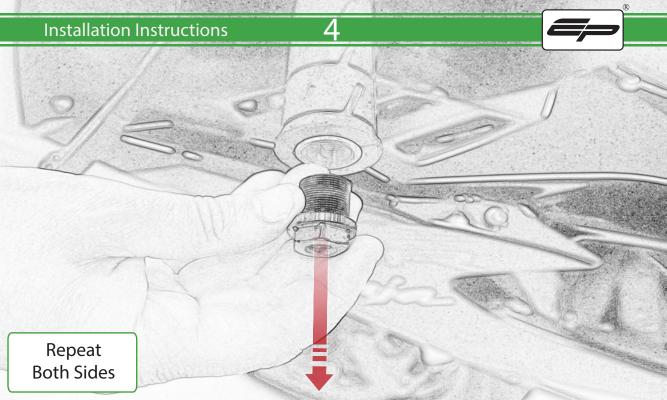


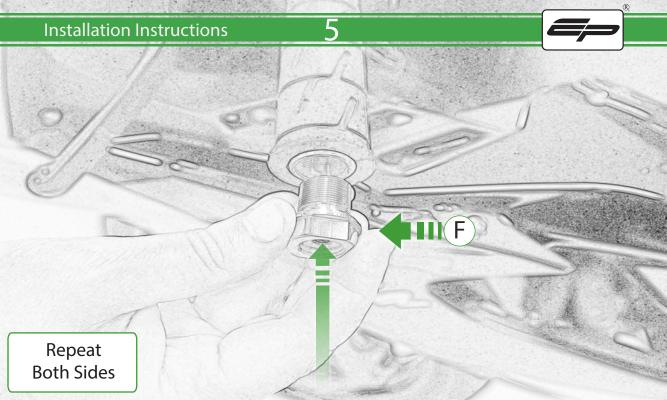


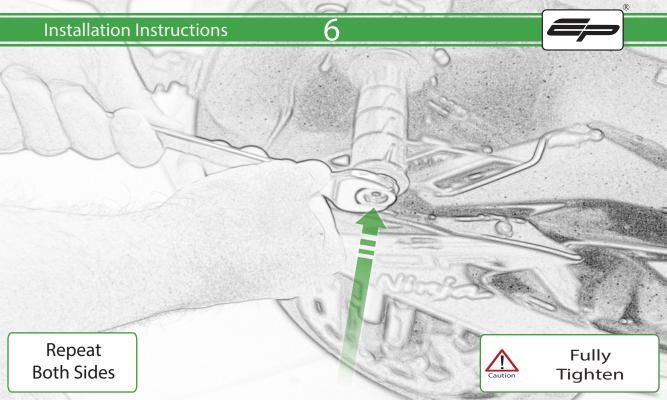


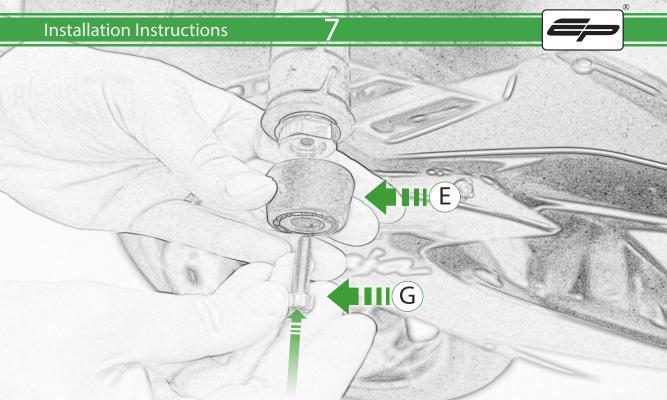


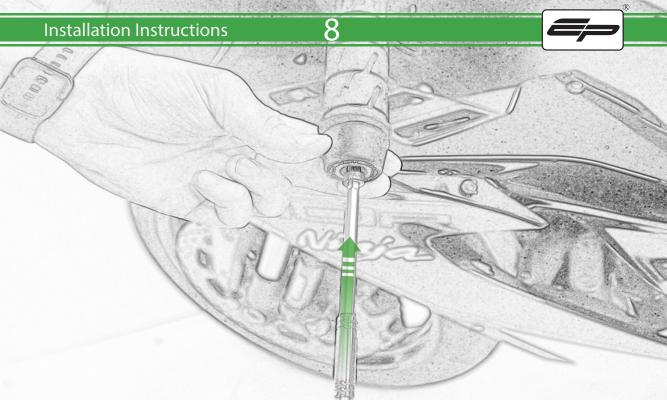


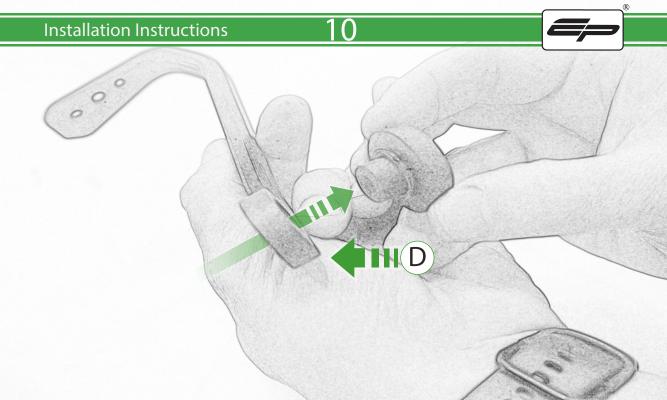

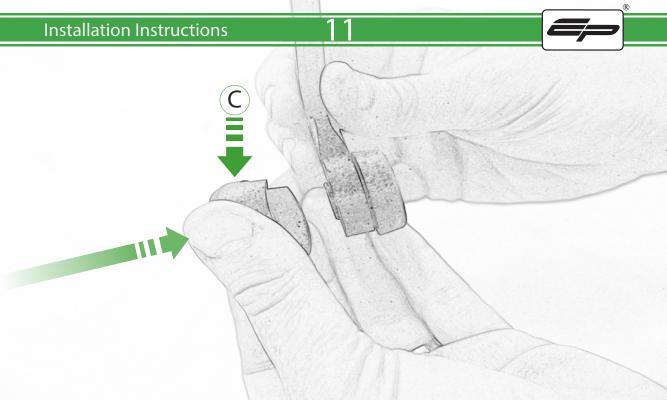

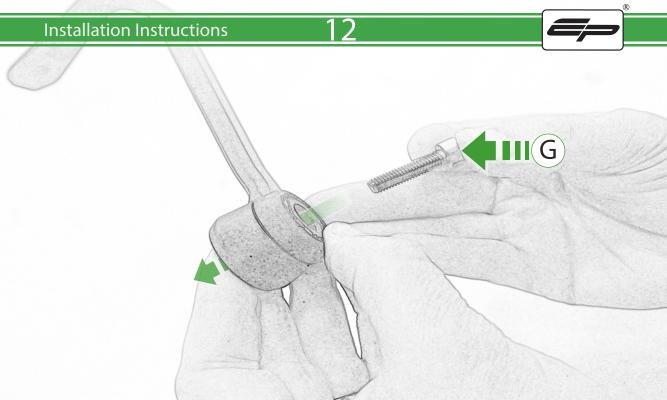

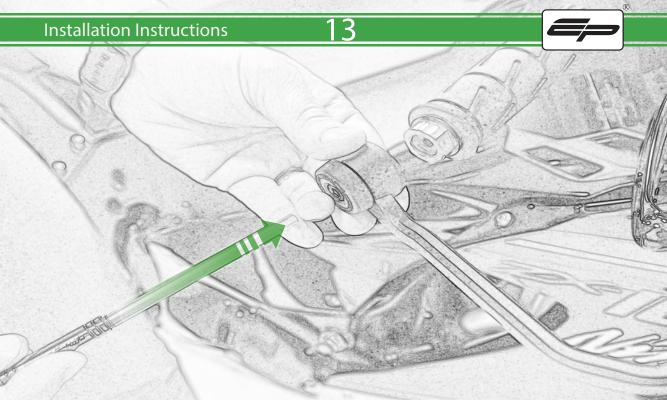

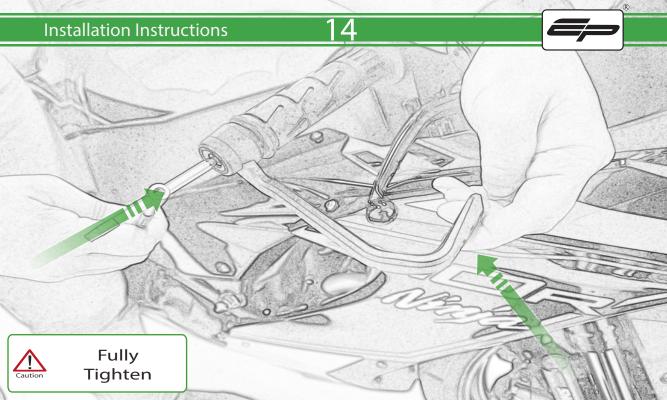





ESSENTIAL CHECKS 🔨



Please ensure the throttle grip has sufficient clearance between the brake lever protector / bar end weight before riding. It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

