





Kit Contents PRN014066

- (A) 1 x Spindle Shaft
- (B) 1 x Spindle Nut
- (C) 1 x Bobbin Spacer
- (D) 2 x M8 Nuts
- (E) 2 x M8 Washers
- (F) 2 x Main Tail Tidy
- (G) 2 x Bobbin Heads

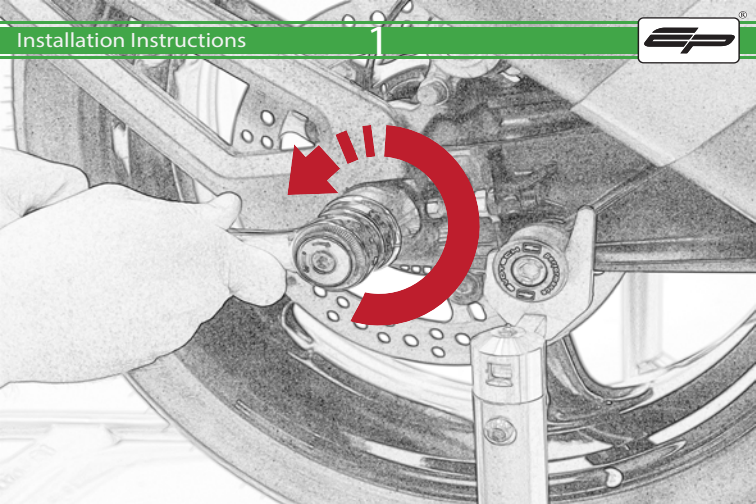

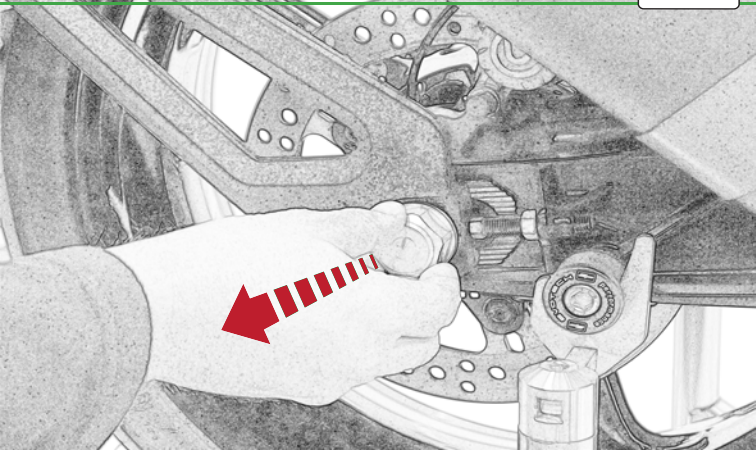

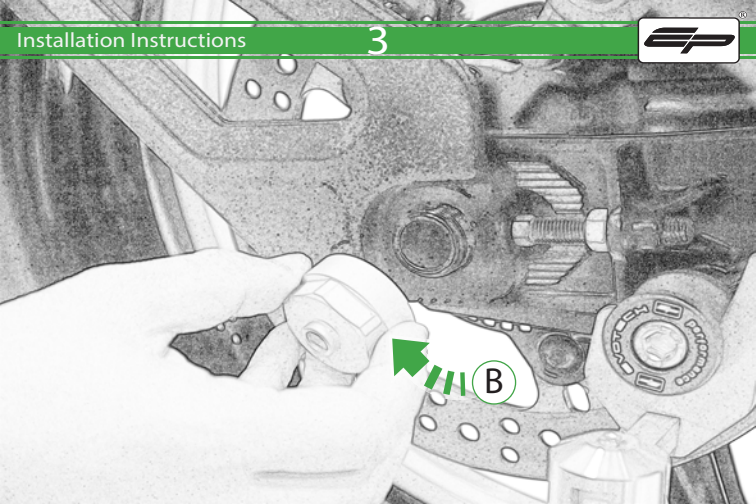


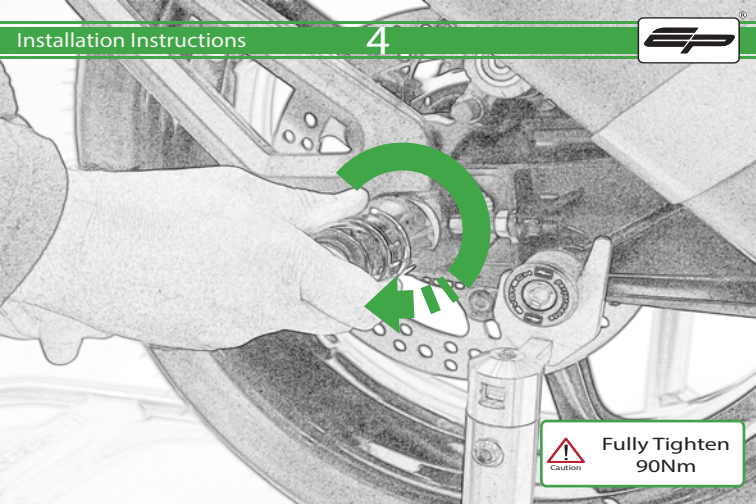



Caution


**Fully Tighten
90Nm**




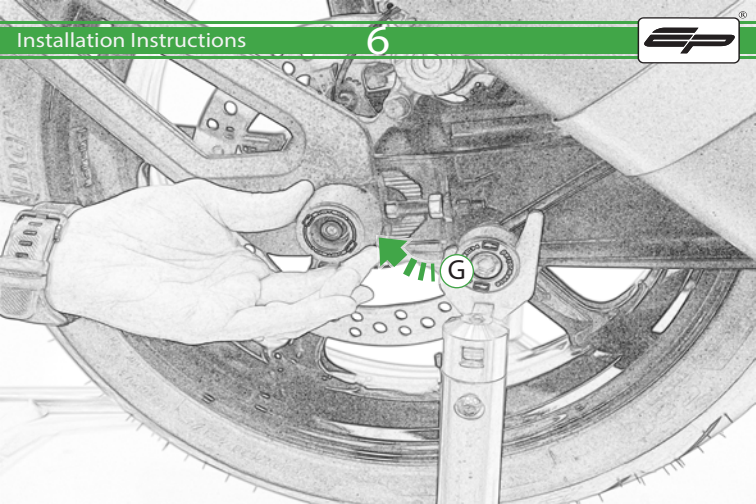


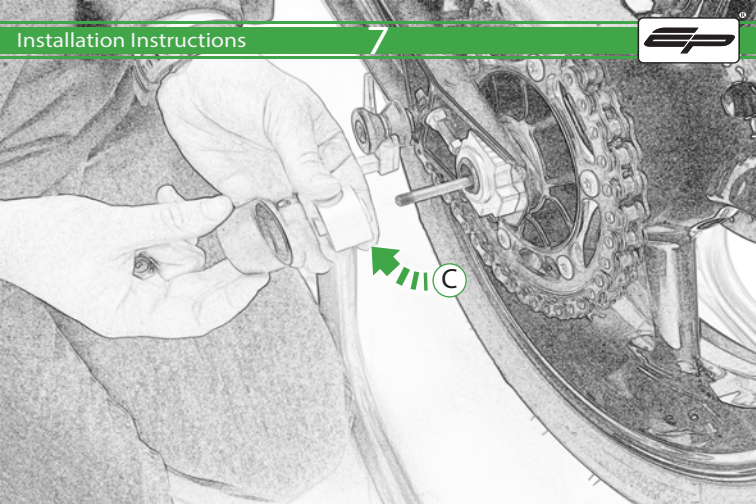

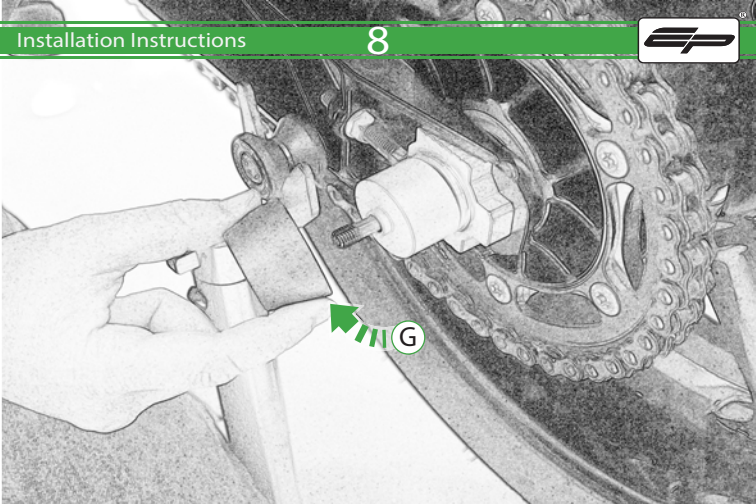

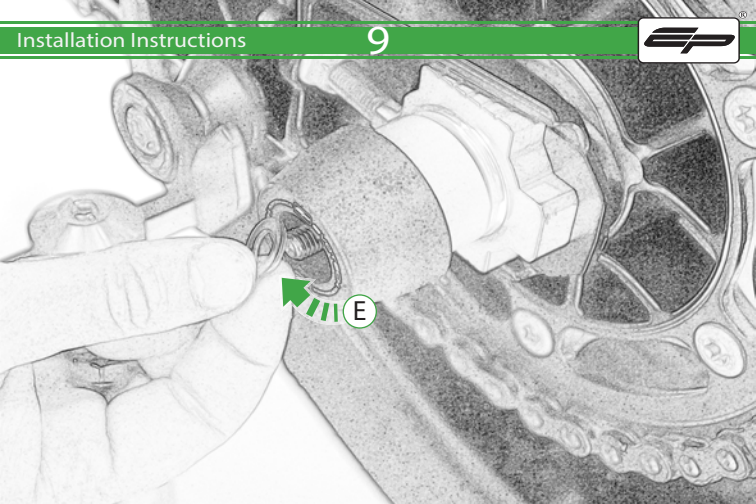

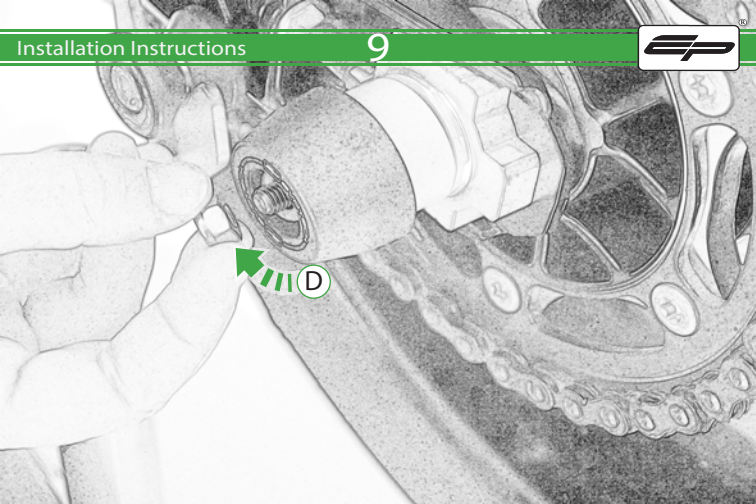

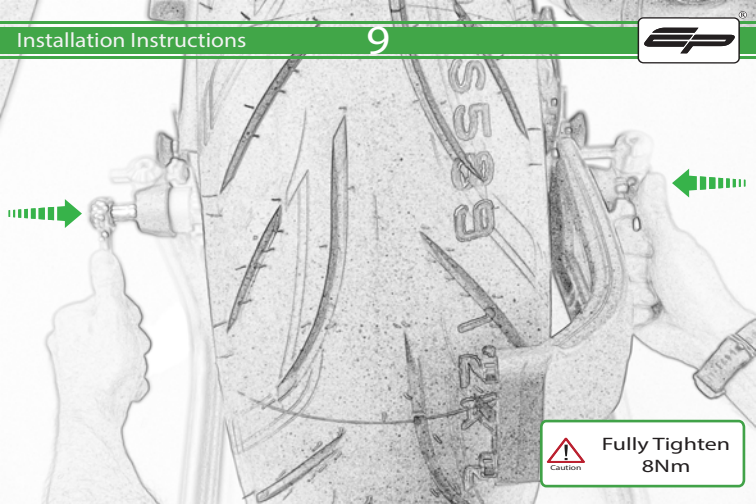

Caution

Fully Tighten
8Nm



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced