



**EVOTECH**®  
P E R F O R M A N C E


Kawasaki Ninja 400  
Tail Tidy

Installation Instructions





## Kit Contents PRN014139


- (A) 1 x Reflector Kit
- (B) 1 x Retro Light
- (C) 1 x Loom Connector (Con 5)
- (D) 2 x M4 Flange Nuts
- (E) 2 x M8 x 20mm Black Button Heads Bolts
- (F) 3 x M5 x 12mm C/sink Screws
- (G) 4 x M4 x 10mm Black Button Heads Bolts
- (H) 4 x M8 Flange Nuts

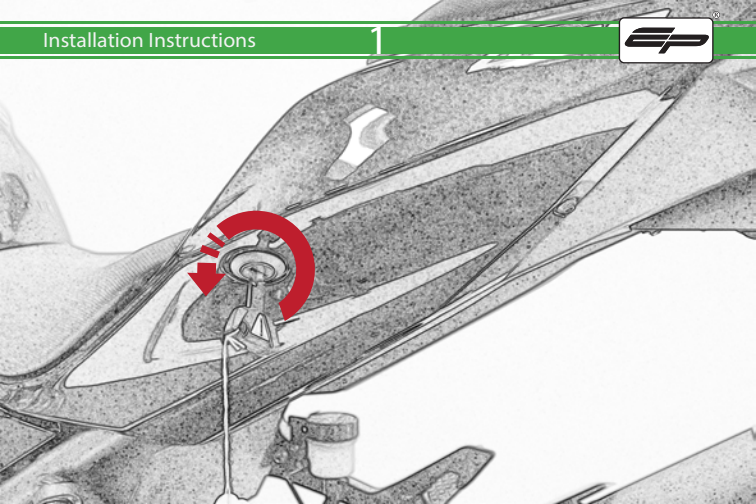







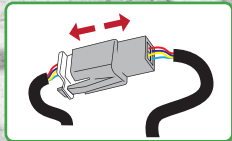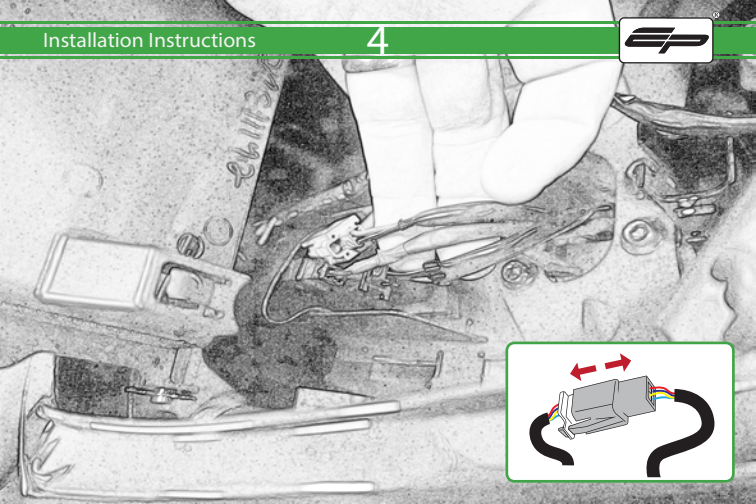

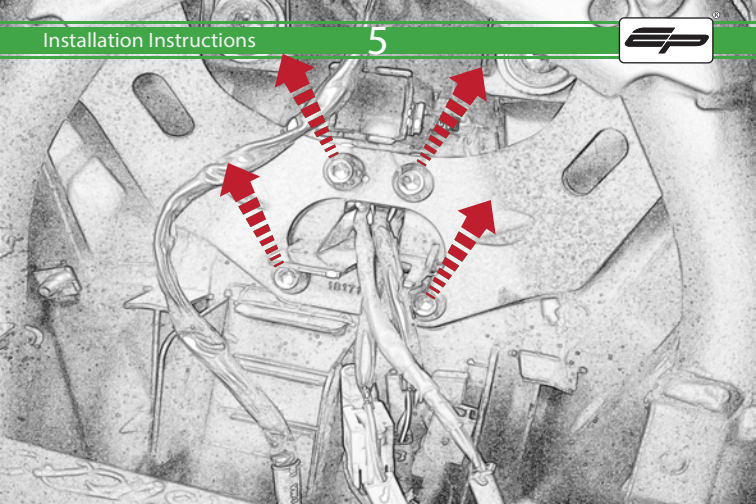


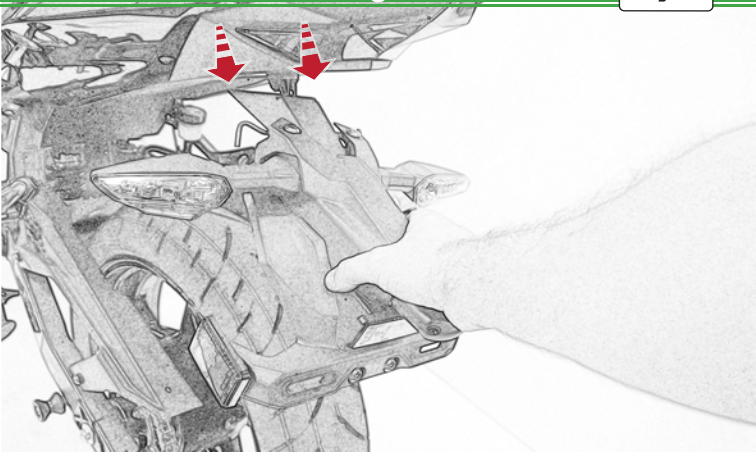




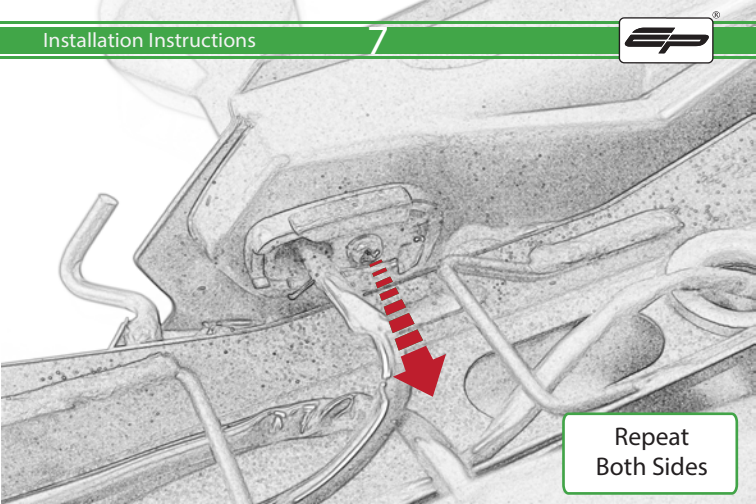


Repeat  
Both Sides

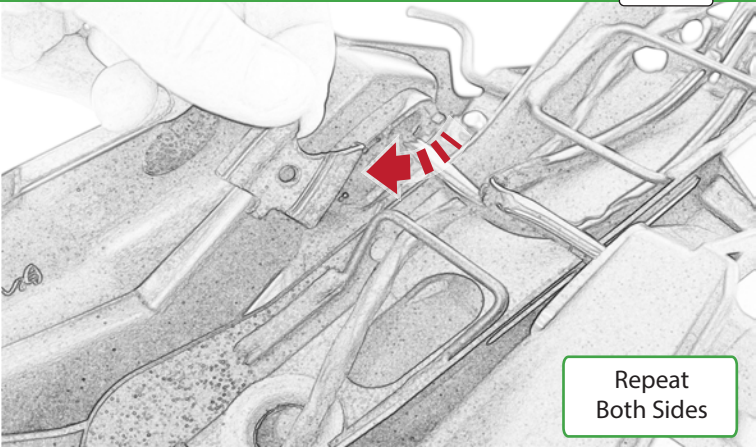


Repeat  
Both Sides

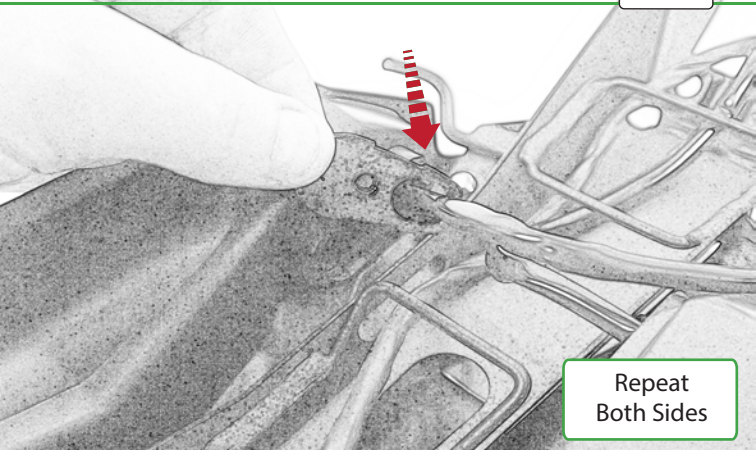


Repeat  
Both Sides

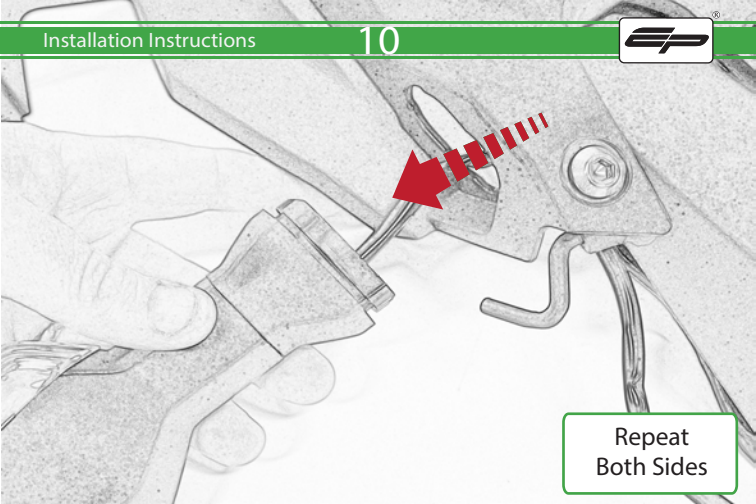


Repeat  
Both Sides

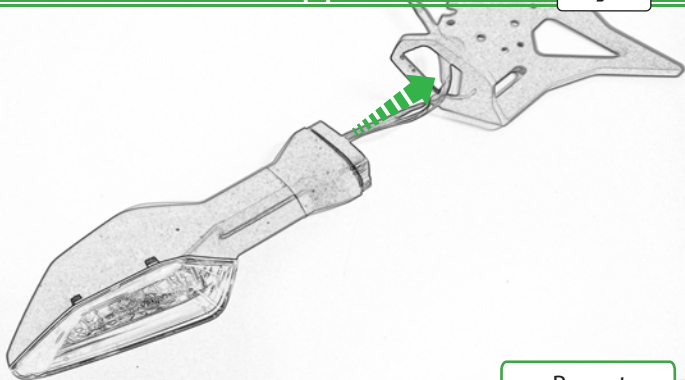


Repeat  
Both Sides

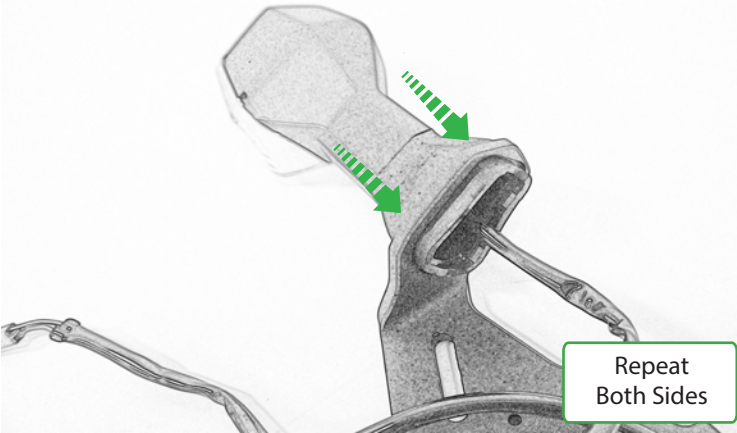

Repeat  
Both Sides

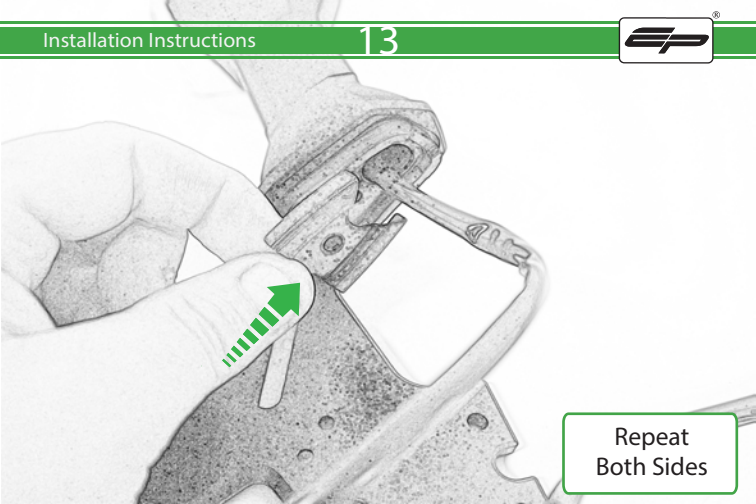


Repeat  
Both Sides

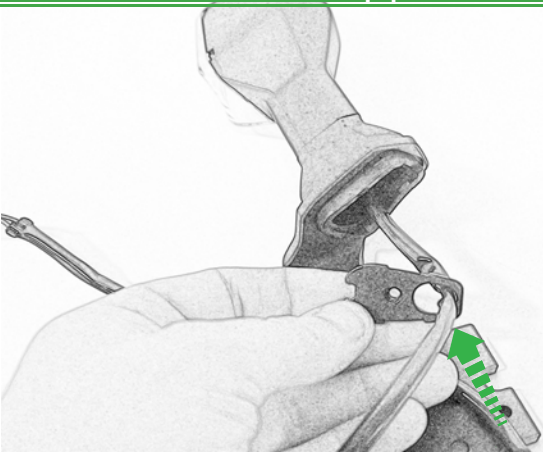


Repeat  
Both Sides




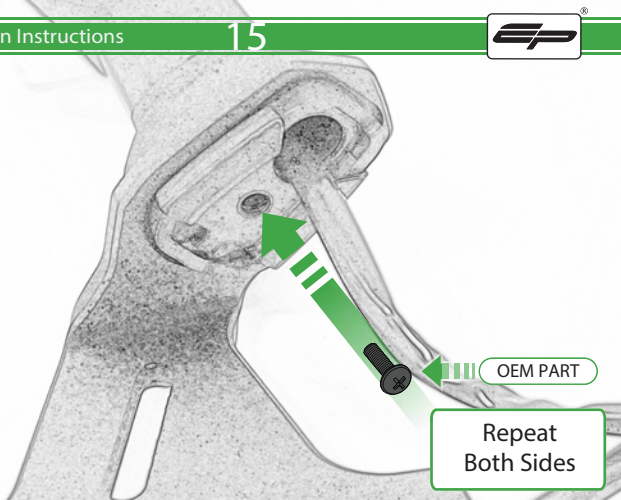


OEM PART

Repeat  
Both Sides

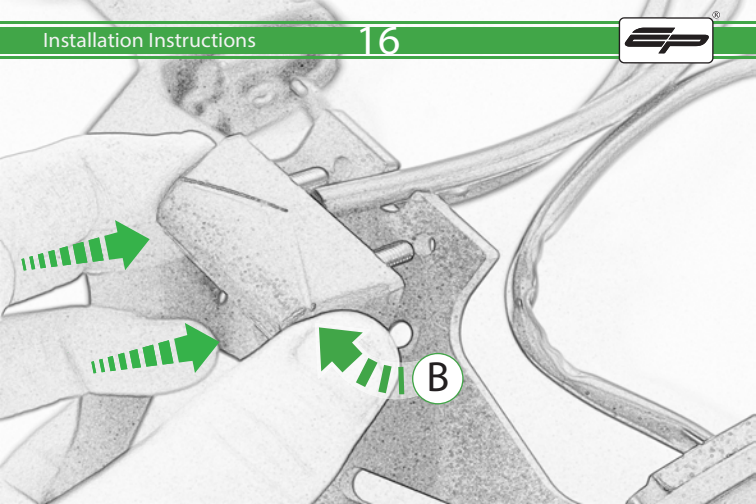


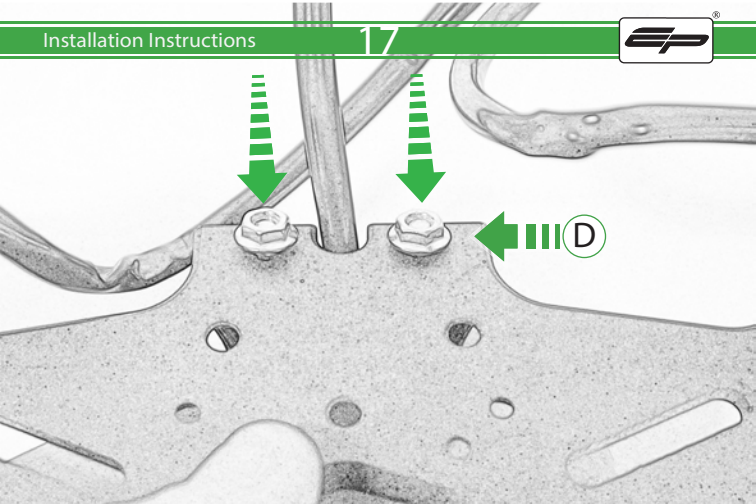


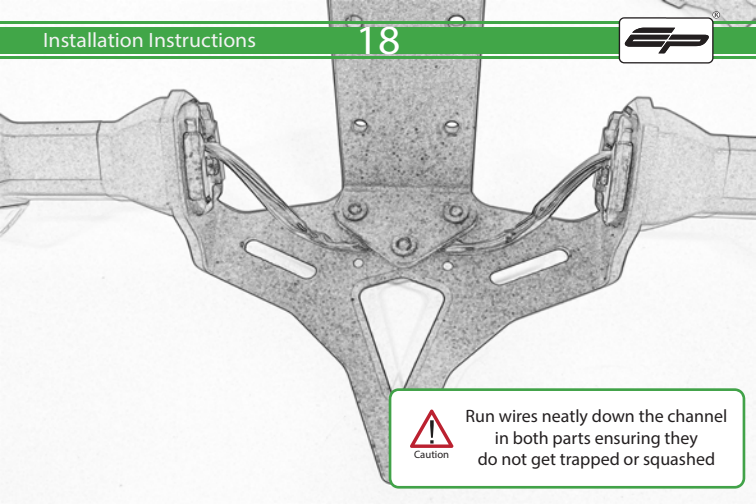


Caution



Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

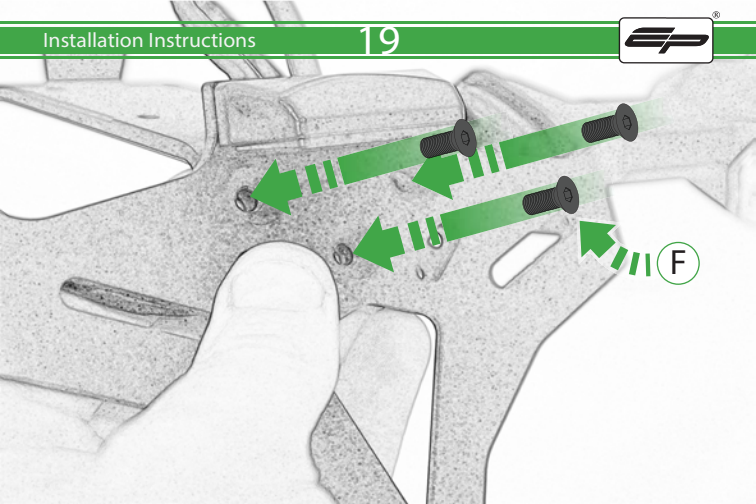


F

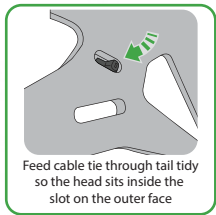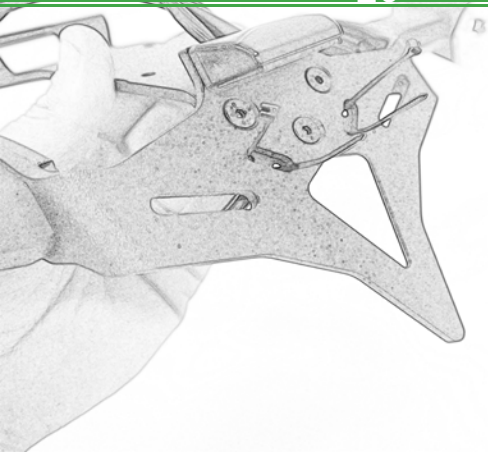


Feed cable tie through tail tidy  
so the head sits inside the  
slot on the outer face

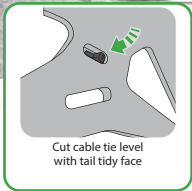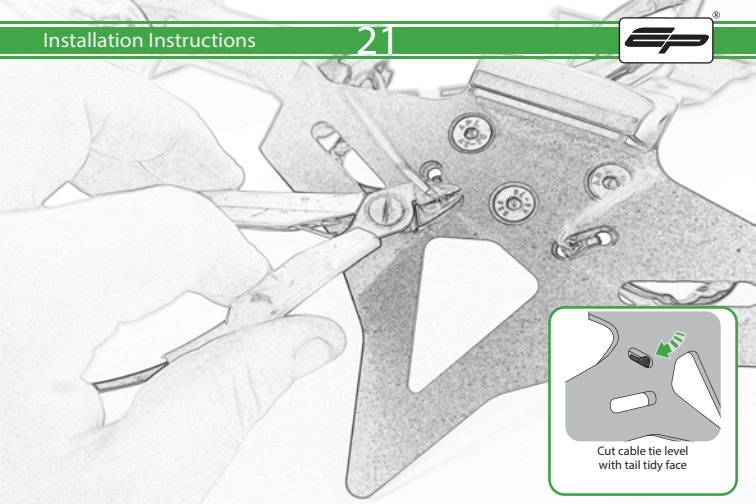



Cut cable tie level  
with tail tidy face

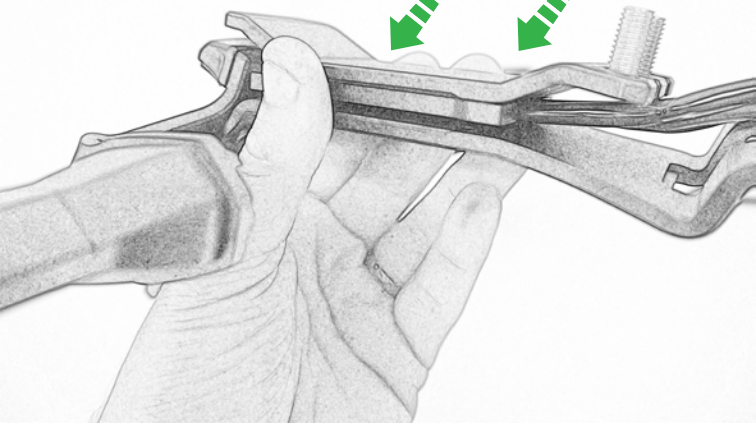





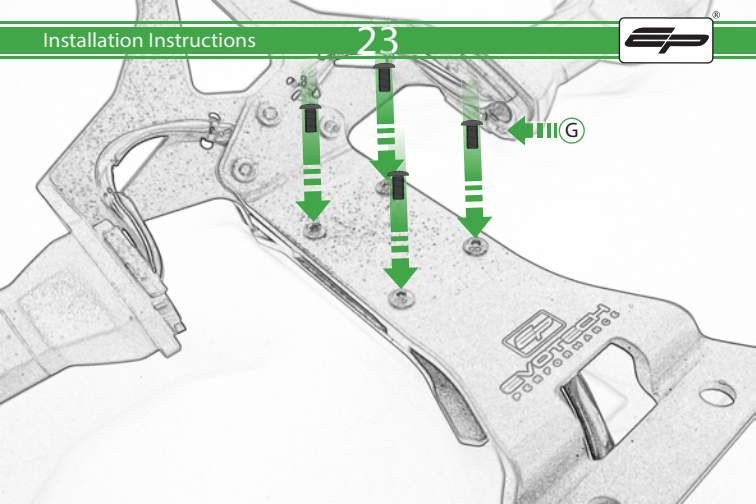



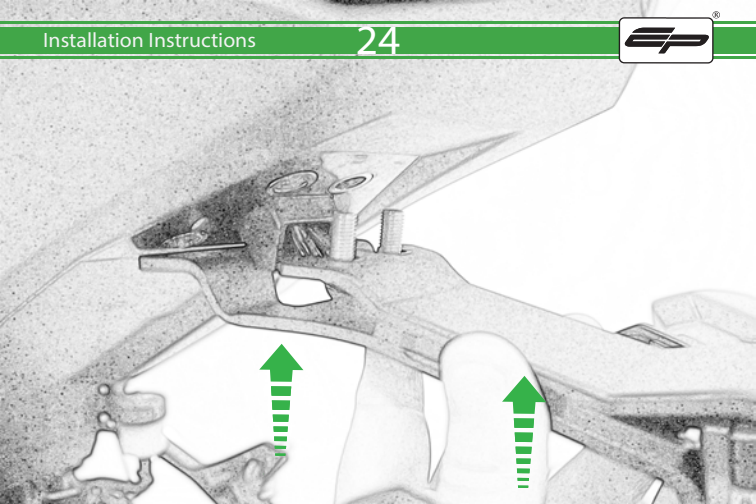


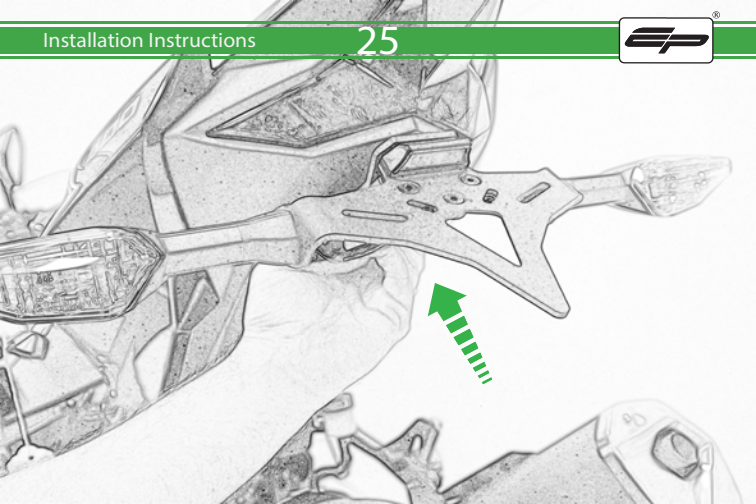


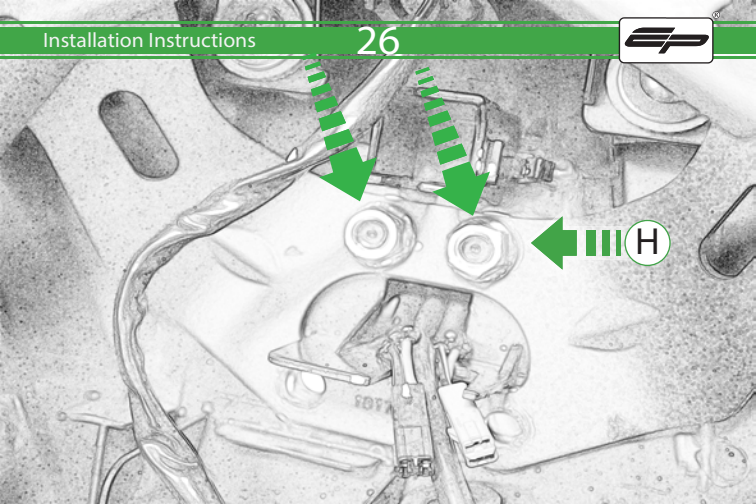

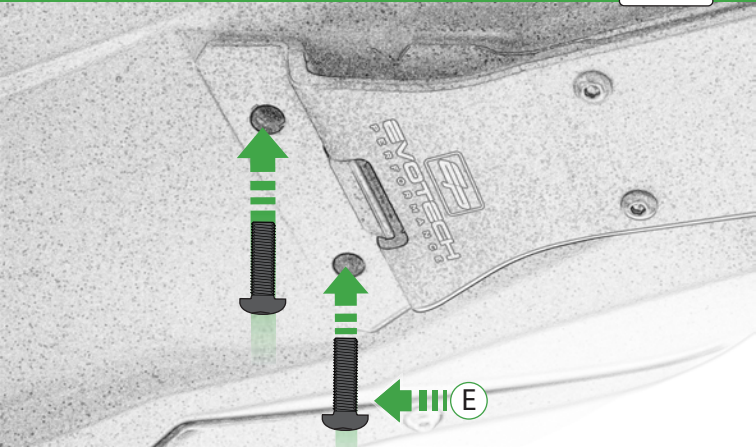


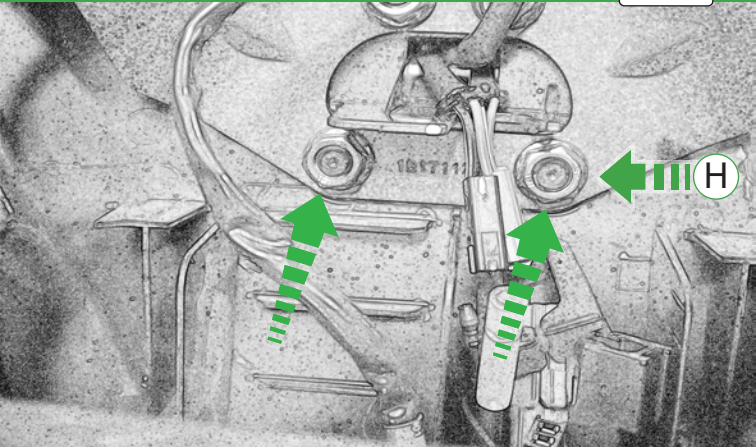

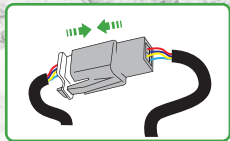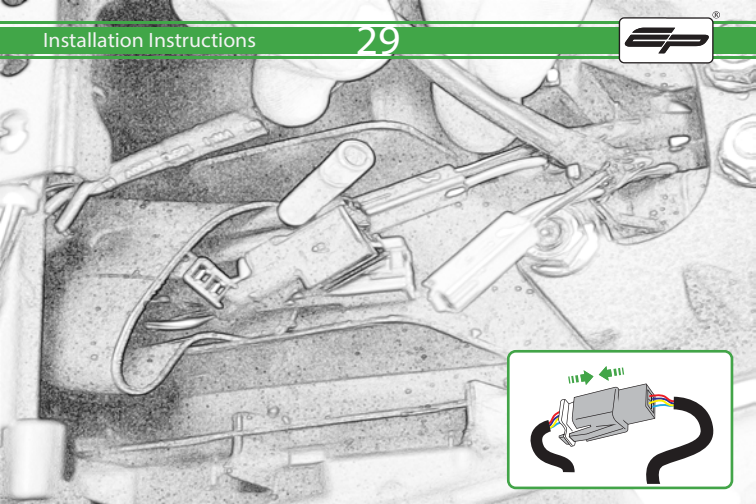








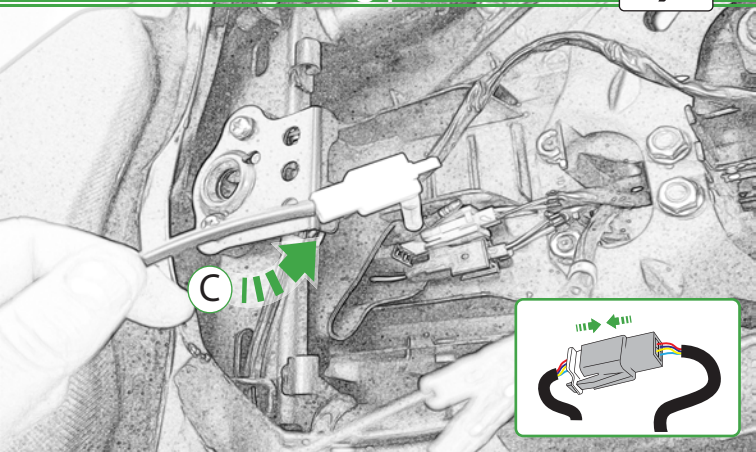

C

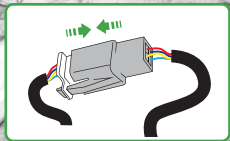

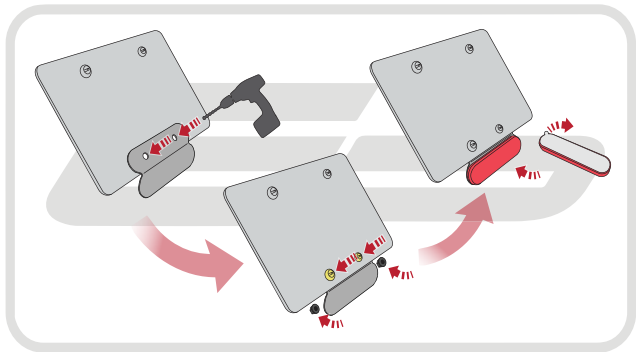

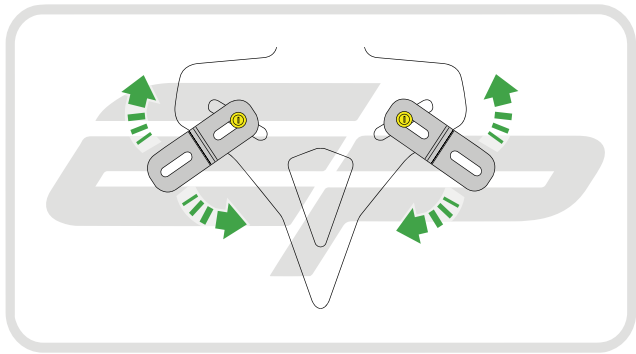



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)