



EVOTECH®
P E R F O R M A N C E


BMW R nineT
Tail Tidy


Installation Instructions






Kit Contents PRN014169


- | | |
|------------------------------------|------------------------------------|
| (A) 1 x Reflector Kit | (F) 2 x M6 Flange Nuts |
| (B) 1 x Rear Light (If Ordered) | (G) 2 x M6 x 16 Black Button Bolts |
| (C) 1 x M6 Black Washer | (H) 2 x M6 x 10 Black Button Bolts |
| (D) 1 x M6 x 30 Black Button Bolts | (I) 4 x M5 x 20 Black Button Bolts |
| (E) 2 x Indicator Spacers | (J) 4 x M5 Black Washer |
| | (K) 4 x Top Hat Spacers |

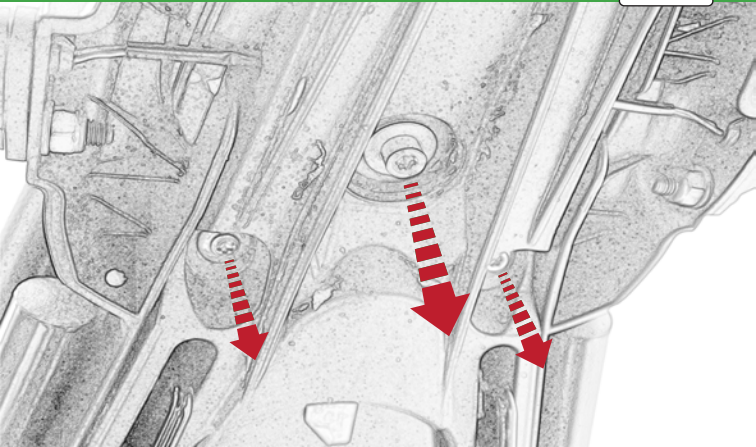

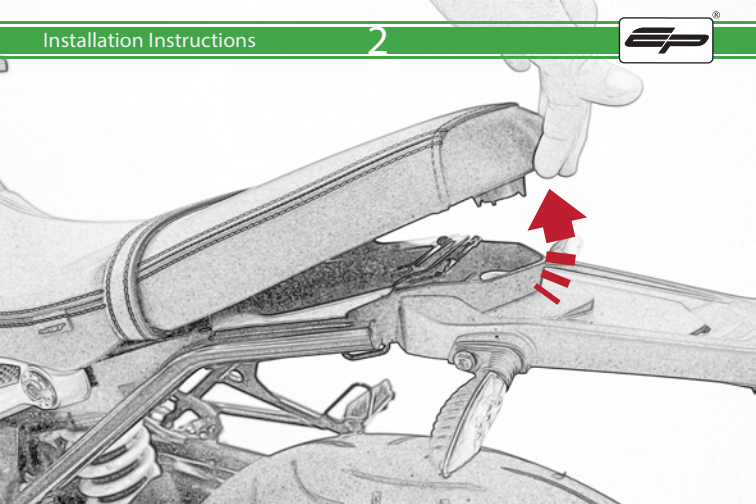

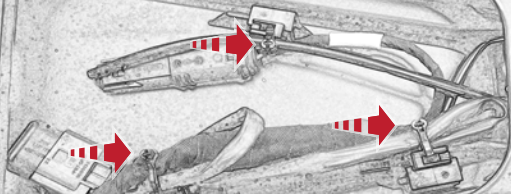

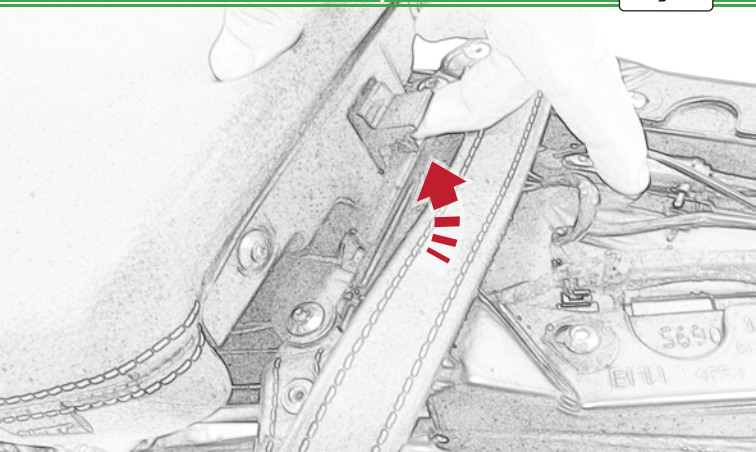

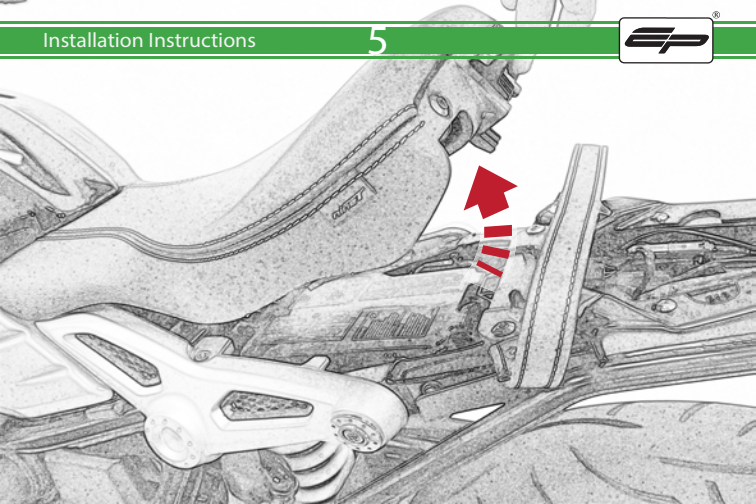


**RELEASE****RE-SET****RE-FIT****Achtung!**



Für von BMW nicht freigegebene Ersatzteile und Zubehörteile ist keine Art übernahmenehmung BMW-Kennzeichnung


Attention!


BMW does not accept any responsibility for the use of parts and accessories not approved by BMW.

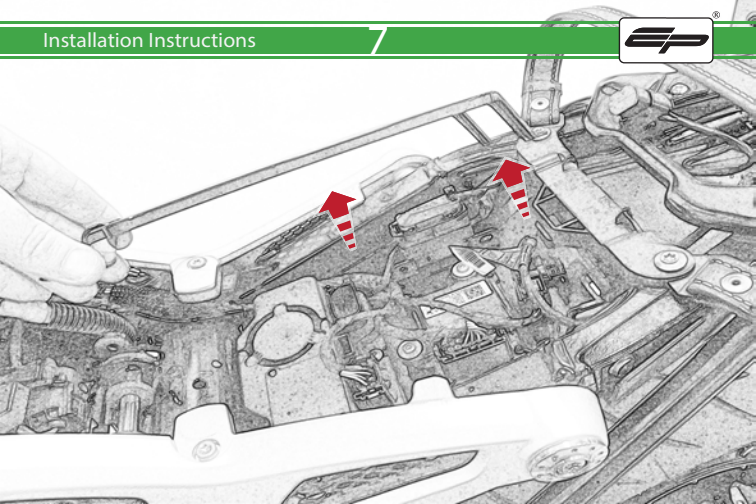





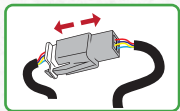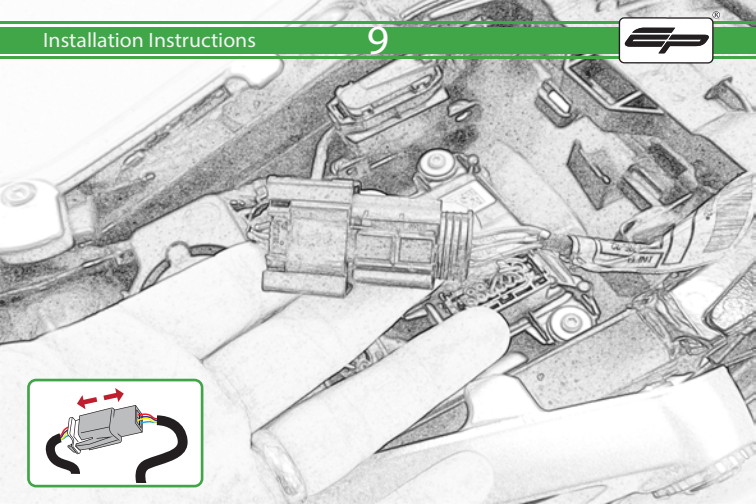


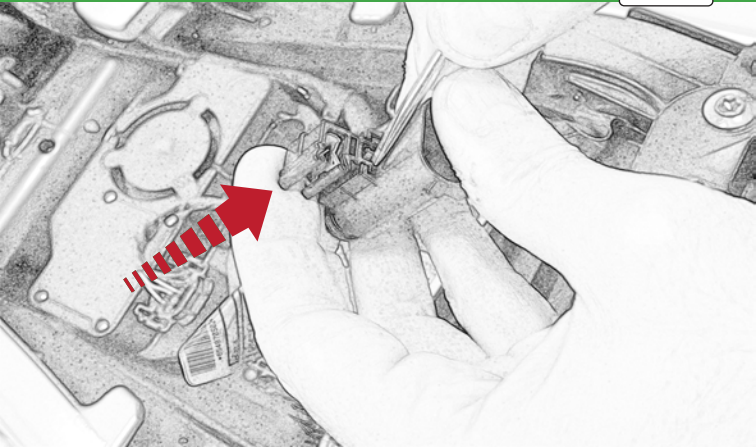


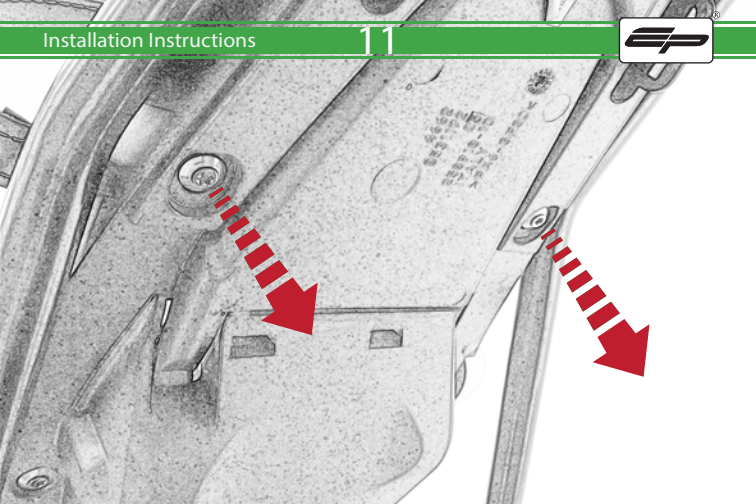


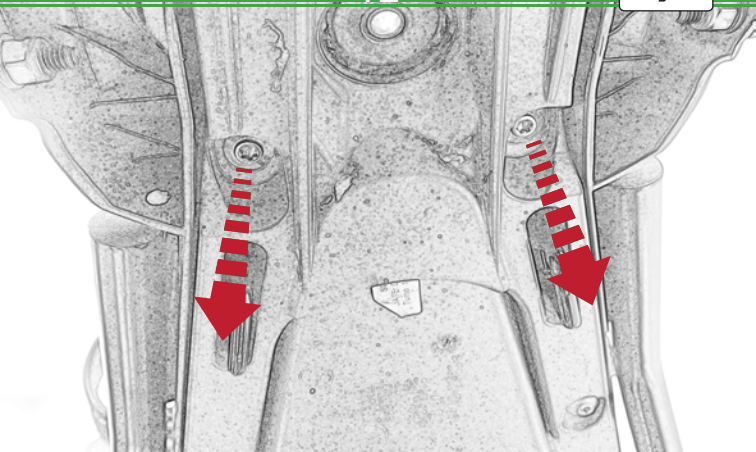


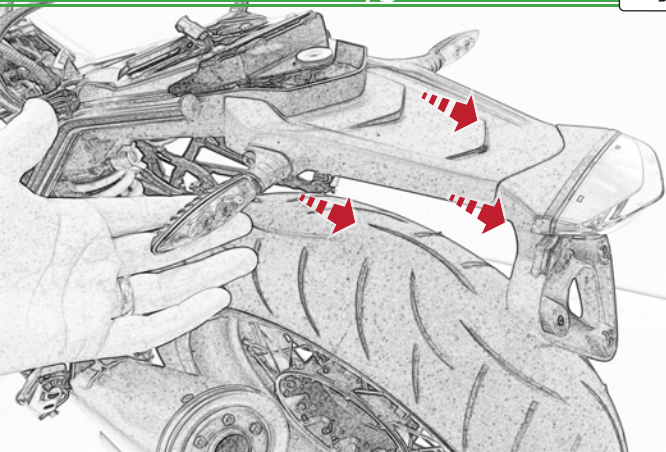


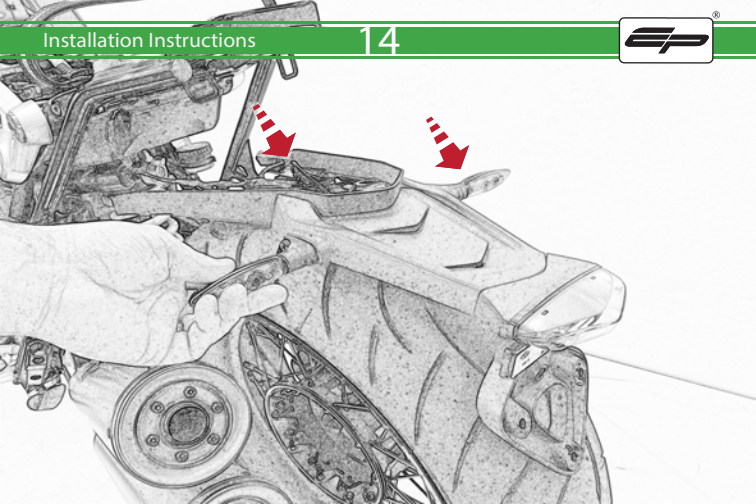


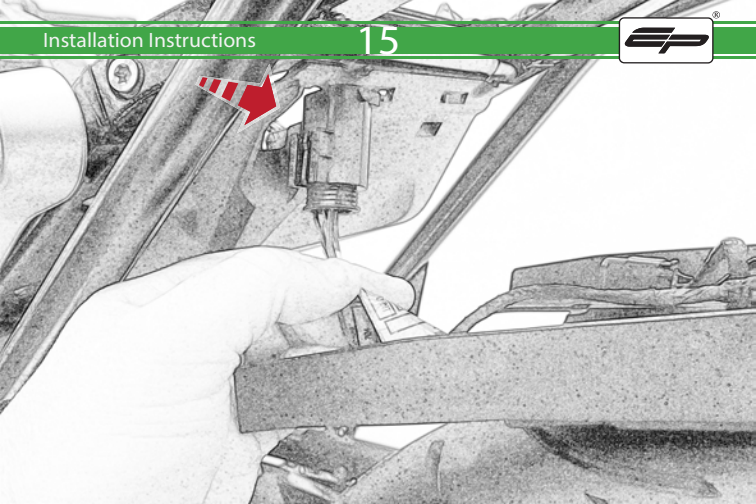



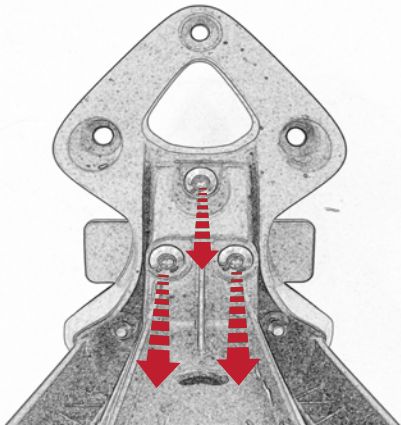



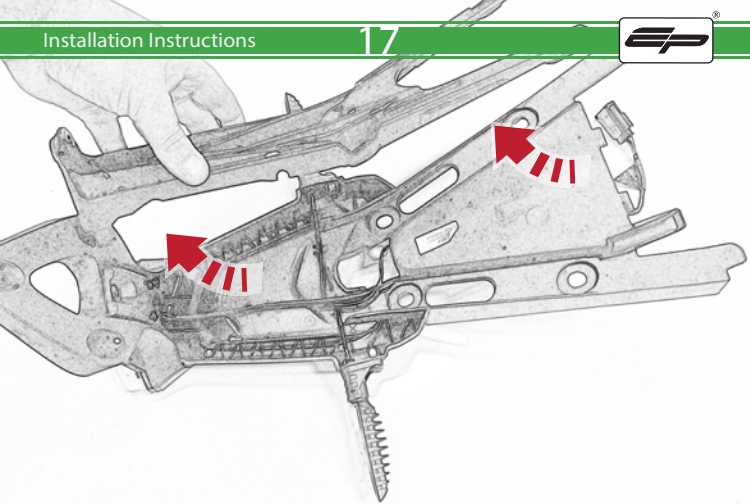


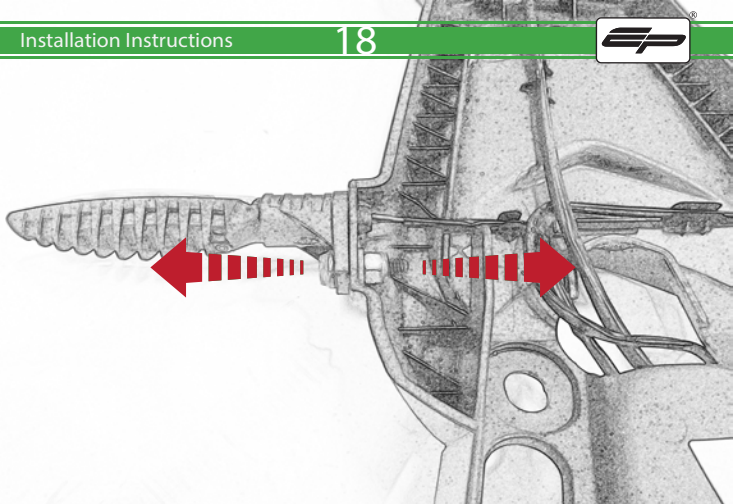


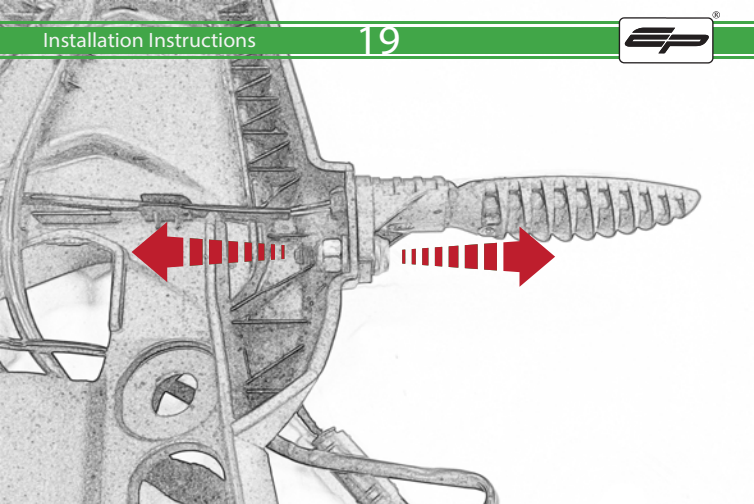

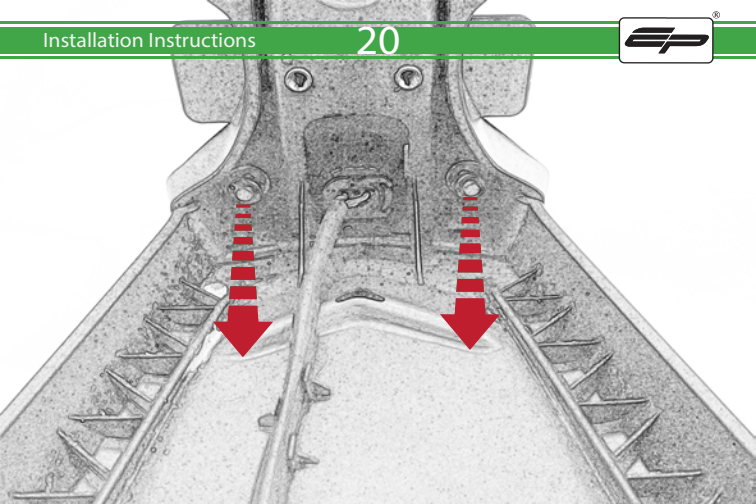


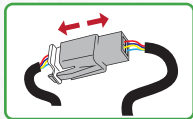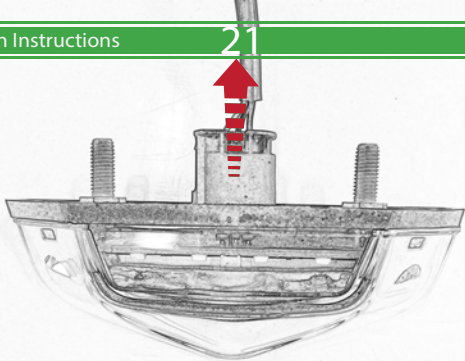

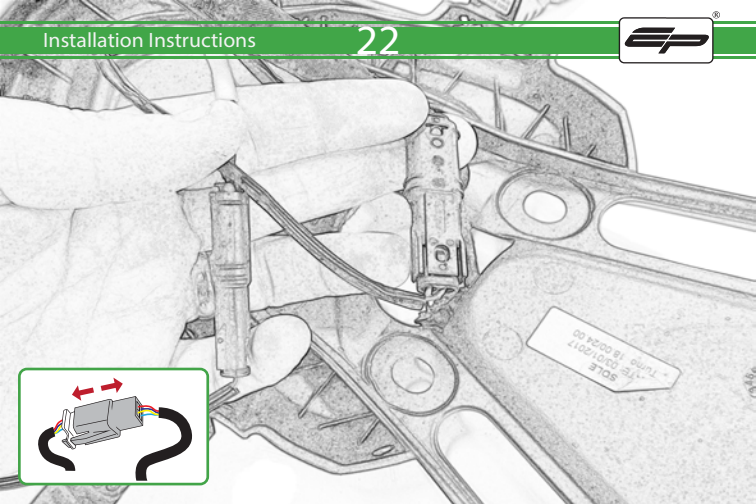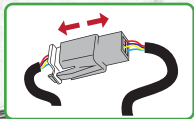


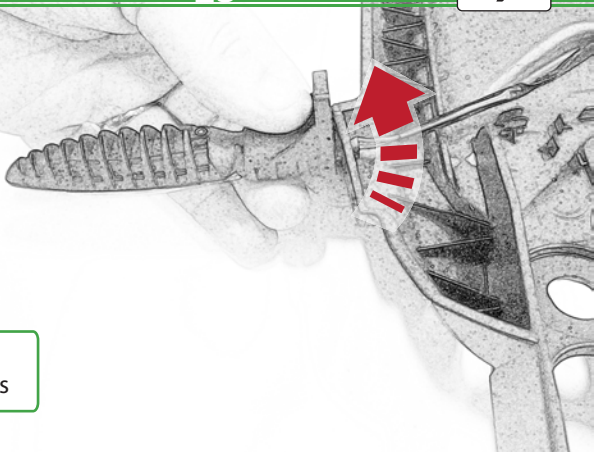


Repeat
Both Sides

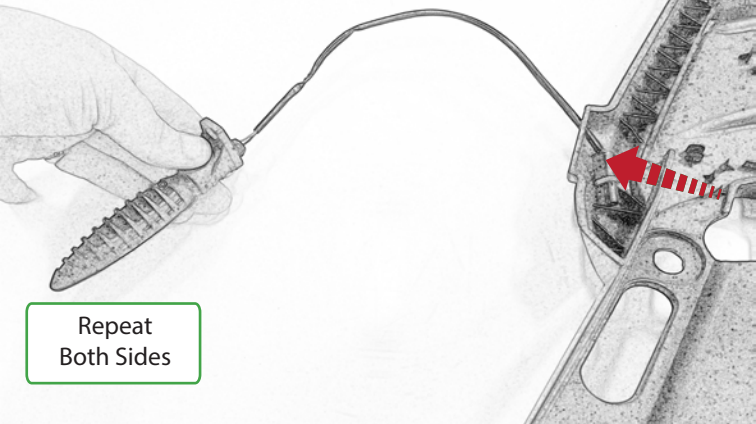


Repeat
Both Sides

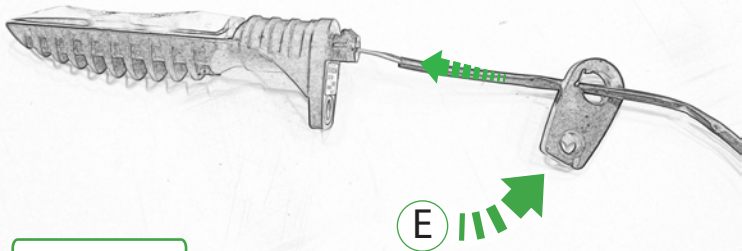


Repeat
Both Sides

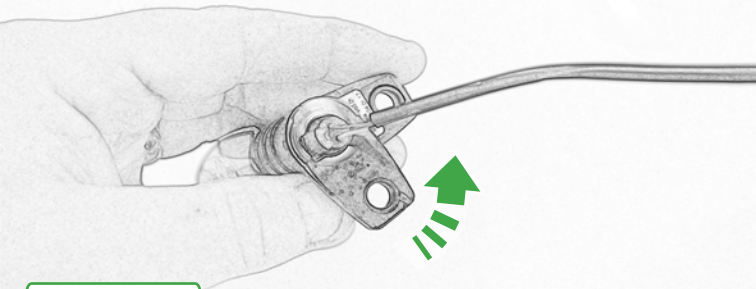


Repeat
Both Sides

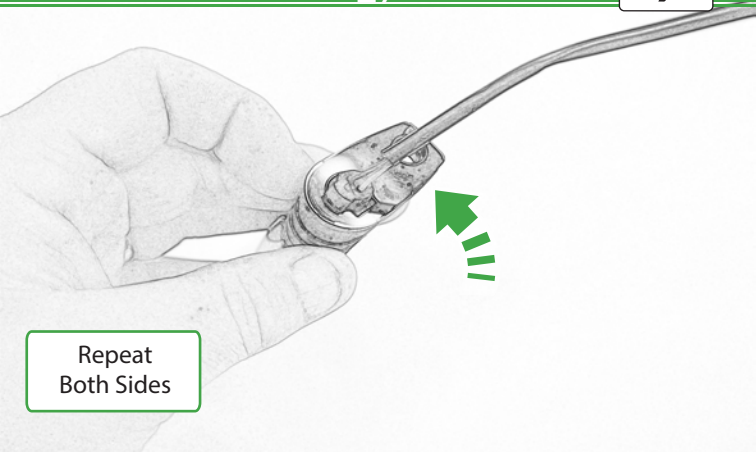


Repeat
Both Sides

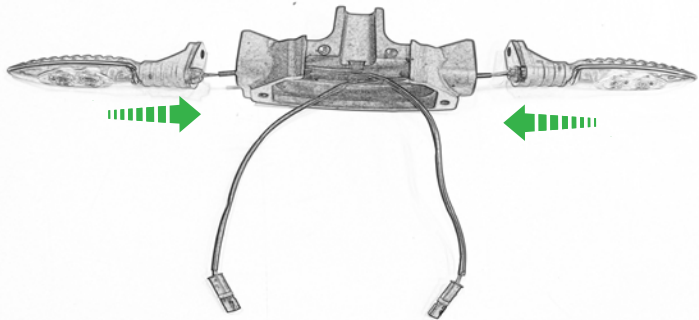

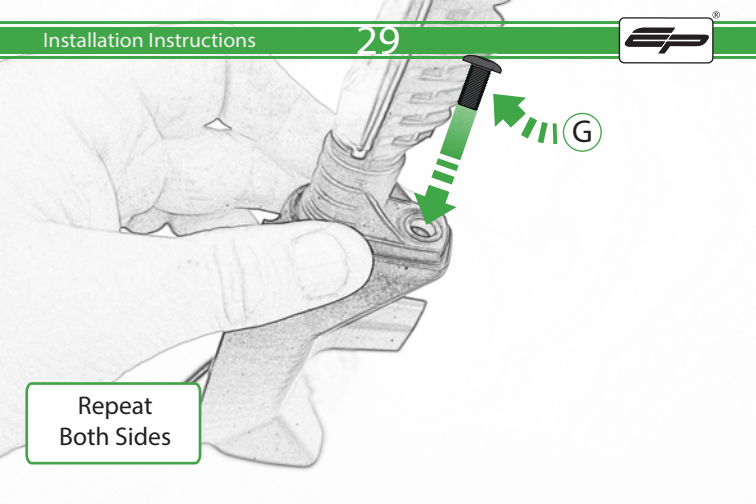



Repeat
Both Sides


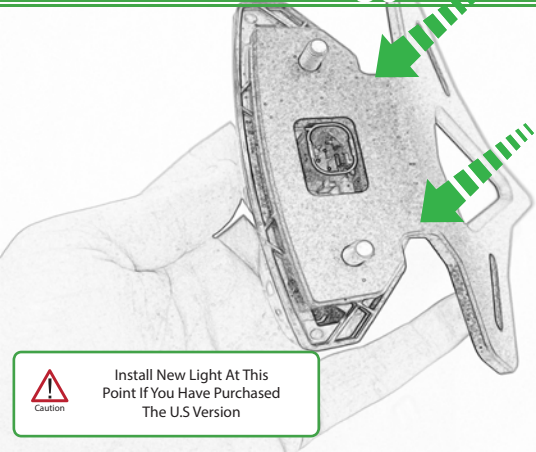


Caution

Install New Light At This
Point If You Have Purchased
The U.S Version

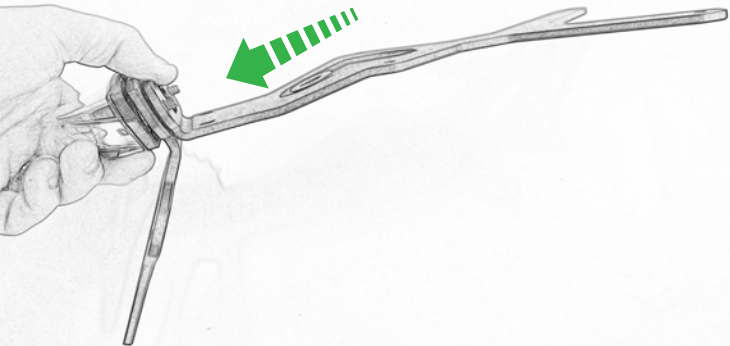


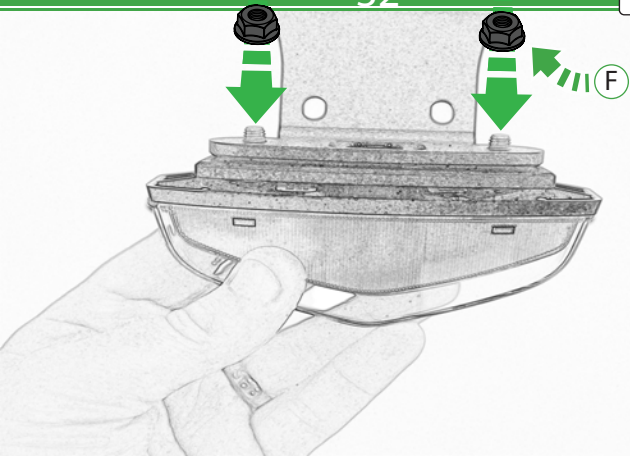


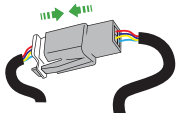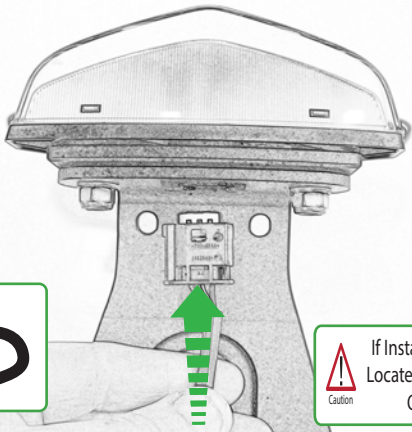



Caution


If Installing The U.S Version
Locate the Correct Connector
On the OEM Loom

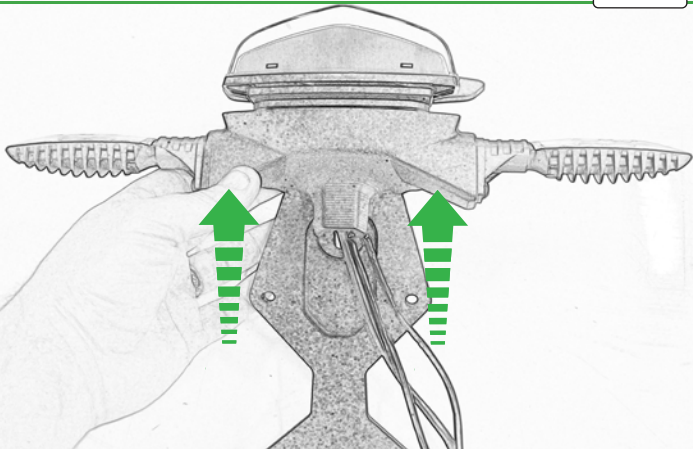


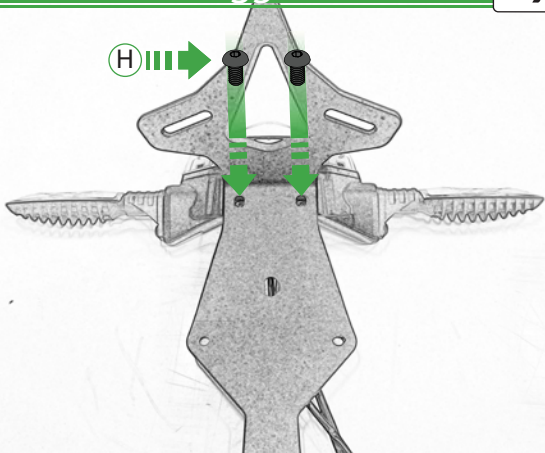

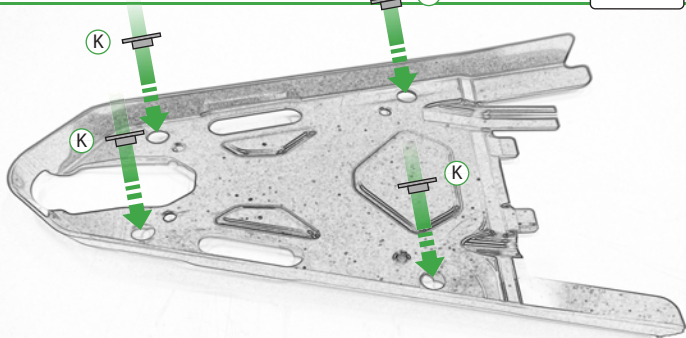

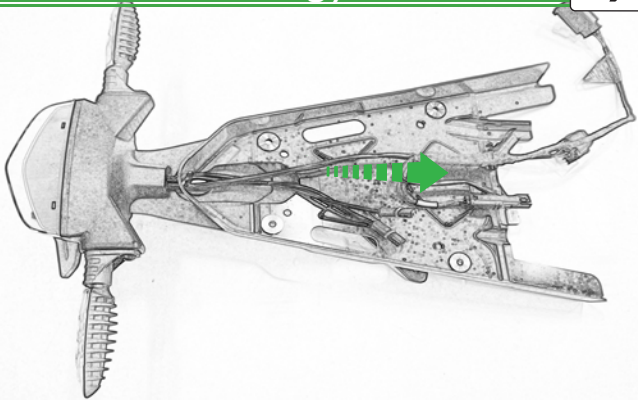

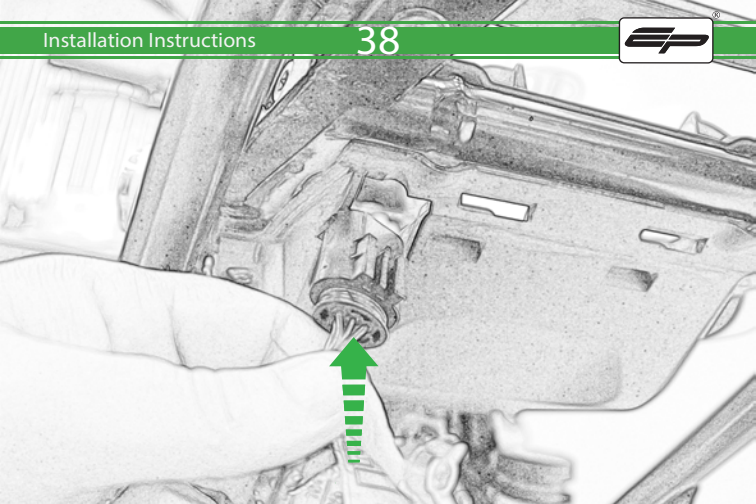


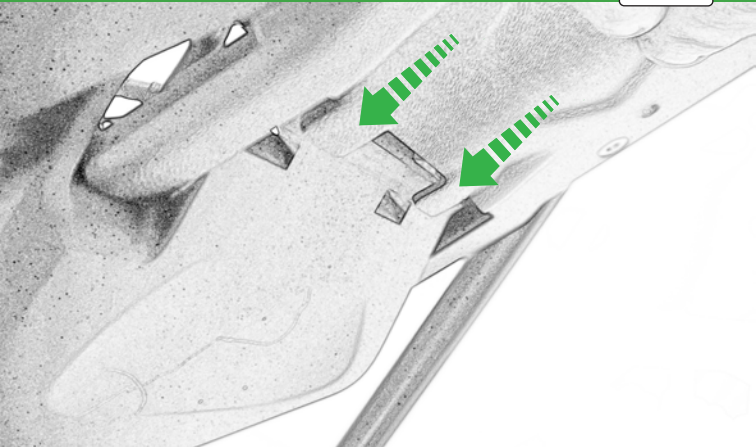



Caution

Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

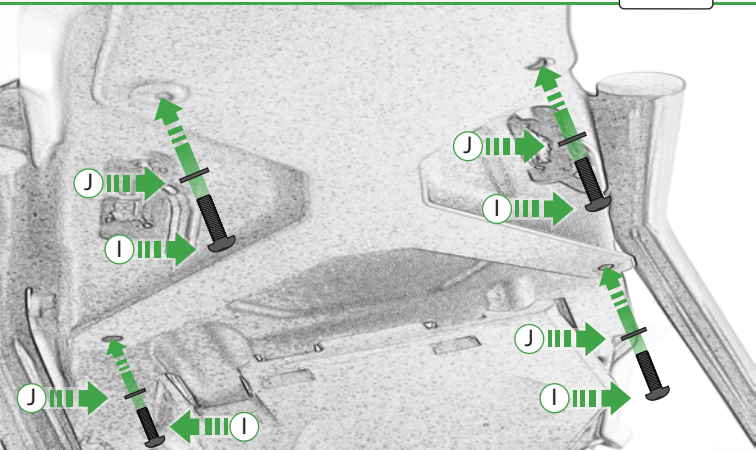








Caution


For U.S. version locate the additional OEM loom light connector (European) Part Number 987360-1

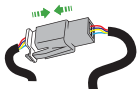

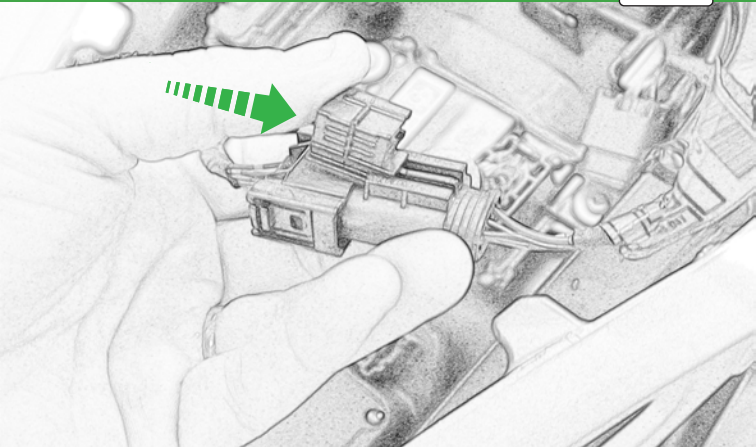



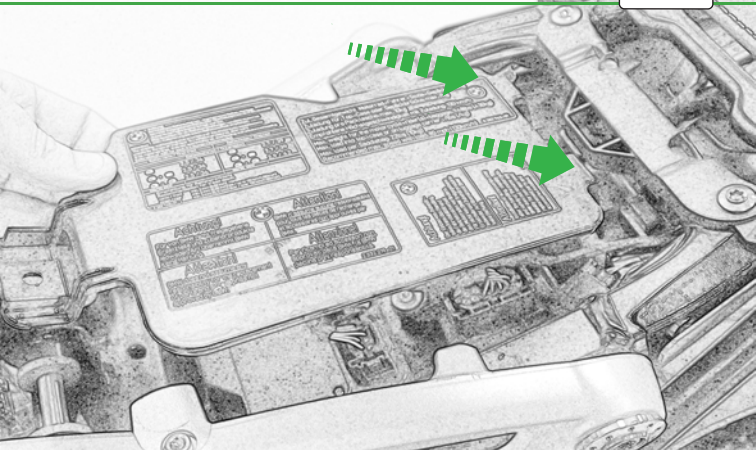

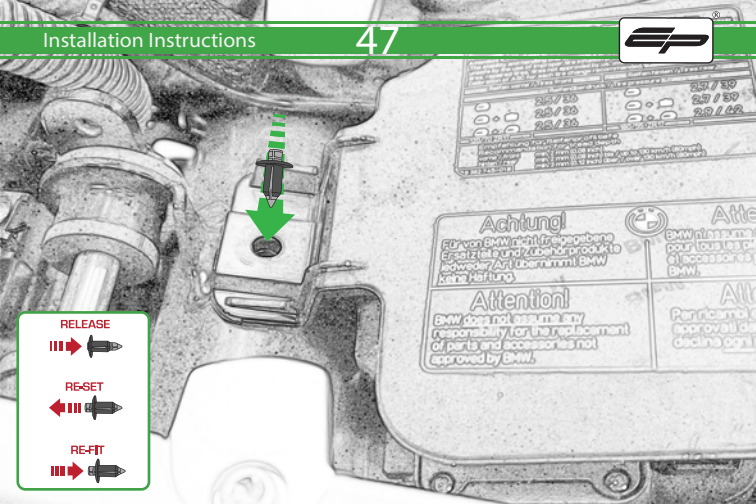

RELEASE



RE-SET



RE-FIT



Achtung!

Für von BMW nicht freigegebene Ersatzteile und Zubehörprodukte ist jedweder Art übernimmt BMW keine Haftung.





Attention!
BMW n'assume aucune responsabilité pour tous les aspects d'accessoires non approuvés par BMW.


Attention!


BMW does not assume any responsibility for the replacement of parts and accessories not approved by BMW.


Attenzione!
BMW non assume alcuna responsabilità per l'installazione di accessori non approvati da BMW.

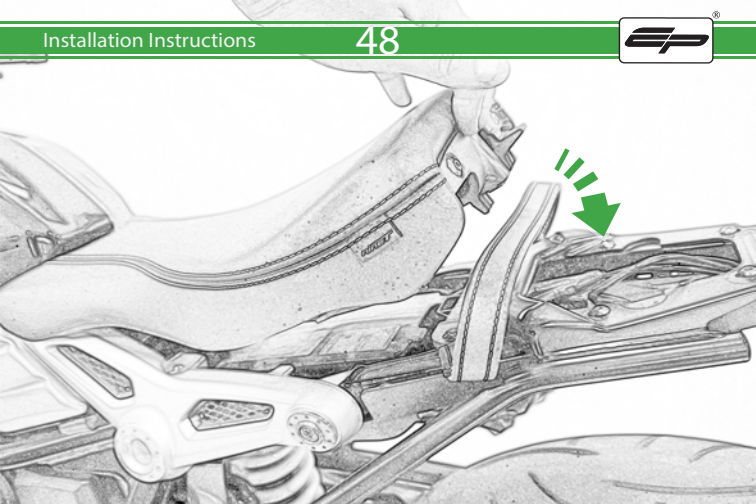

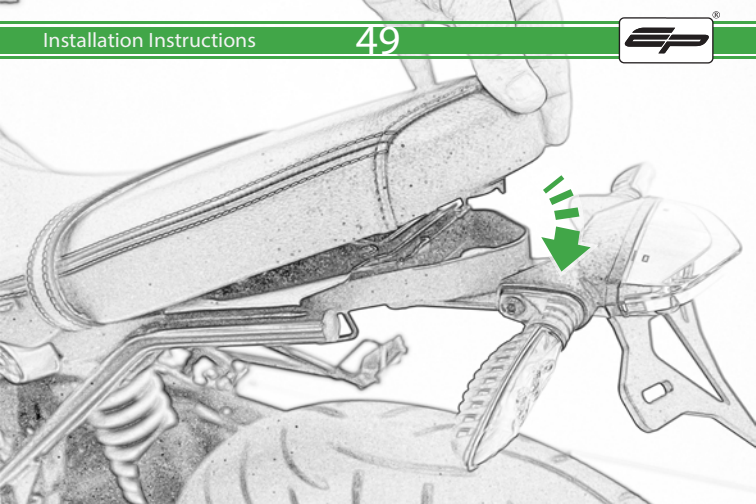

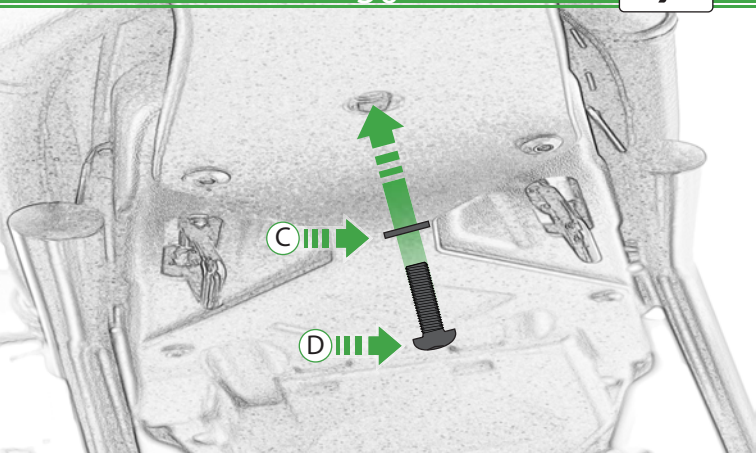

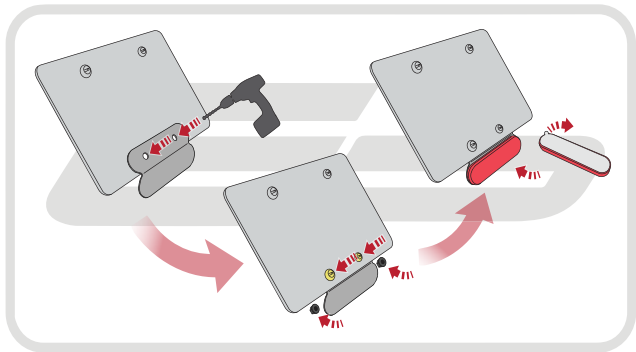

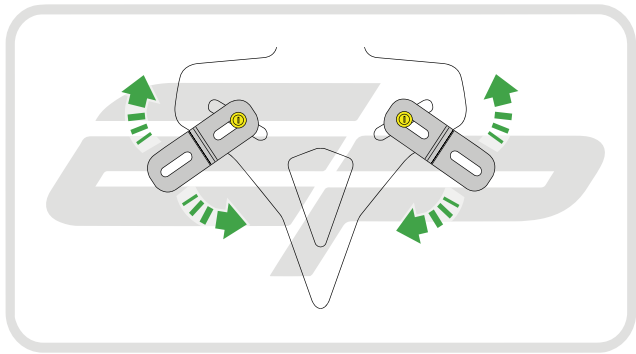



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com