



Kawasaki ZX6R
Crash Protection


Installation Instructions





Kit Contents PRN014189

- (A) 1 x L/H Bobbin Spacer
- (B) 1 x R/H Bobbin Spacer
- (C) 2 x Low Profile Bobbin Head
- (D) 2 x M10 Custom Washer
- (E) 2 x Polyurathane Washer
- (F) 2 x M10 120mm x 1.25mm Caphead



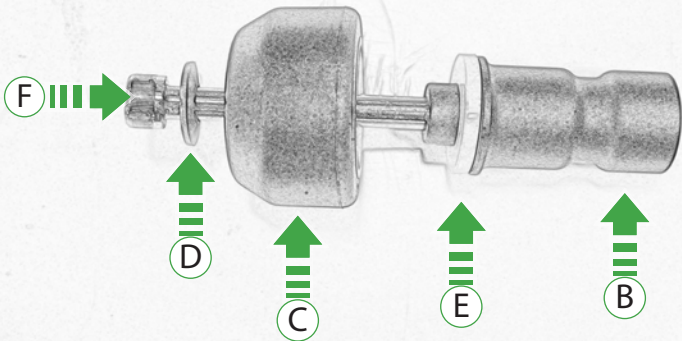


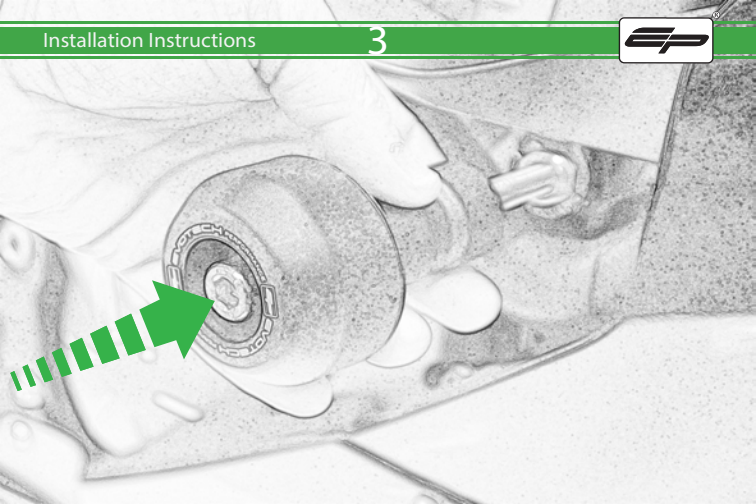


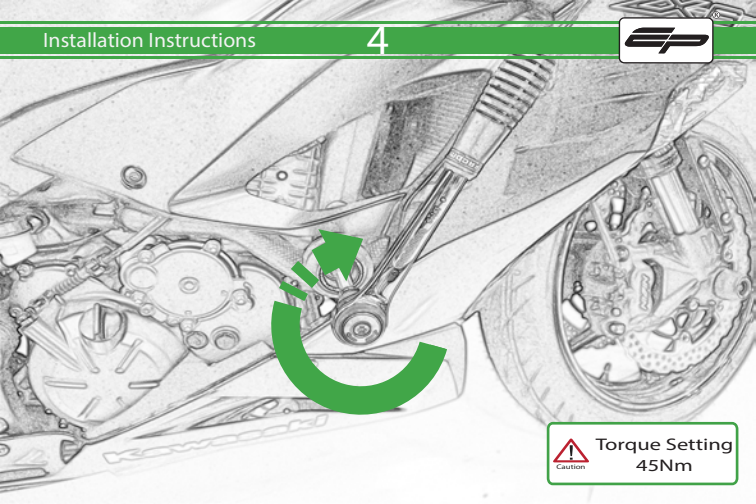

Caution

Torque Setting
45Nm

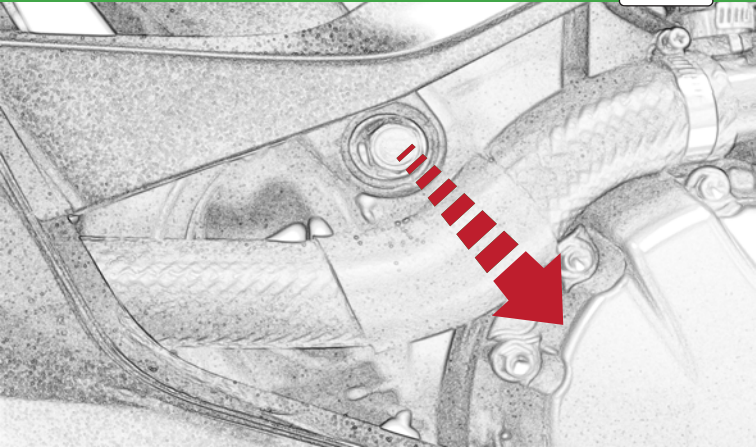

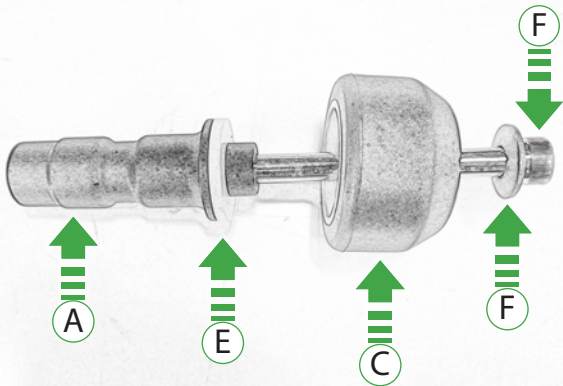





Torque Setting
45Nm

Kawasaki



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com