



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

BMW S 1000 XR Radiator Guard Set

Installation Instructions




Kit Contents PRN014331-015018


- Ⓐ 2 x M5 x 8 Black Button Head
- Ⓑ 6 x Neoprene
- Ⓒ 10 x Rubber Bung

Installation Instructions


1

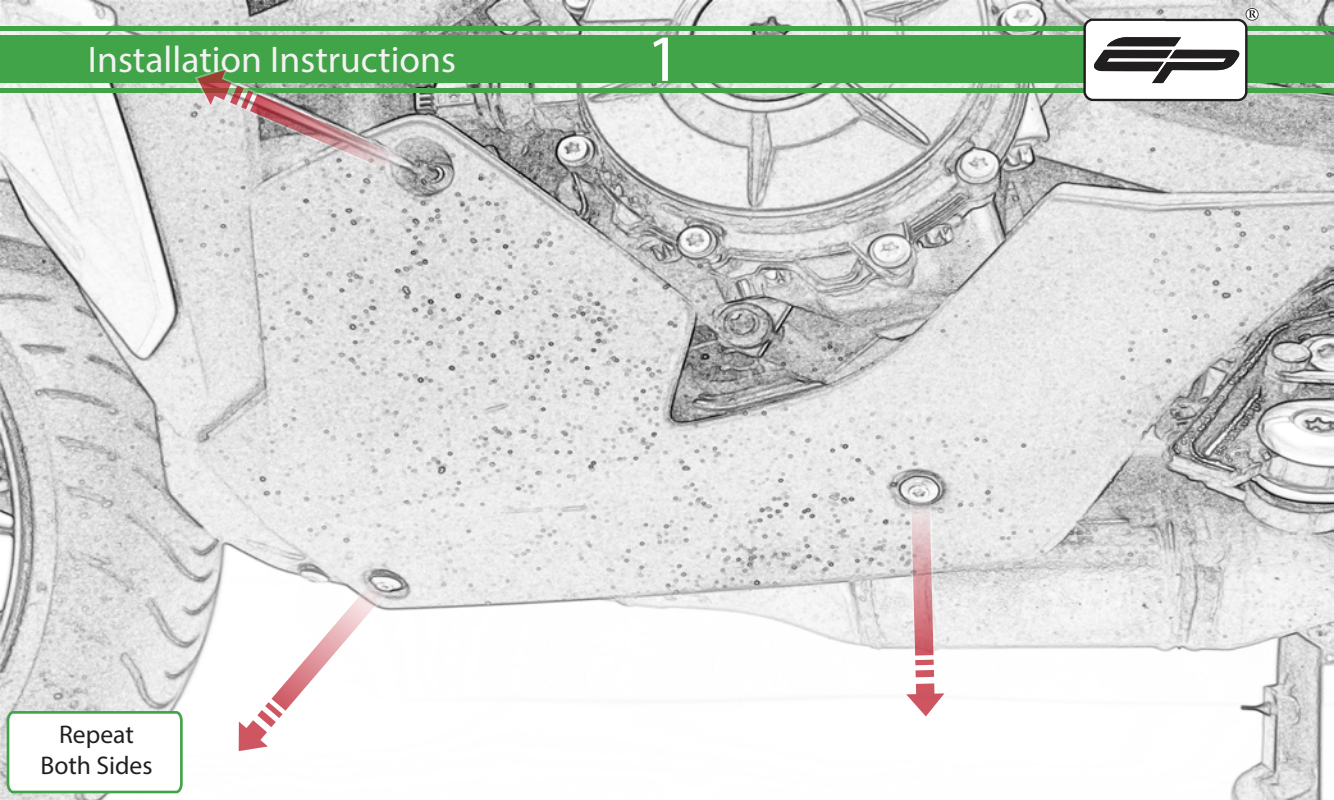

Repeat
Both Sides

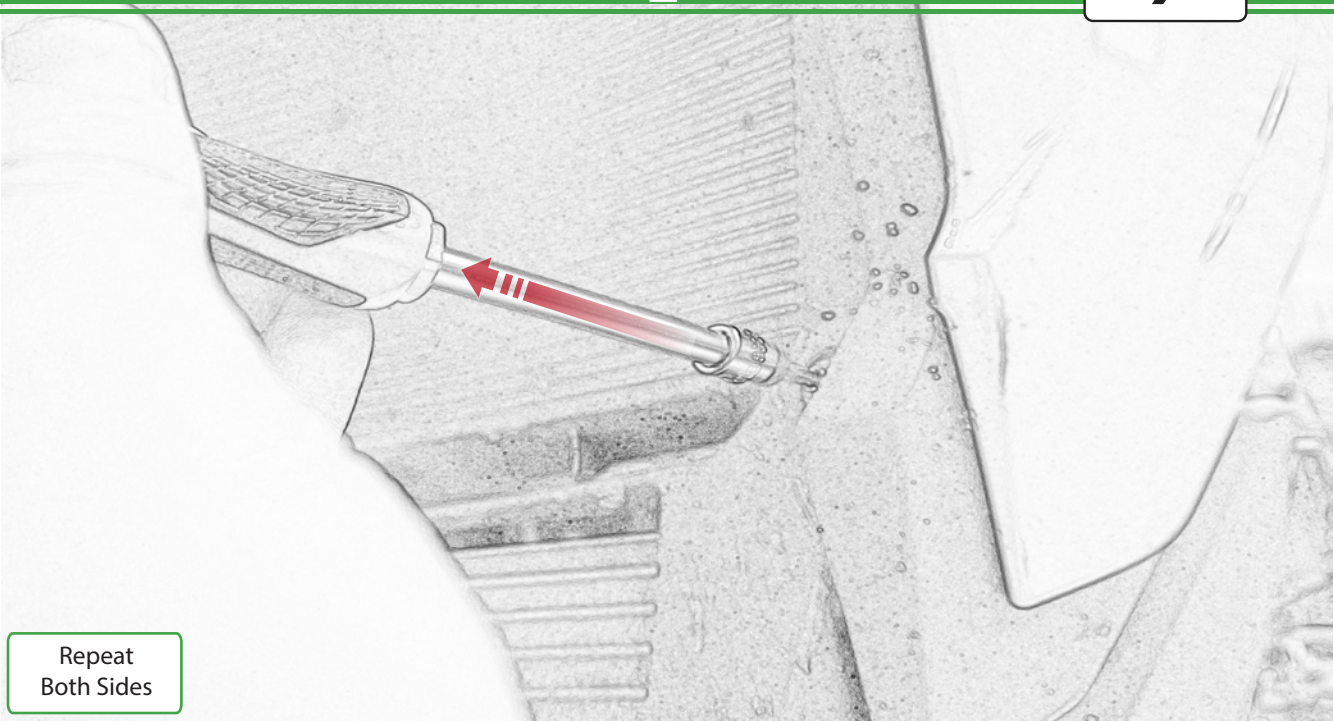


Repeat
Both Sides

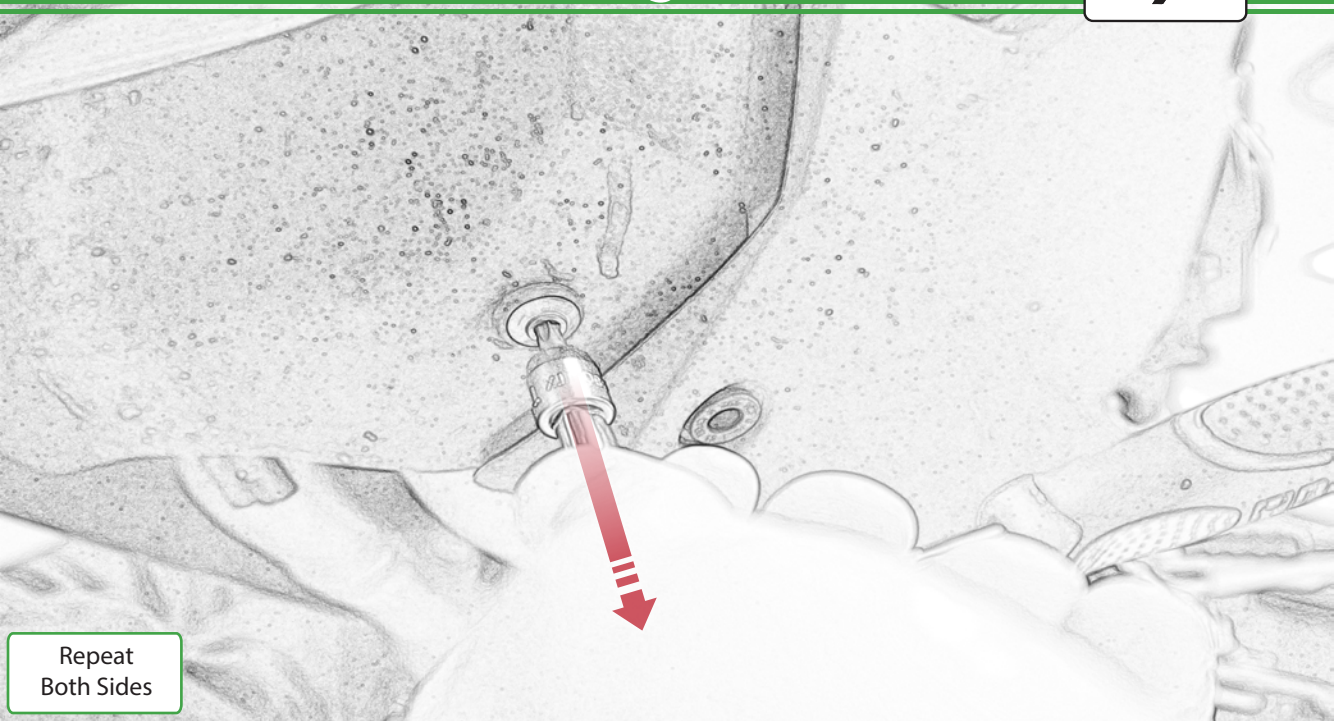


Repeat
Both Sides




Repeat
Both Sides

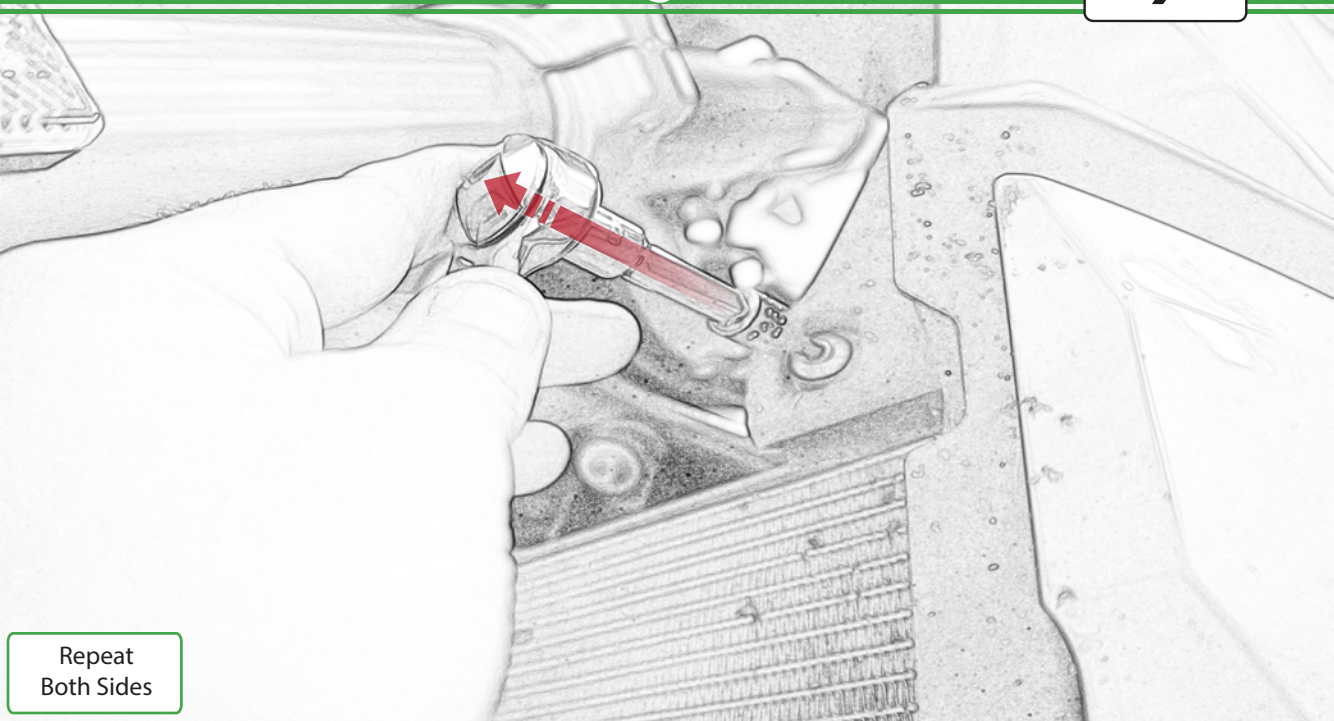


Repeat
Both Sides

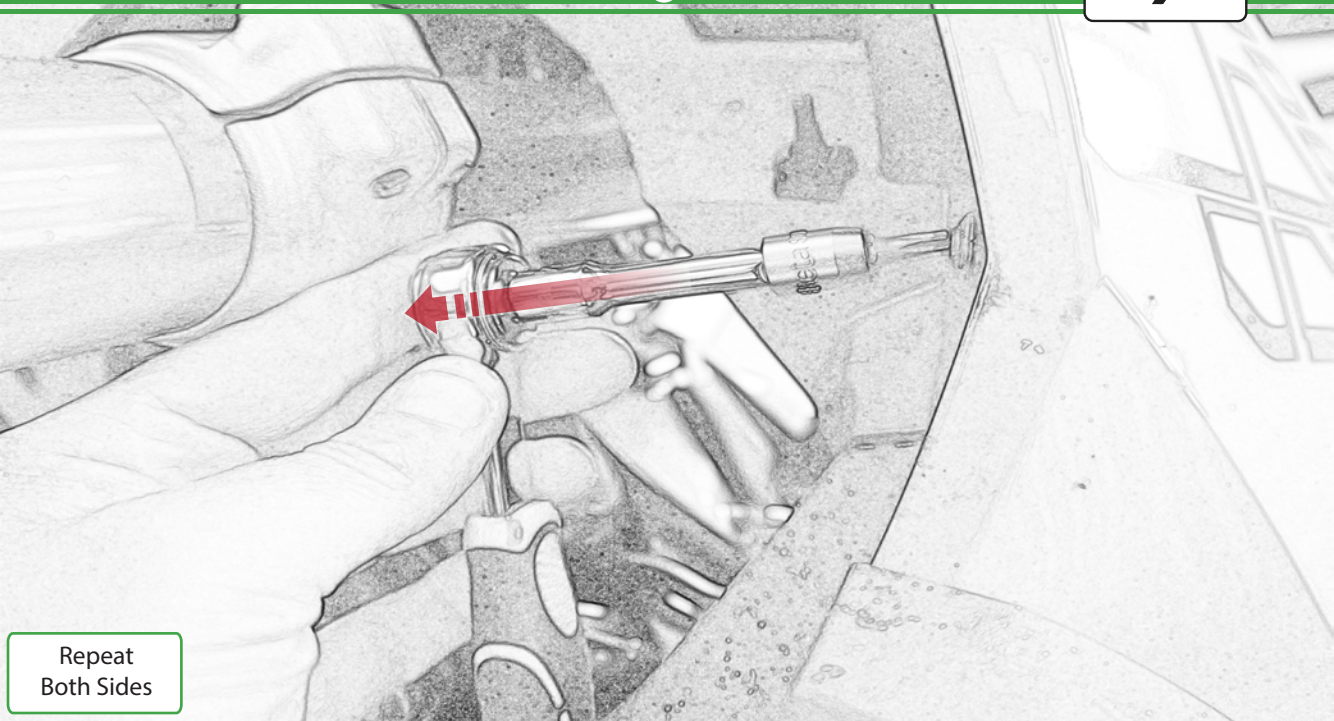

Repeat
Both Sides

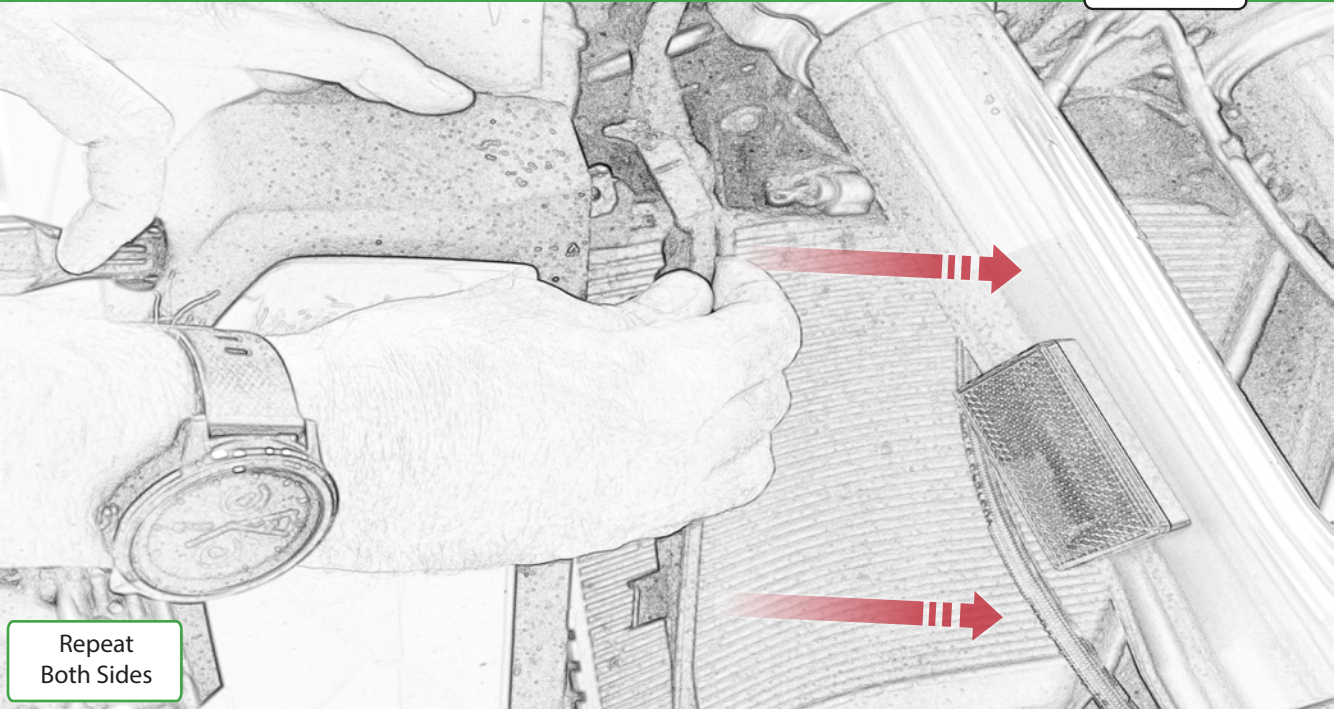


Repeat
Both Sides

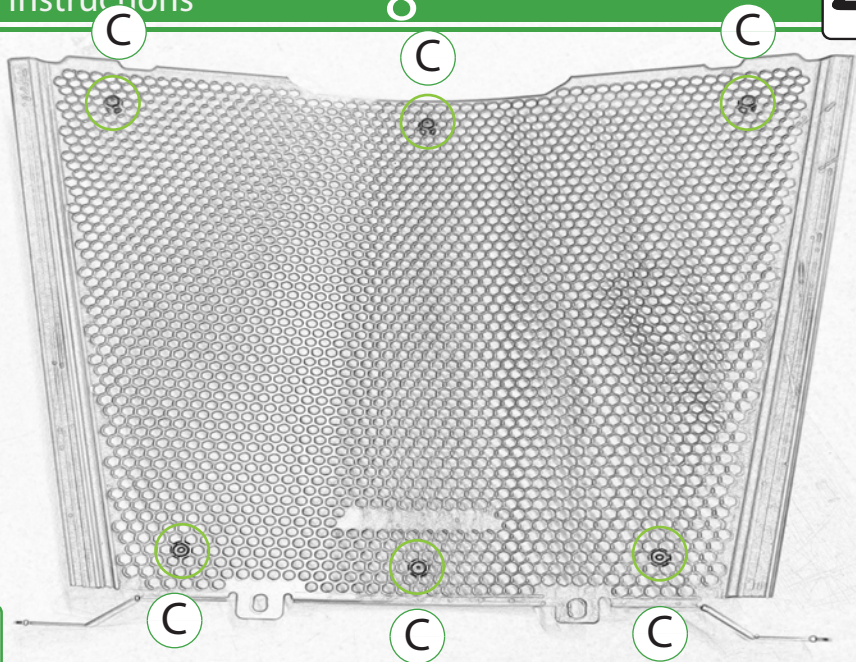

Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face




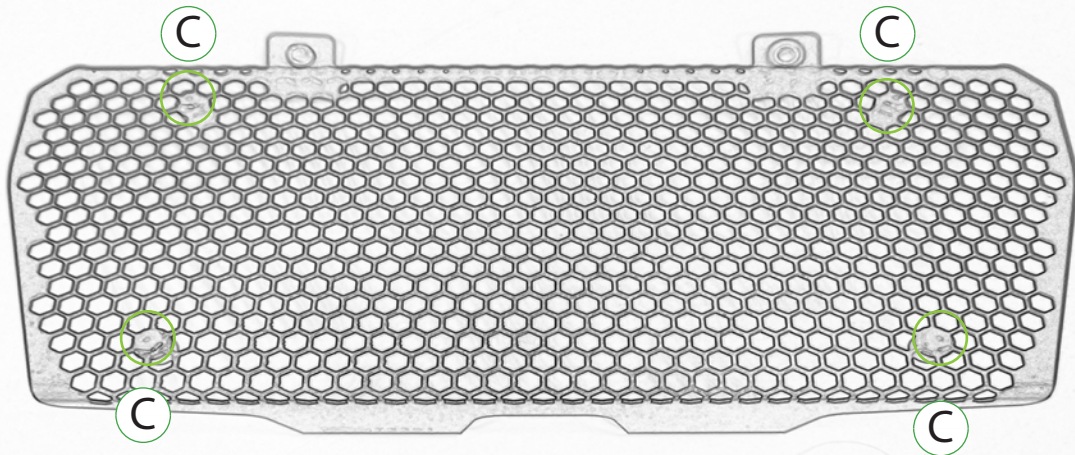


Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face




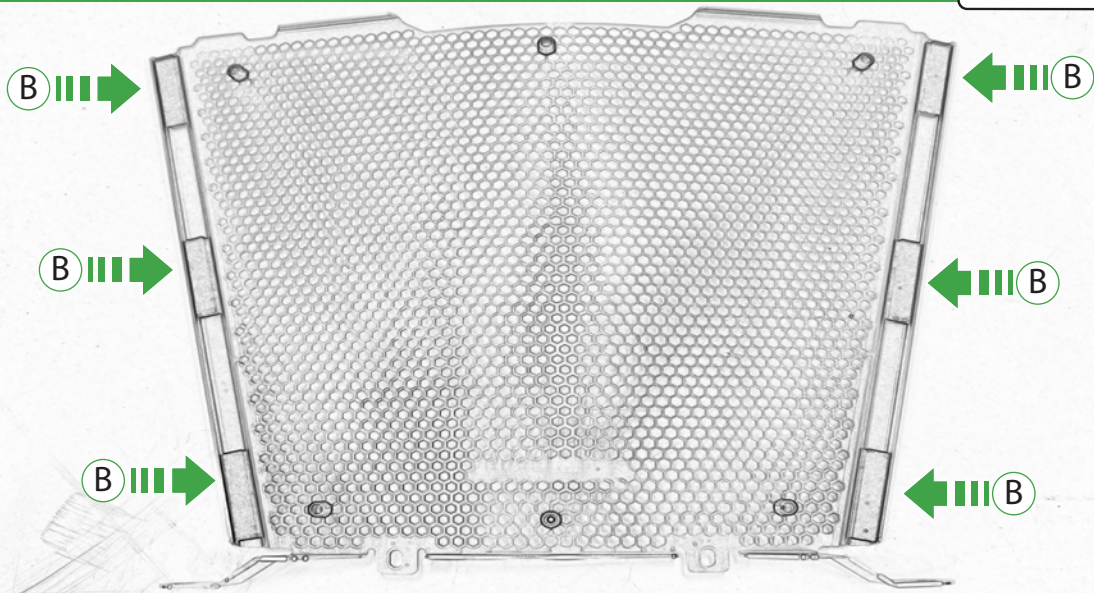

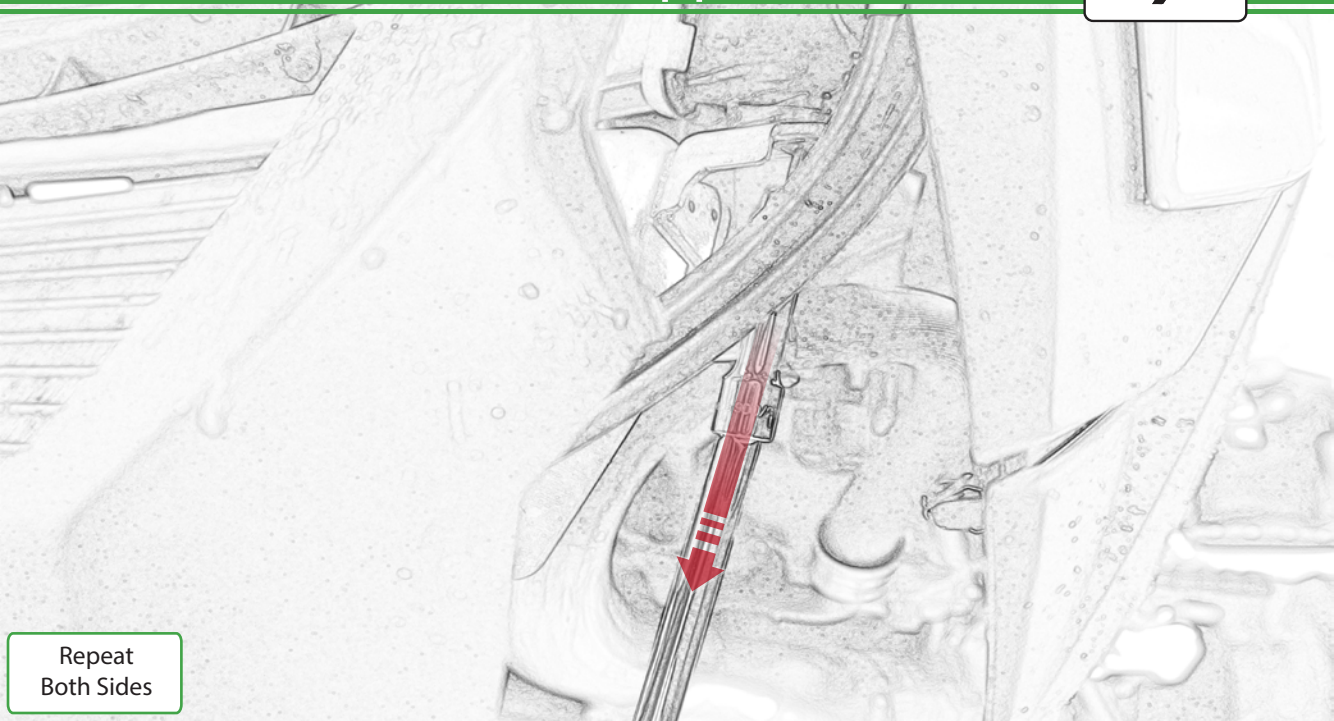


Repeat
Both Sides

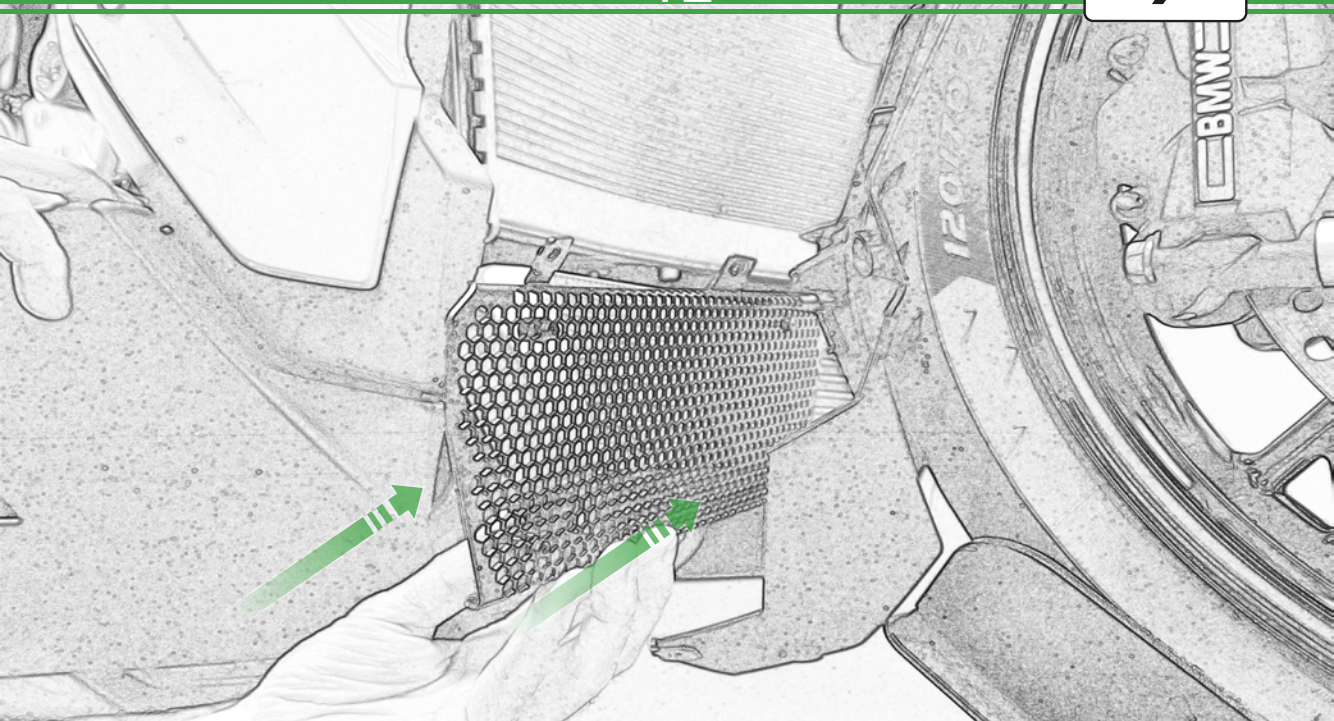



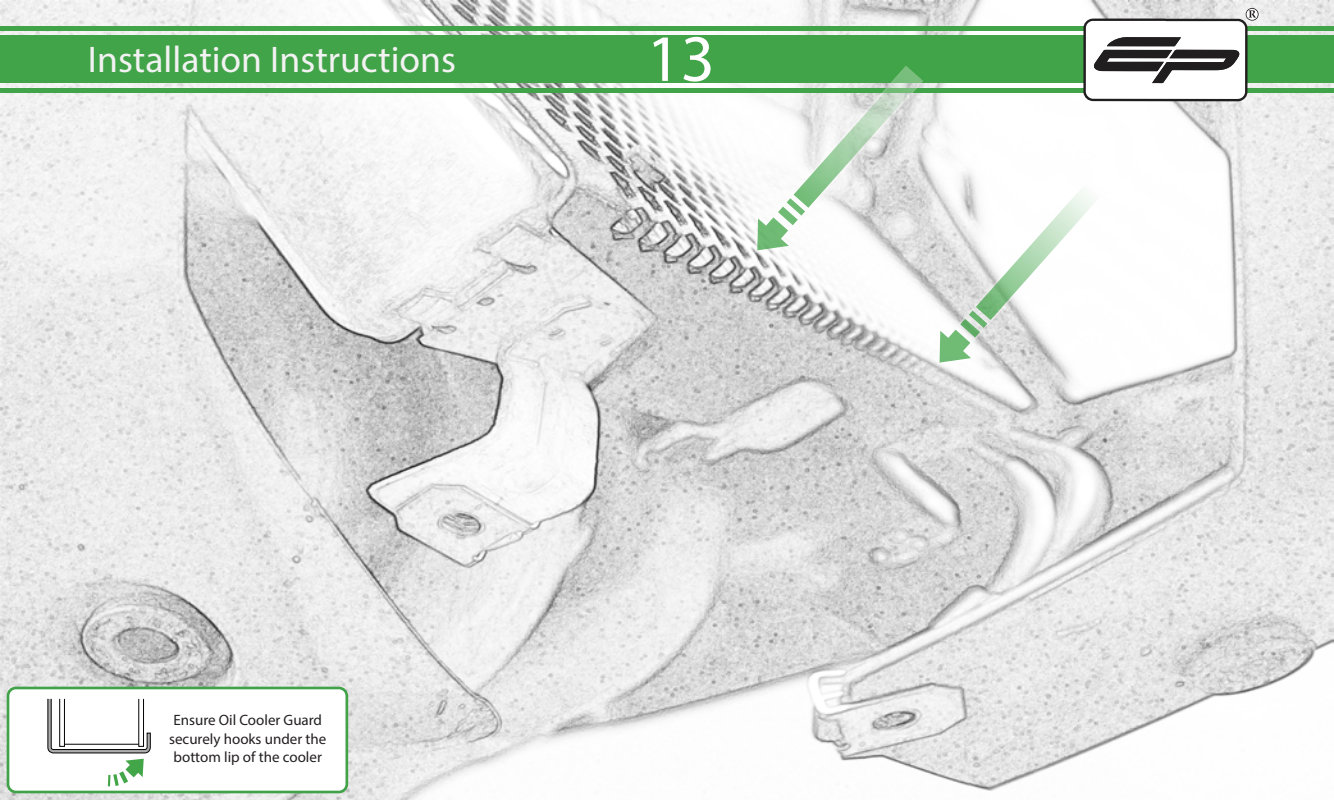


Ensure Oil Cooler Guard
securely hooks under the
bottom lip of the cooler

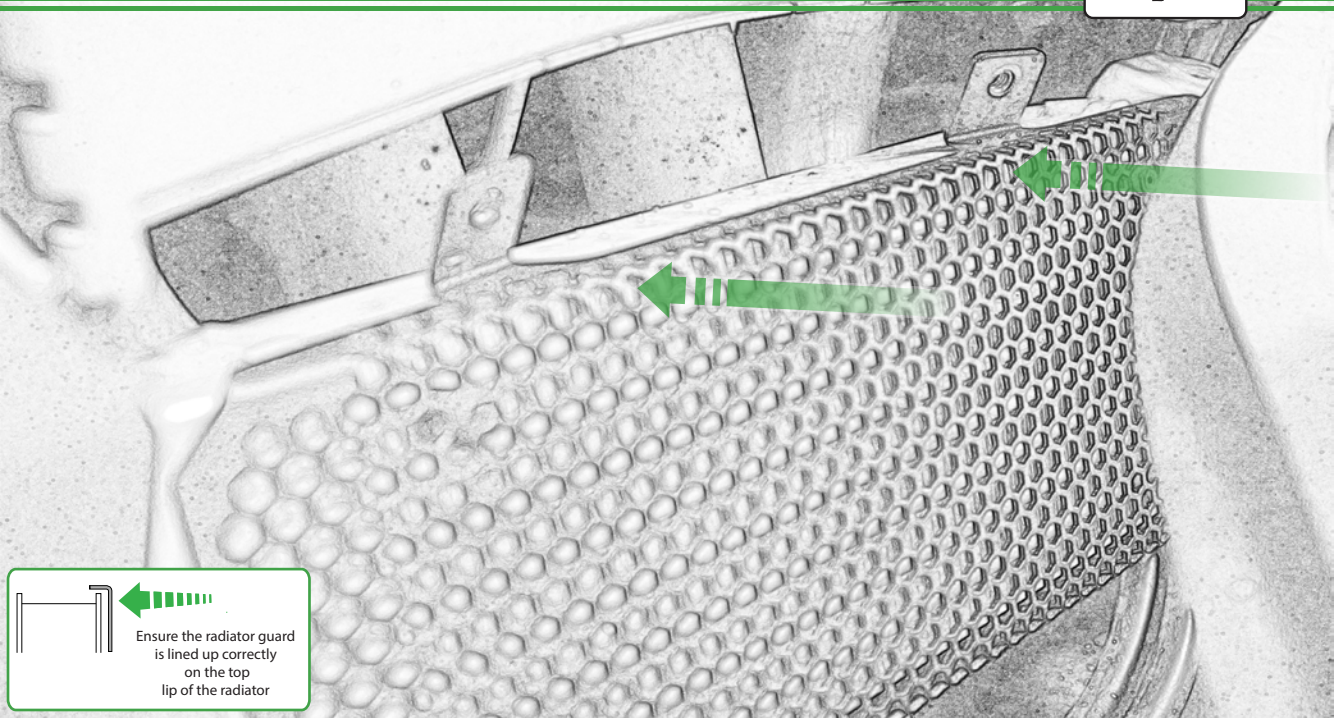


Ensure the radiator guard is lined up correctly on the top lip of the radiator

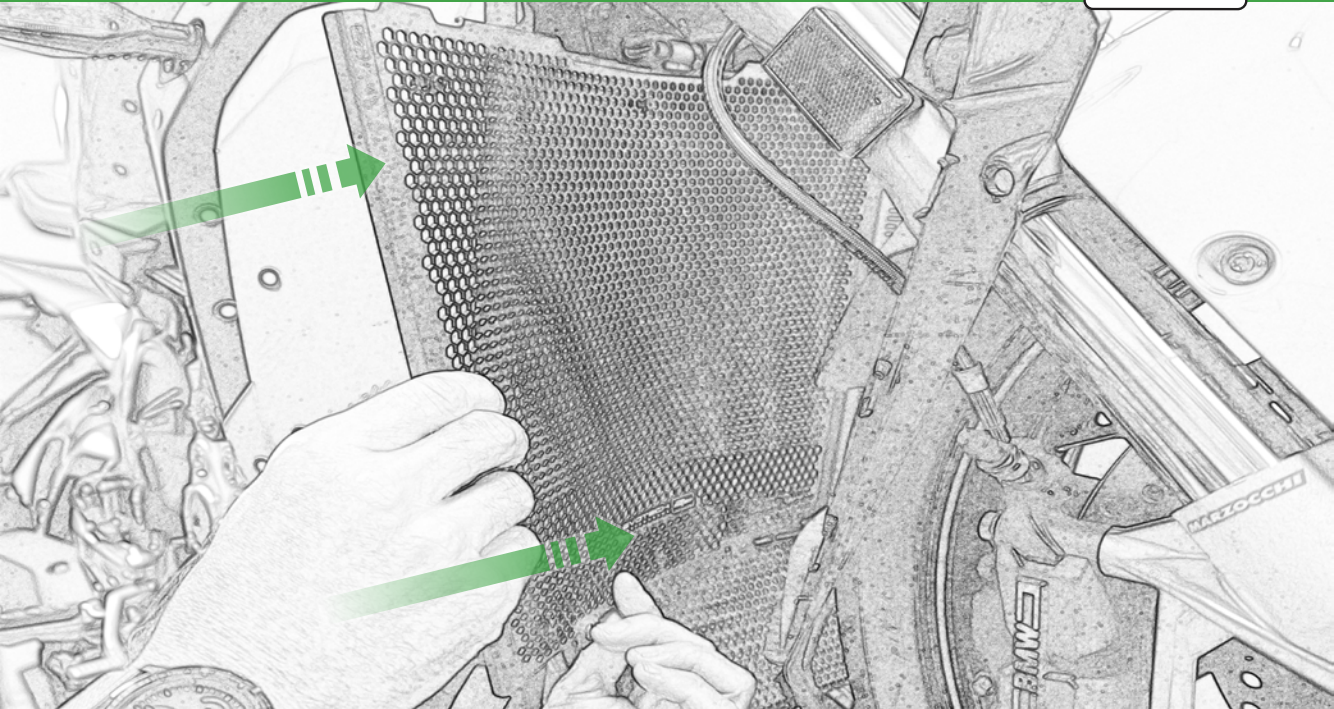

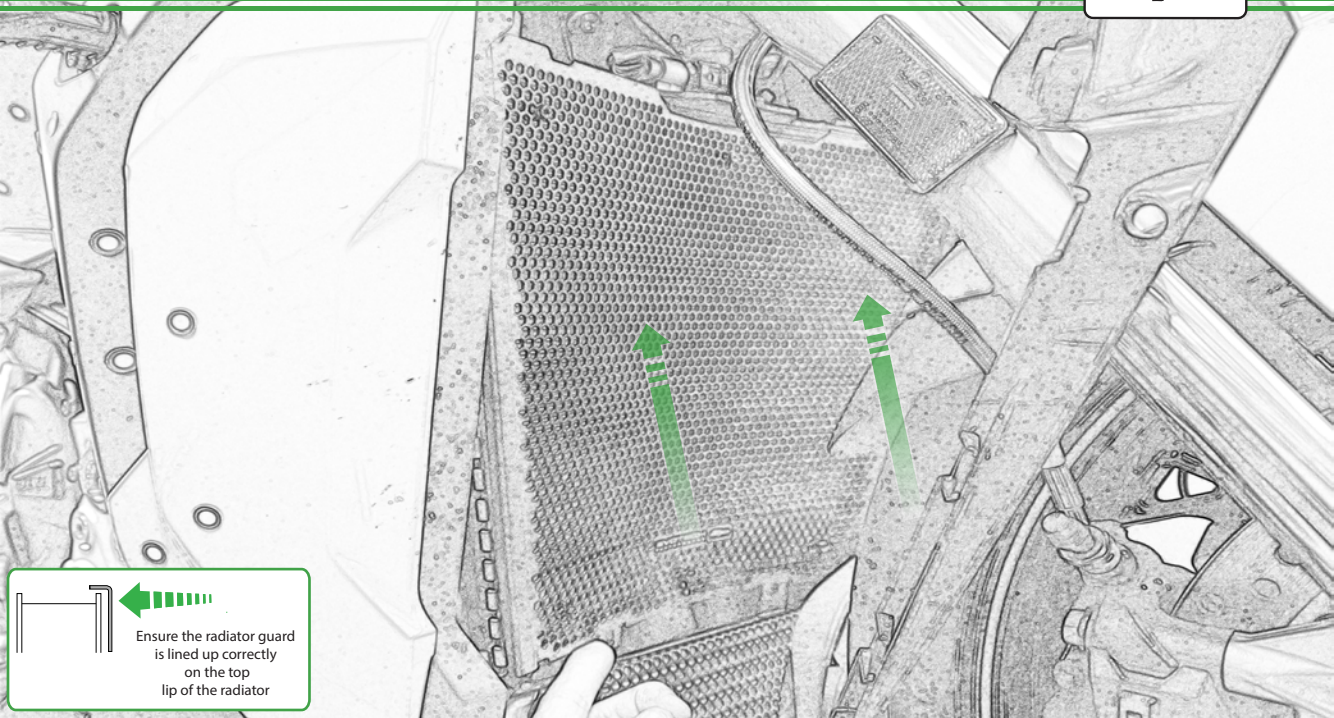


Ensure the radiator guard
is lined up correctly
on the top
lip of the radiator

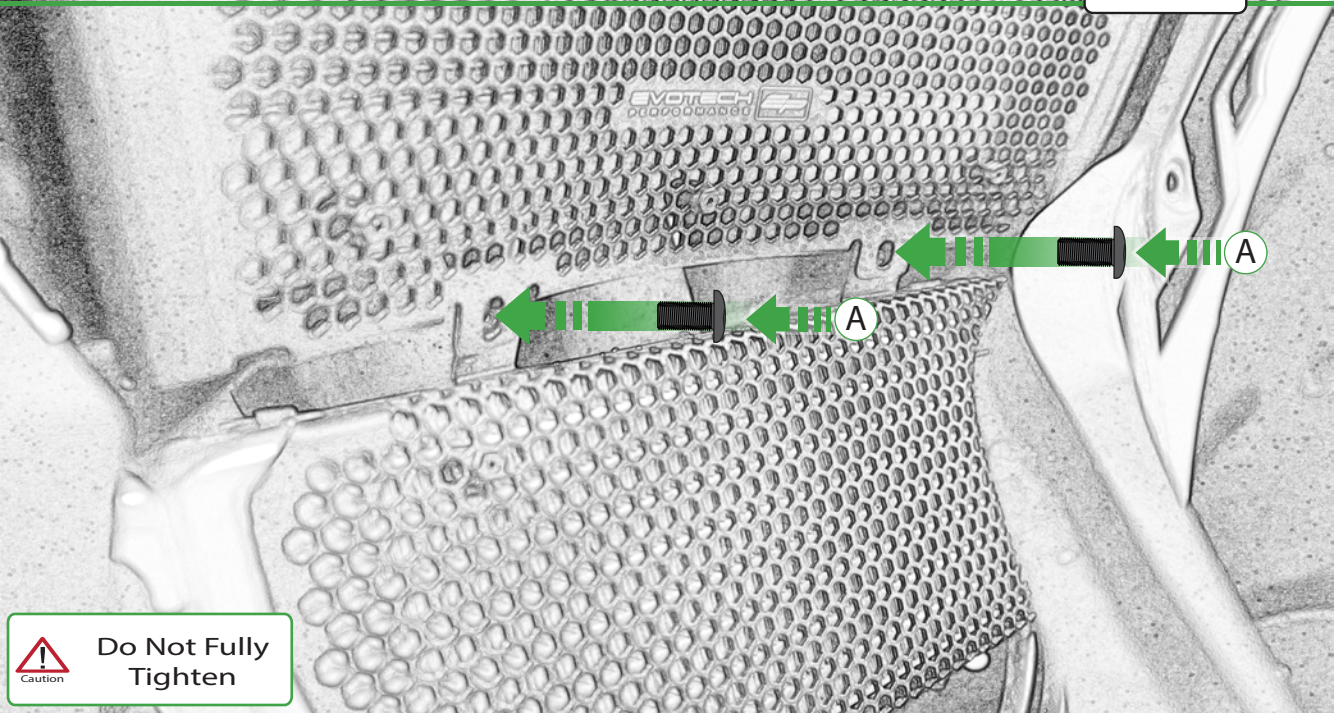


Do Not Fully Tighten



Repeat
Both Sides

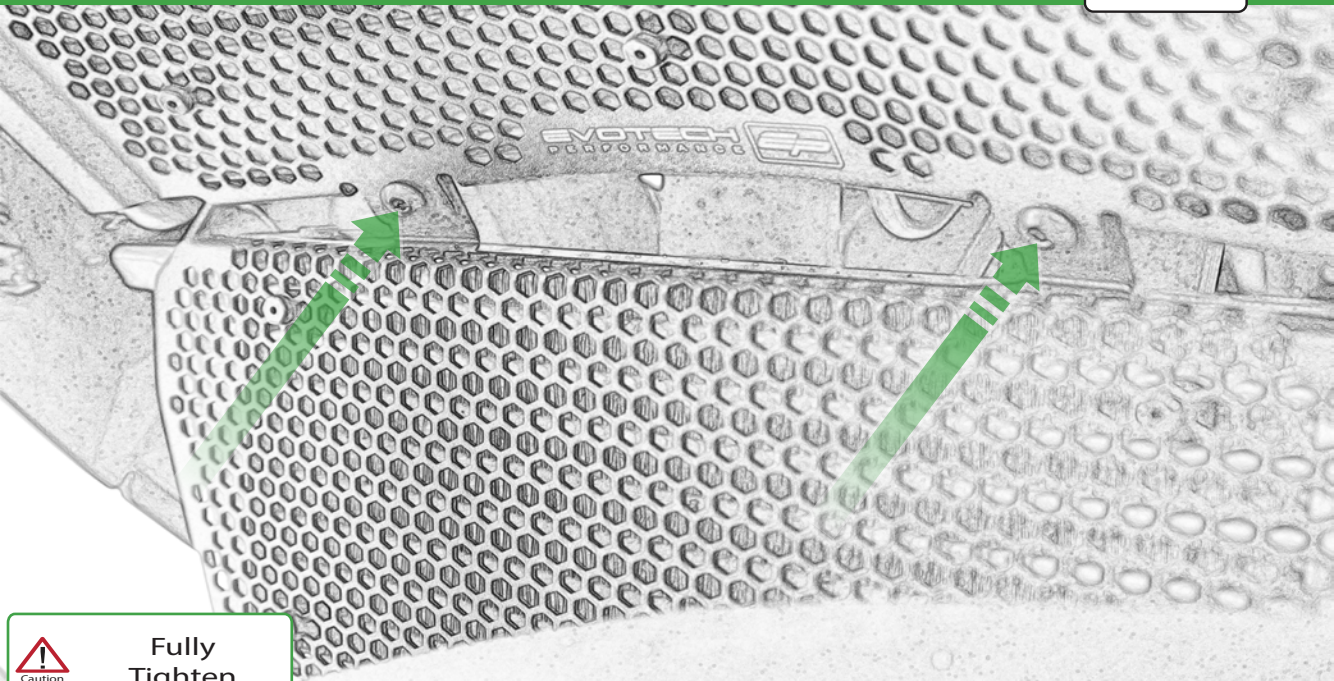

Fully
Tighten

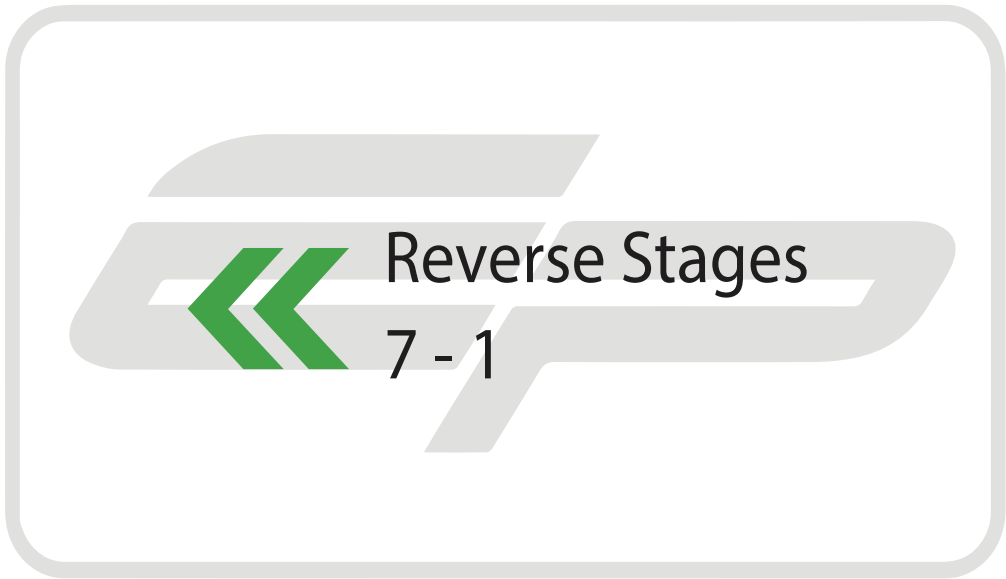



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com