
Installation Instructions





Kit Contents PRN014350


- A 2 x Bar Ends Weights
- B 2 x M8 x 40mm Caphead

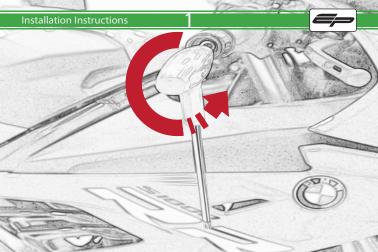





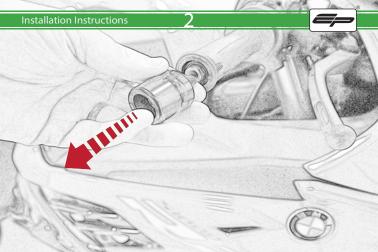

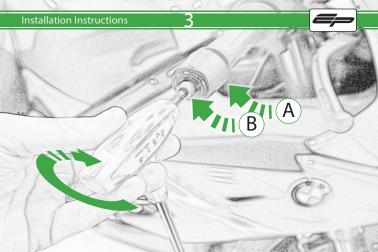

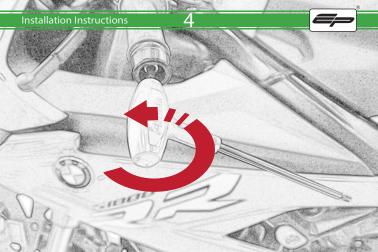

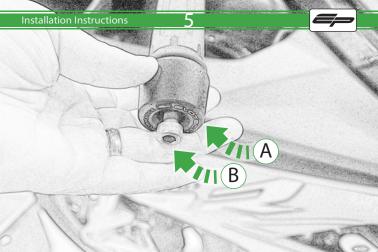

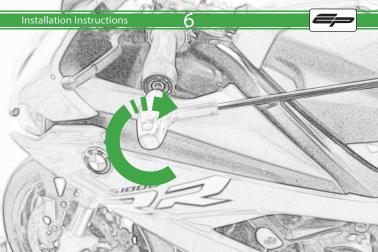





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

