




**EVOTECH**®  
P E R F O R M A N C E


BMW R 1200 / 1250 GS  
Garmin Sat Nav Mount


Installation Instructions



- (A) 1 x Main Plate
- (B) 1 x Sub Plate
- (C) 2 x M4 x 5mm Black Button Head Bolts
- (D) 2 x P-clips (No.1)
- (E) 2 x P-clips (No.2)
- (F) 2 x P-clips (No.3)
- (G) 2 x P-clips (No.4)
- (H) 2 x Rubber Bung (TFT Screens Only)
- (I) 3 x M5 x 12mm Black Button head Bolts
- (J) 4 x M4 x 10mm Black Button head Bolts
- (K) 4 x M6 x 16mm Caphead Bolt

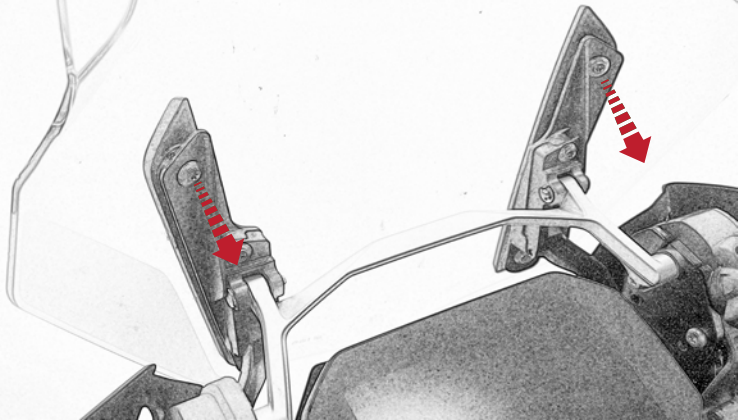

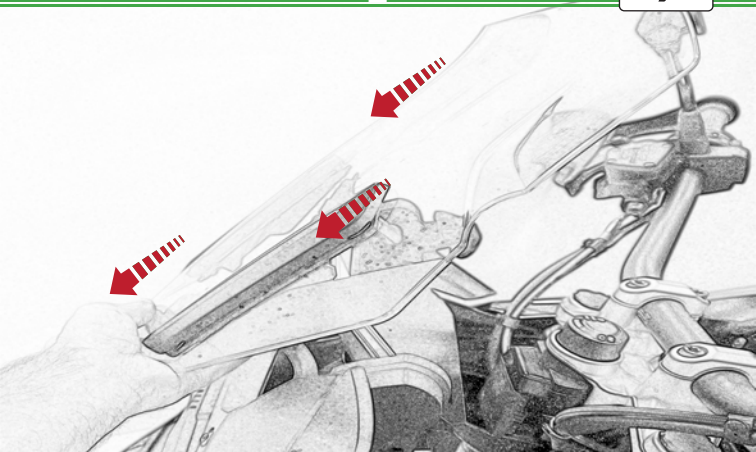


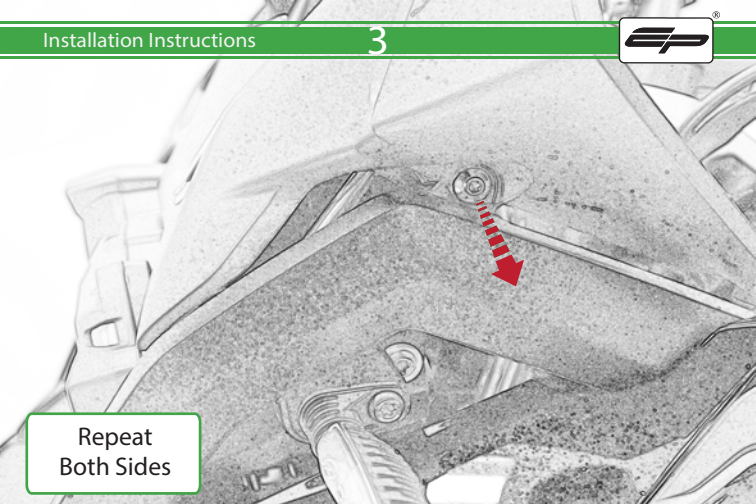


Repeat  
Both Sides



Repeat  
Both Sides

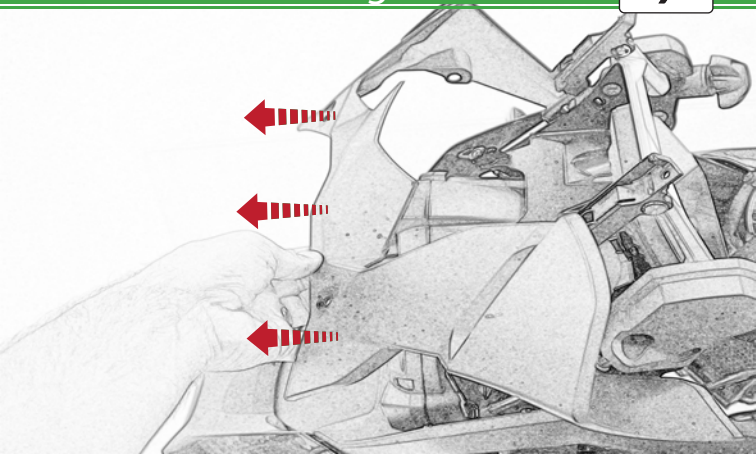

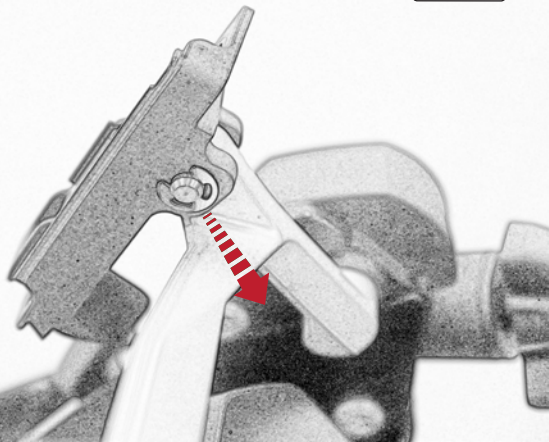


Repeat  
Both Sides







Repeat  
Both Sides

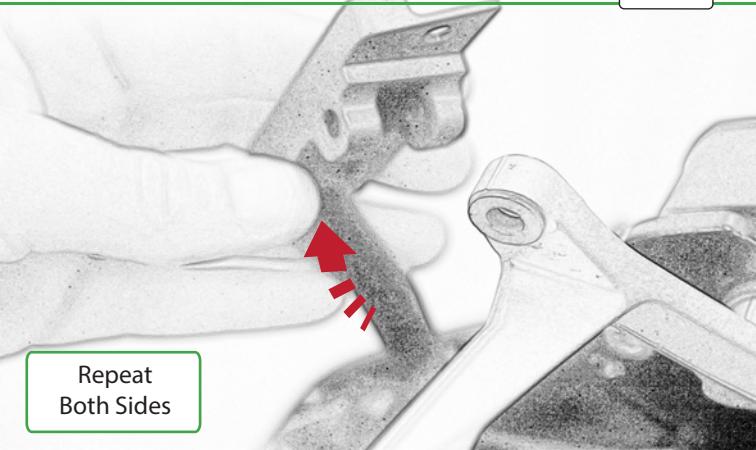



Repeat  
Both Sides

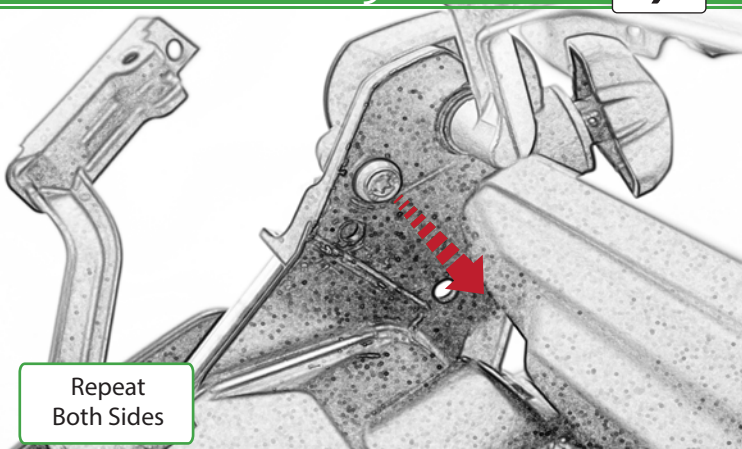

Repeat  
Both Sides

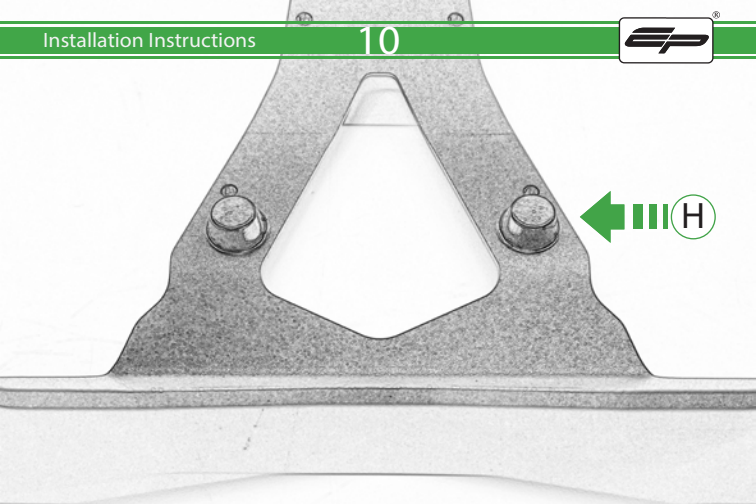


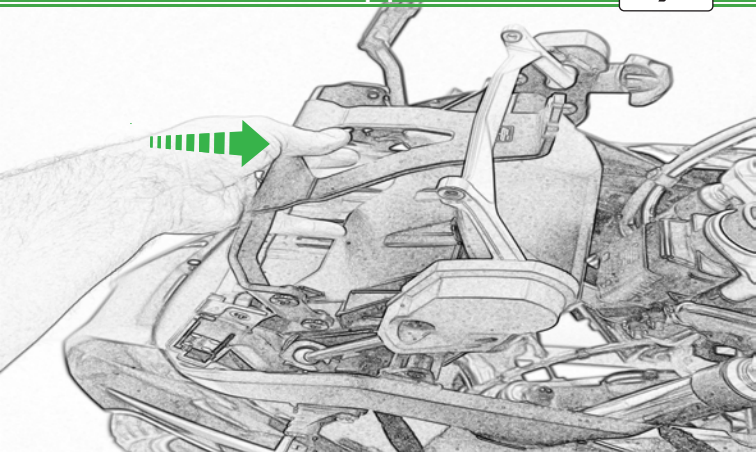

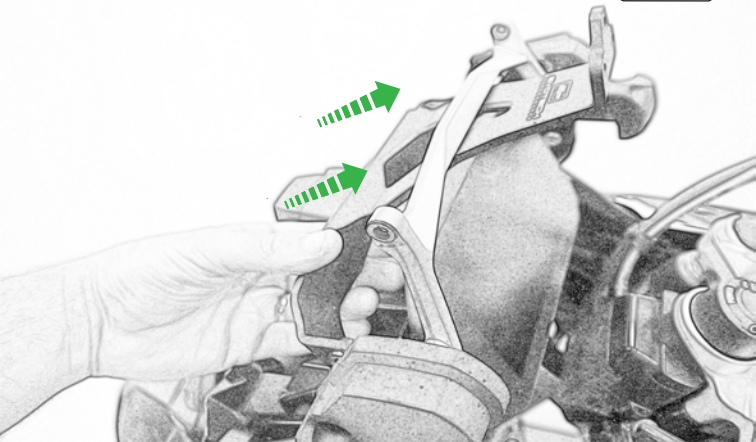




K

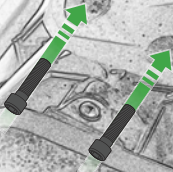


Repeat  
Both Sides

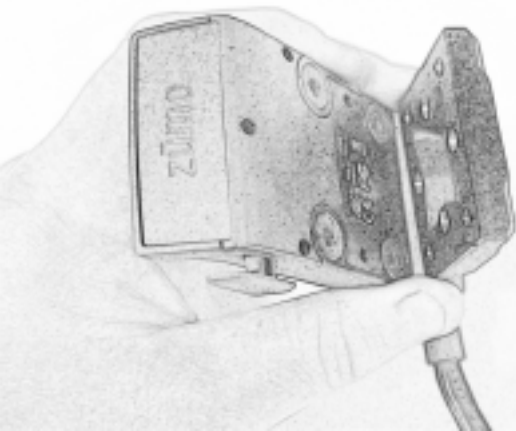







J

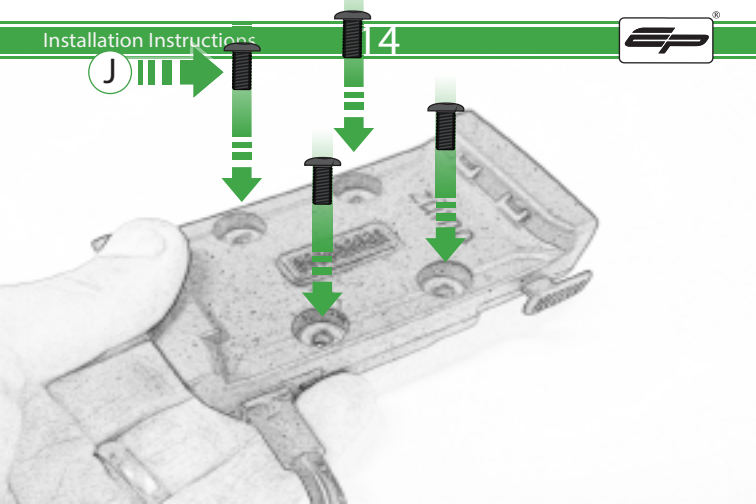

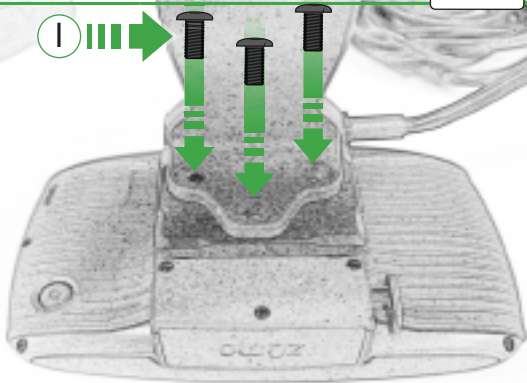

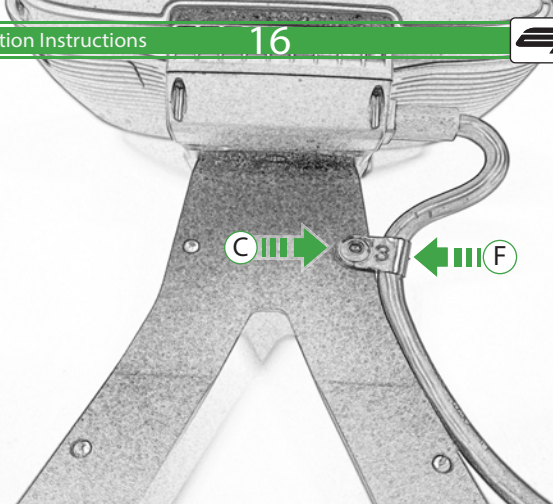



Reverse Stages

9 - 1



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)