

## Honda CB1000R Neo Sports Cafe Garmin Sat Nav Mount

Installation Instructions


## Installation Instructions





## Kit Contents PRN014566-014655


- (A) 1 x Main Plate (L) 2 x M4 x 5mm Black Button Head Bolts
- 8 1 x Pivot Plate
   M 4 x M4 x 10mm Black Button head Bolts
   1 x Sub Mounting Bracket
   4 x 5 x 25mm Forming Screw
- D 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- (No.3)
- © 2 x P-clips (No.4)
- H 2 x M5 Black Washer
- 2 x M5 x 8mm Black Button head Bolts
- ① 2 x Lobe Screw
- © 2 x Locking Washer




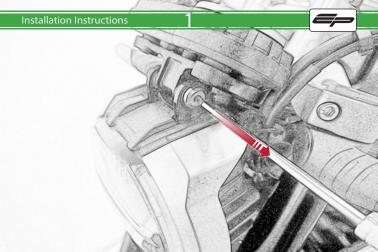


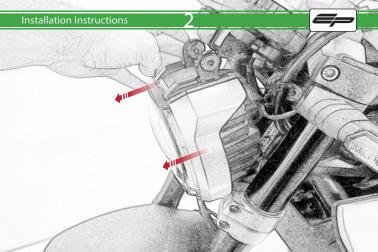

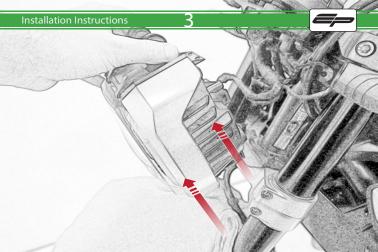

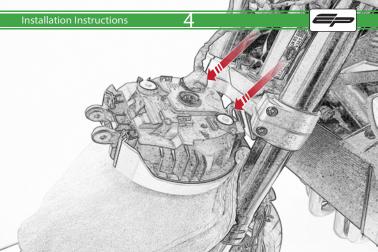

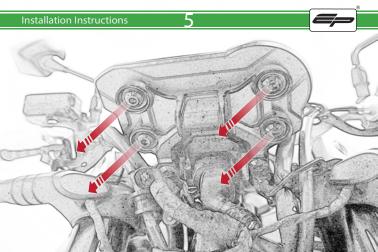

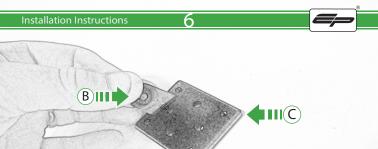













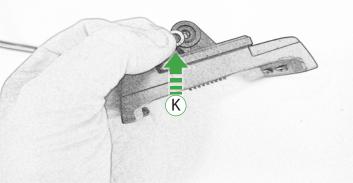





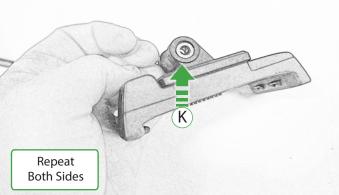








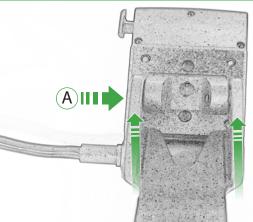


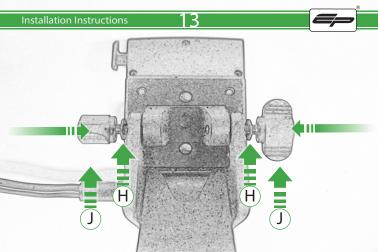

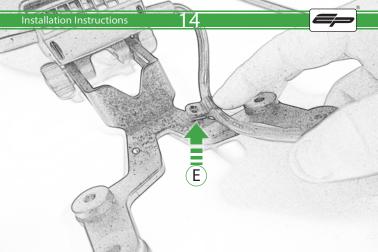

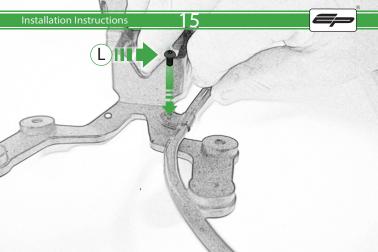

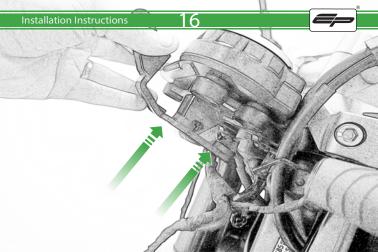

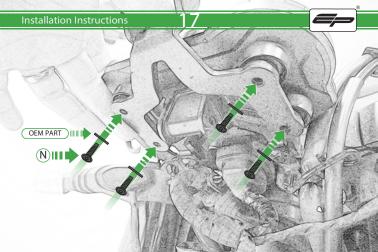



## Reverse Stages





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com