



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com



BMW Garmin Sat Nav Mount


Installation Instructions





Kit Contents PRN014566-015031


- | | |
|--|---|
| (A) 1 x Main Plate | (L) 2 x M4 x 5mm Black Button Head Bolts |
| (B) 1 x Pivot Plate | (M) 4 x M4 x 10mm Black Button Head Bolts |
| (C) 1 x Sub Mounting Bracket | |
| (D) 2 x M5 x 8mm Black Button Head Bolts | |
| (E) 2 x P-clips (No.1) | |
| (F) 2 x P-clips (No.2) | |
| (G) 2 x P-clips (No.3) | Sub Kit |
| (H) 2 x P-clips (No.4) | (N) 1 x Right Hand Arm |
| (I) 2 x Lobe Screw | (O) 1 x Left Hand Arm |
| (J) 2 x M5 Black Washer | (P) 1 x Spacer |
| (K) 2 x Locking Washer | (Q) 2 x M8 x 45mm Flange Bolt |
| | (R) 2 x M5 x 12mm Black Button Head Bolts |

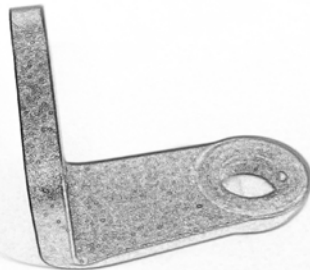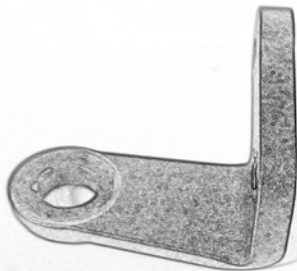


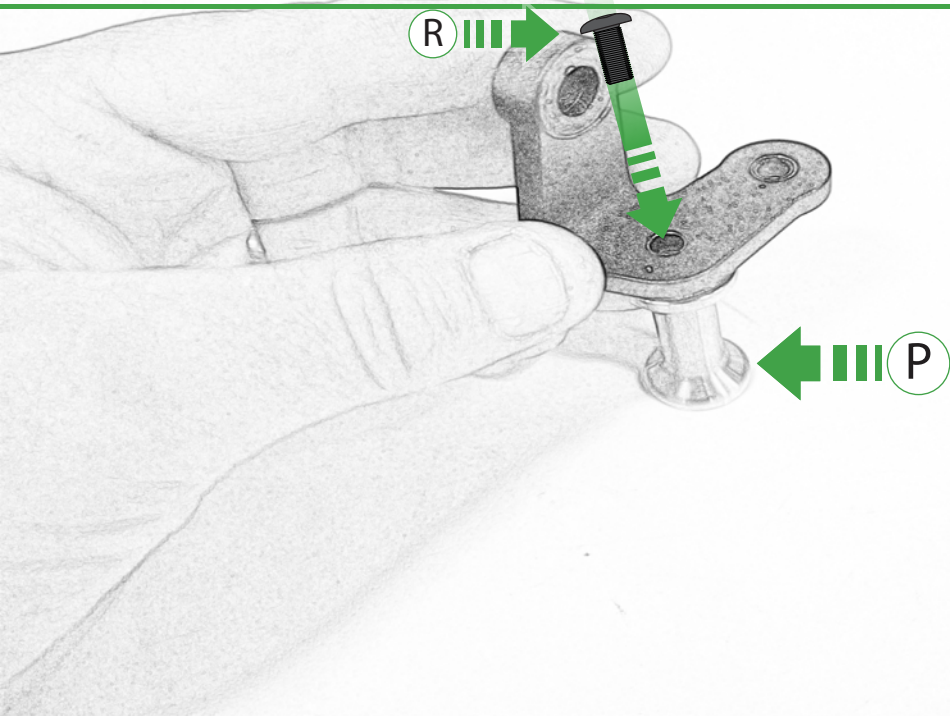


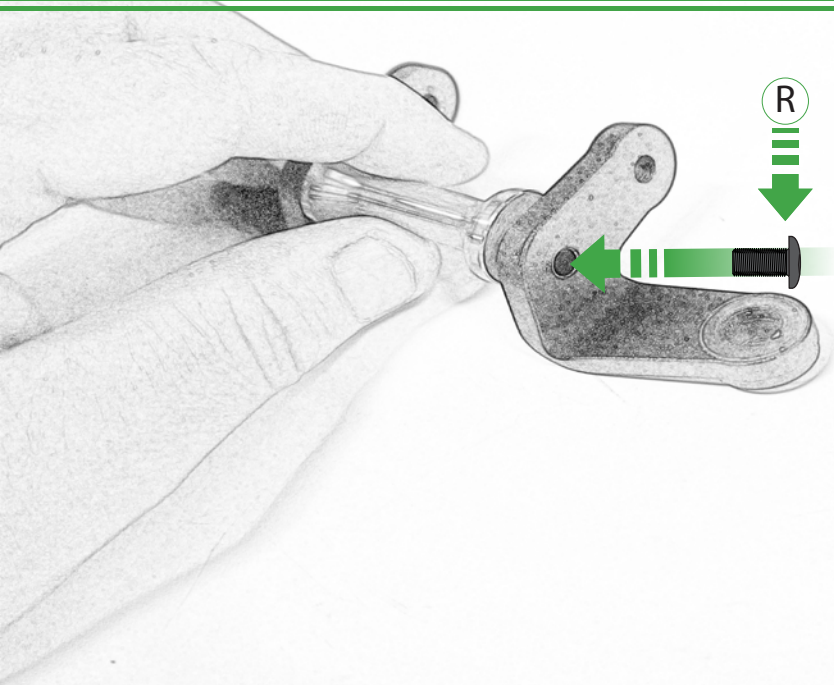


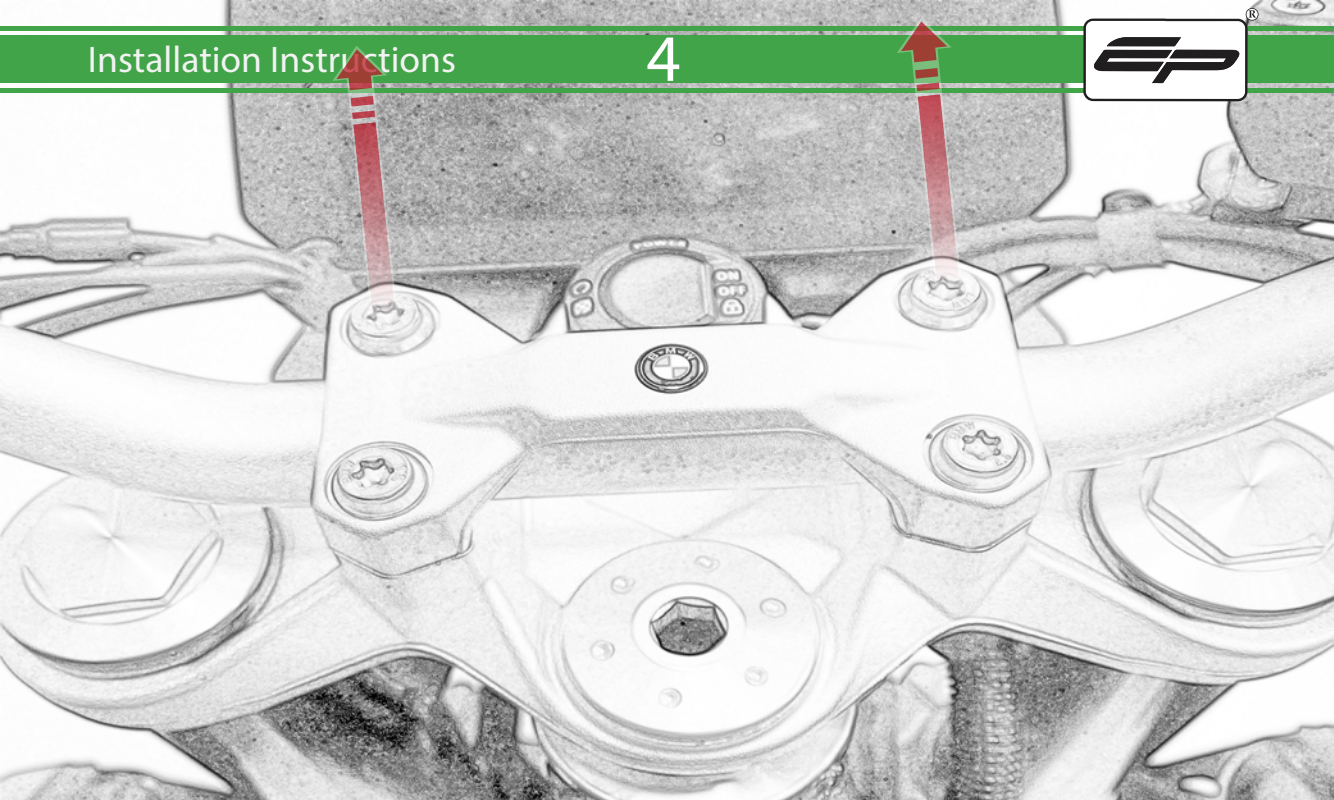


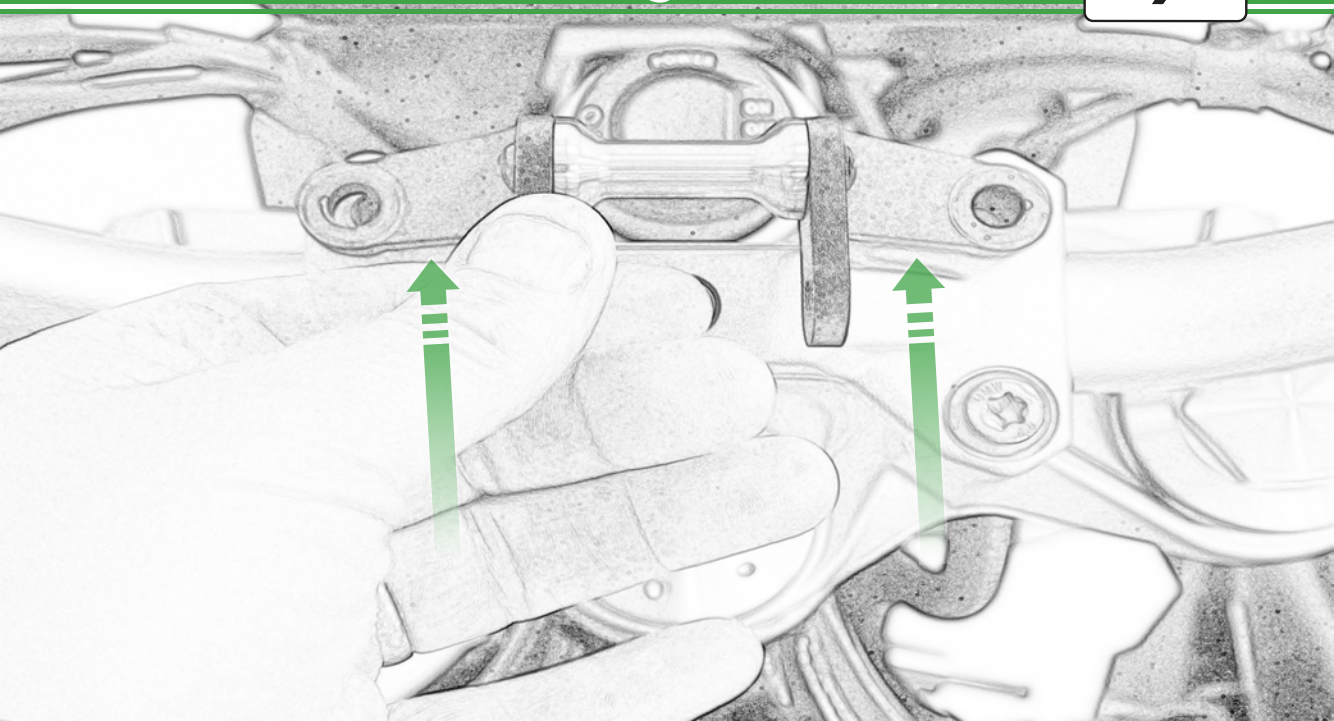


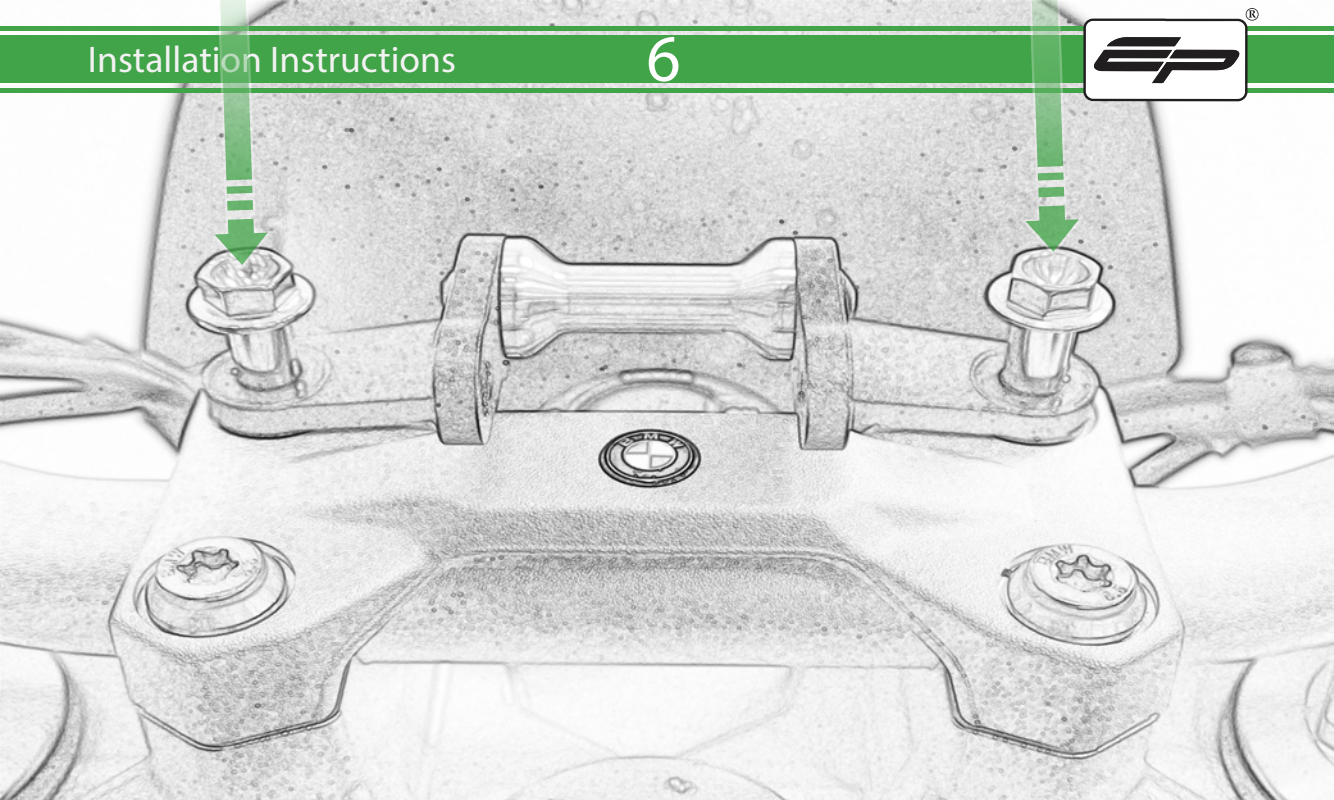


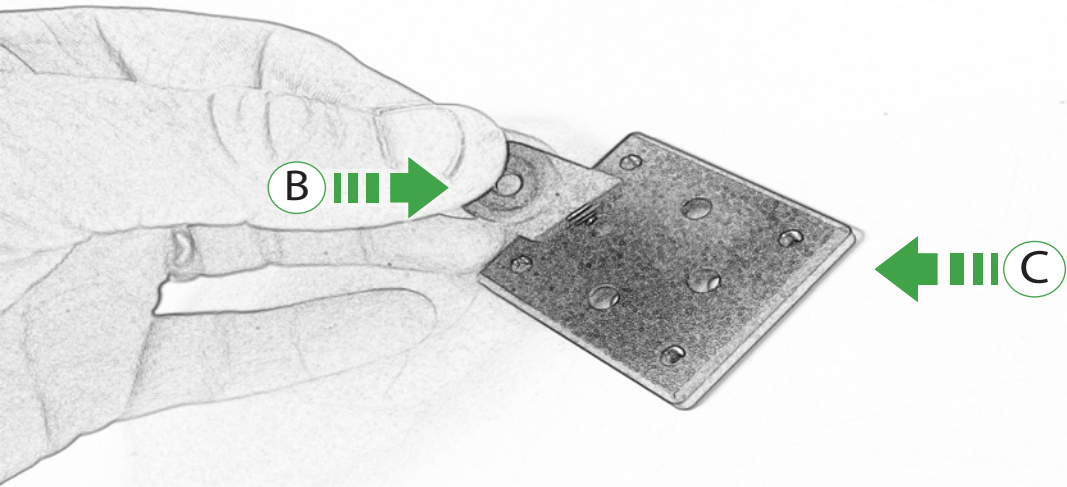


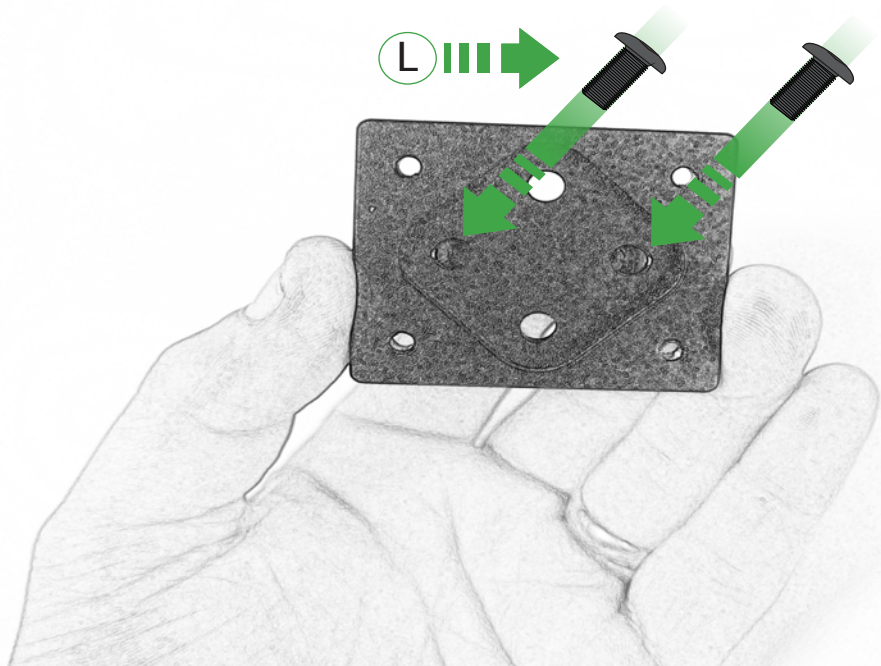

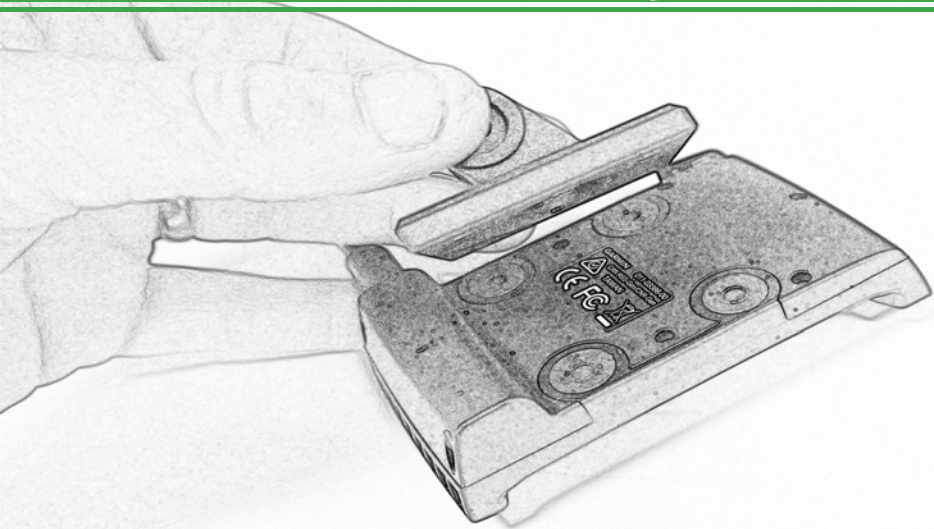


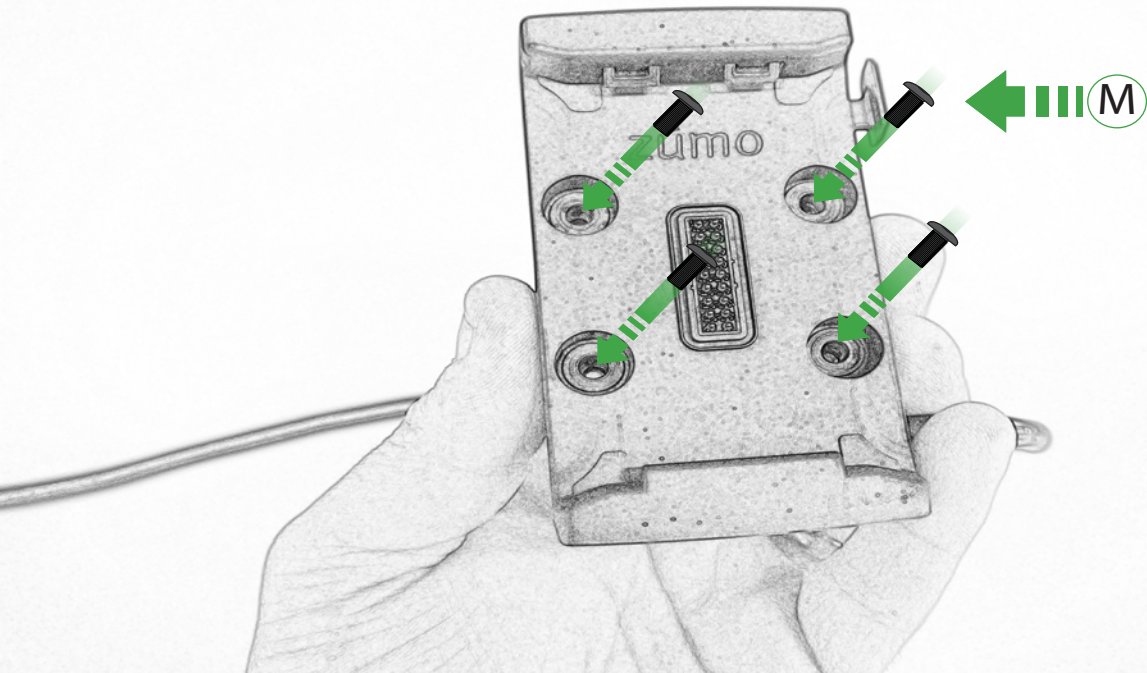


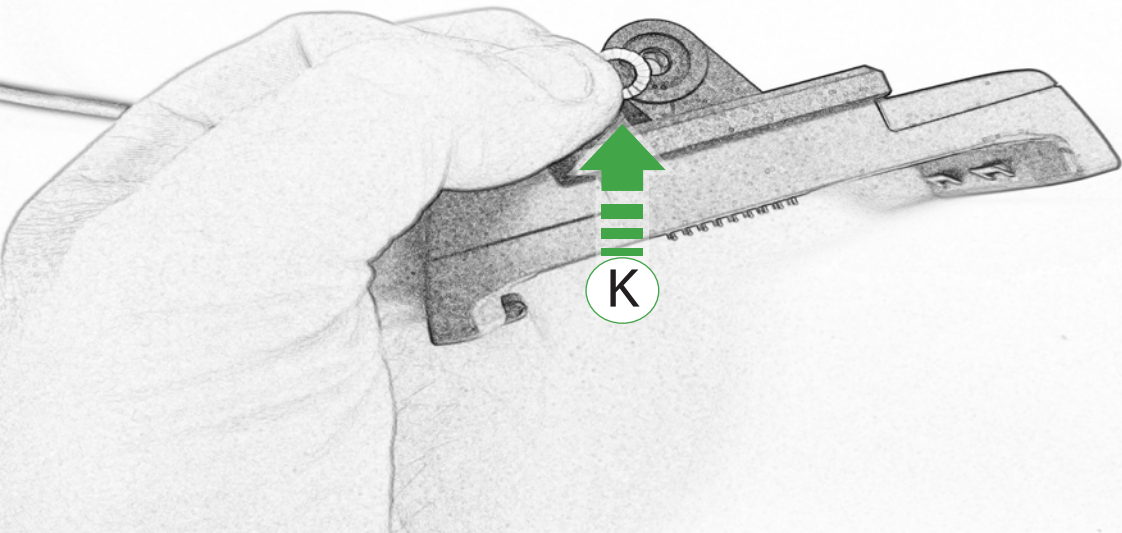

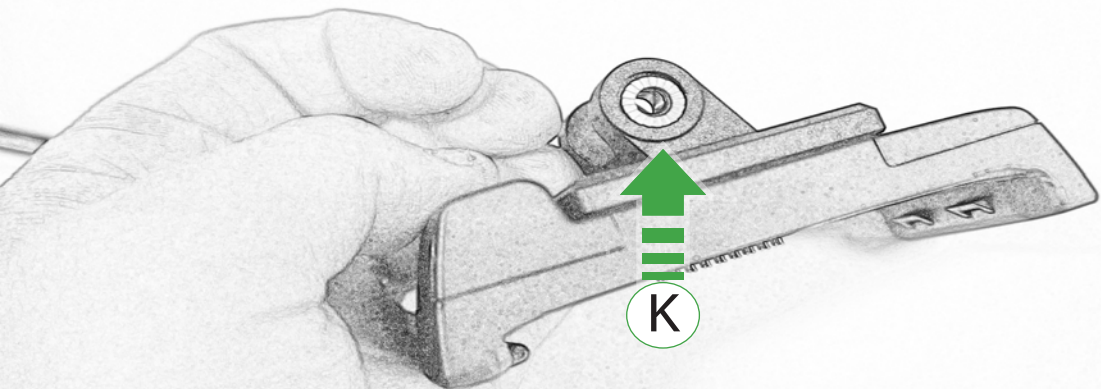

Repeat
Both Sides

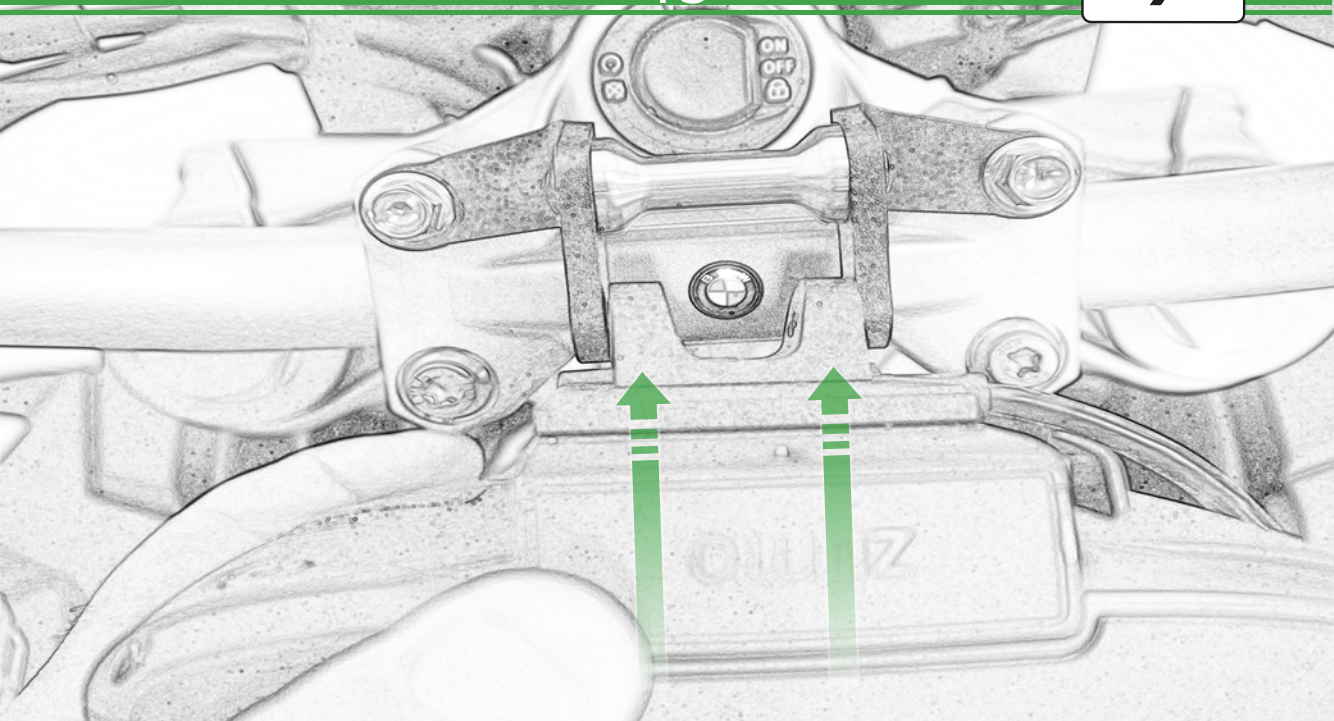

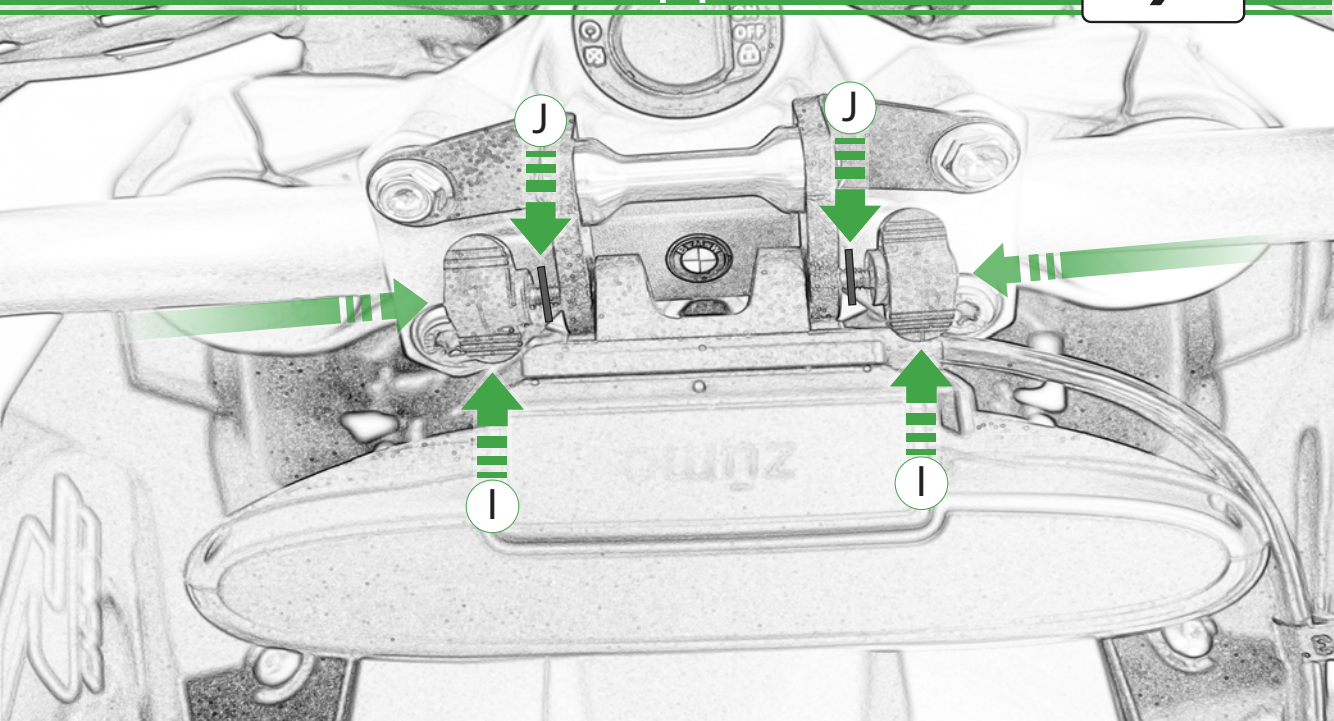



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com