
Installation Instructions





Kit Contents PRN014567-014655


- © 1 x Sub Mounting Bracket ® 4 x M5 x 12mm Black Button head Bolts
- © 2 x P-clips (No.1) © 2 x P-clips (No.2)
- F 2 x P-clips (No.3)
- © 2 x P-clips (No.4)
- (H) 2 x M5 Black Washer
- ① 2 x M5 x 8mm Black Button head Bolts
- ① 2 x M4 x 5mm Black Button Head Bolts
- K 2 x Lobe Screw

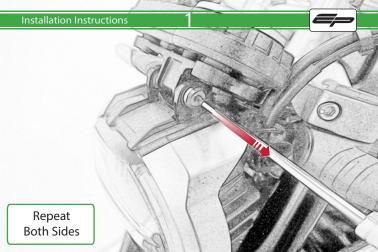





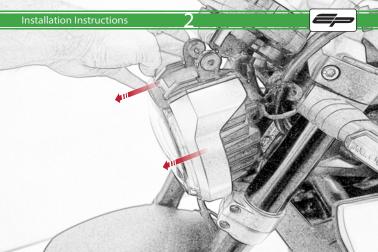

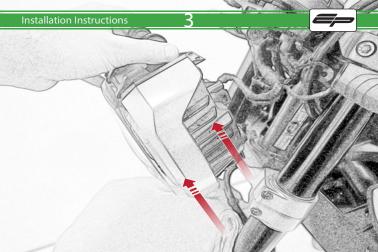

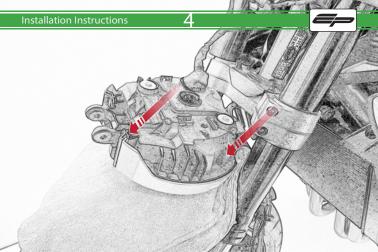


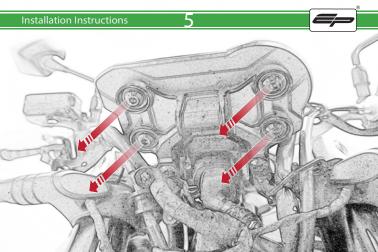


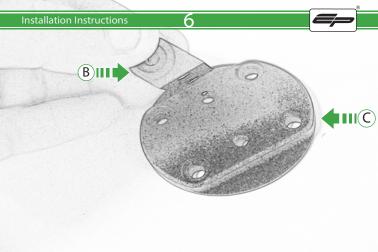








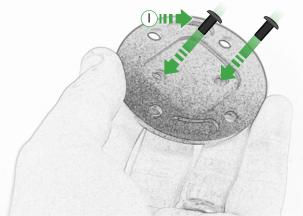


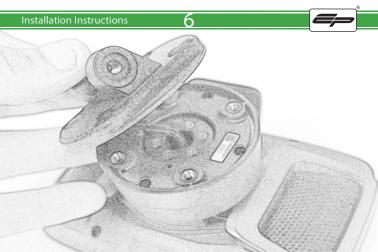


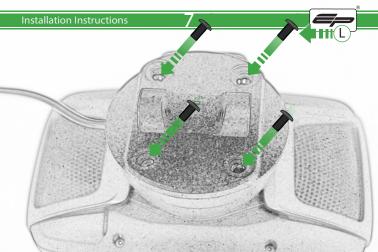


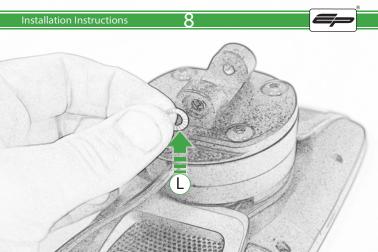


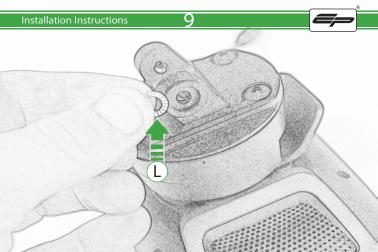


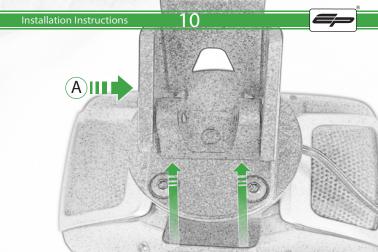


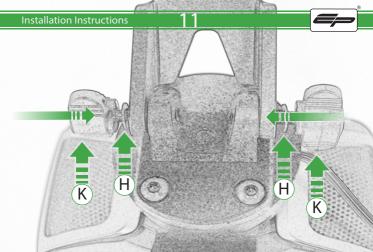

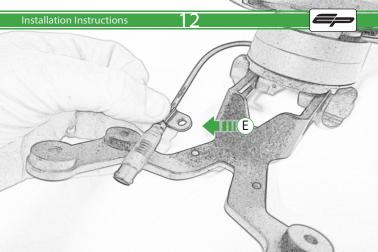


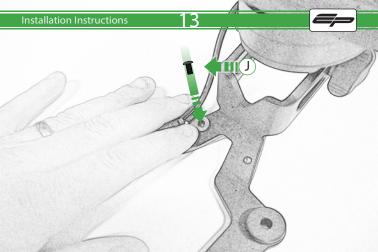

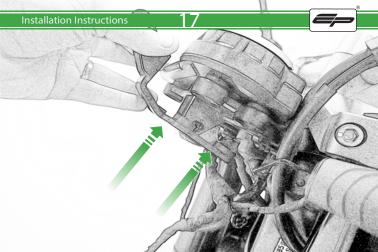

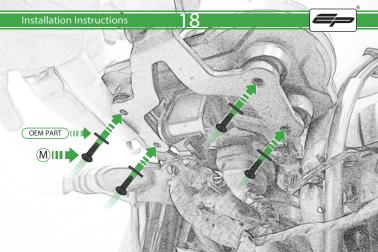











It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

