

## **Installation Instructions**





## **Kit Contents**

- (A) 1 x Pivot Plate
- **B** 1 x Tom Tom Plate
- © 2 x M5 x 10 Caphead Bolt
- D 2 x M8 Caphead Bolt
- **E** 2 x Nord Washer
- F 2 x M5 x 8mm Black Button Head Bolt
- © 2 x Spacer
- (H) 4 x M5 x 12mm Black Button Head Bolts

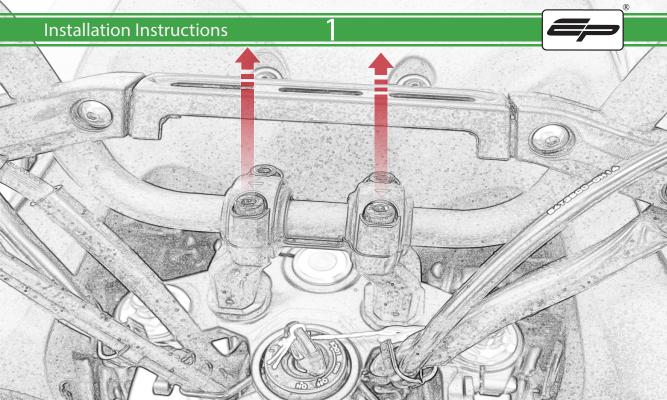

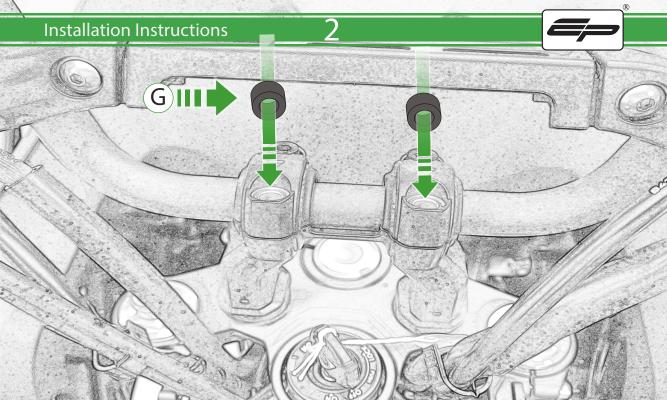


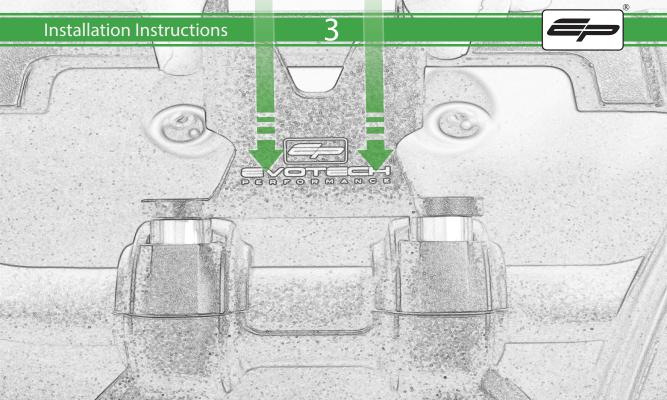

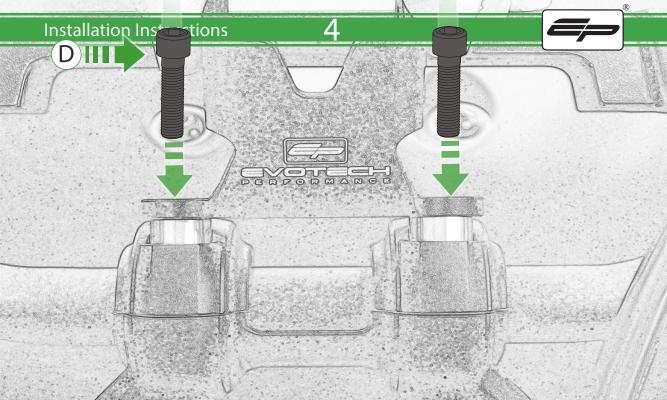


5




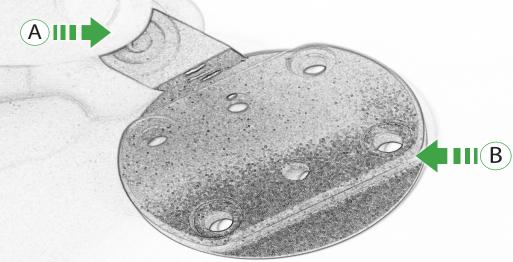






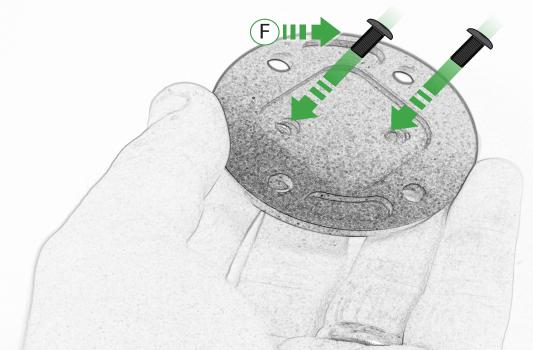


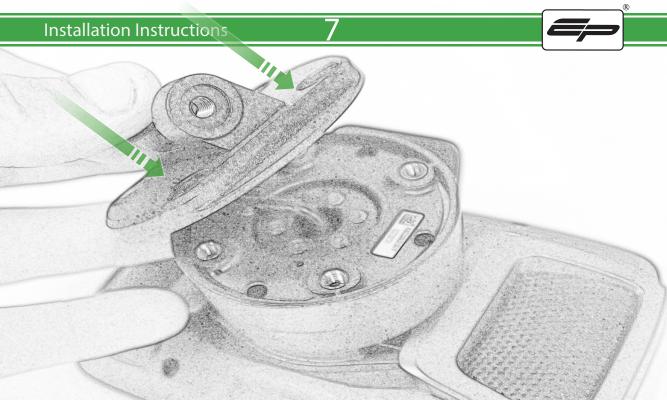


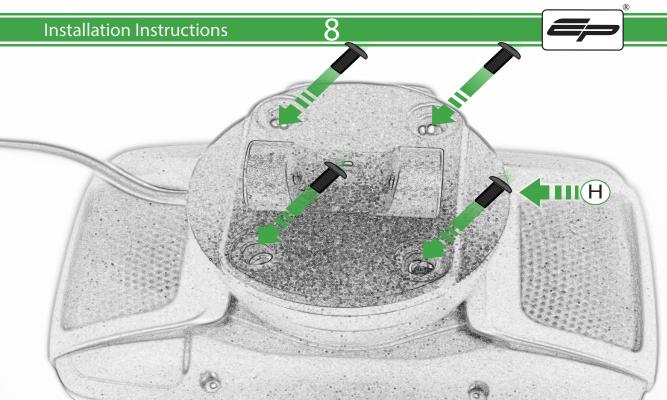







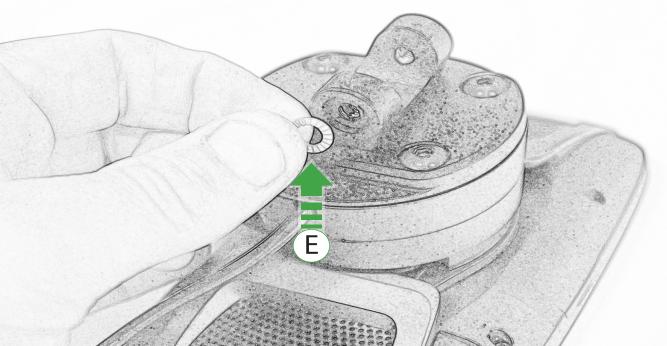

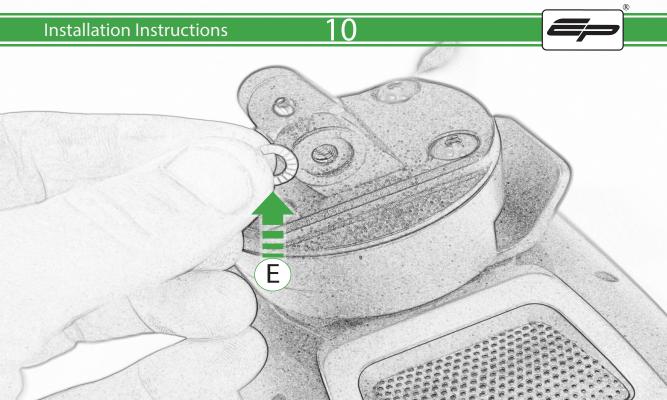

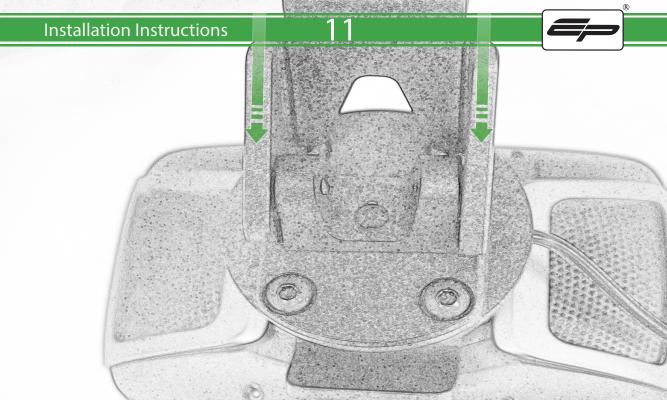

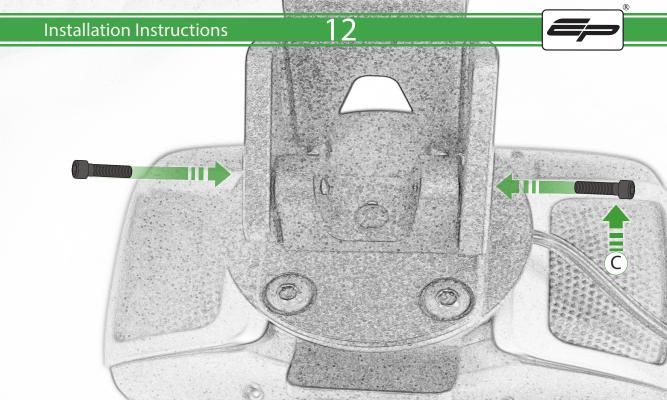





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

