
Installation Instructions





Kit Contents


- A 1 x Pivot Plate
- B 1 x Quad Lock Plate
- © 1 x Quad Lock Mount
- D 2 x M8 Caphead Bolt
- **E** 2 x Nord Washer
- (F) 2 x M5 x 8mm Black Button Head Bolt
- © 2 x Spacer
- (H) 2 x M5 x 12 Caphead Bolt

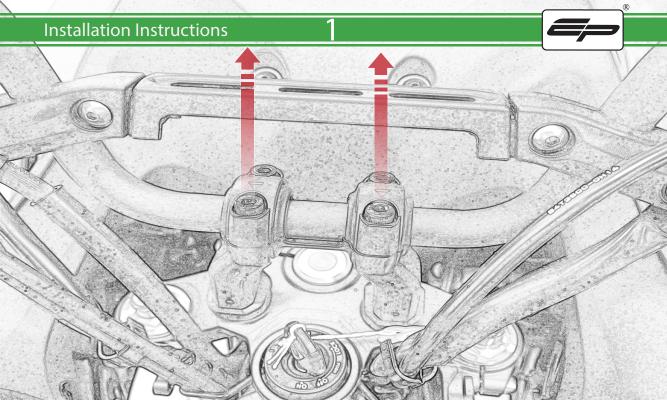



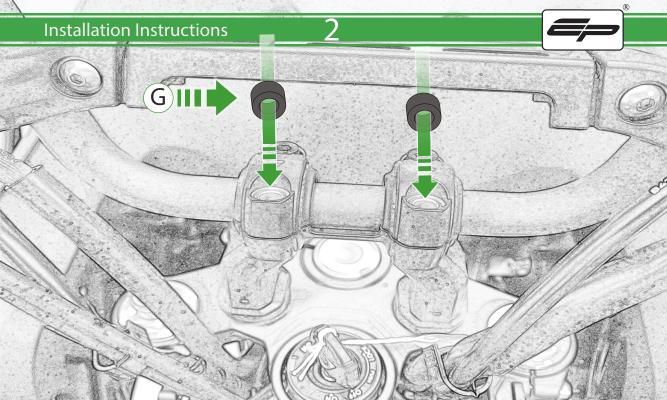


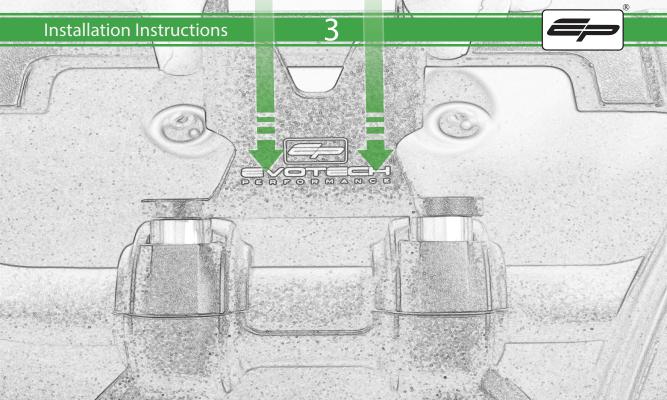


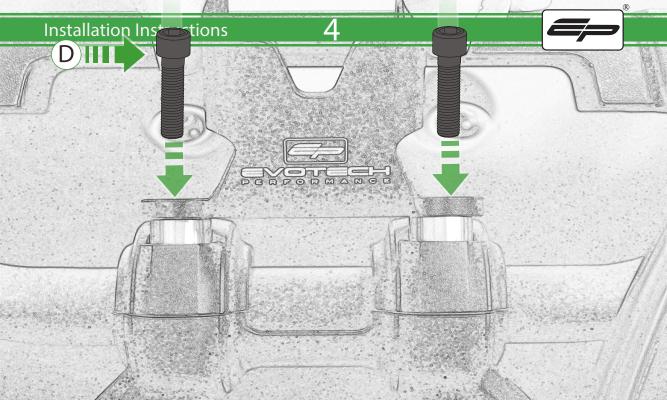





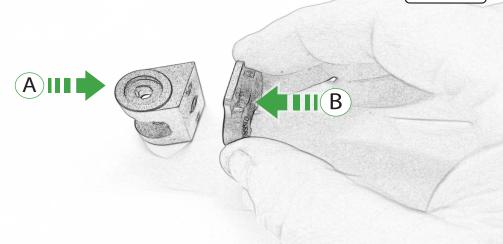

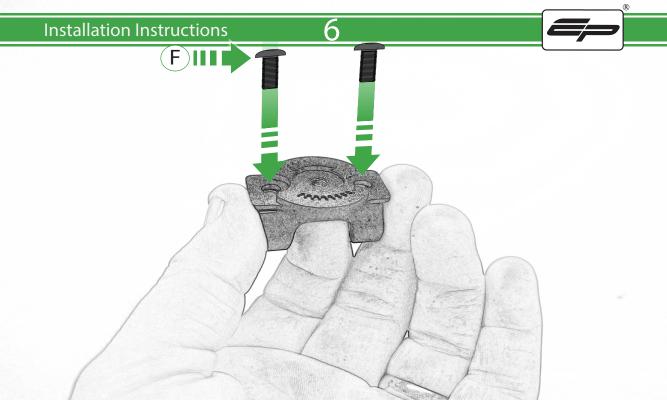








6.0


8



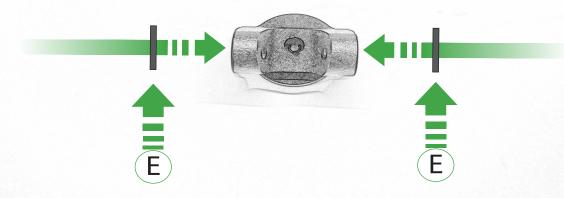


9



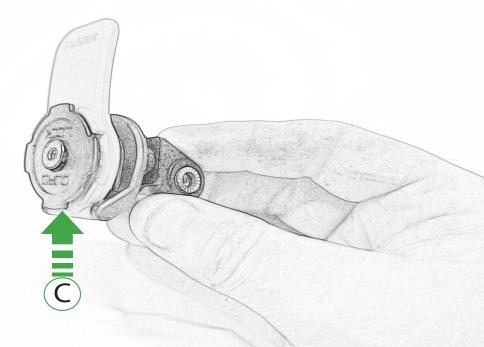






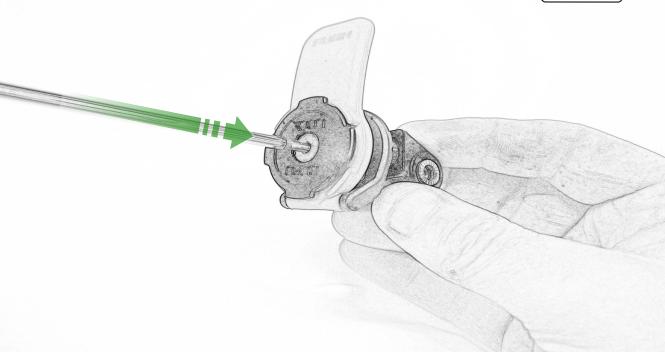






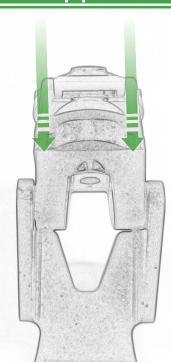

<u>12</u>



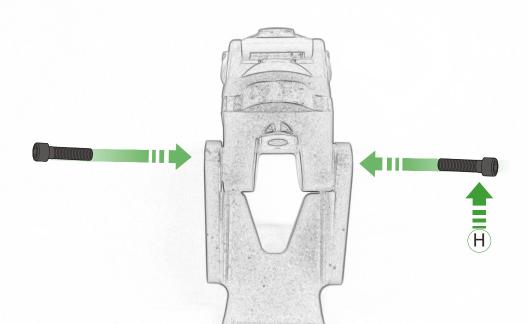





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

