




BMW R NineT Scrambler
Front Spindle Bobbins


Installation Instructions





Kit Contents PRN014598

- (A) 1 x Spindle Nut
- (B) 1 x Spindle
- (C) 1 x Aluminium Spacer
- (D) 2 x Bobbin Heads
- (E) 2 x M8 Washers
- (F) 2 x M8 Nuts

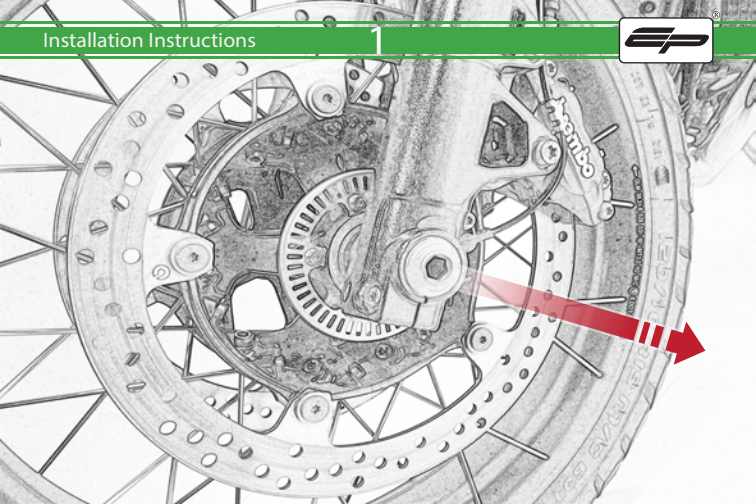


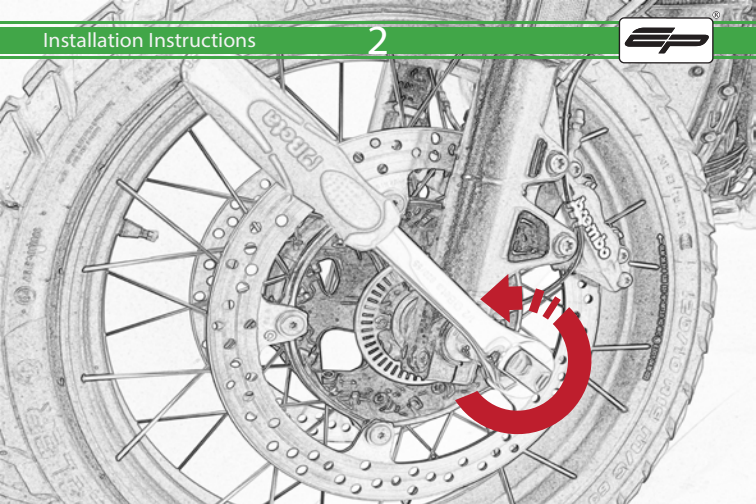


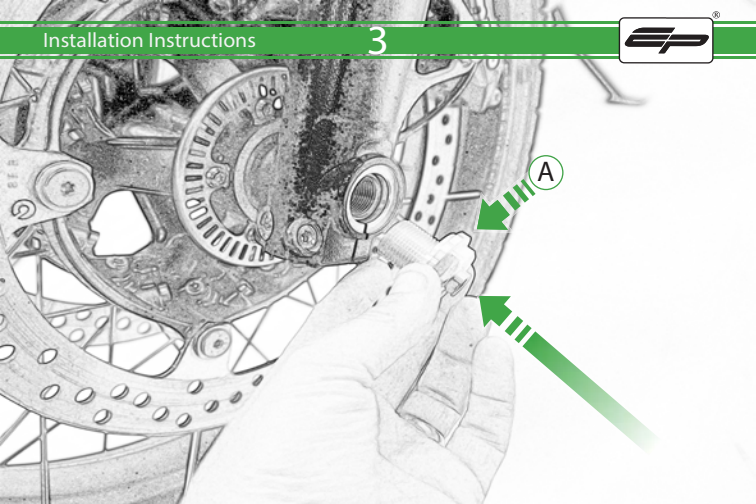



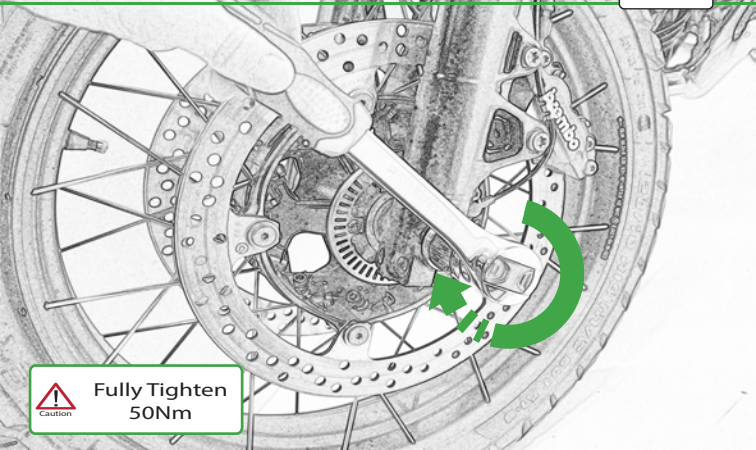



Fully Tighten
50Nm

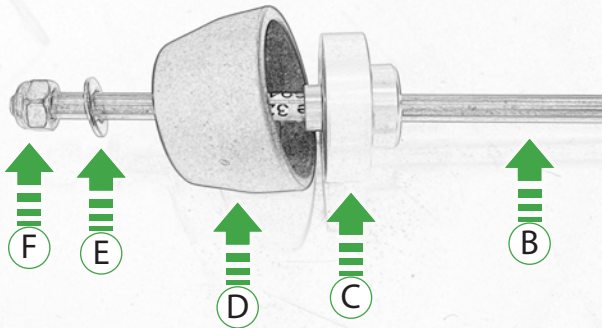

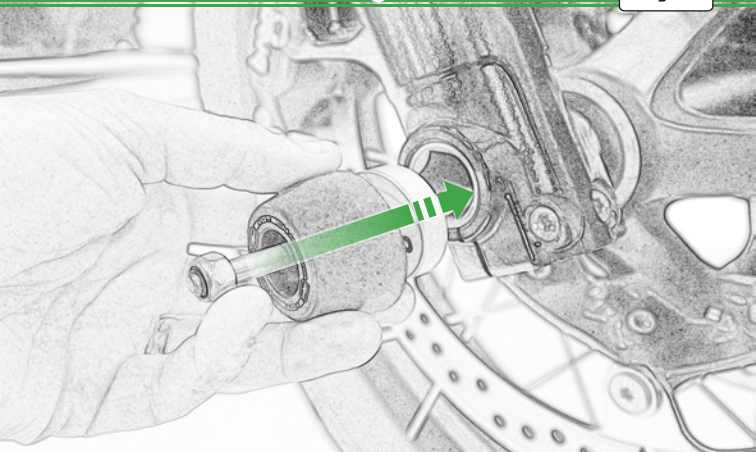

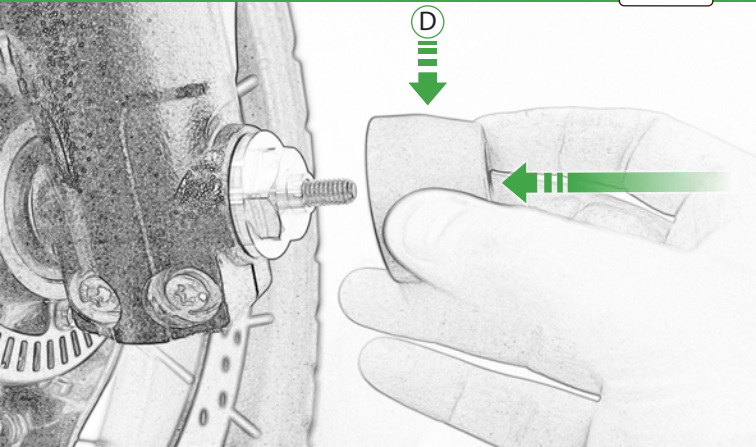

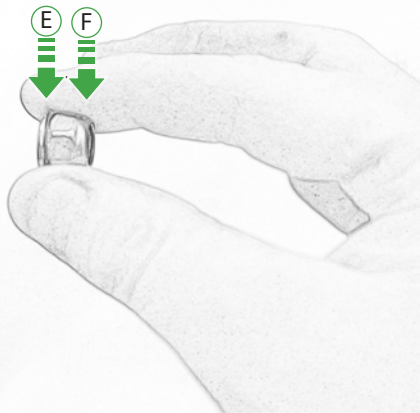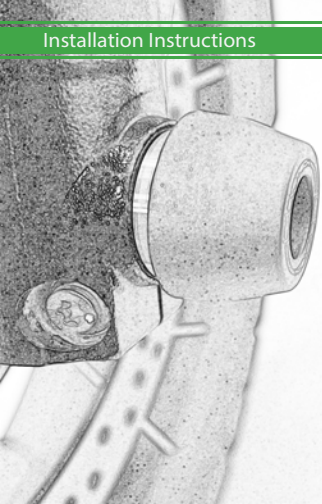

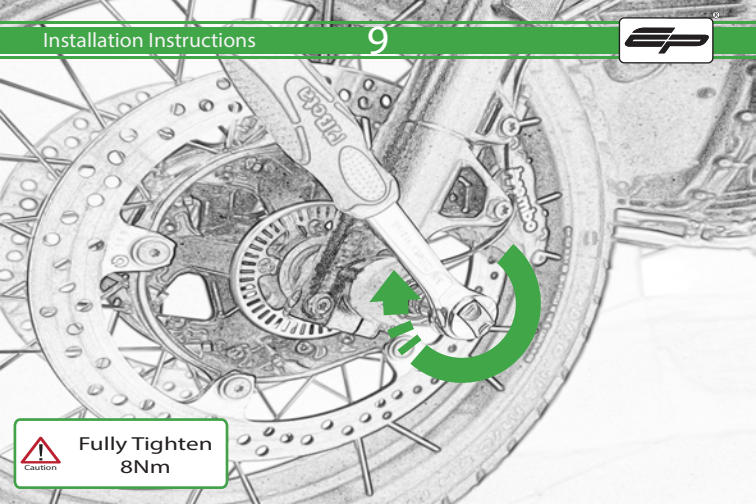

Caution

Fully Tighten
8Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com