







Kit Contents PRN014602

- | | |
|-------------------------------|-----------------------------------|
| (A) 1 x Left Hand Arm | (M) 2 x M8 x 12 Button Head Bolts |
| (B) 1 x Right Hand Arm | (N) 2 x M4 Flange |
| (C) 1 x Main Plate | (O) 2 x M4 x 6 Button Head Bolts |
| (D) 1 x Light Mount | (P) 3 x M4 x 12 Countersink Screw |
| (E) 1 x Reflector Kit | (Q) 6 x M4 x 10 Button Head Bolts |
| (F) 1 x Cover Plate | |
| (G) 1 x Wire Seal | |
| (H) 1 x Retro Light | |
| (I) 1 x Light Connector No.21 | |
| (J) 1 x Light Connector No.22 | |
| (K) 2 x P-Clip 3 | |
| (L) 2 x M8 Washers | |

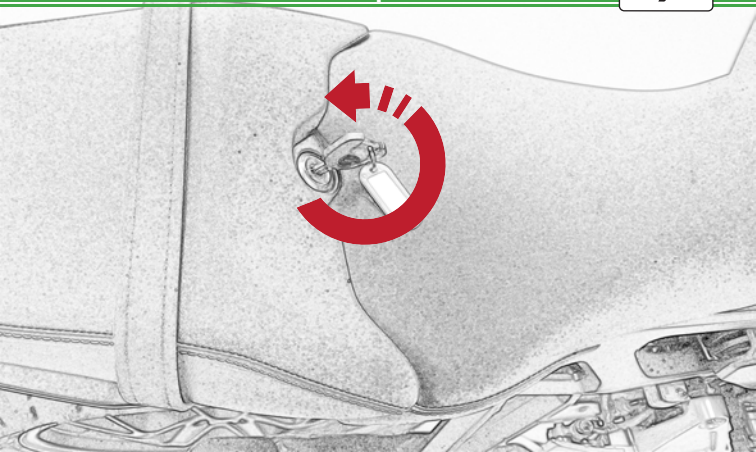

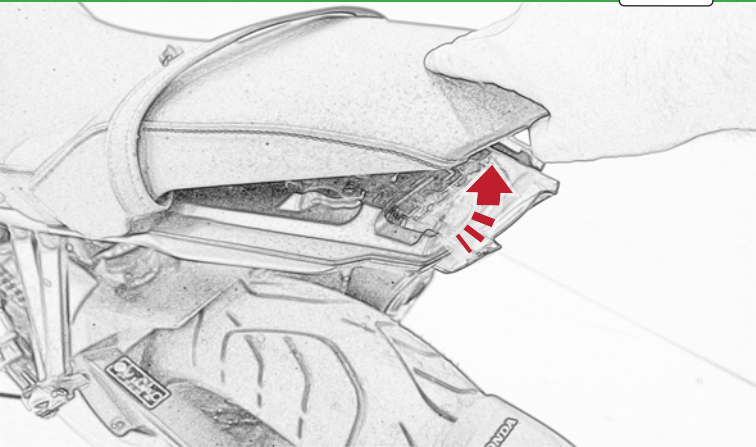

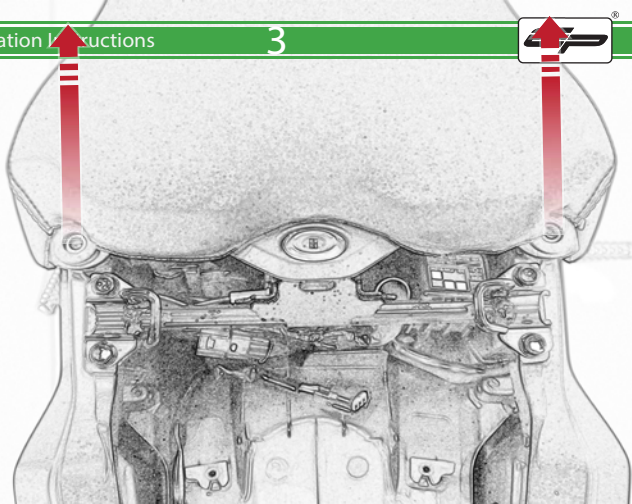

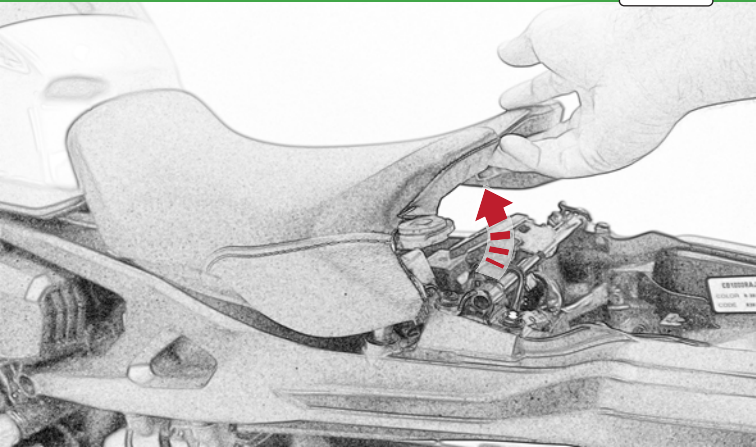




RELEASE



RE-SET



RE-FIT

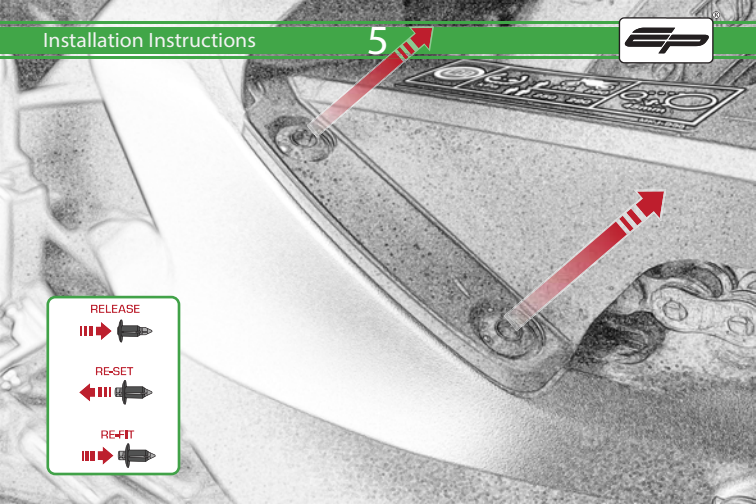




RELEASE





RE-SET





RE-FIT

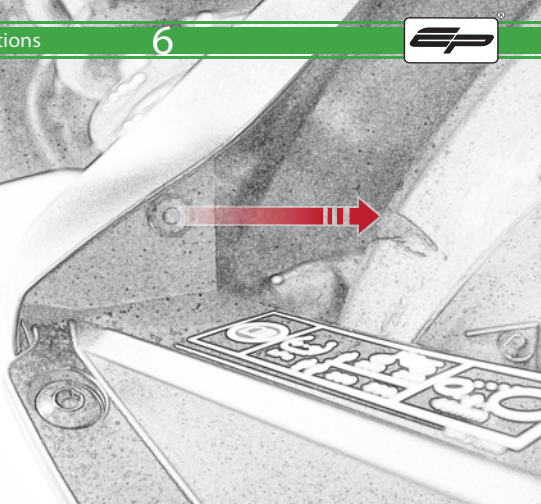


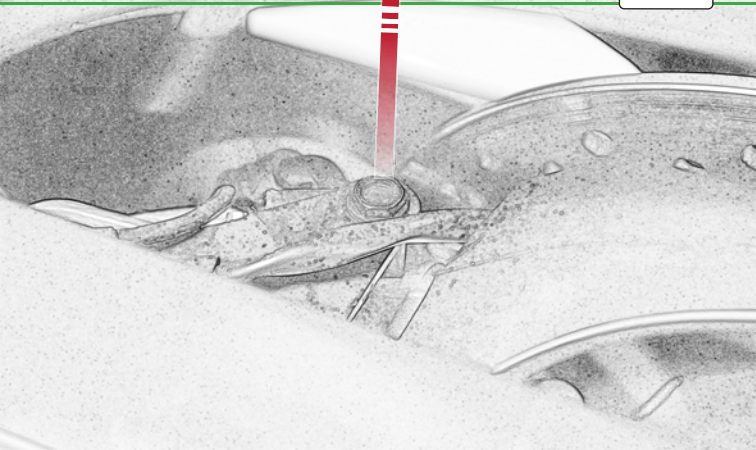


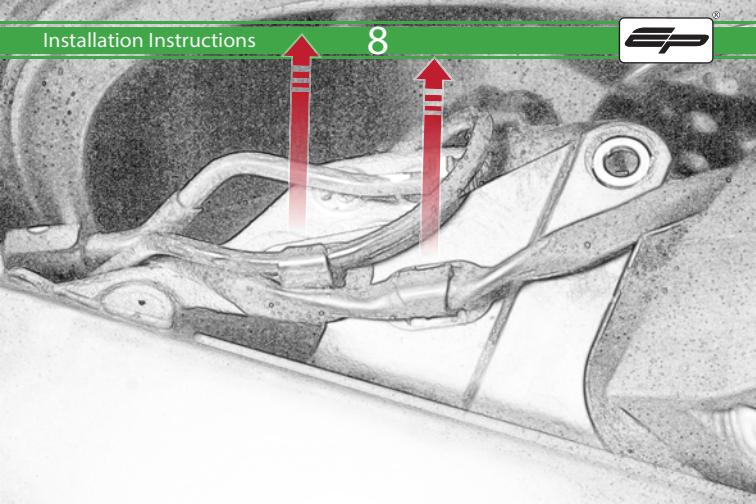


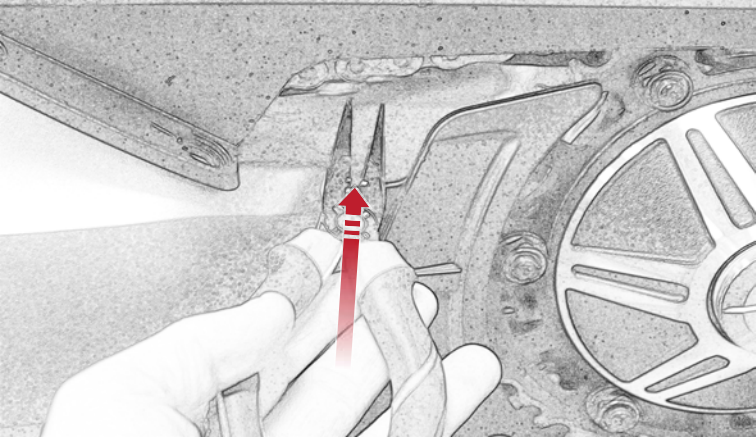


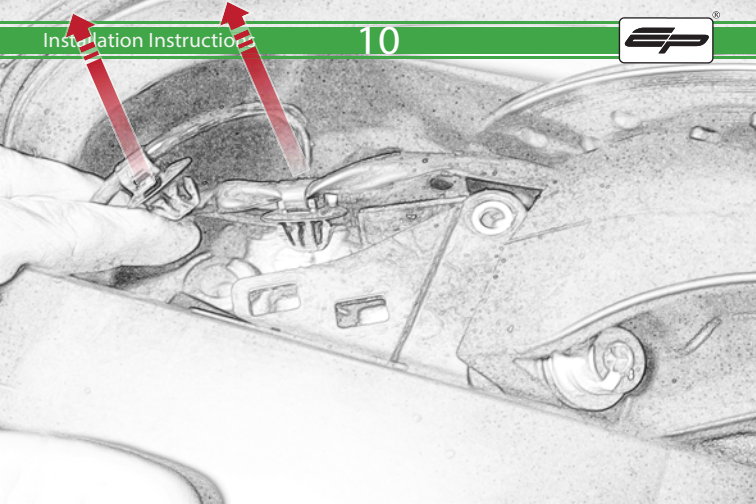


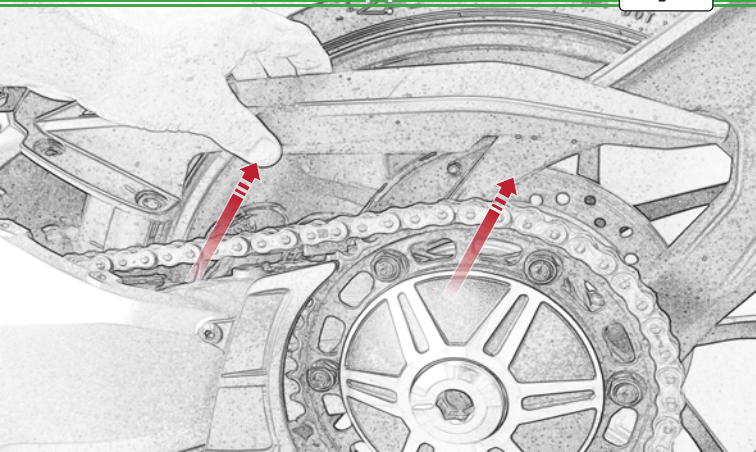


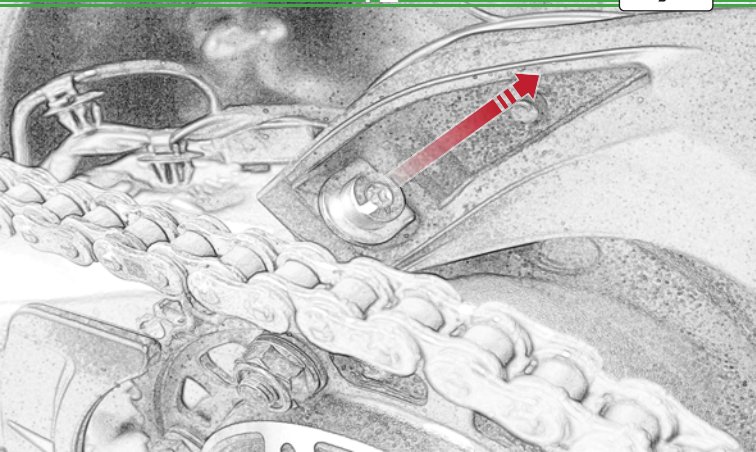

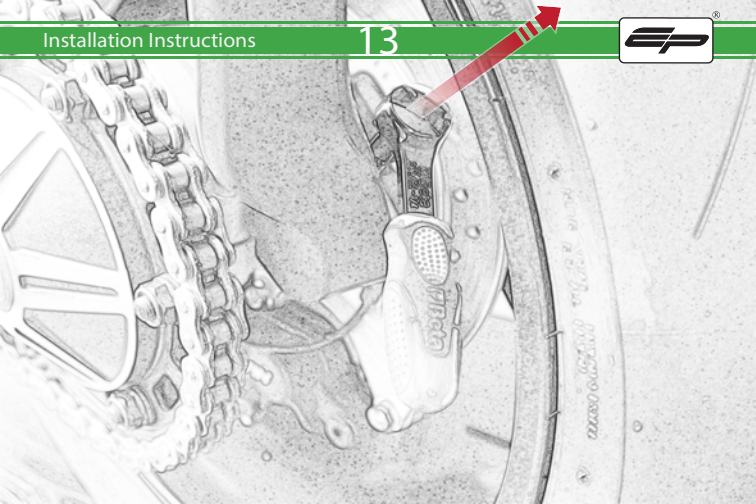


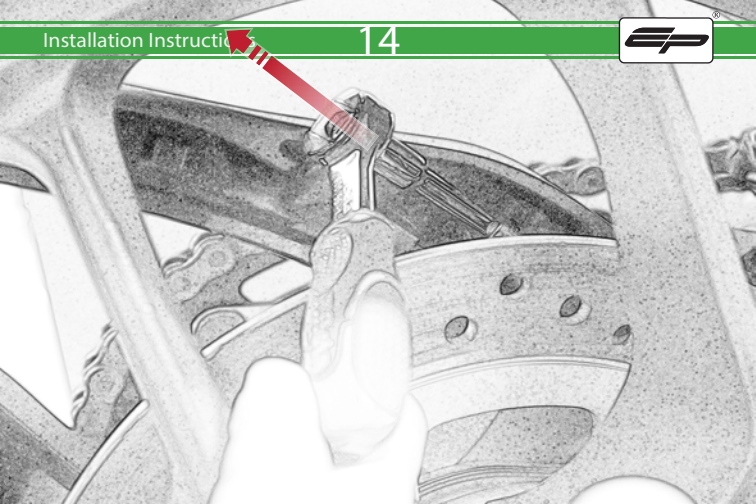

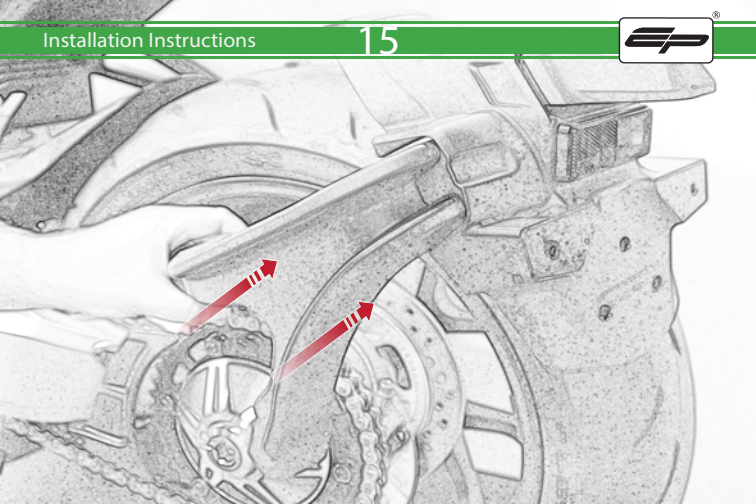

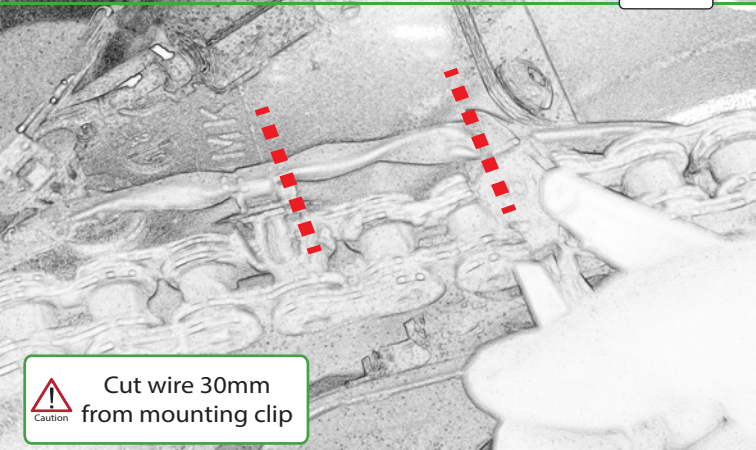



Cut wire 30mm
from mounting clip

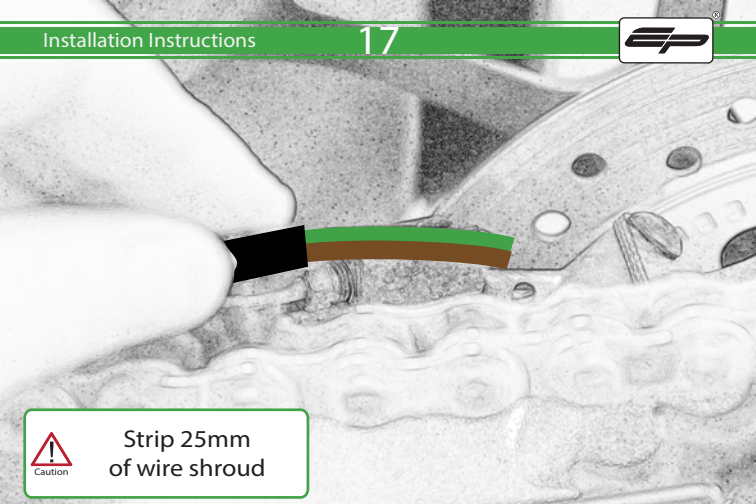



Caution


Strip 25mm
of wire shroud

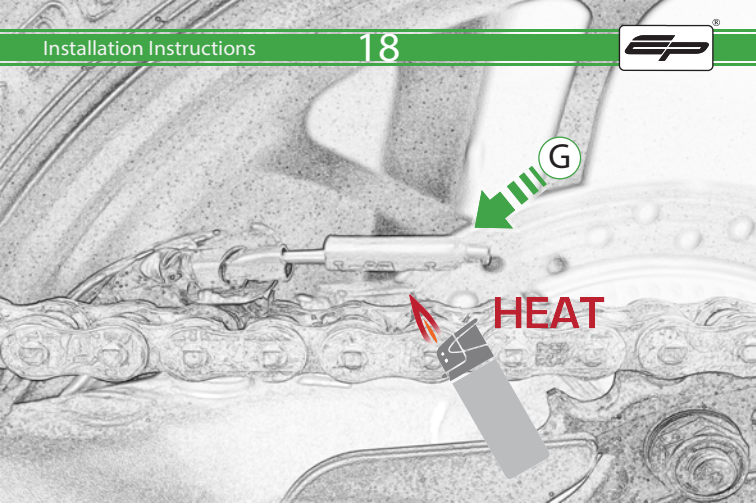


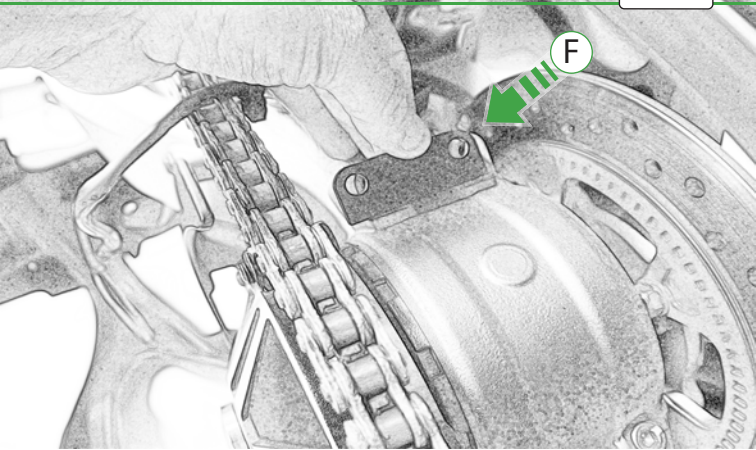


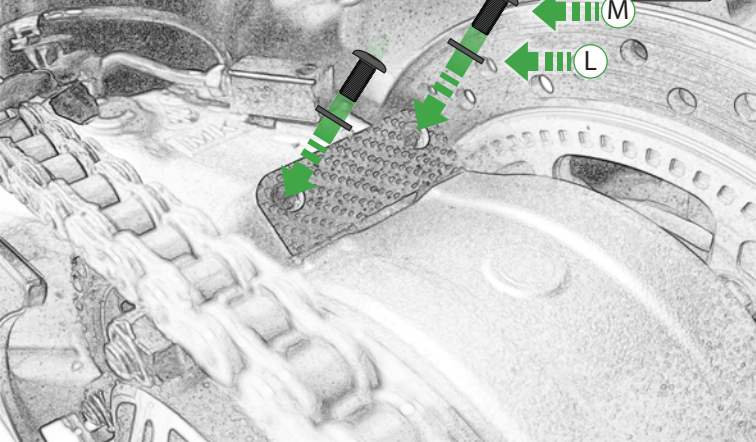


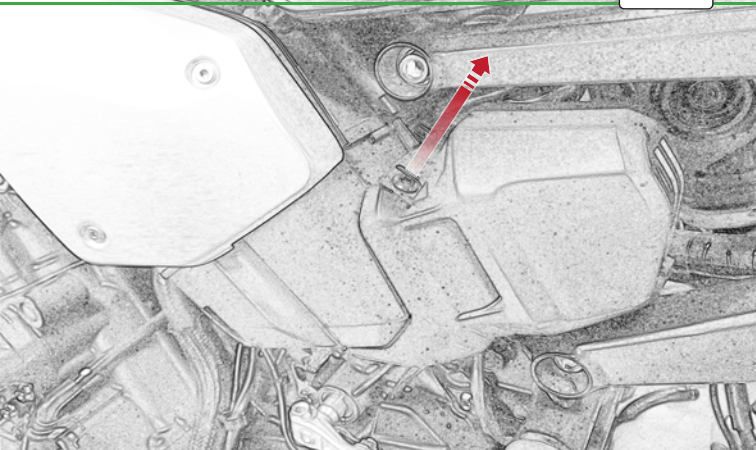



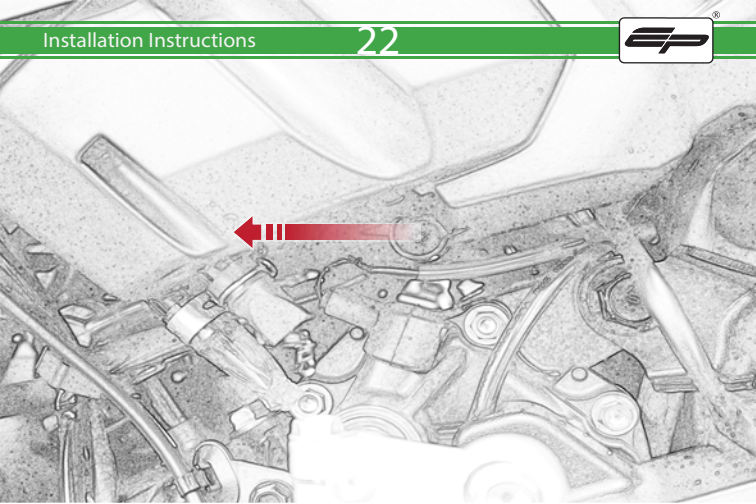



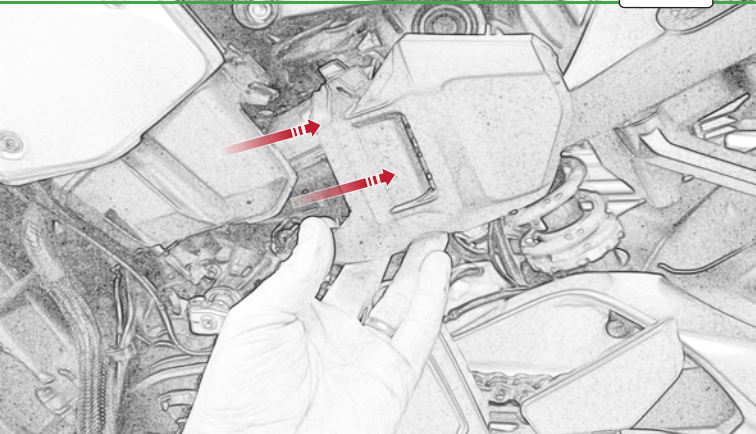


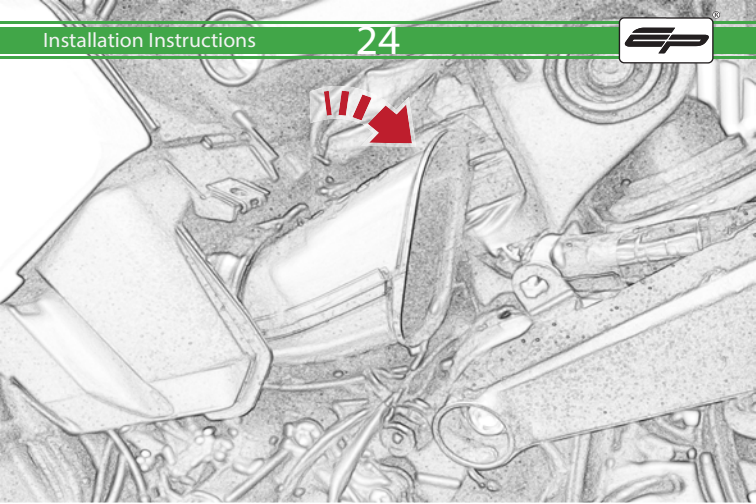


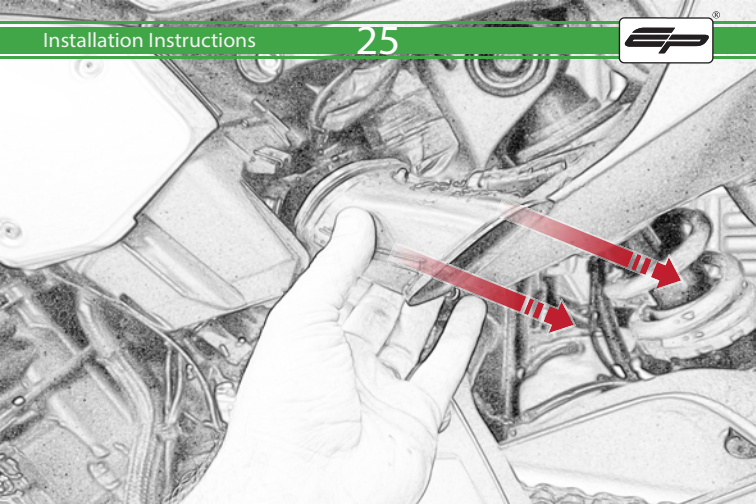


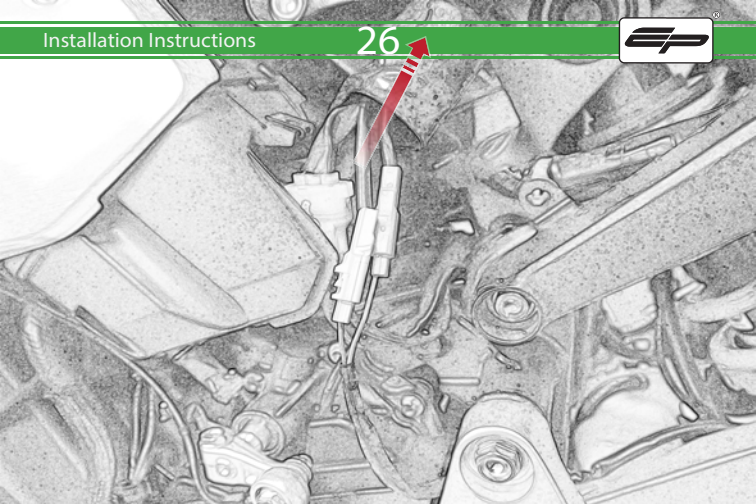

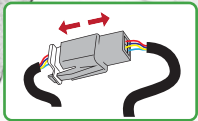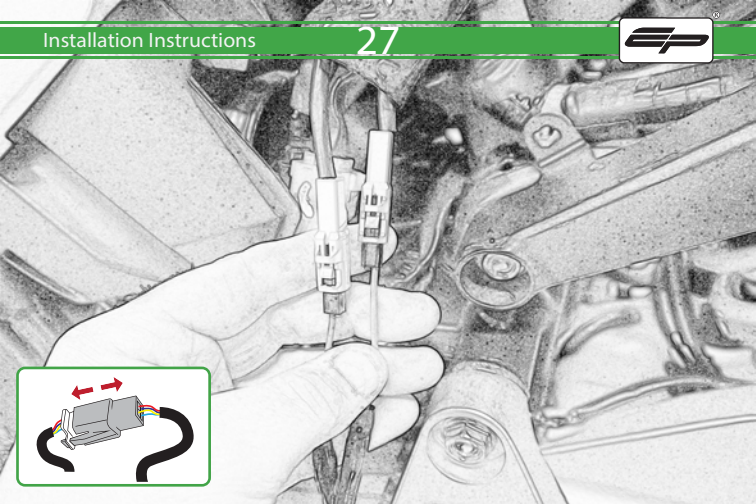

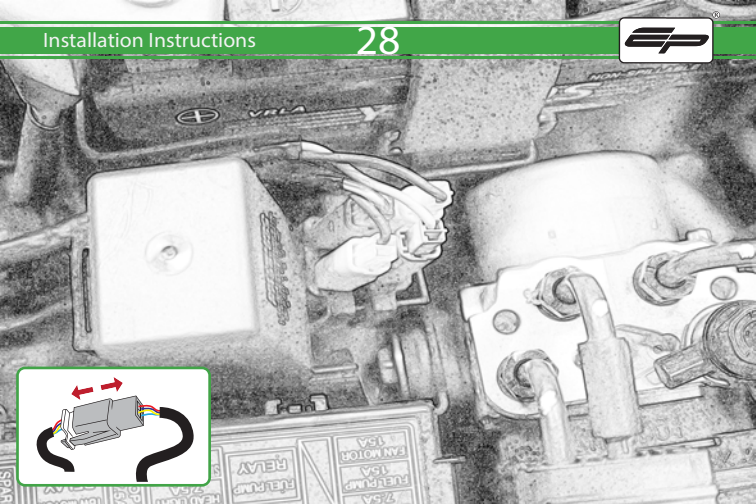


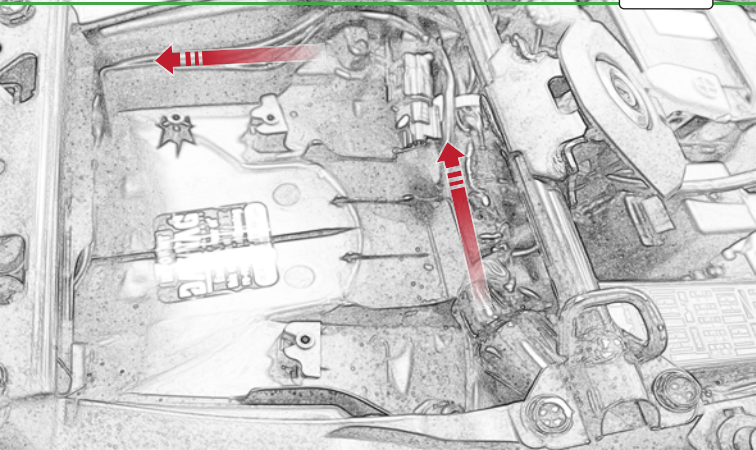


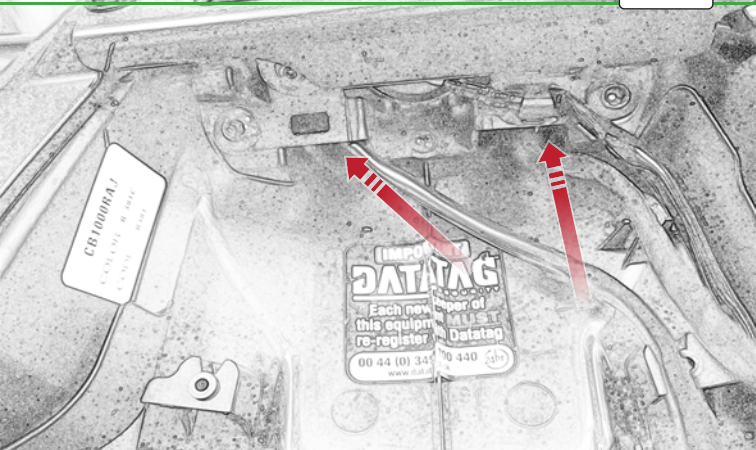






IMPORTANT
DATA!


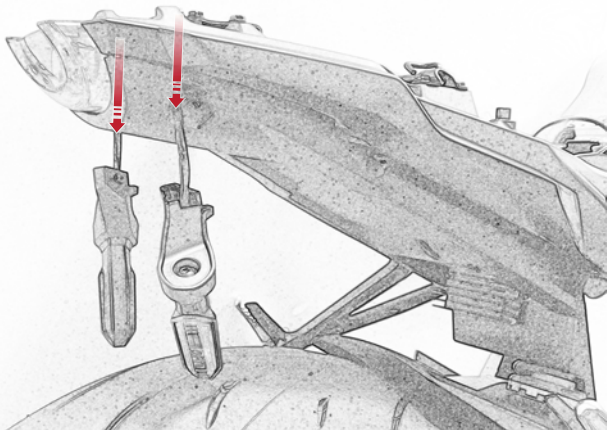


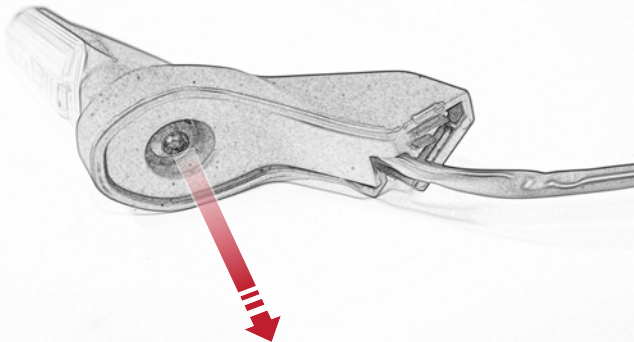

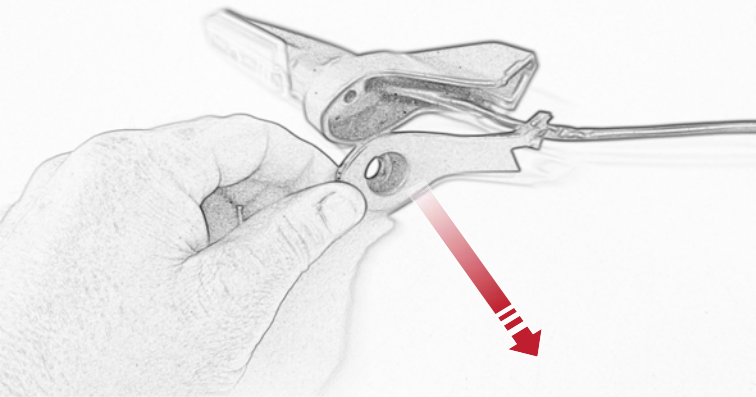


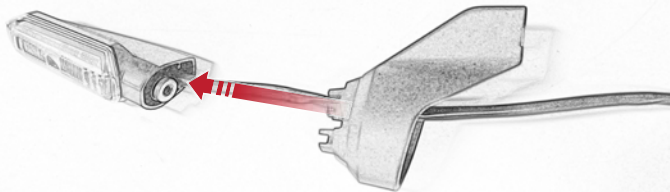


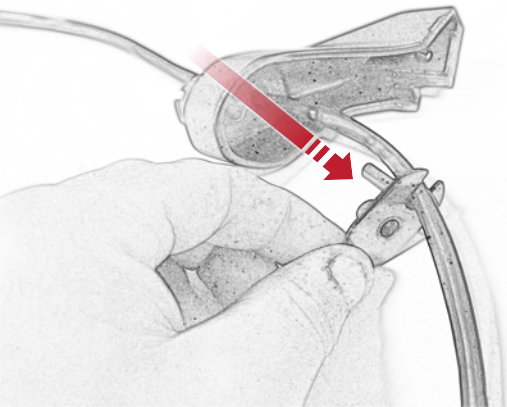


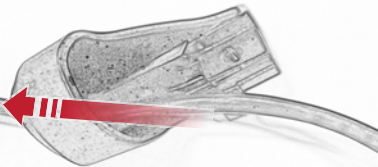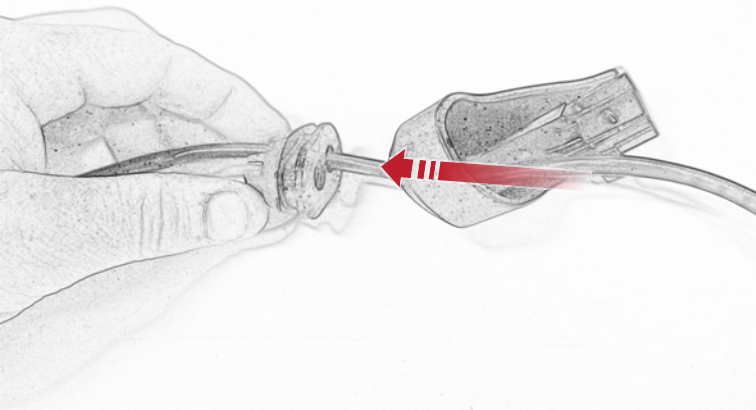




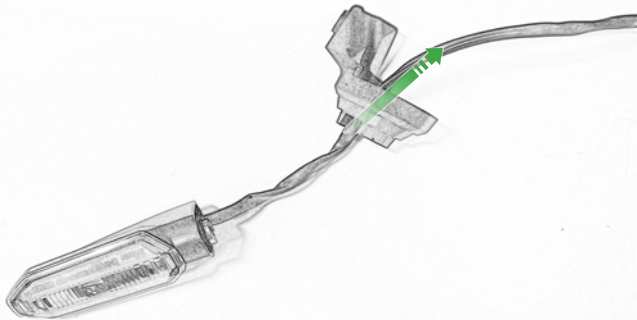


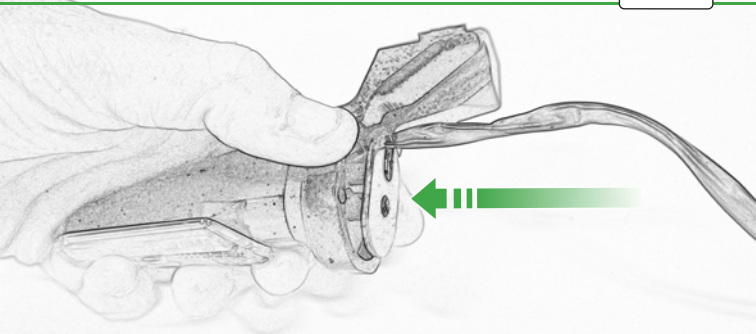


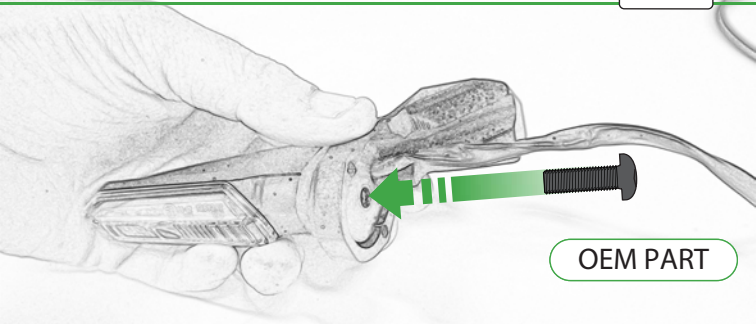



OEM PART

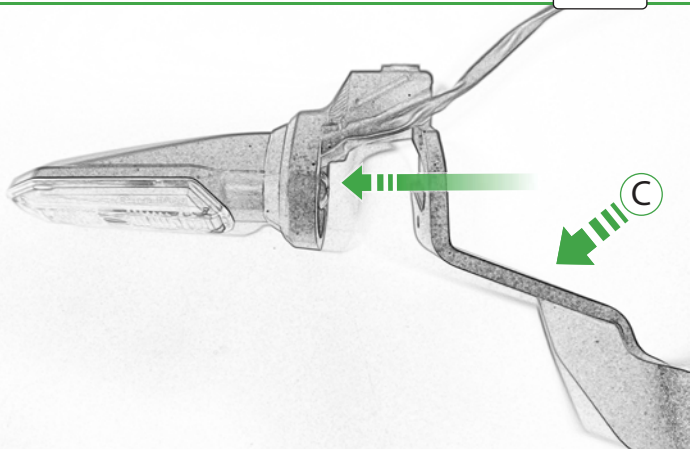


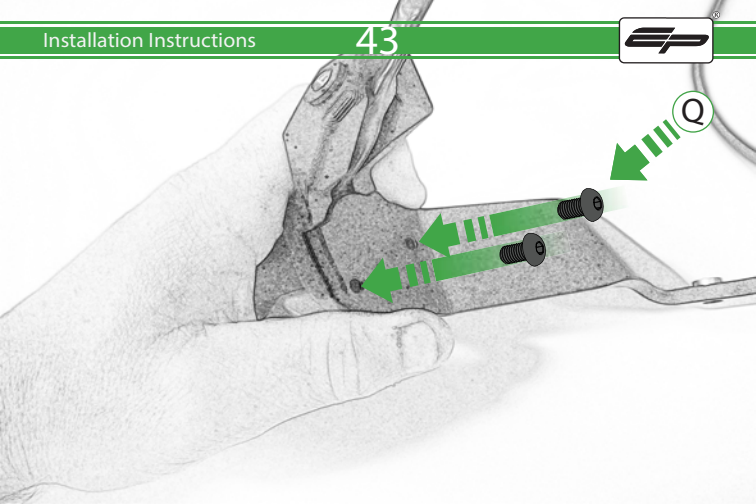


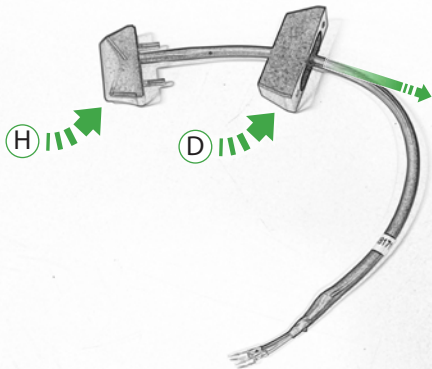


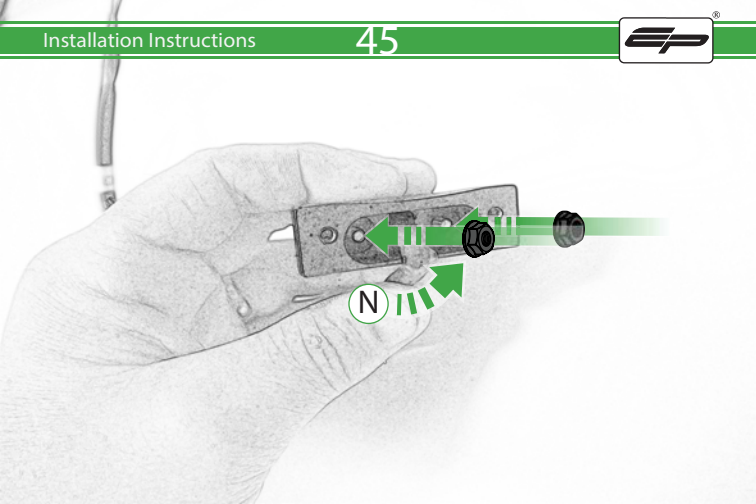


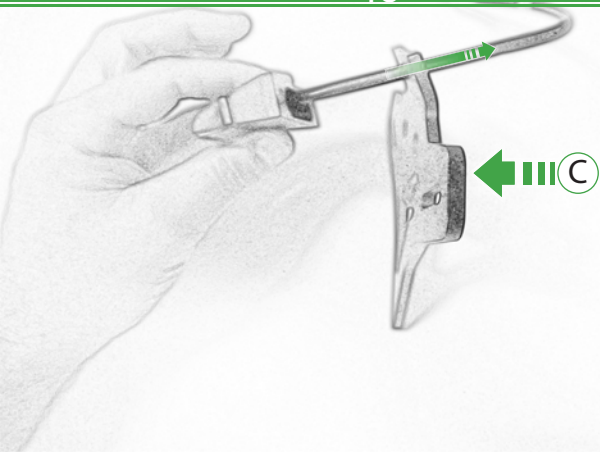

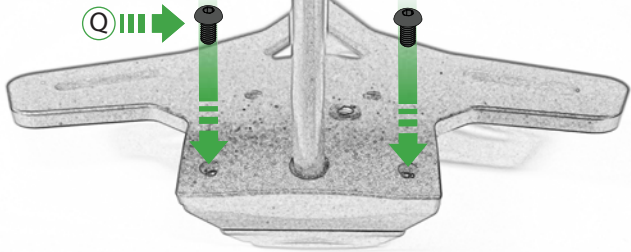

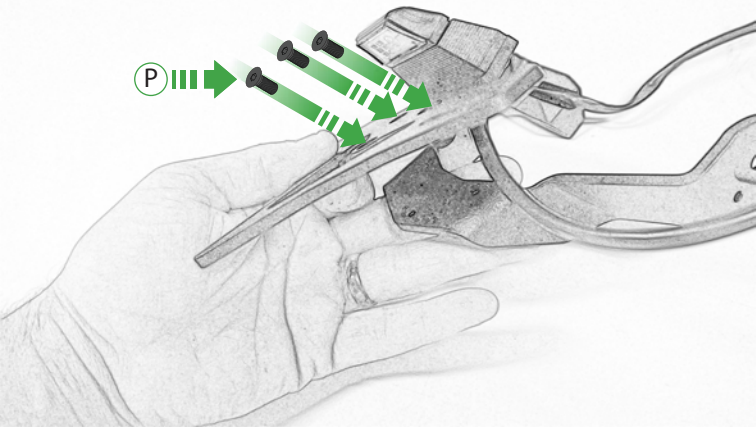

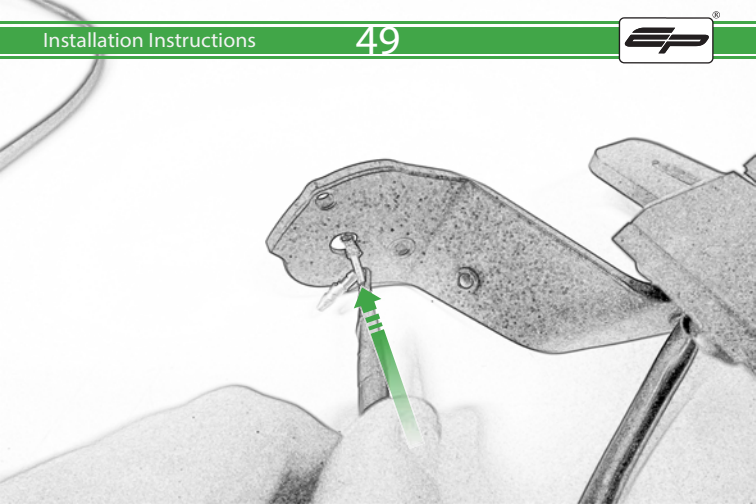


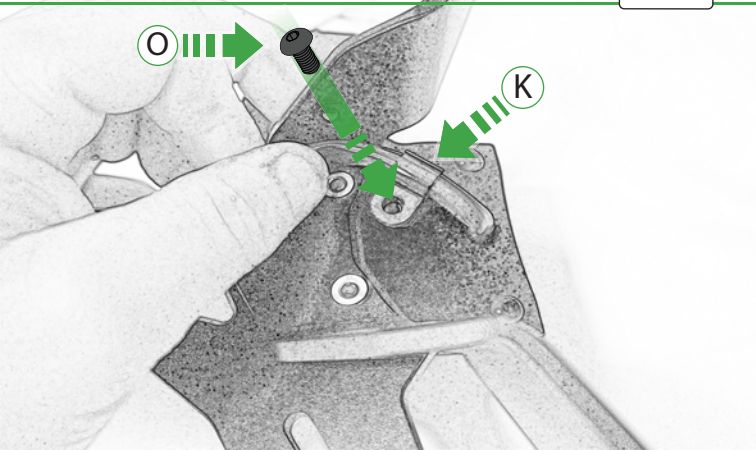





0





K

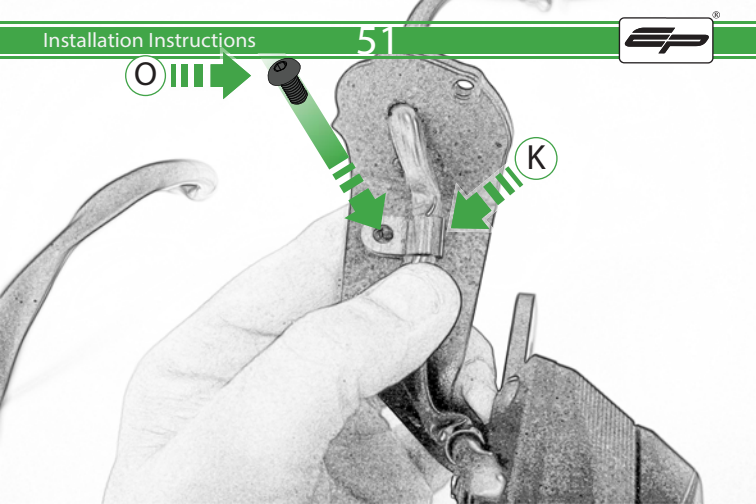



52
0 IIII

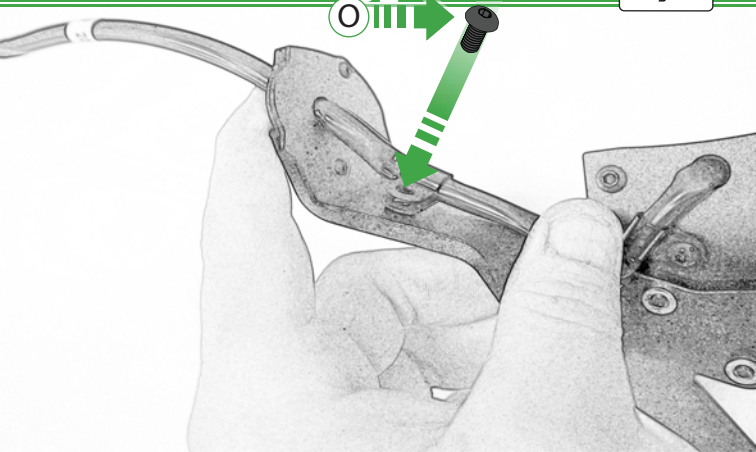


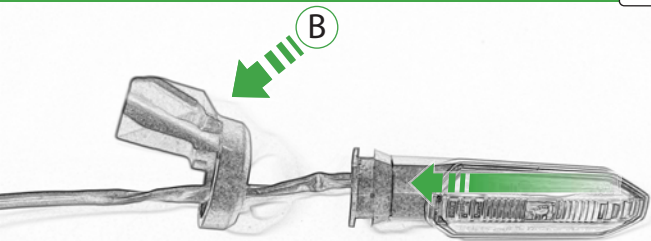

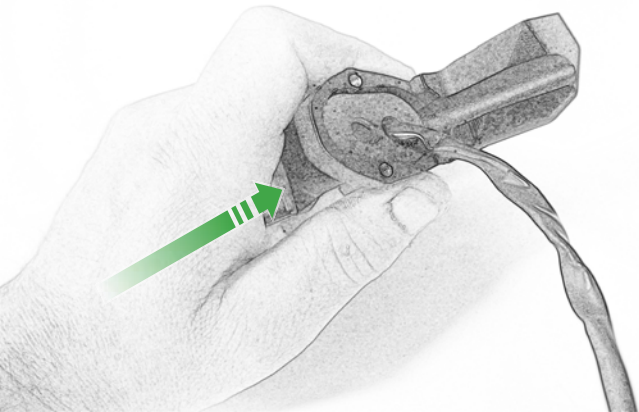

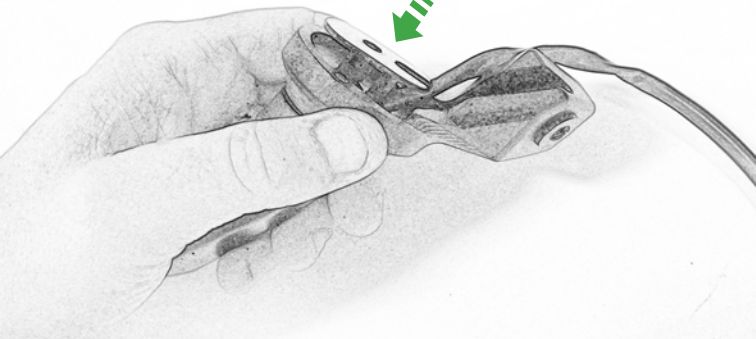

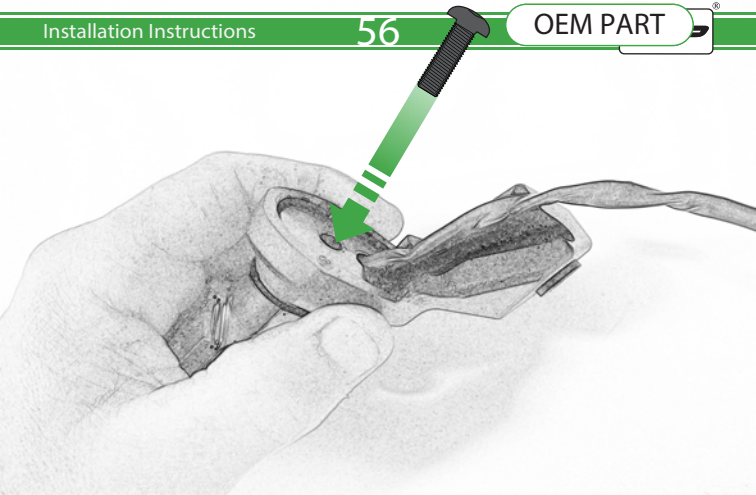

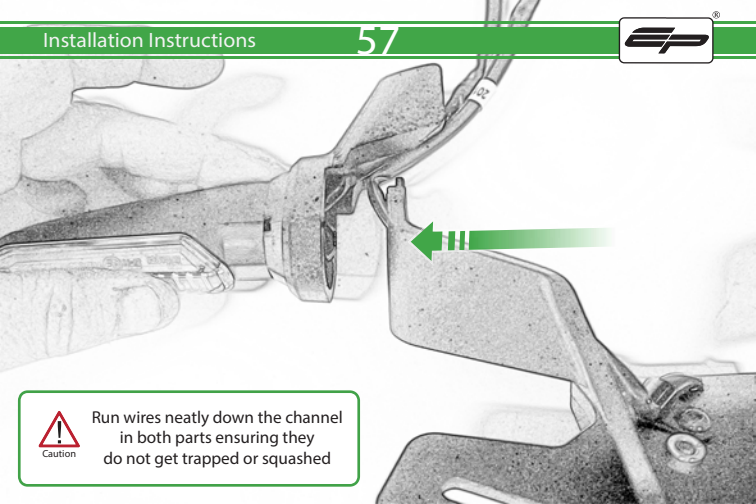



Caution

Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed





Q

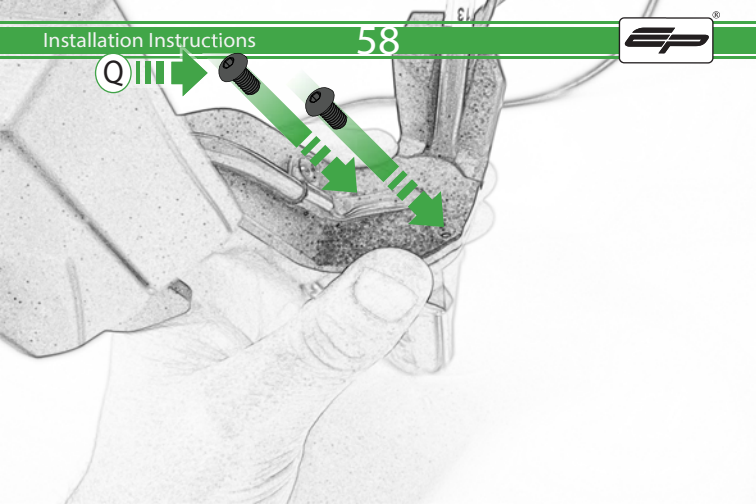


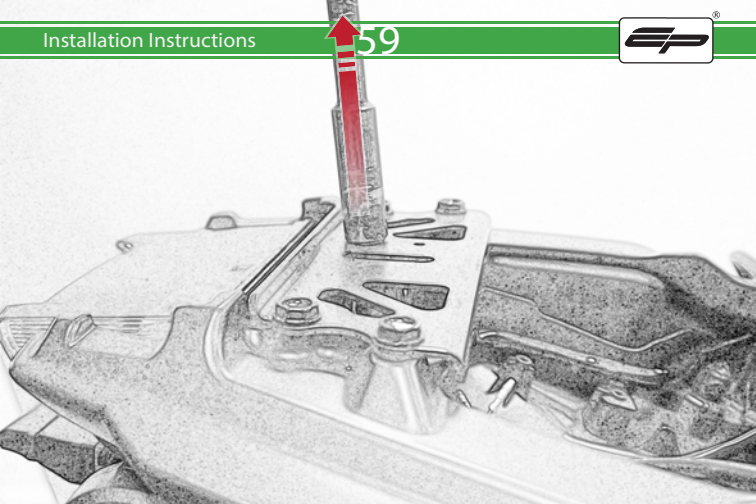



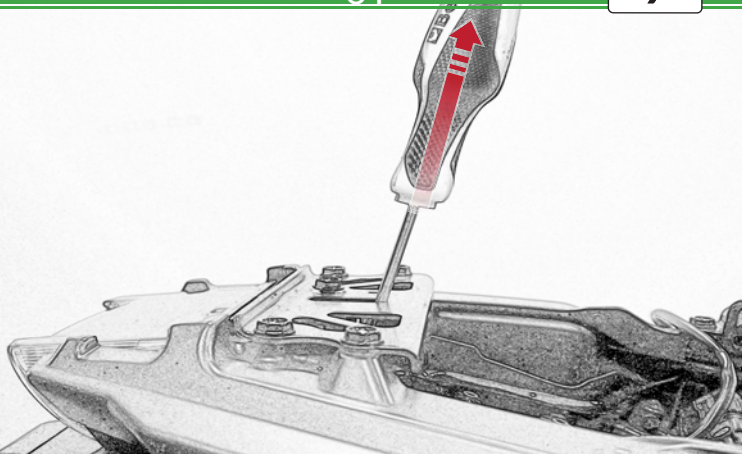

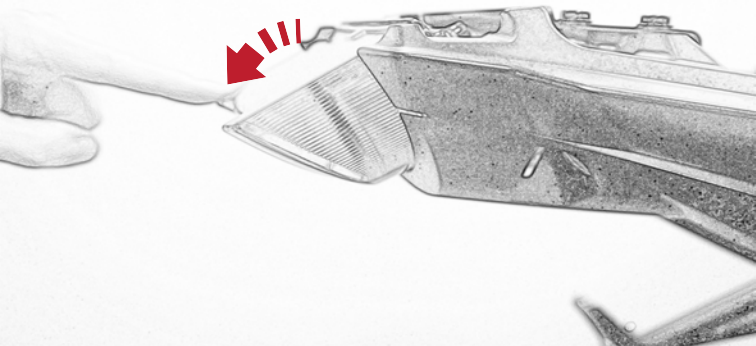

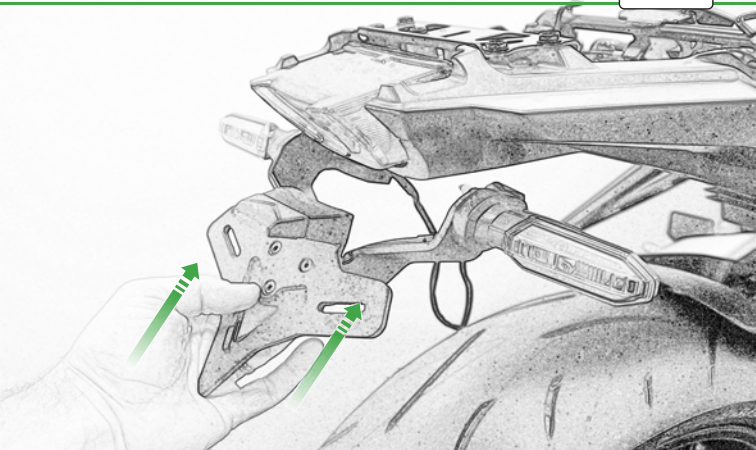







OEM PART


OEM PART

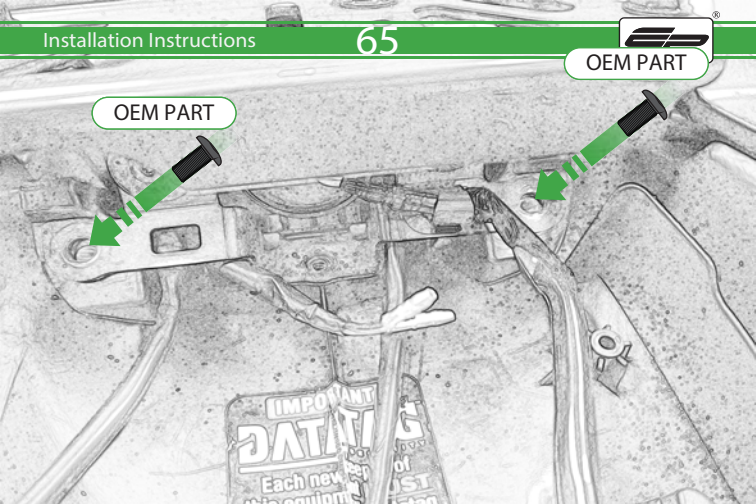


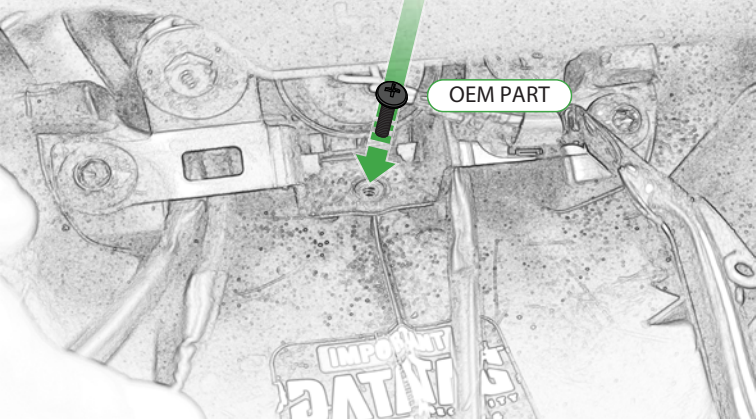


OEM PART

IMPORTANT
DATA!


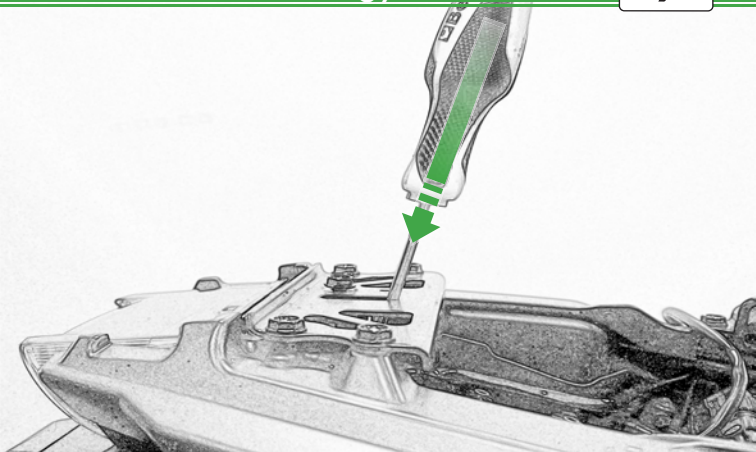


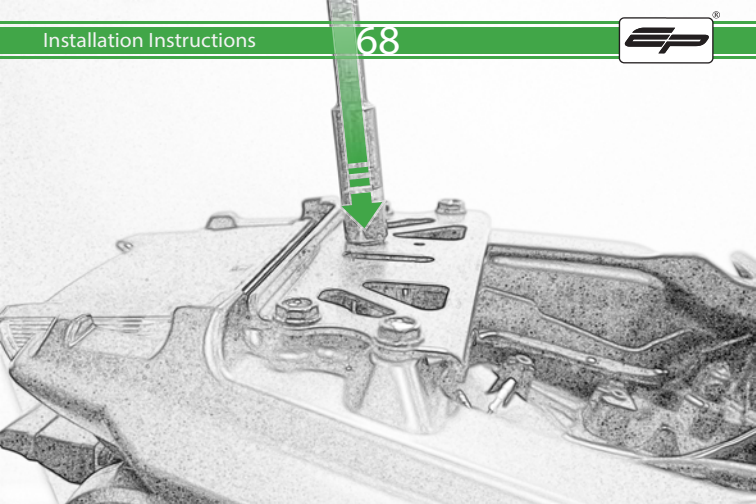


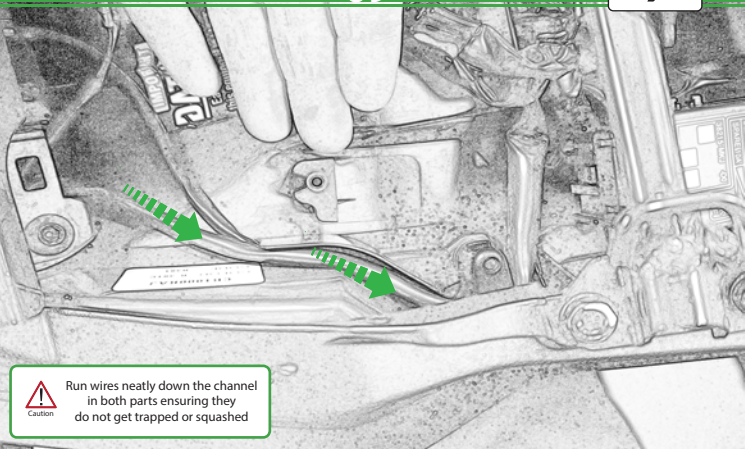


Caution

Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

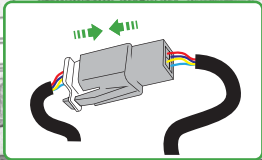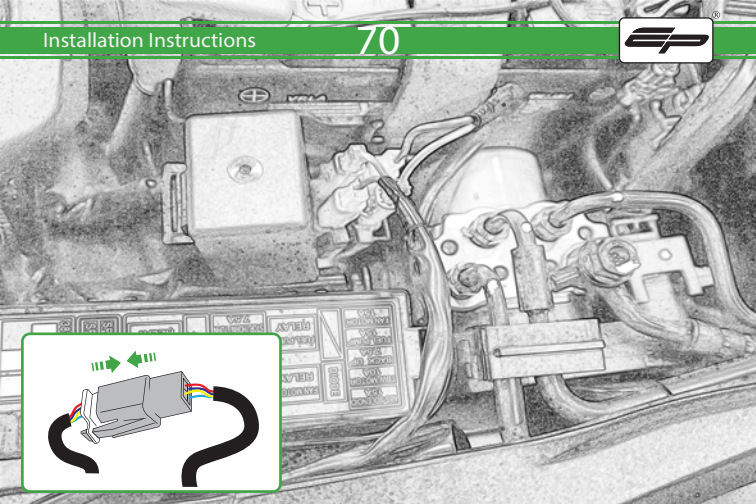



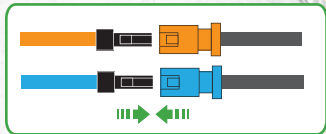


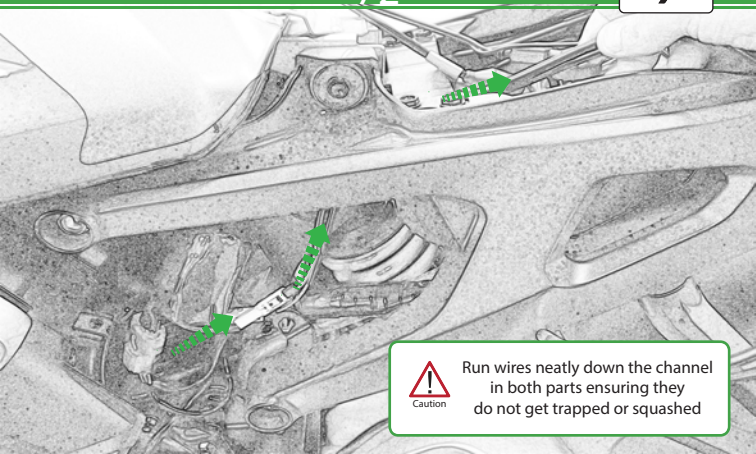



Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

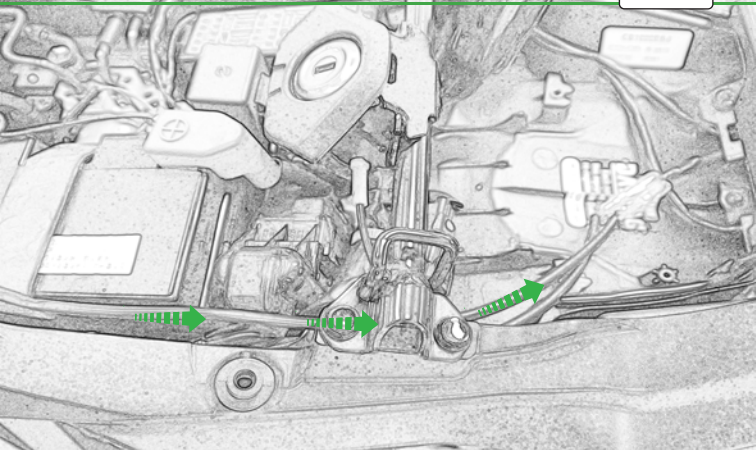


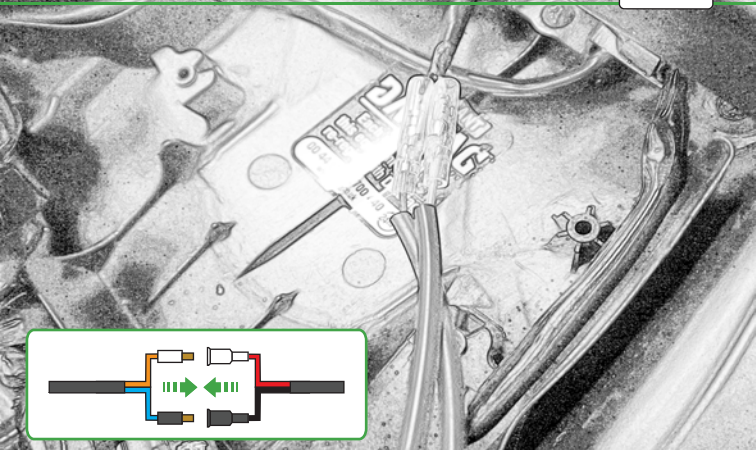




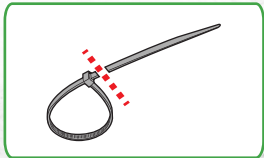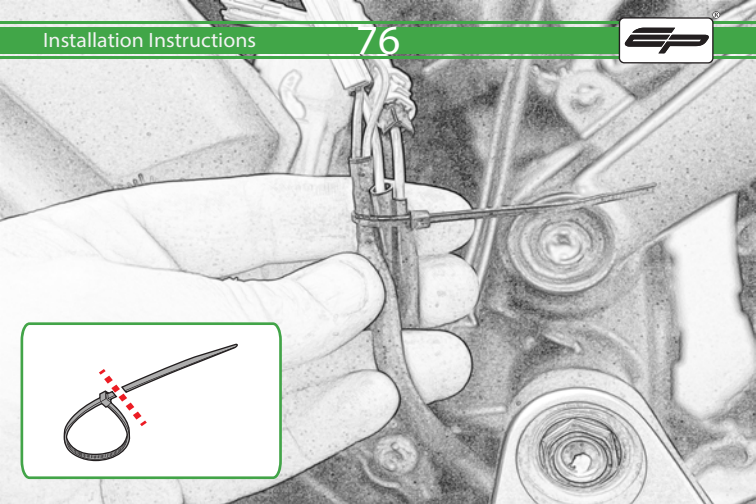

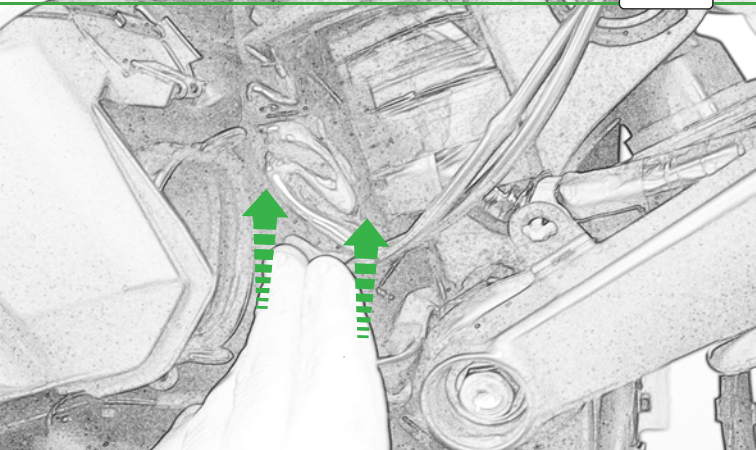

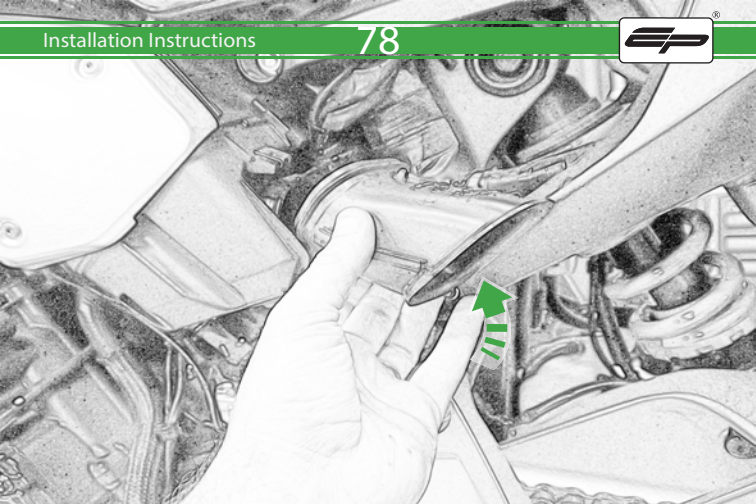

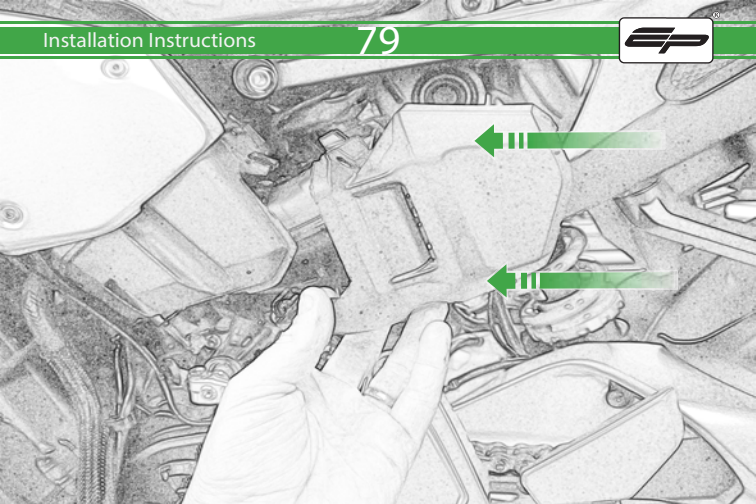



OEM PART




OEM PART






Reverse Stages

9 - 1

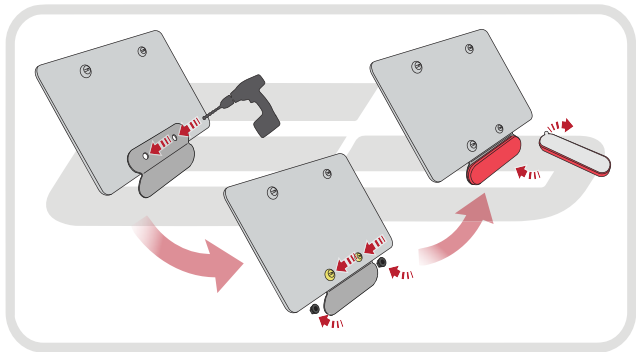

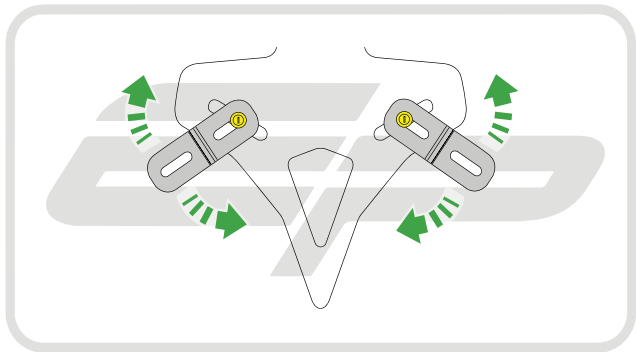



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.