

Kit Contents PRN014655-014677

- A M6 x 16 Countersunk Screw
 A
- B 1 x Pivot Plate
- © 1 x SP Connect Plate
- D 2 x M5 x 10mm Caphead Bolts
- E 2 x P-clips (No.1)
- E 2 x P-clips (No.2)
- G 2 x P-clips (No.3)
- H 2 x P-clips (No.4)
- 1 2 x Lobe Screw
- ① 2 x Locking Washer
- K 2 x M5 Black Washer

C 2 x M4 x 5mm Button Head Bolts


Sub Kit


M 1 x Spanner
 N 4 x Torq Pan Head Screw







Repeat Both Sides

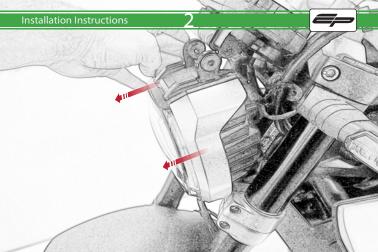

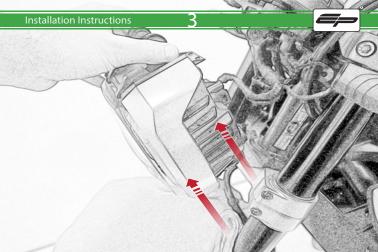


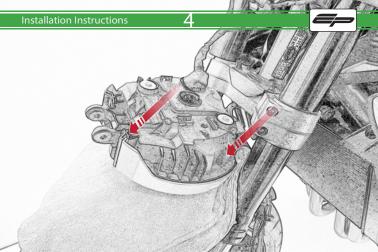




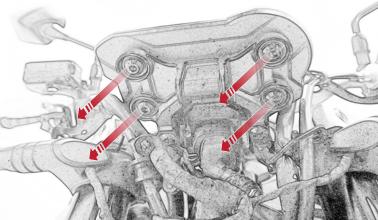




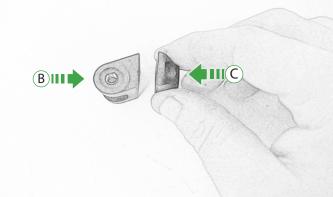

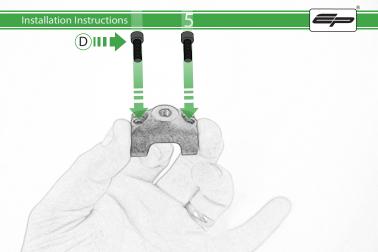




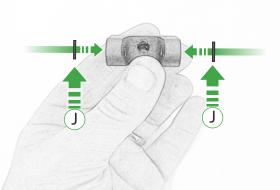








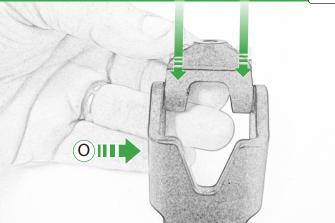


8


Installation Instructions O L Ш Ш K K




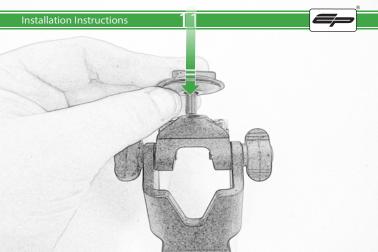



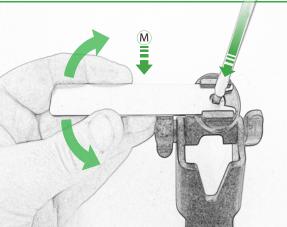


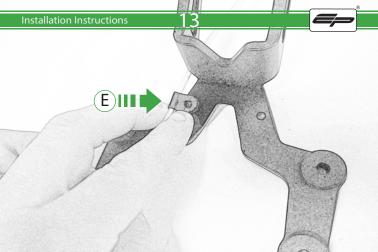


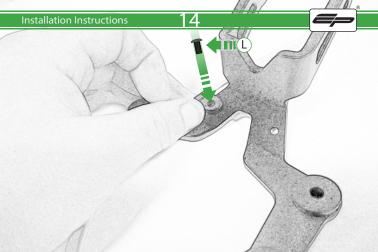





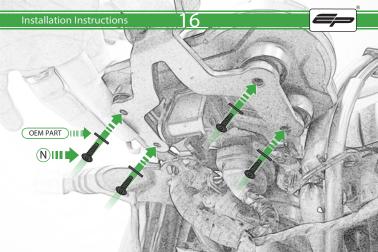

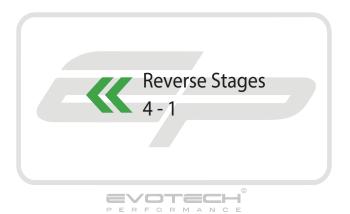



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

