




www.evotech-performance.com


Triumph Tiger 900 SP Connect Sat Nav Mount
Installation Instructions





Kit Contents PRN014677-014925


- | | |
|-----------------------------------|------------------------------------|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M5 Black Washer |
| (B) 1 x Pivot Plate | (M) 2 x M4 x 5mm Button Head Bolts |
| (C) 1 x SP Connect Plate | |
| (D) 1 x Spanner | |
| (E) 2 x M5 x 10mm Caphead Bolts | Sub Kit |
| (F) 2 x P-clips (No.1) | (N) 2 x M5 x 35mm Caphead Bolt |
| (G) 2 x P-clips (No.2) | |
| (H) 2 x P-clips (No.3) | |
| (I) 2 x P-clips (No.4) | |
| (J) 2 x Lobe Screw | |
| (K) 2 x Locking Washer | |

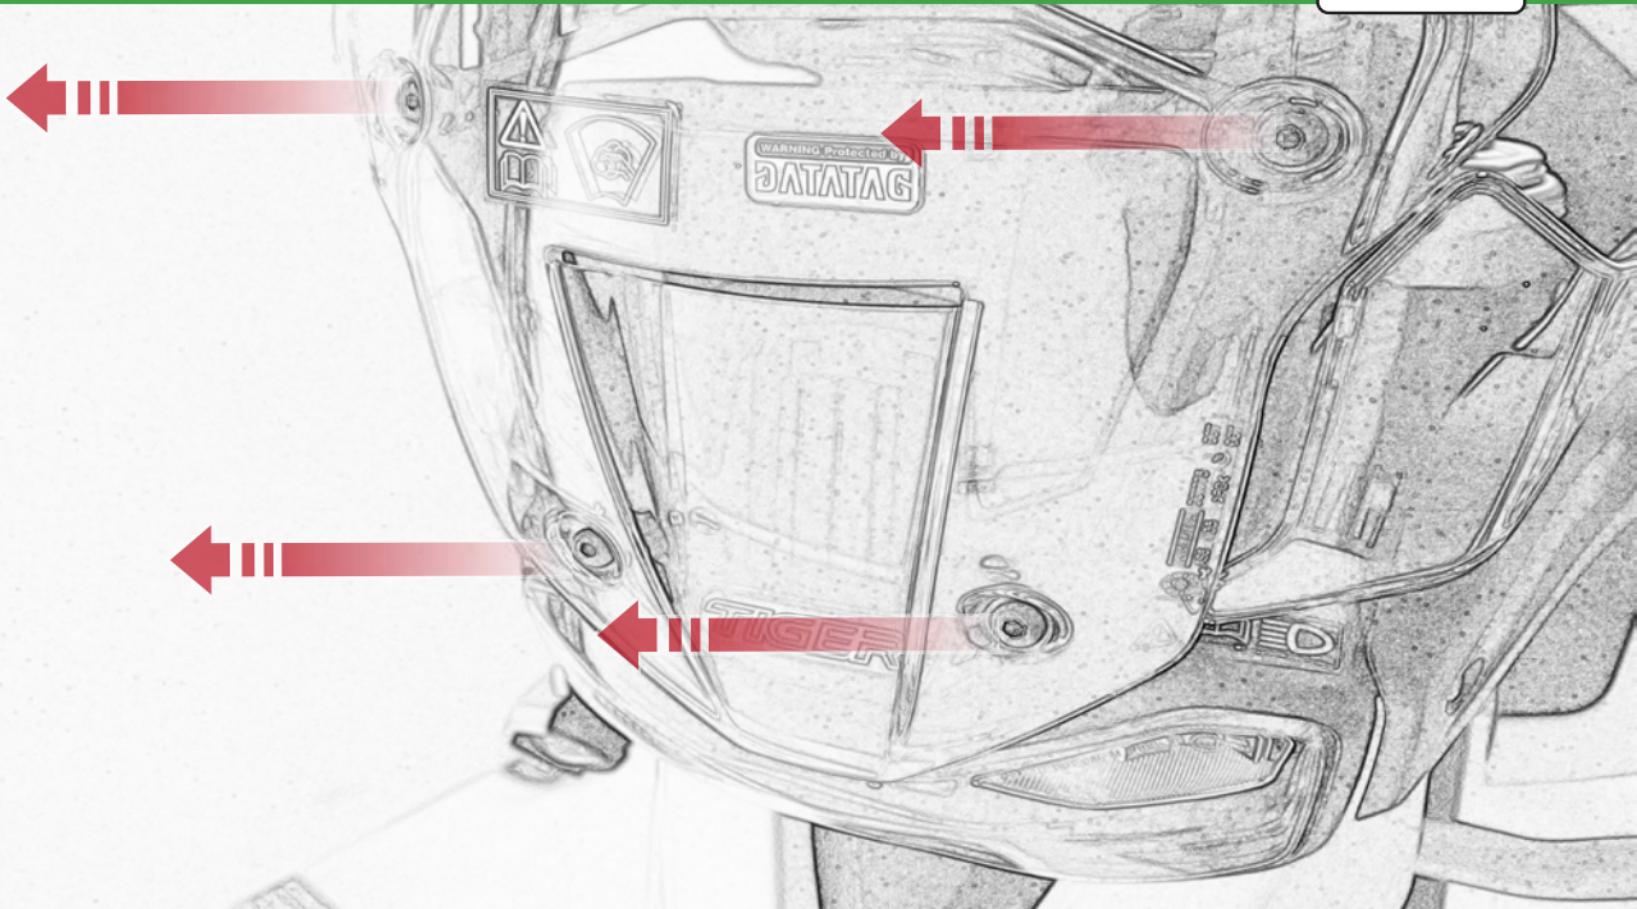


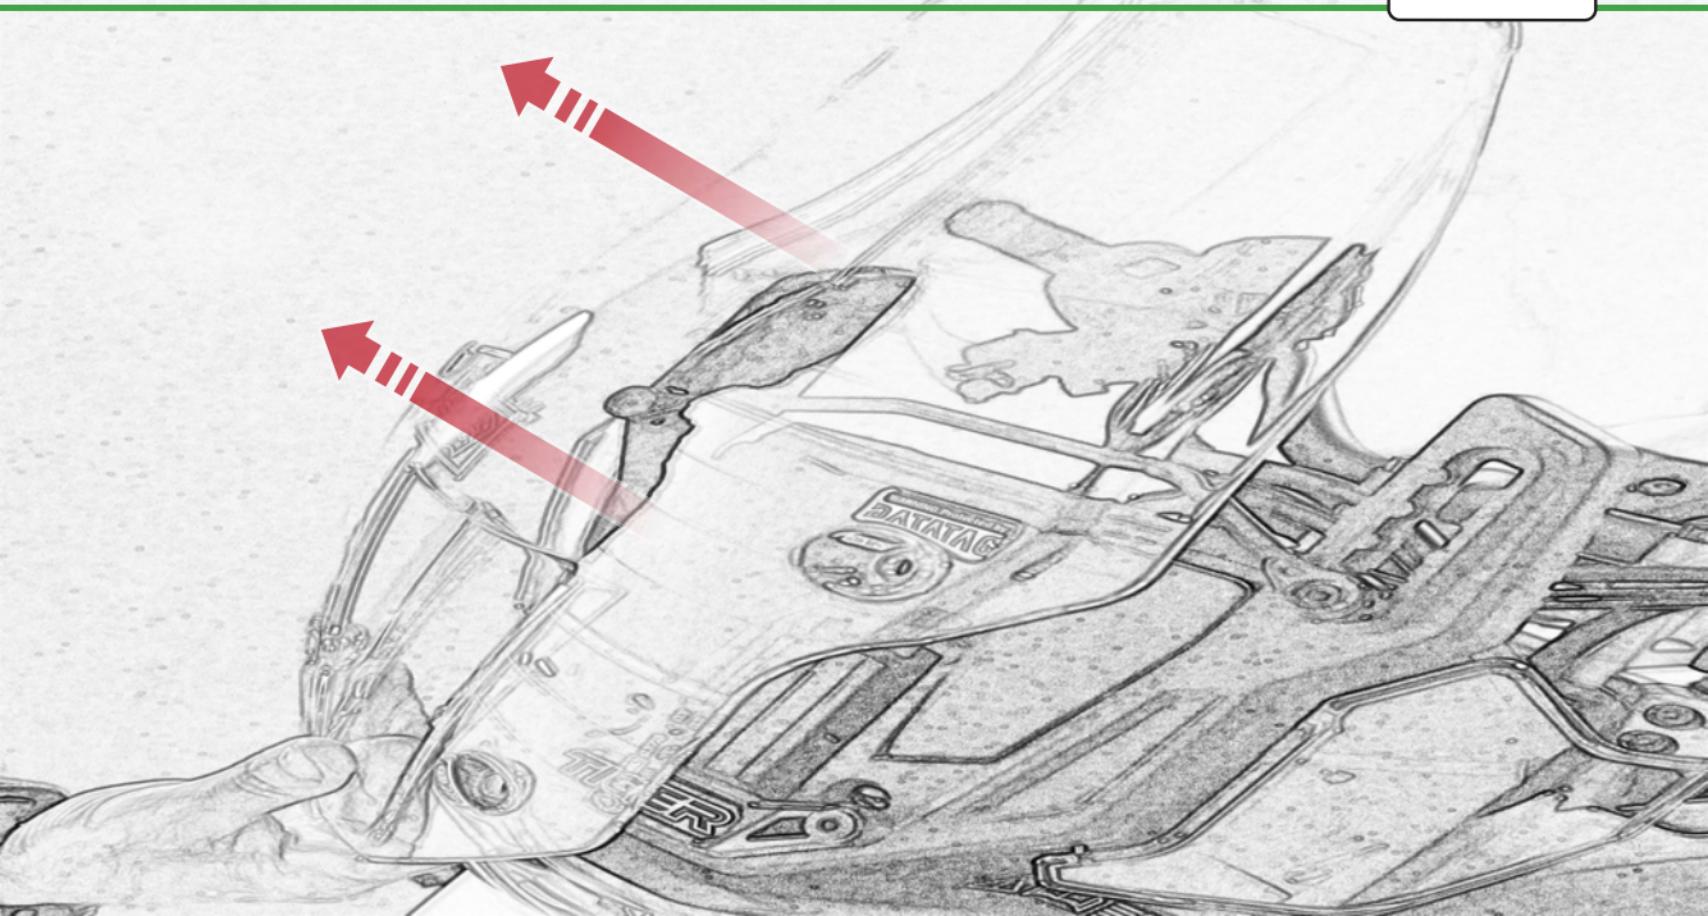


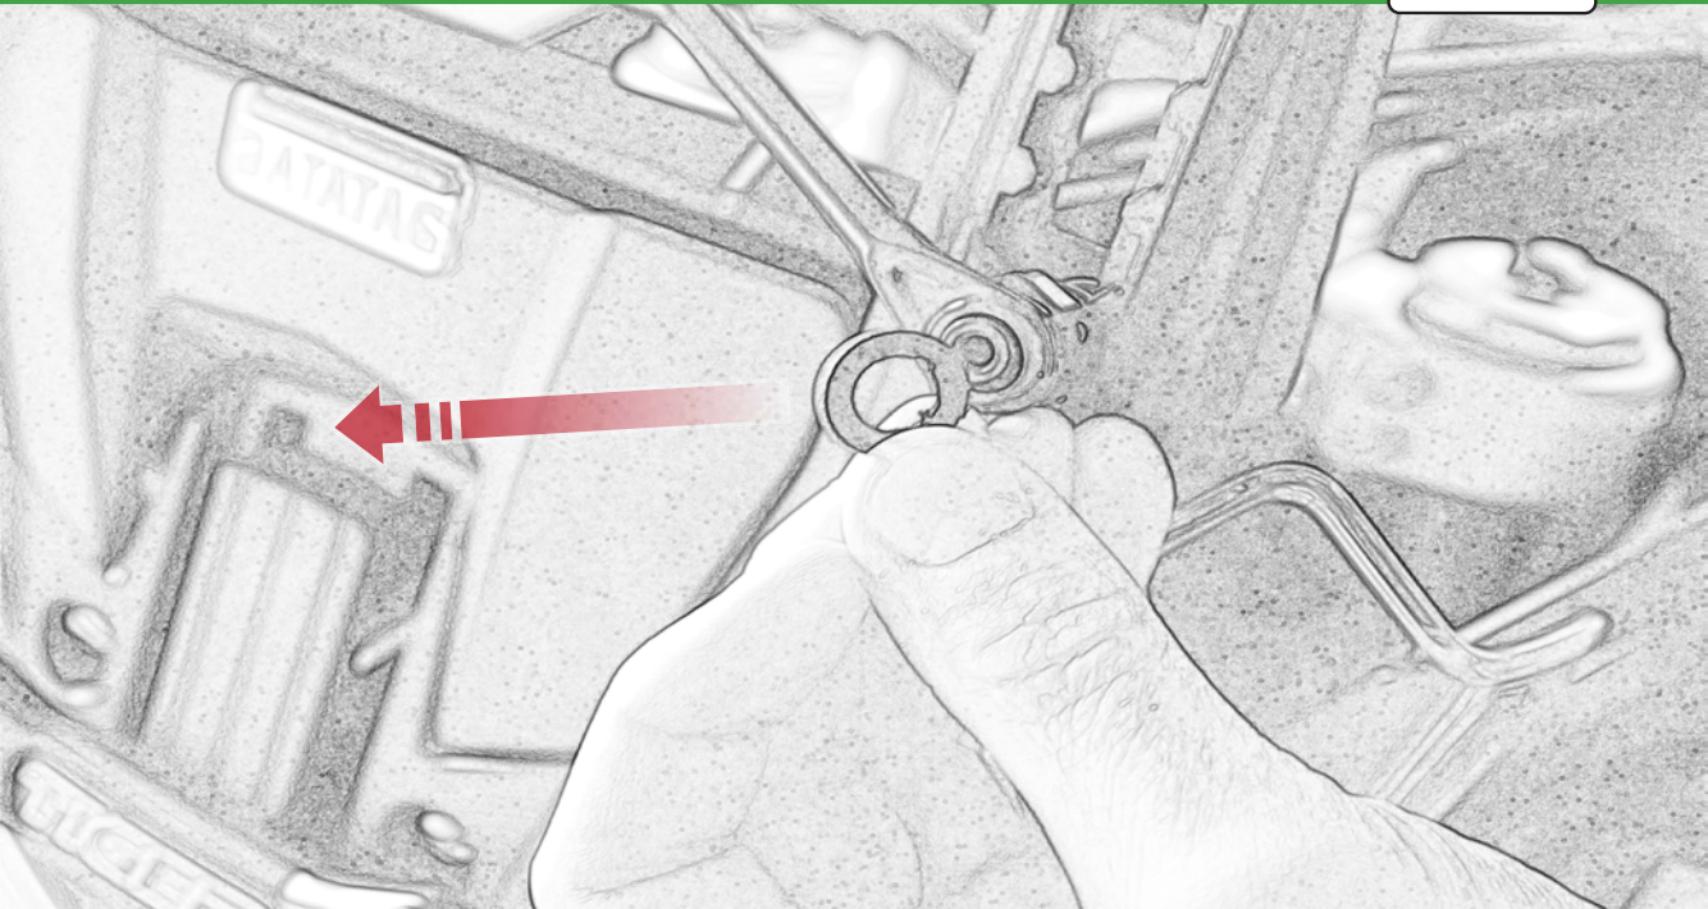


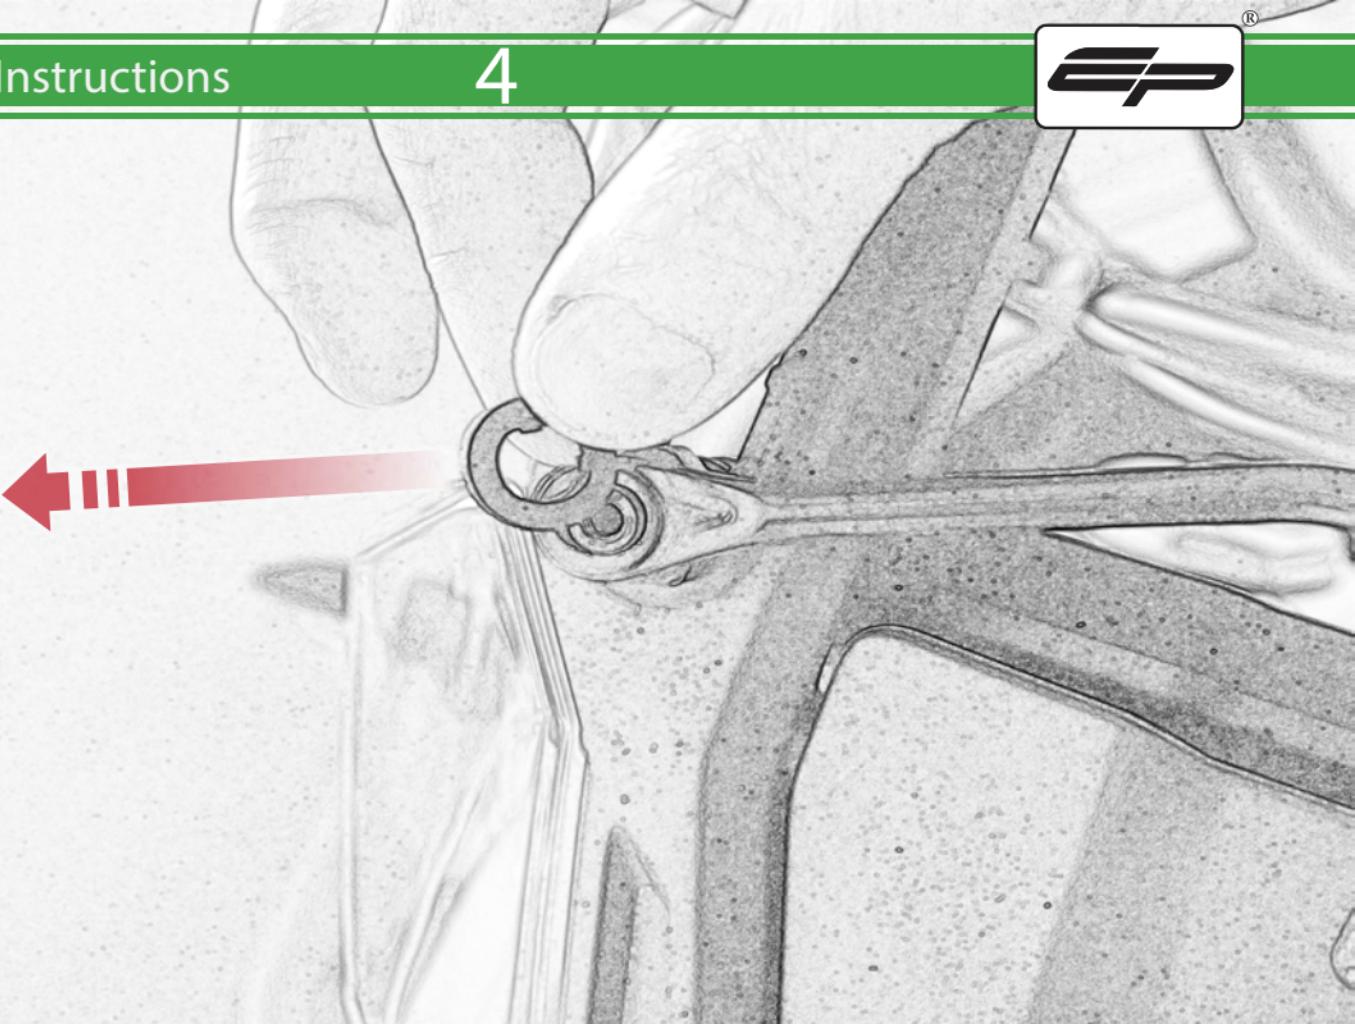

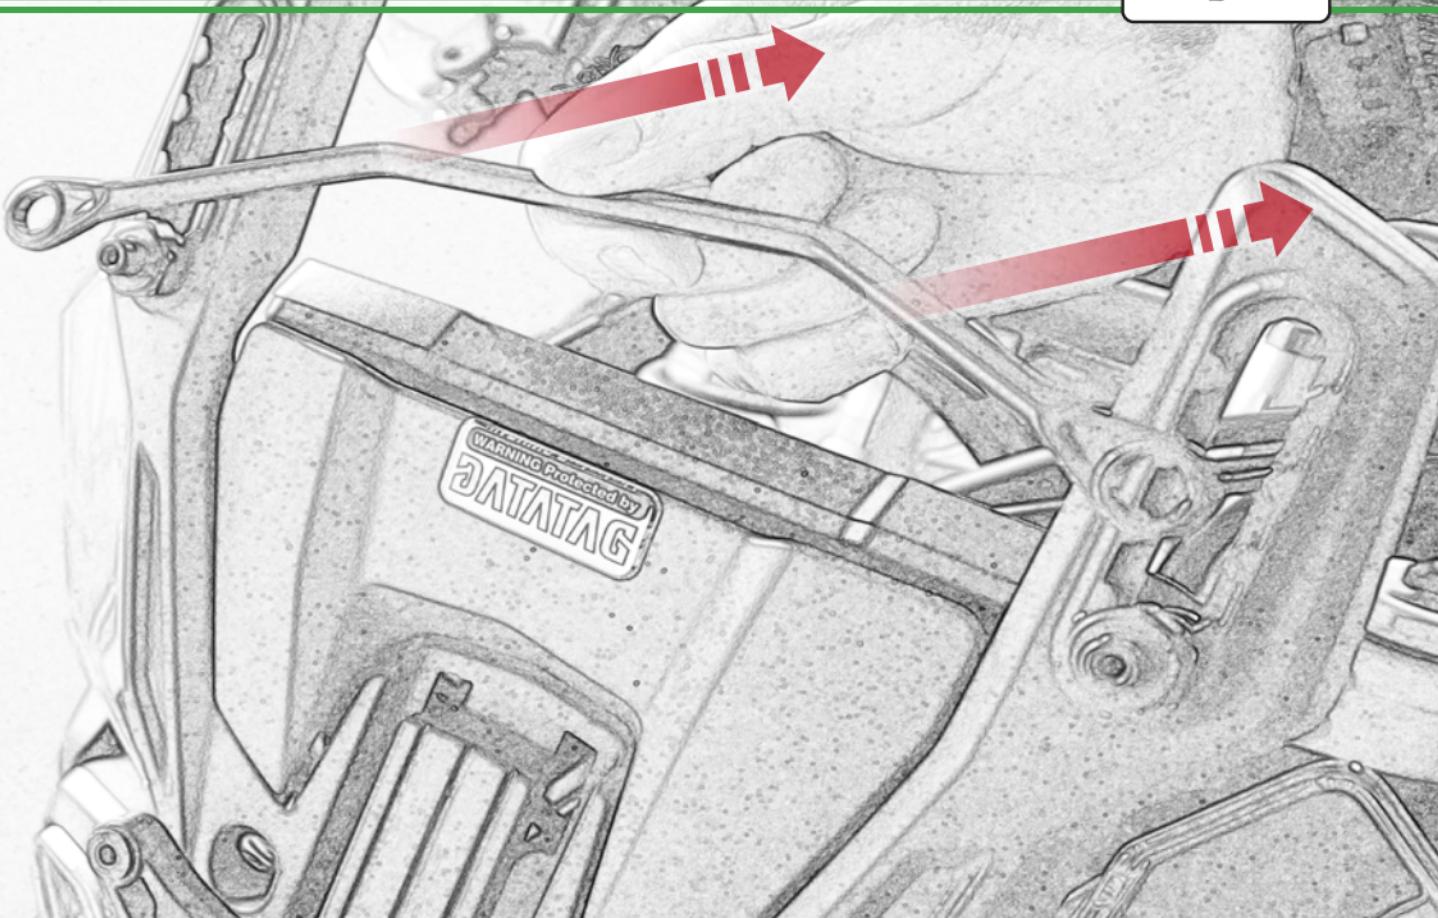


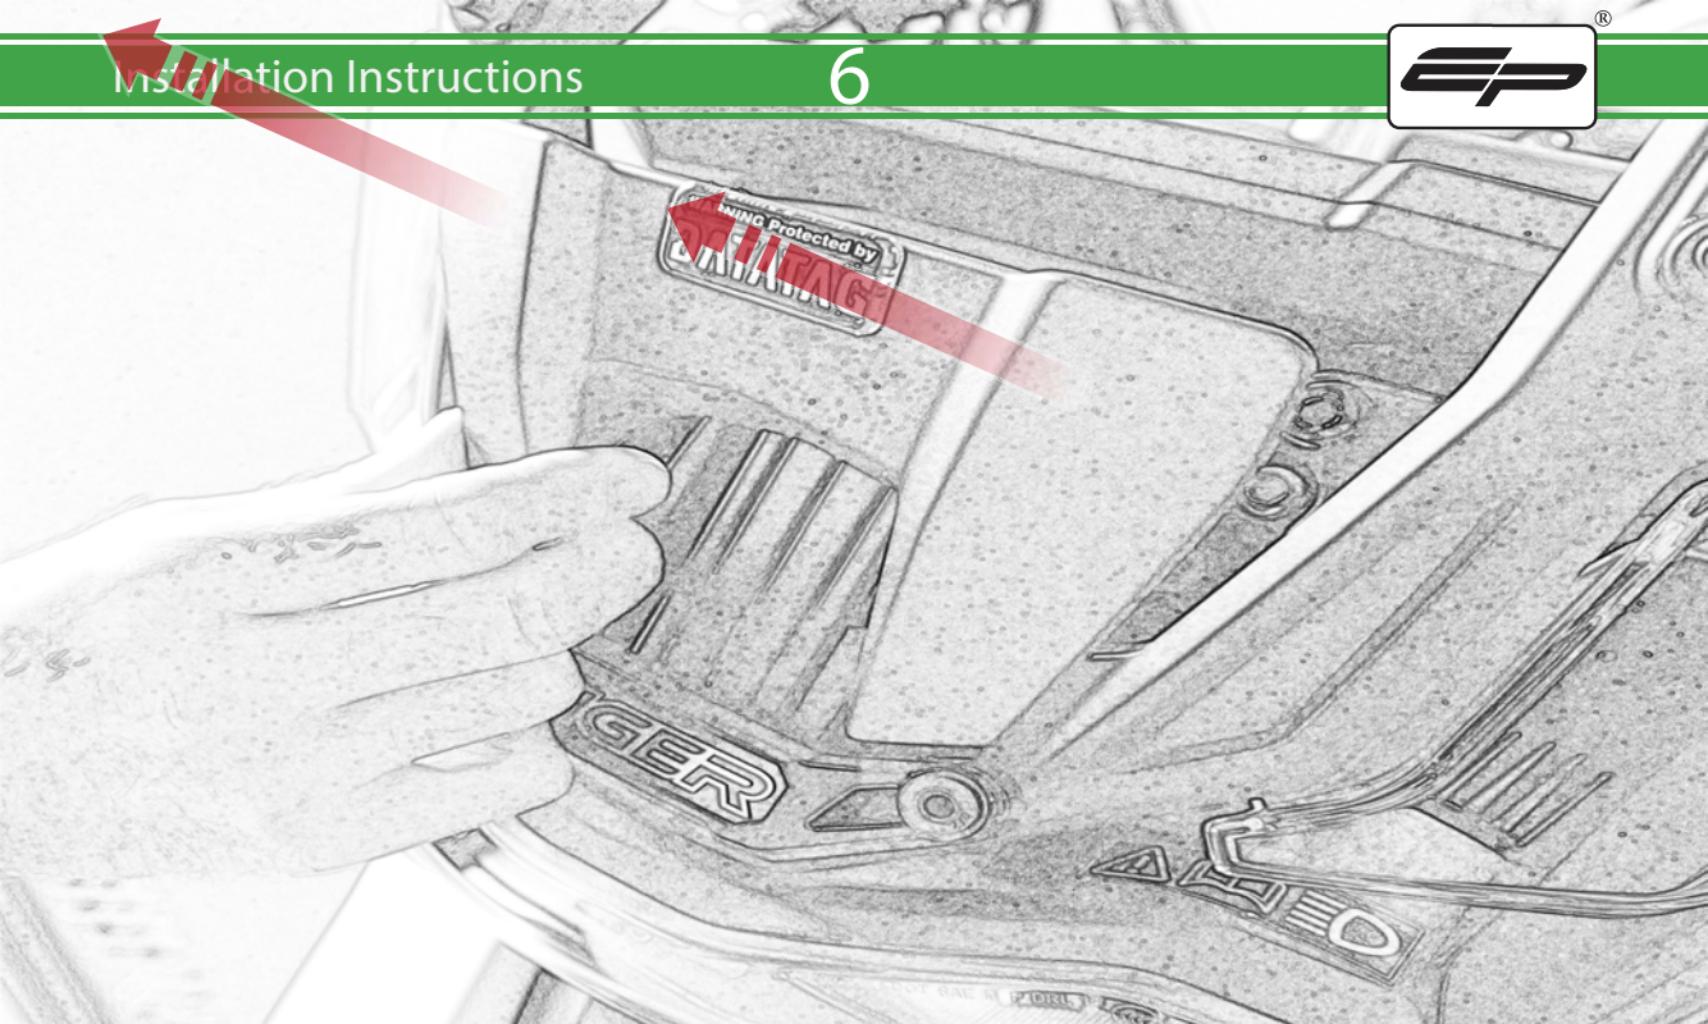


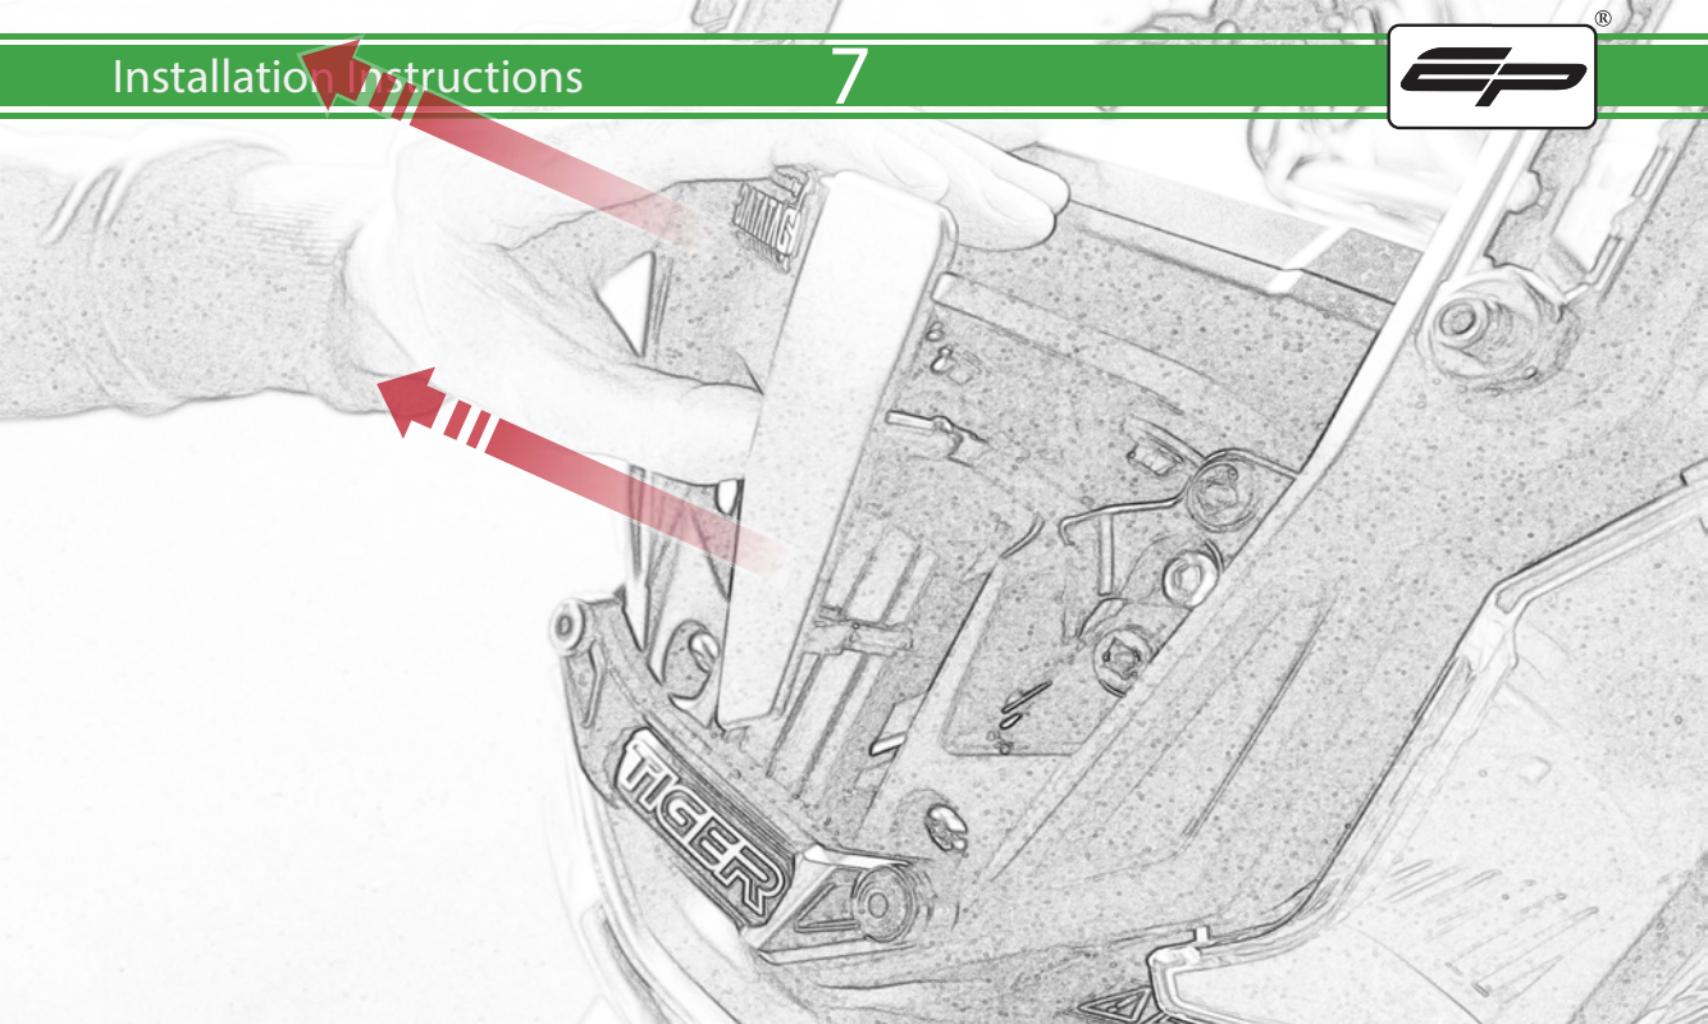


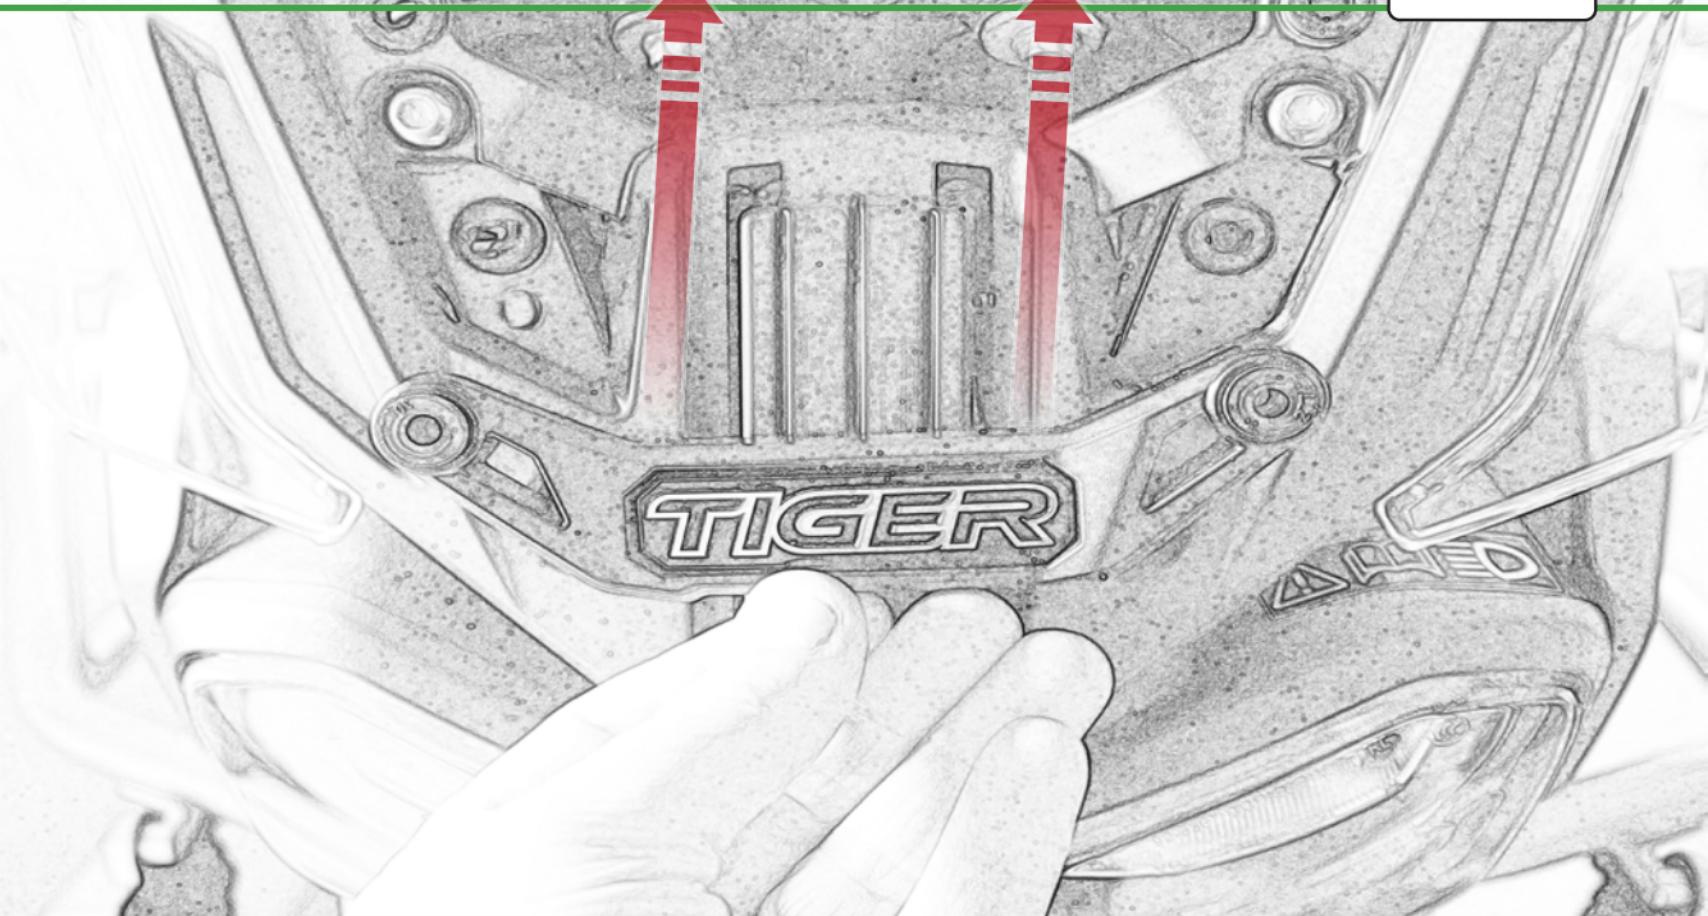





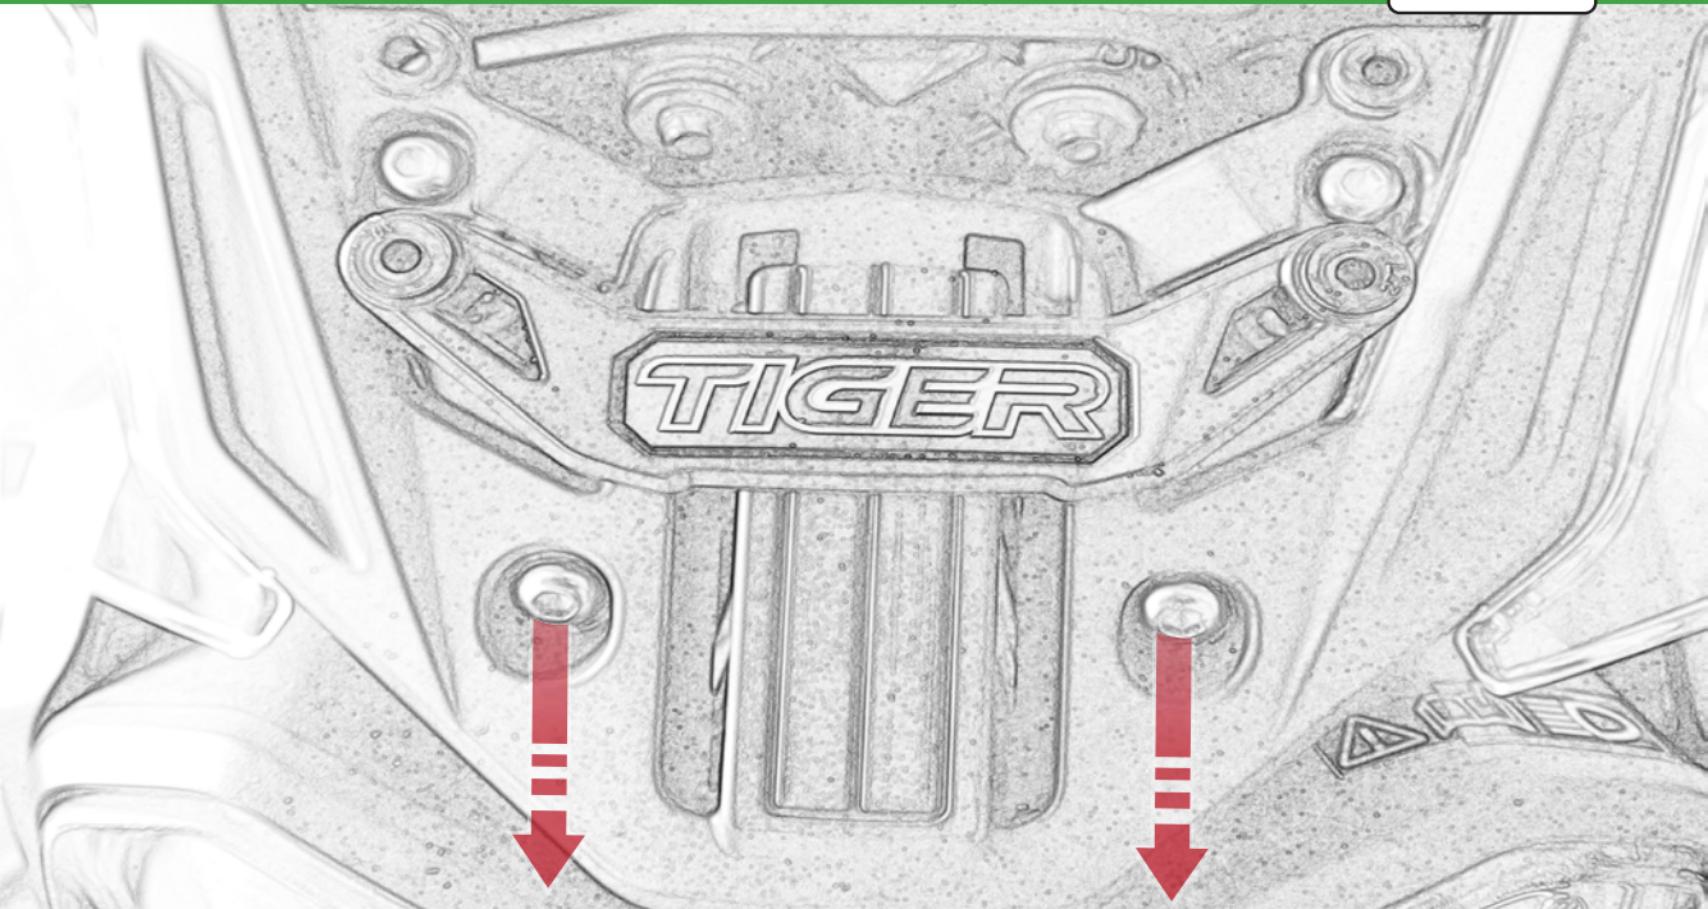


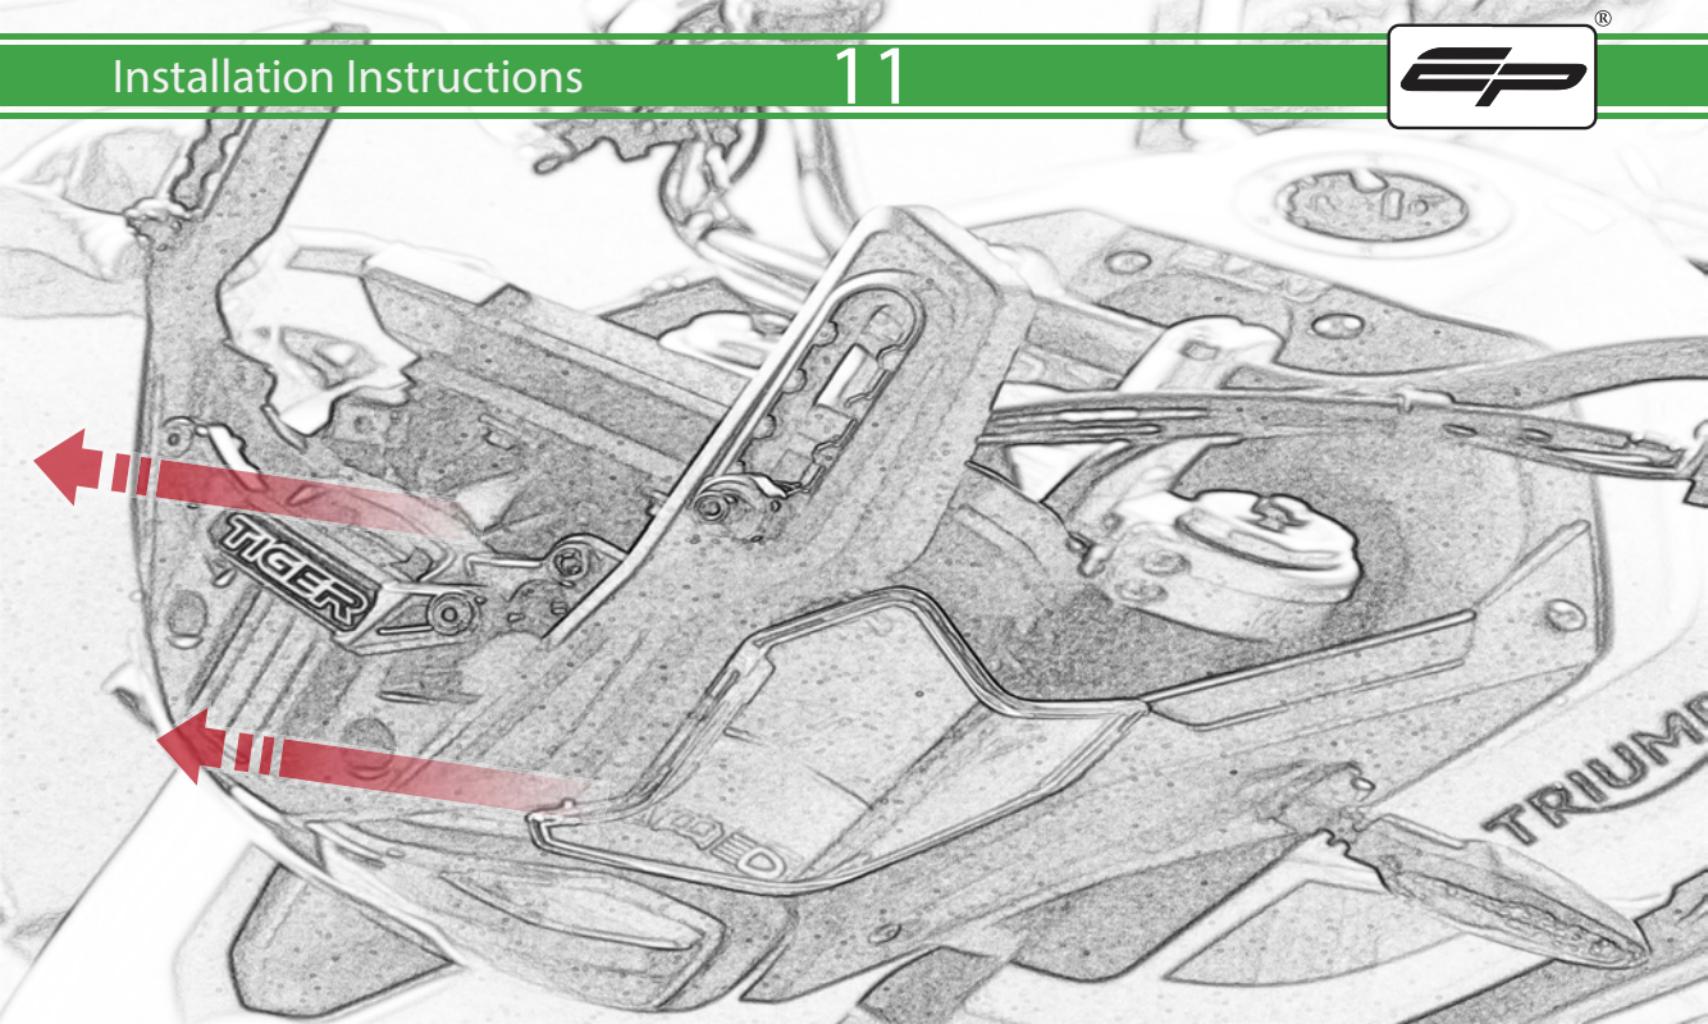


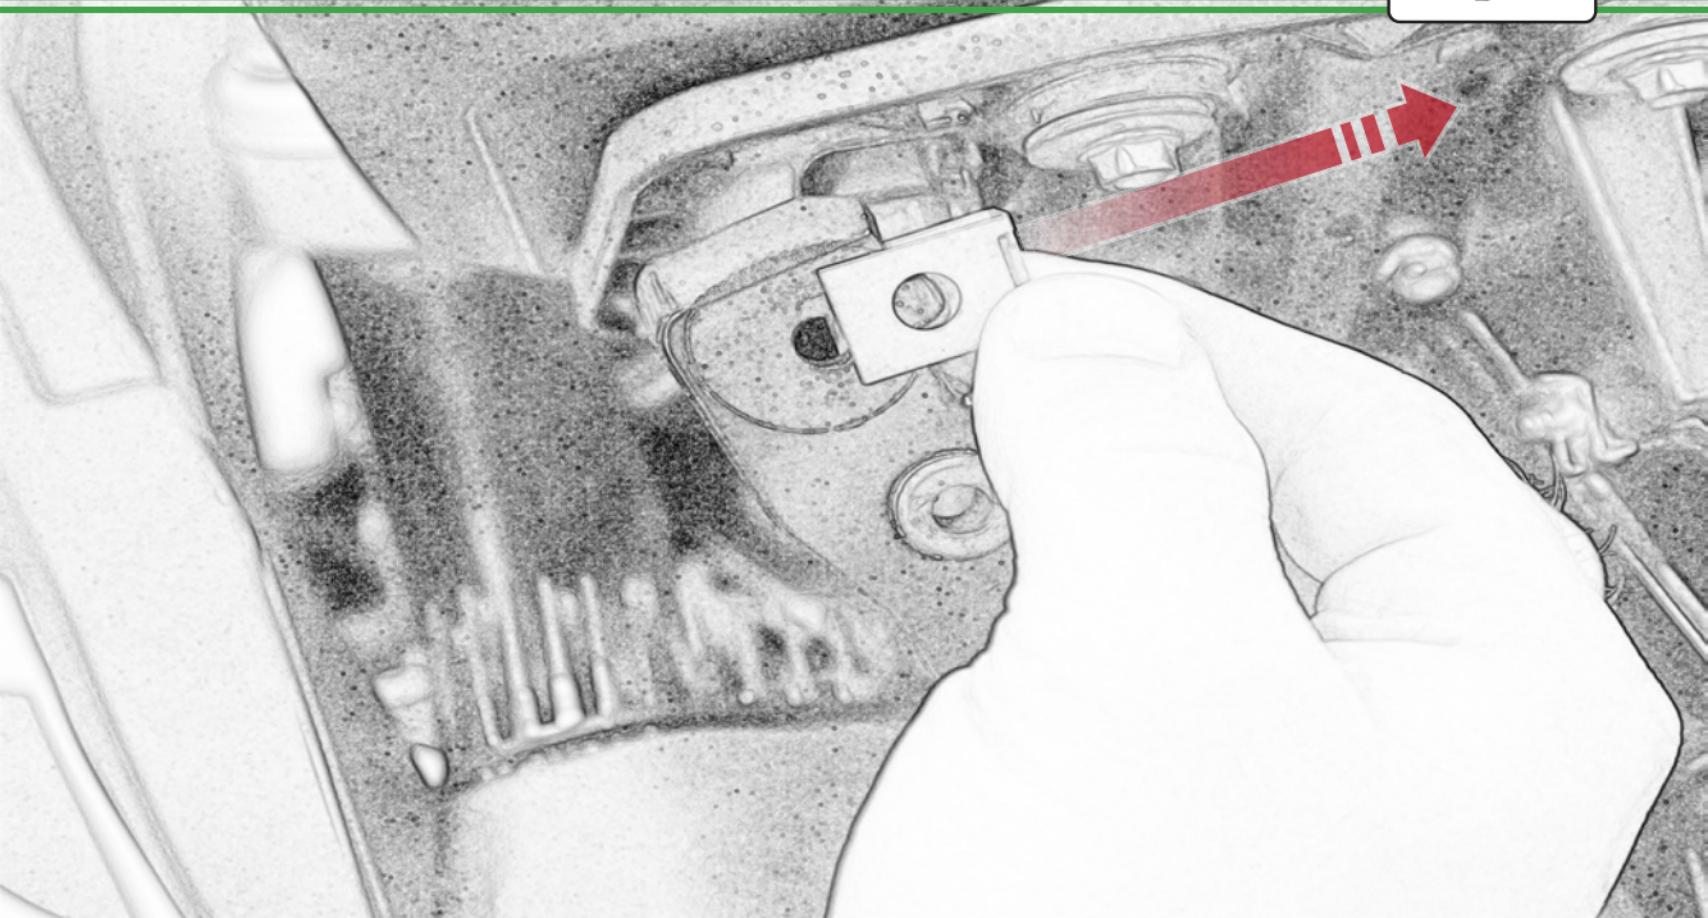

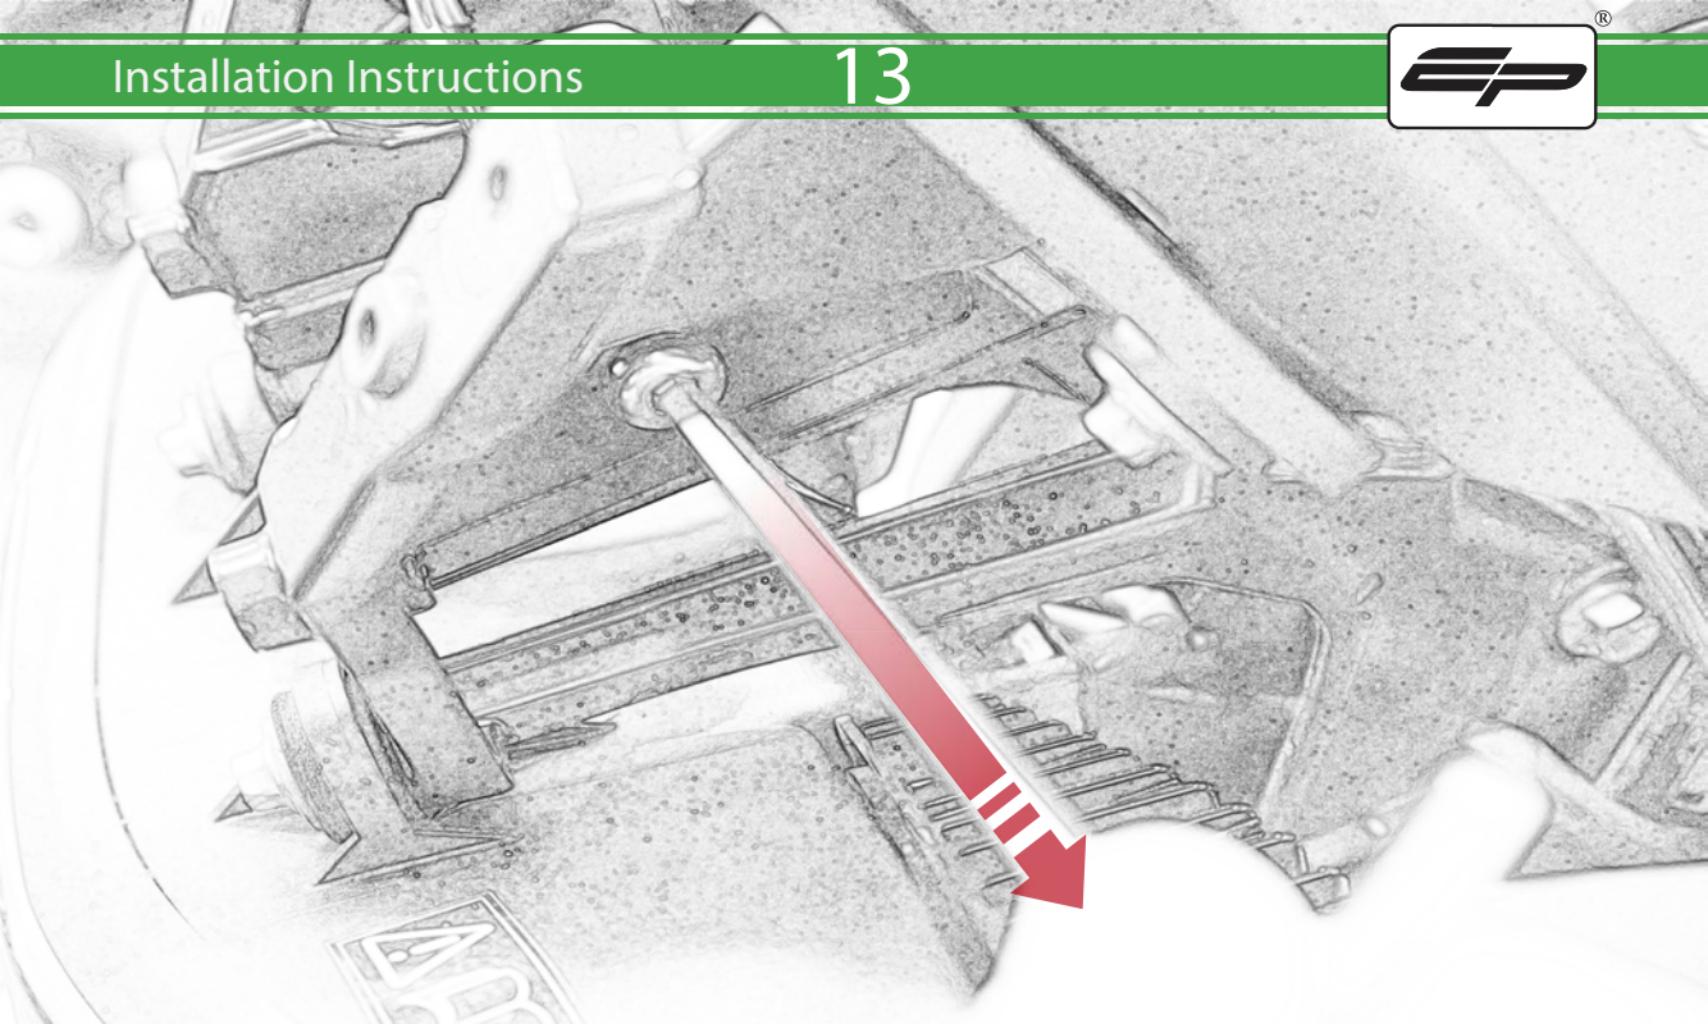


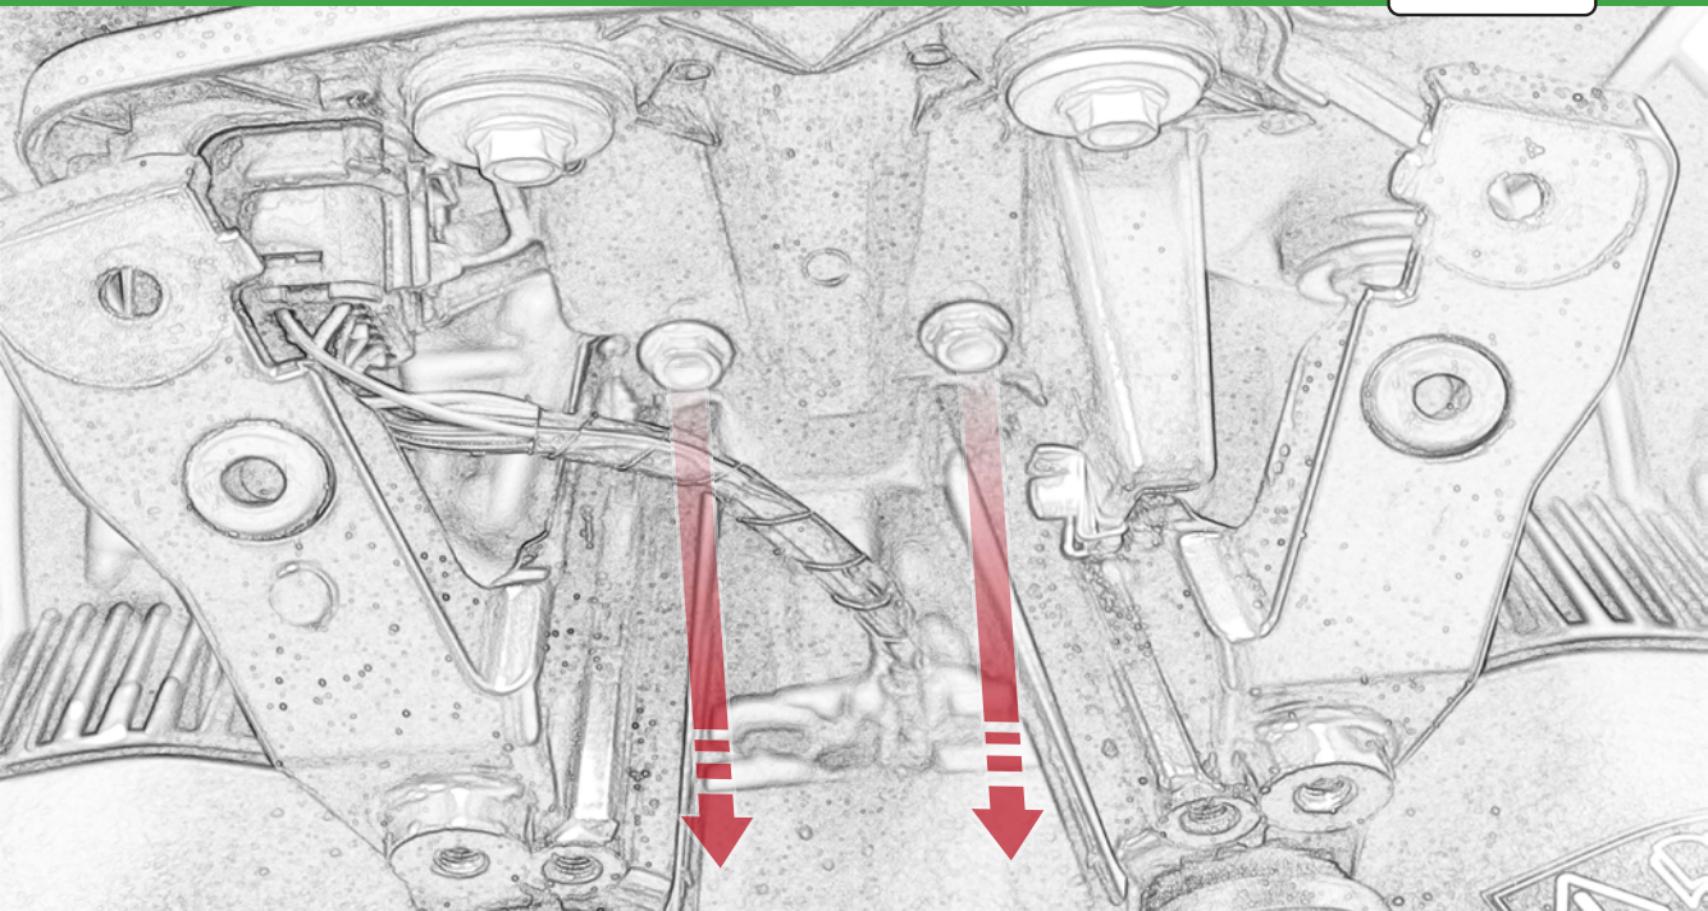


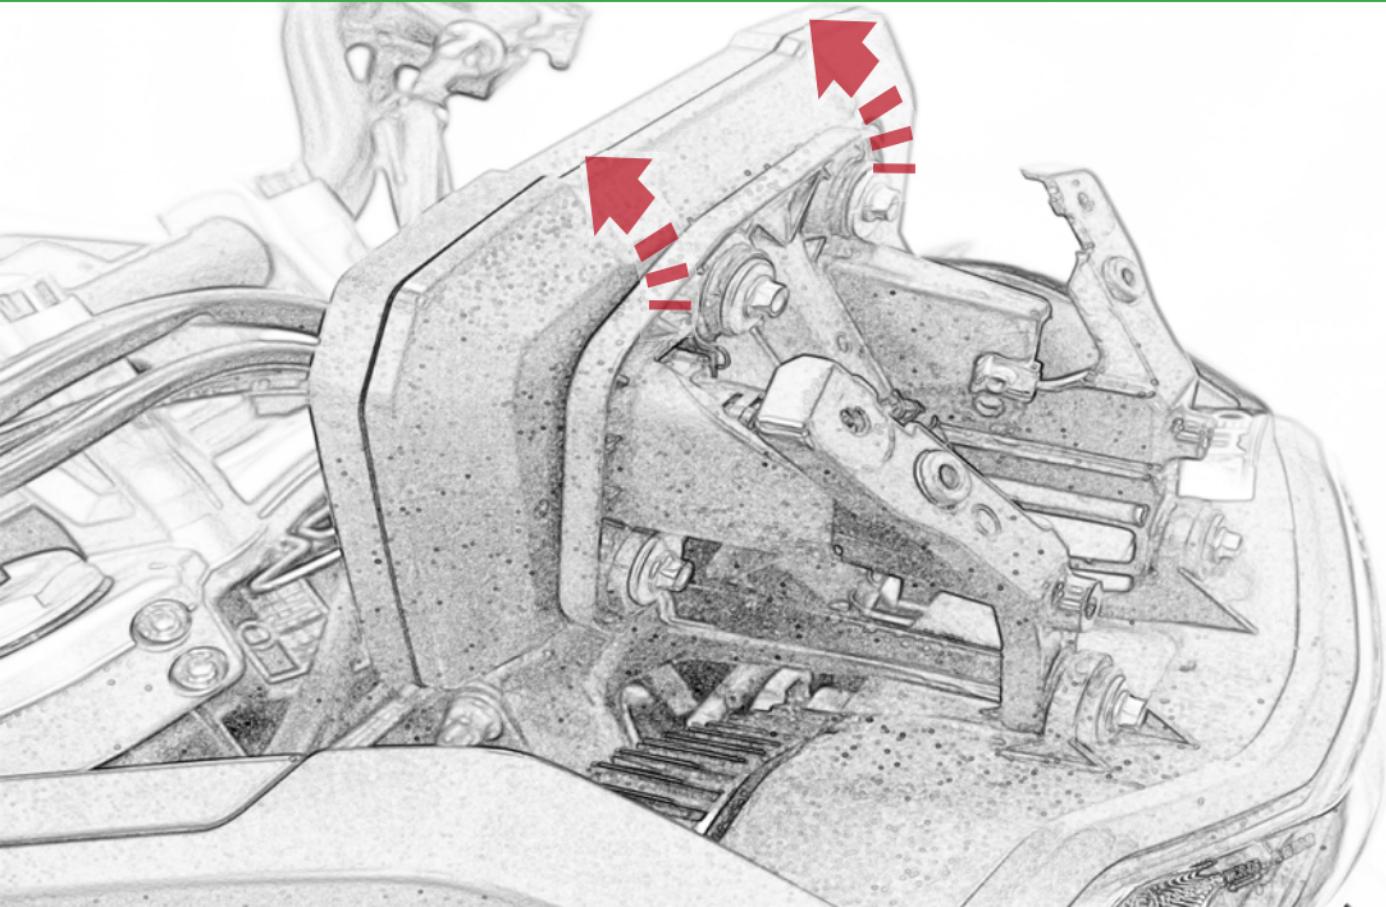


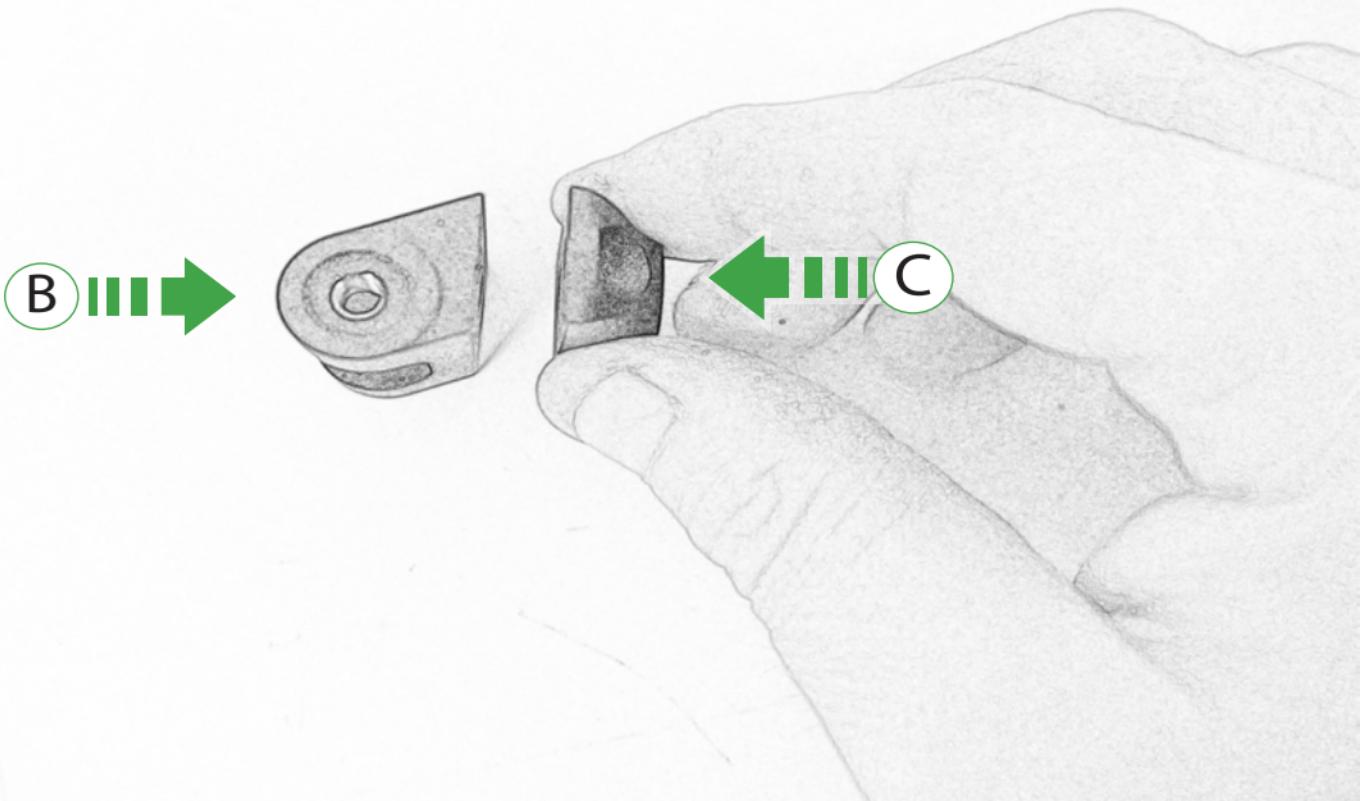



E 

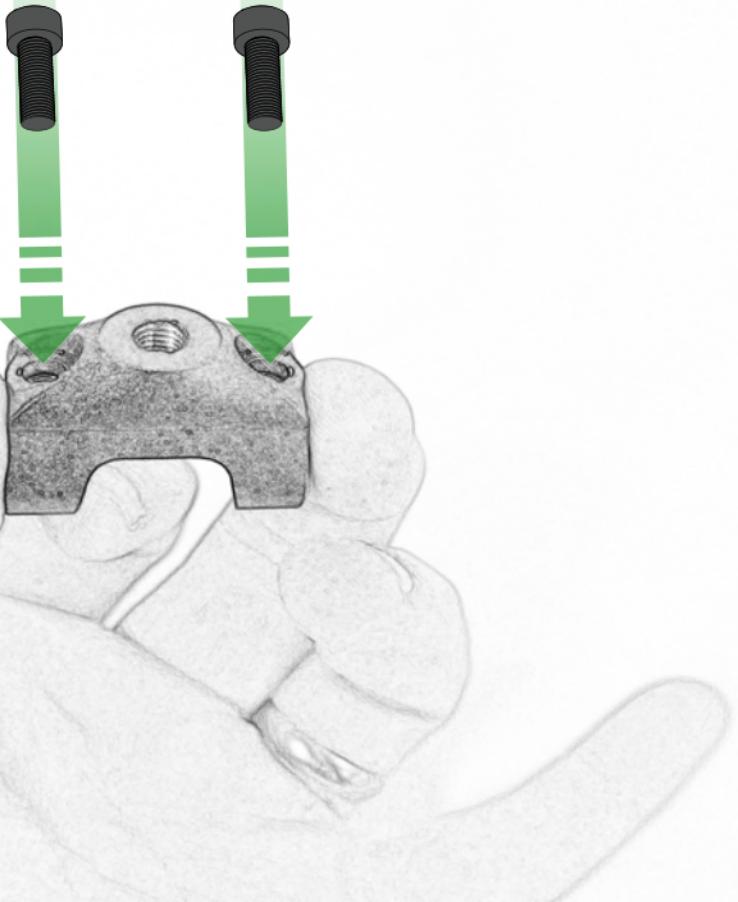


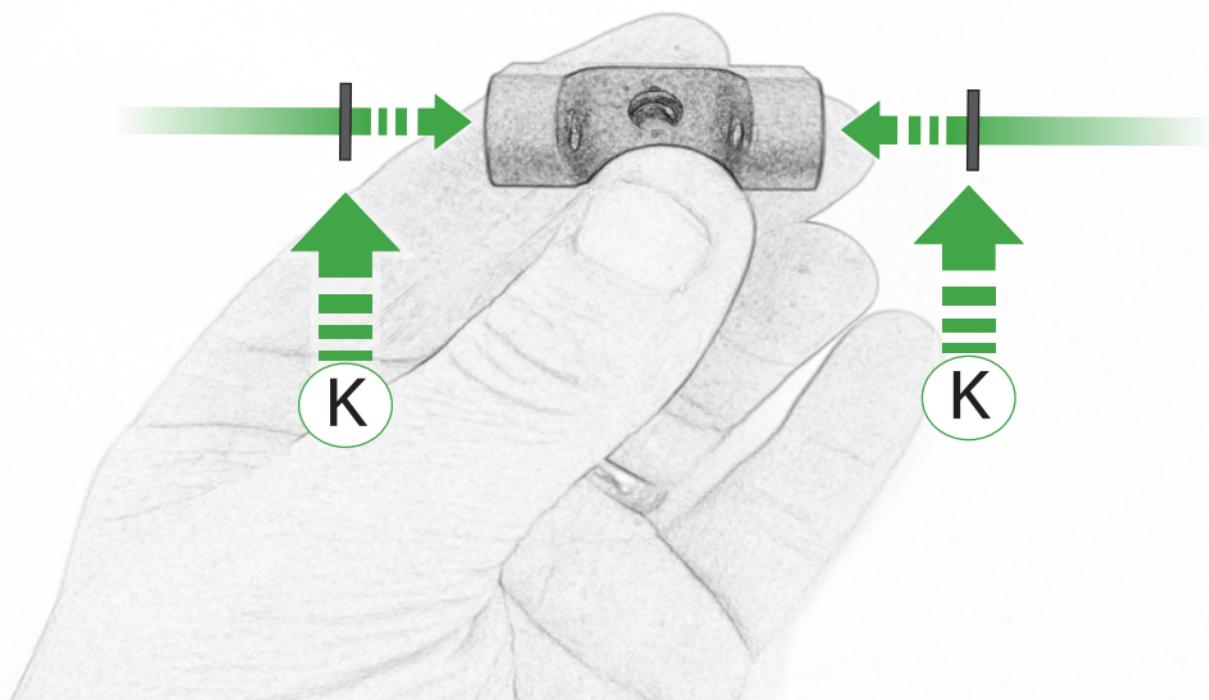


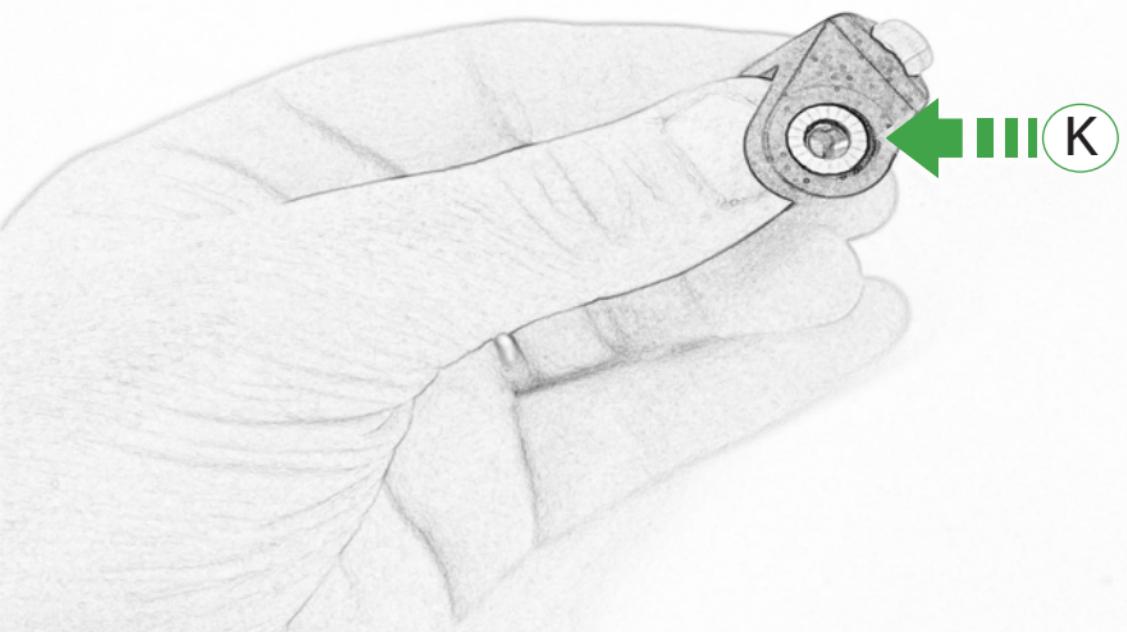


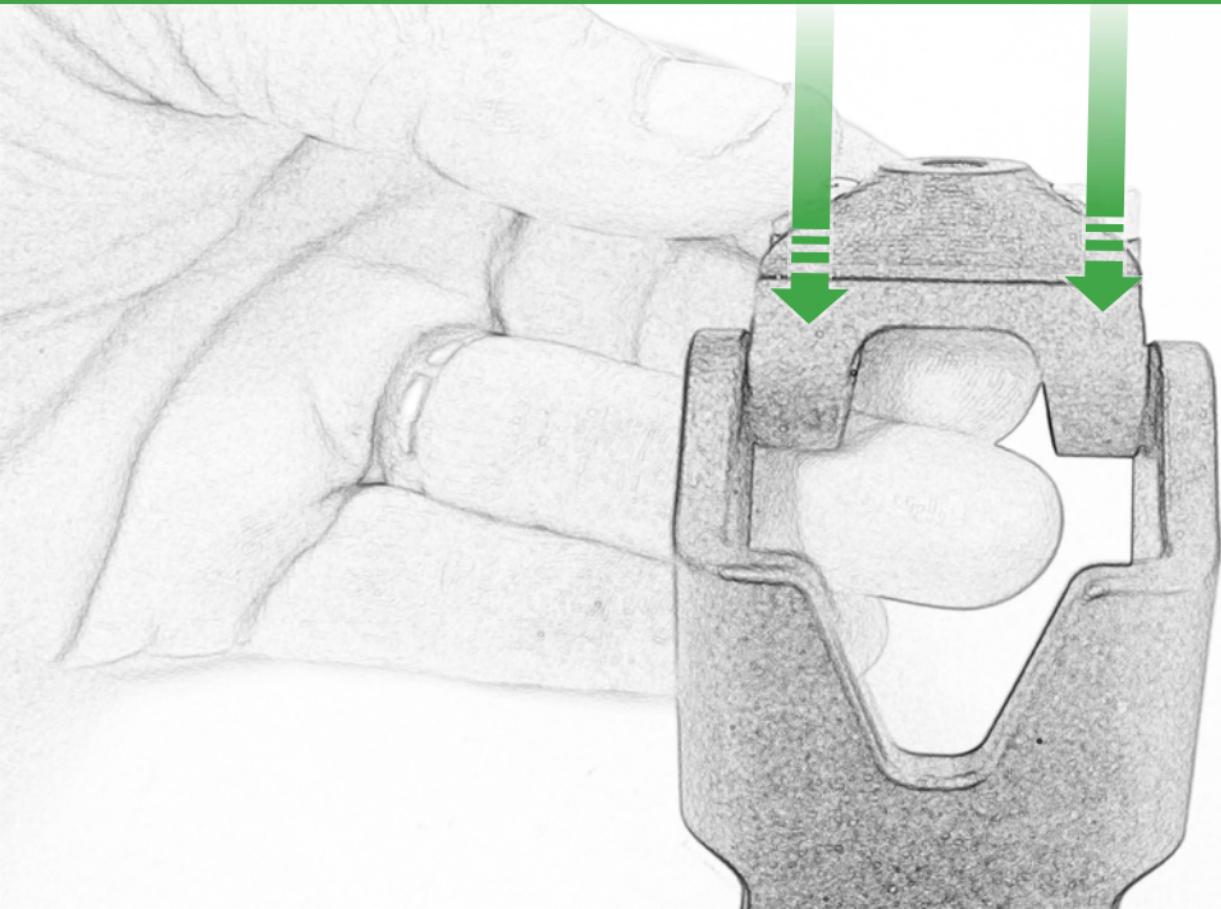

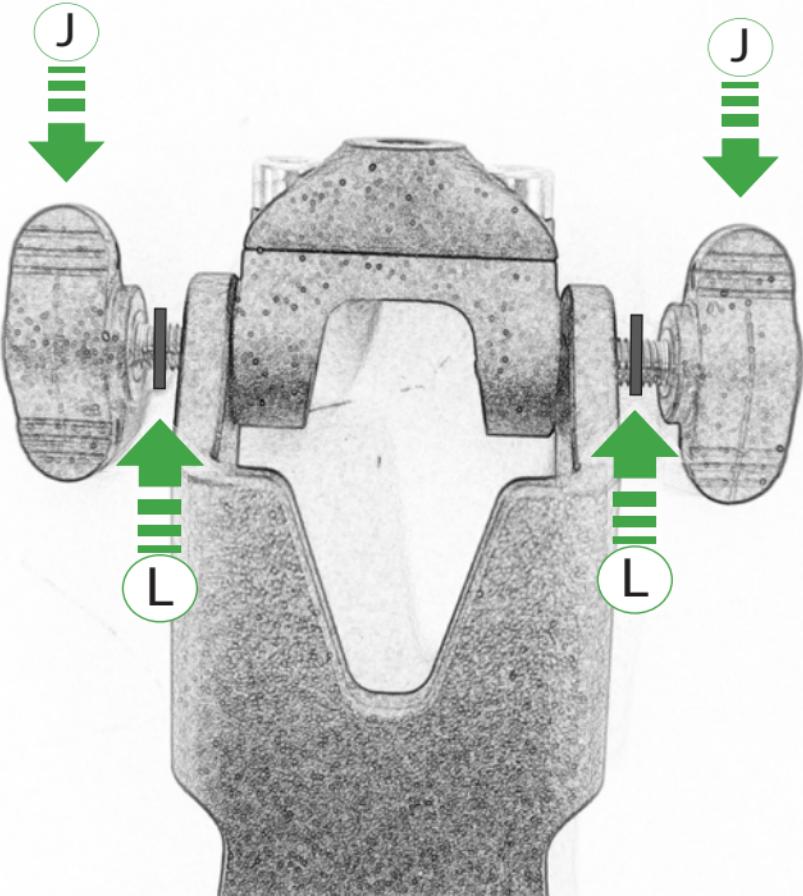

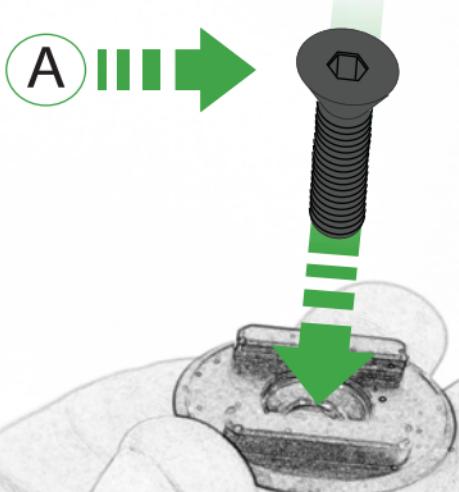


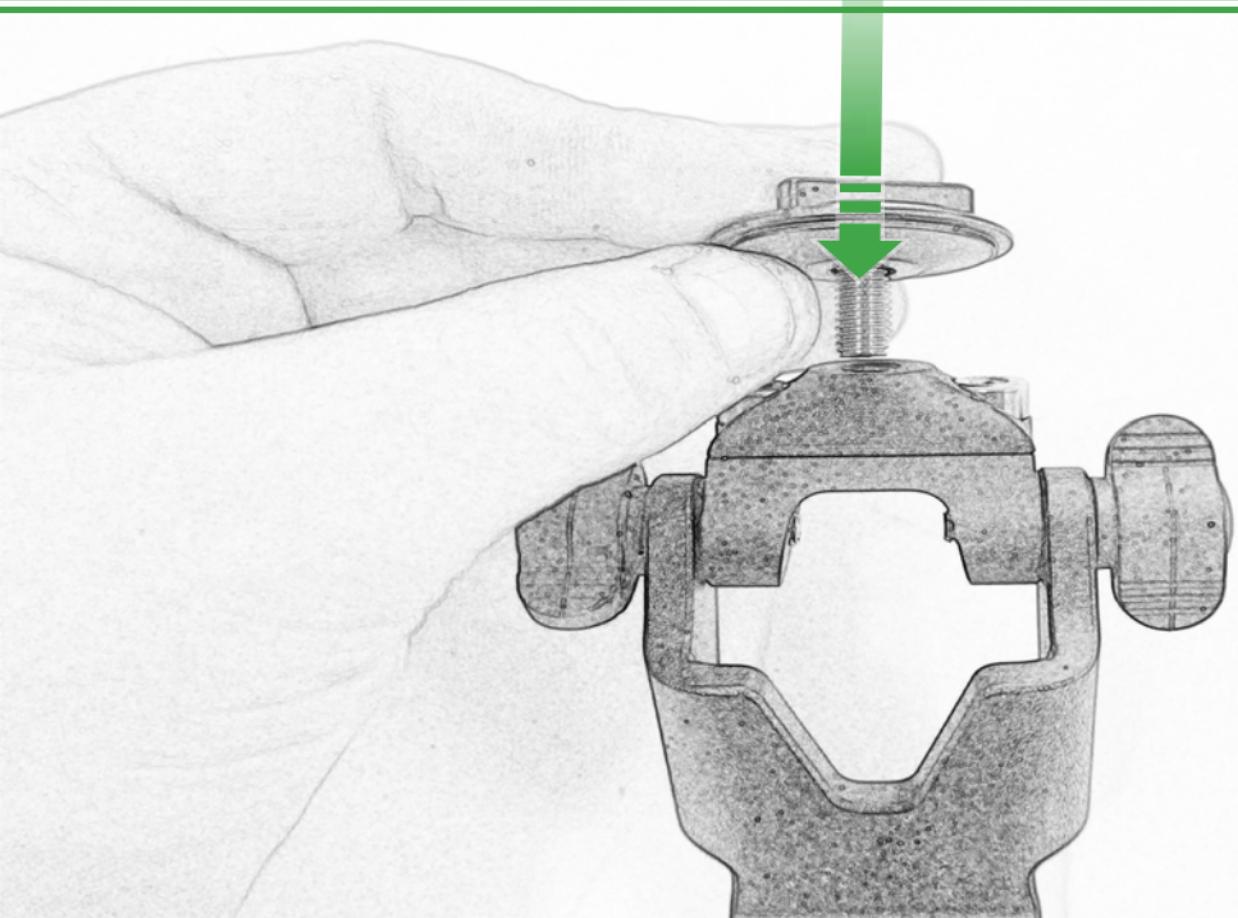

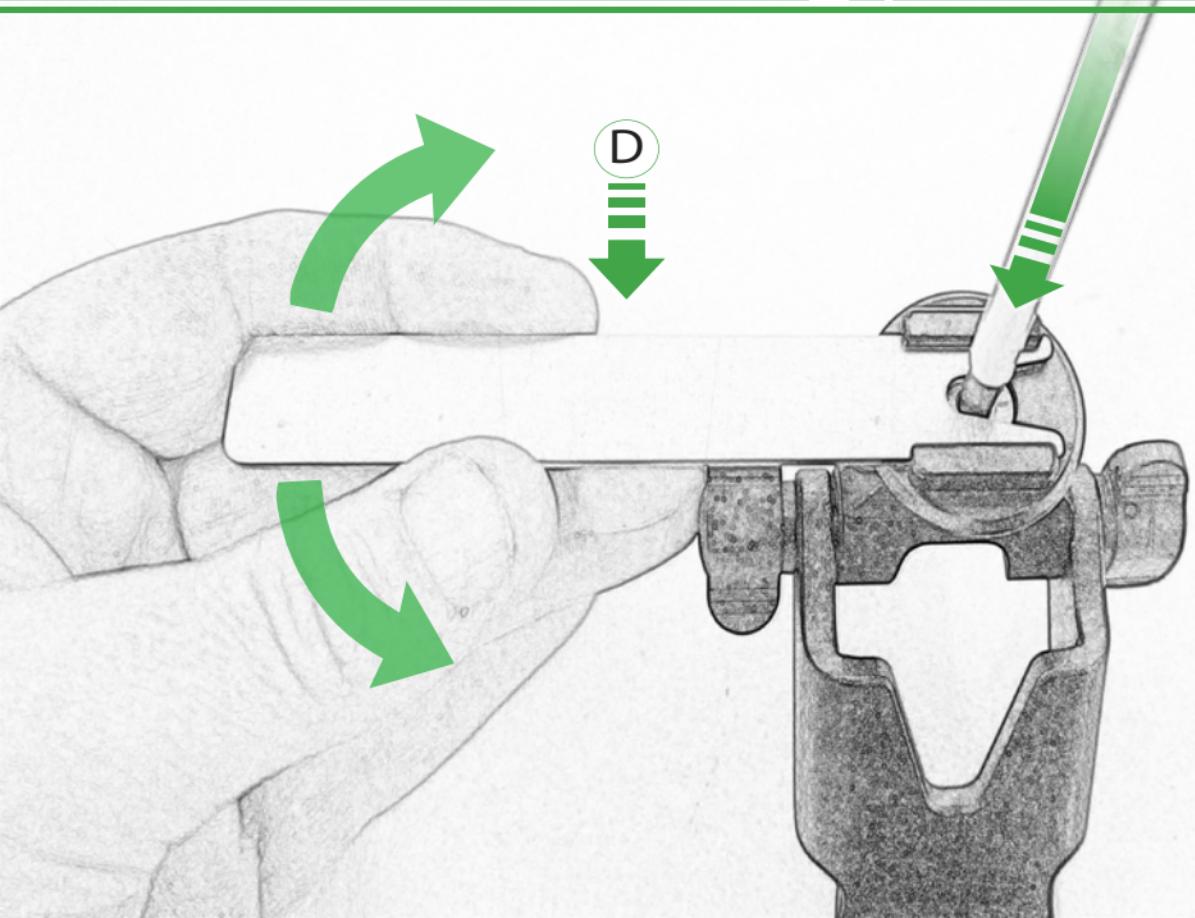



F

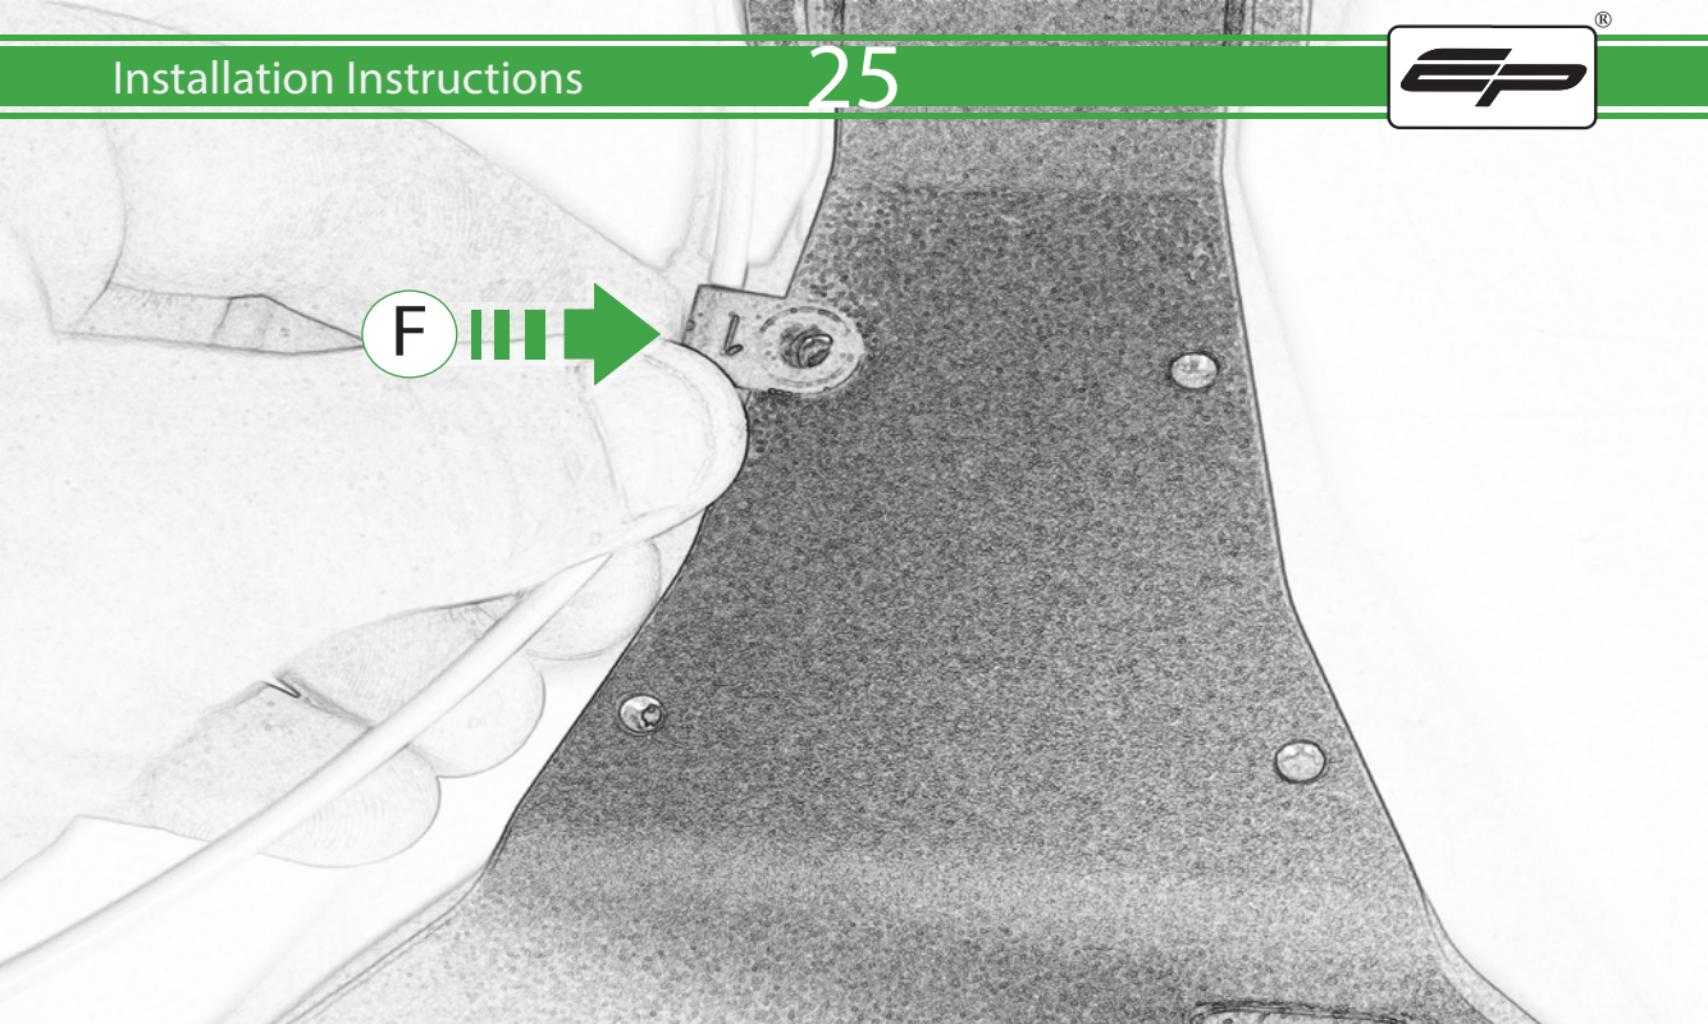



Installation Instructions


M


→ 6




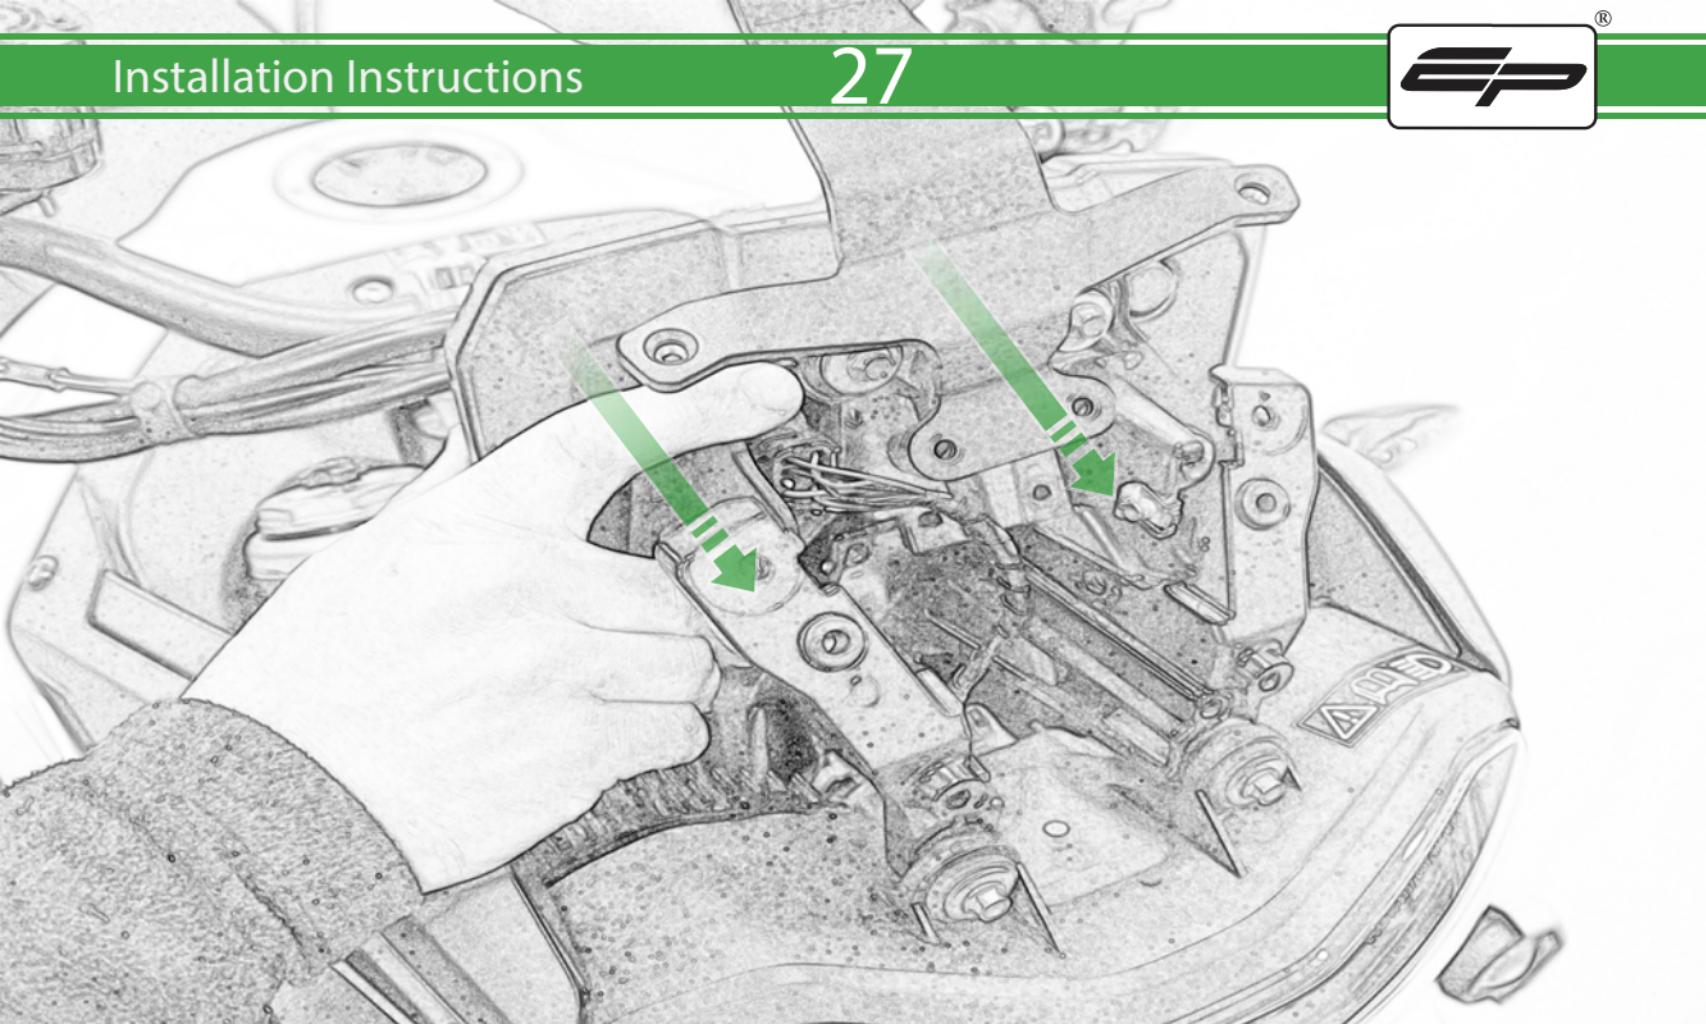


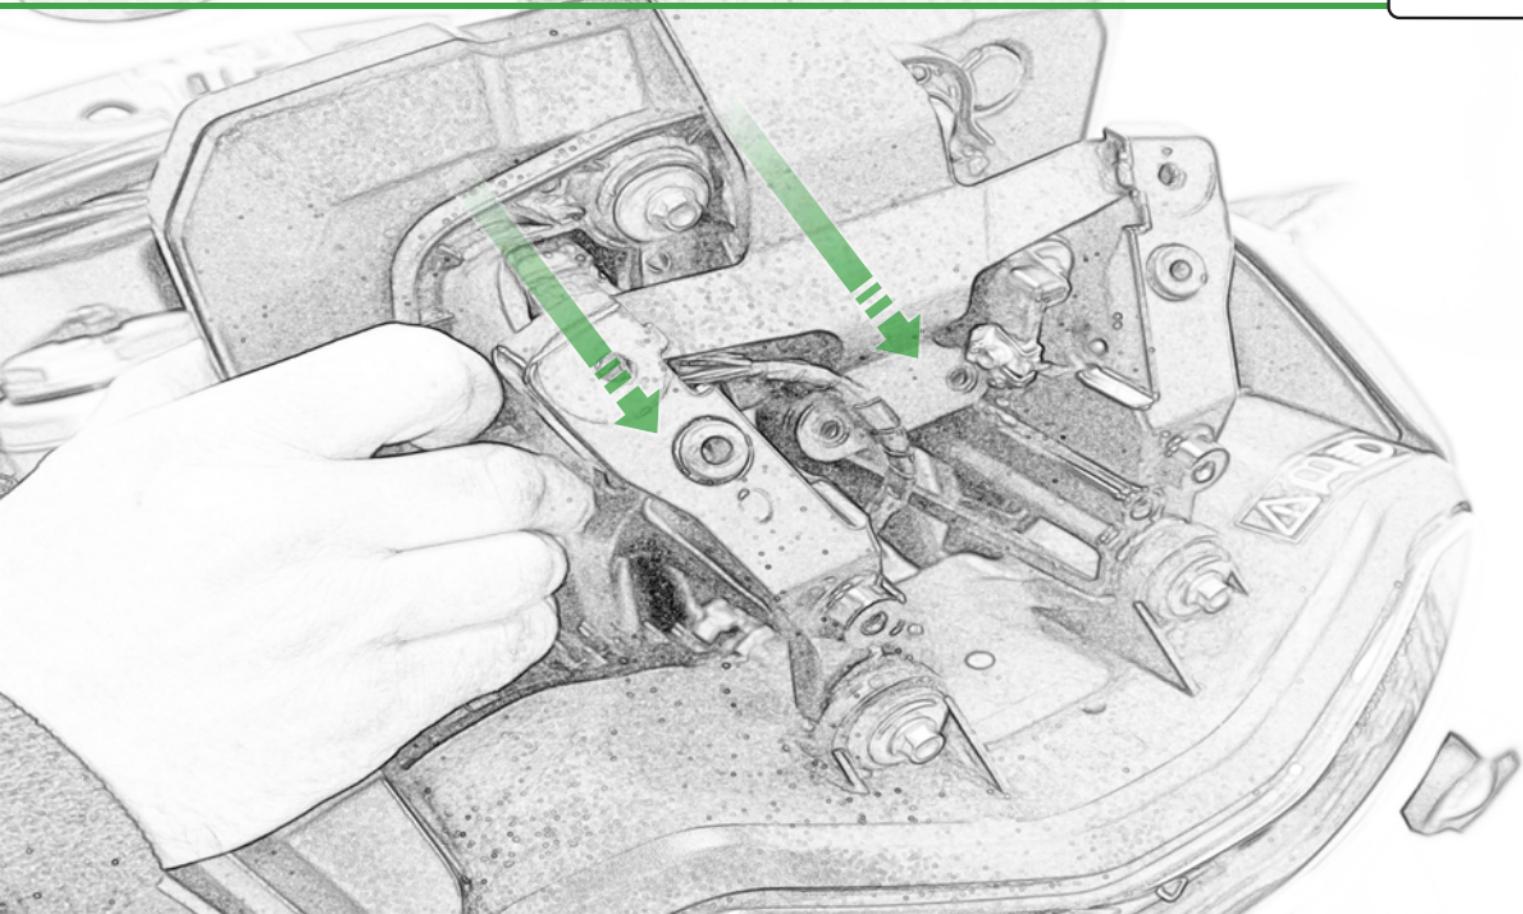

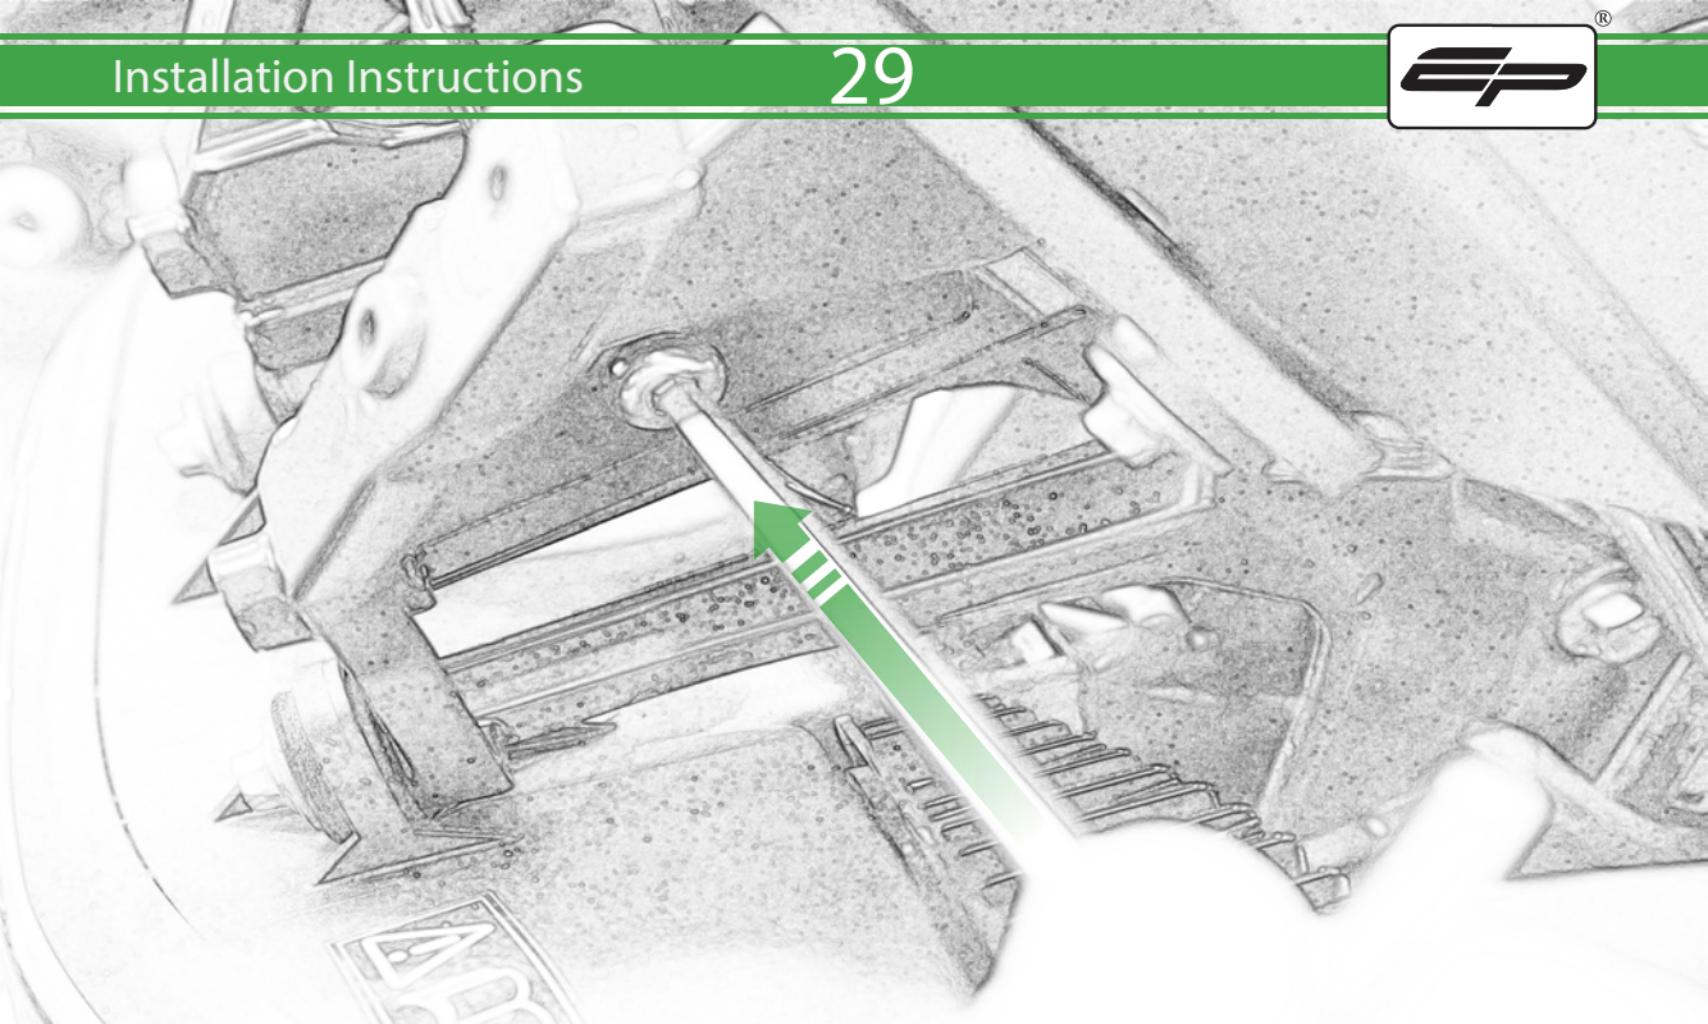

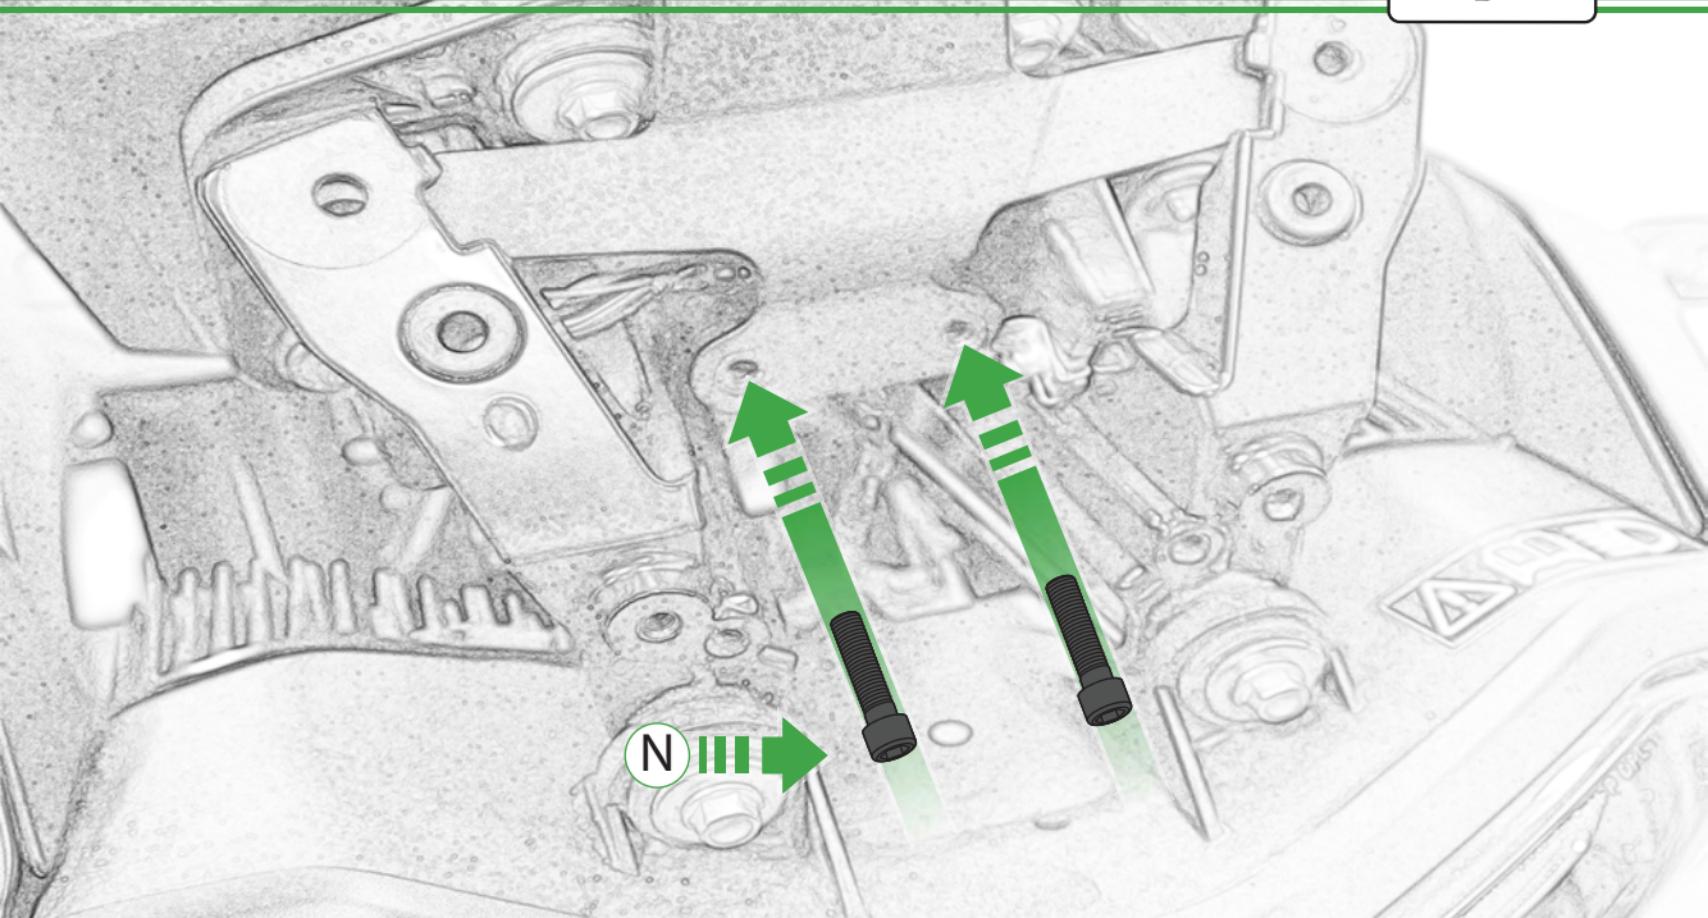

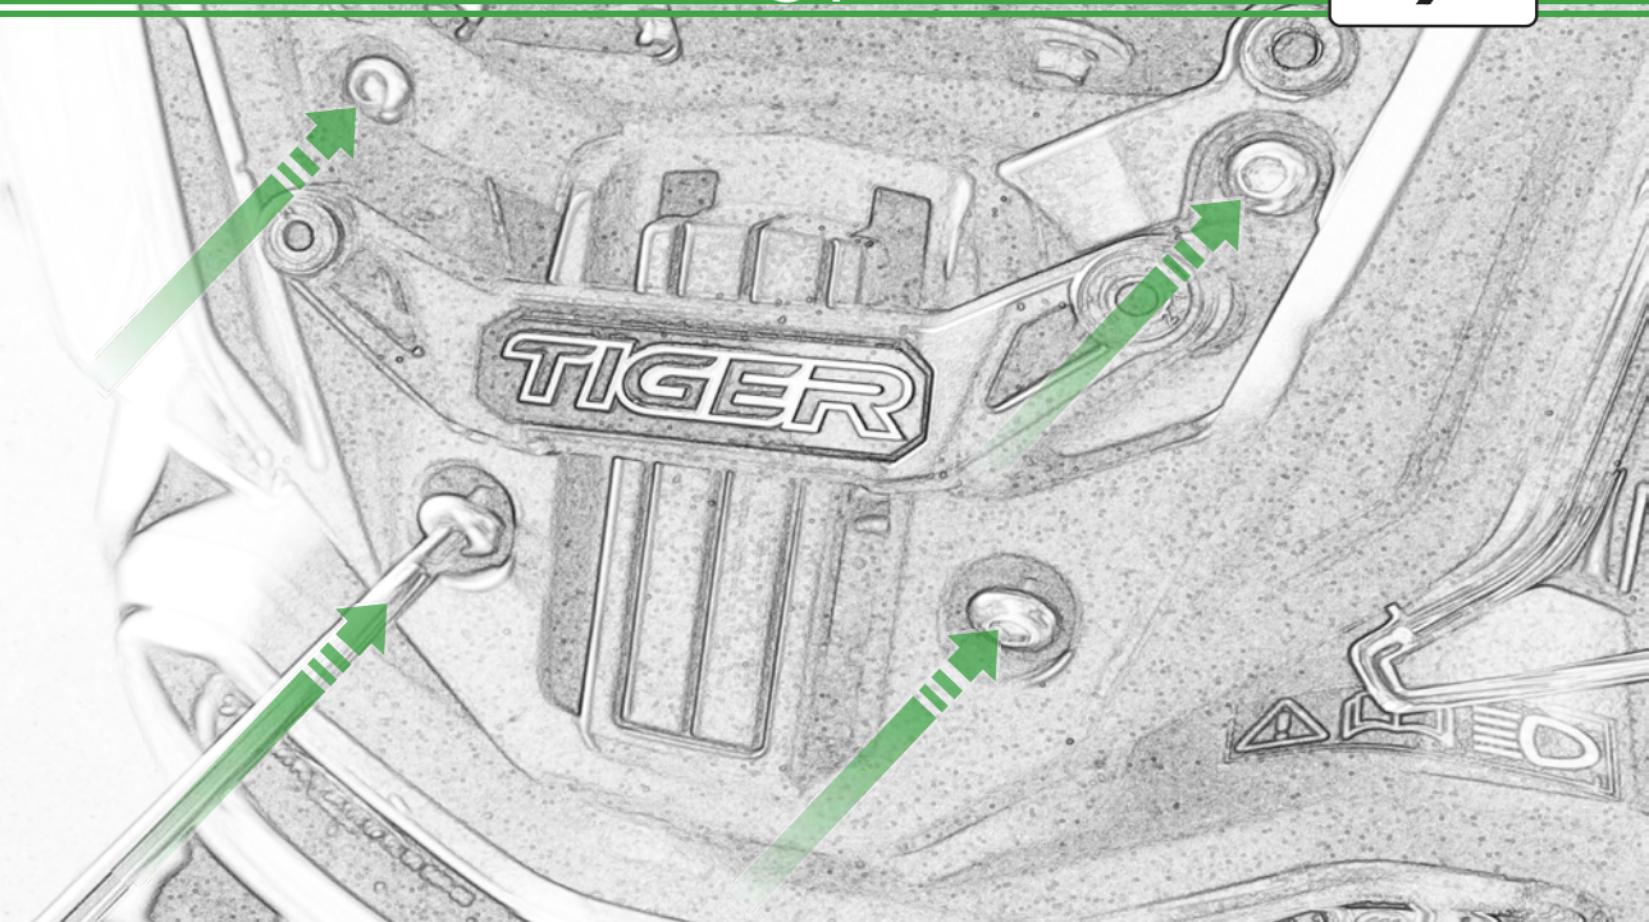

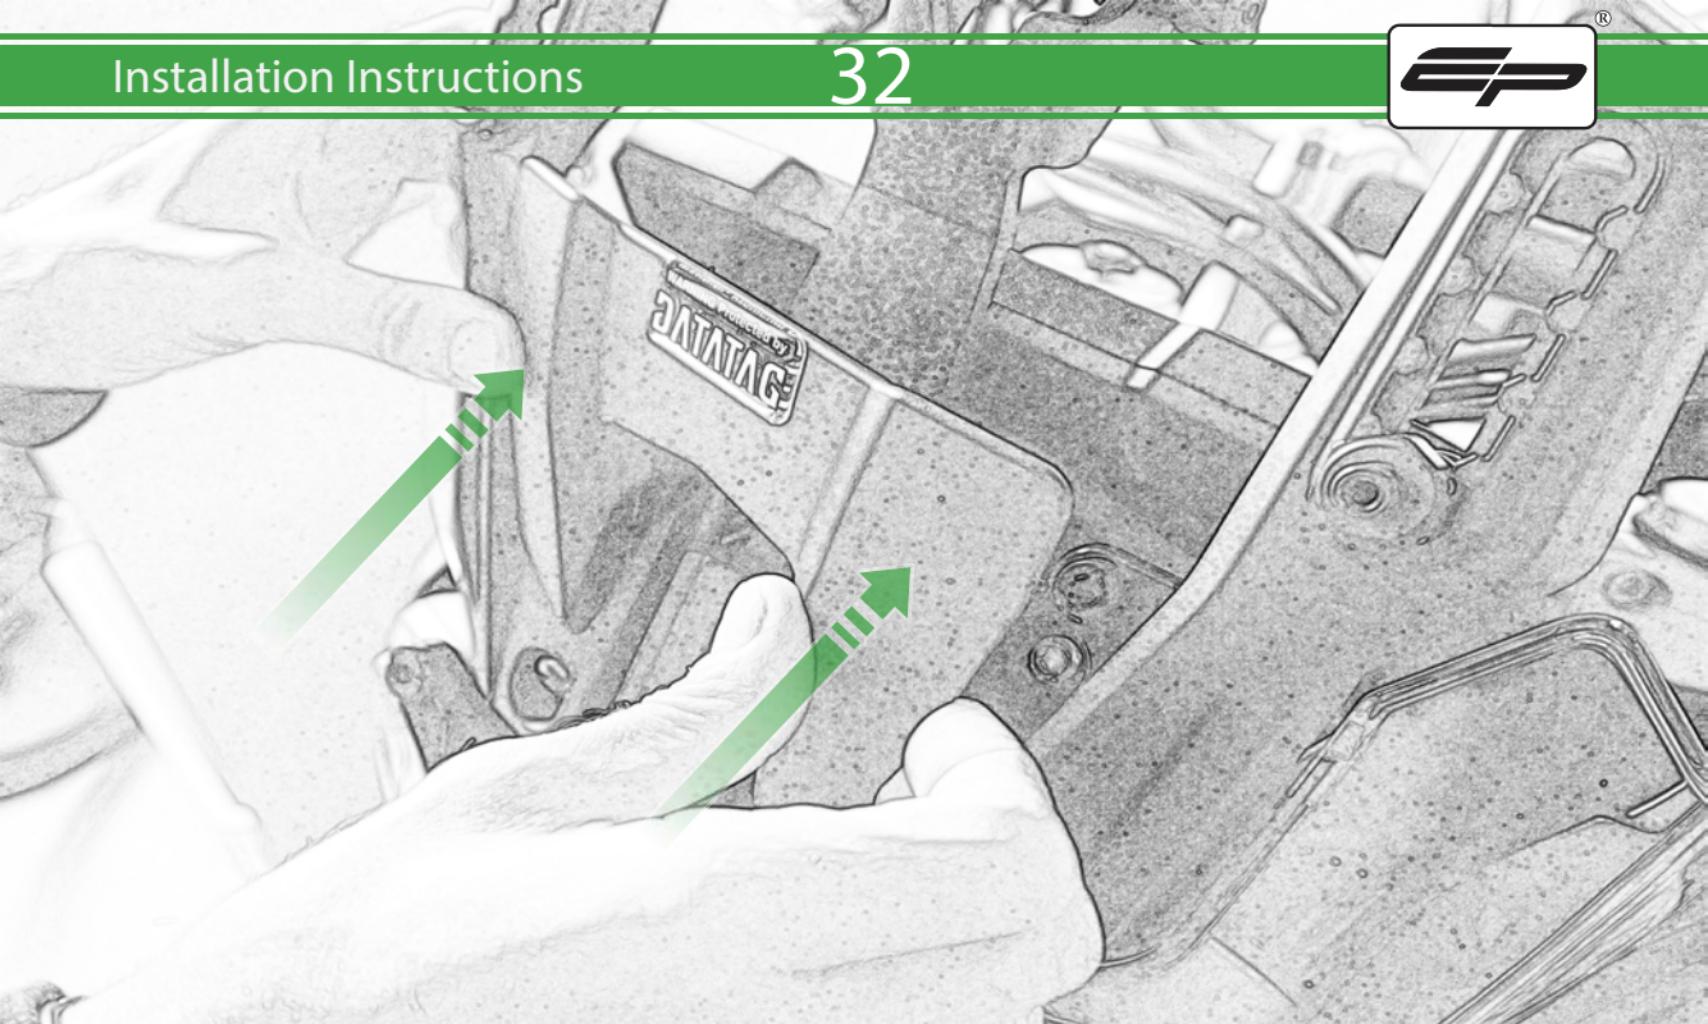





Reverse Stages

4 - 1



EVOTECH
P E R F O R M A N C E

www.evotech-performance.com