



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)



KTM 1290 Super Duke R Radiator Guard

Installation Instructions




## Kit Contents PRN014794

- (A) 8 x Rubber Bungs
- (B) 2 x Spacer
- (C) 2 x M5 x 16mm

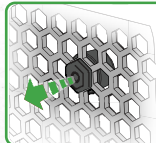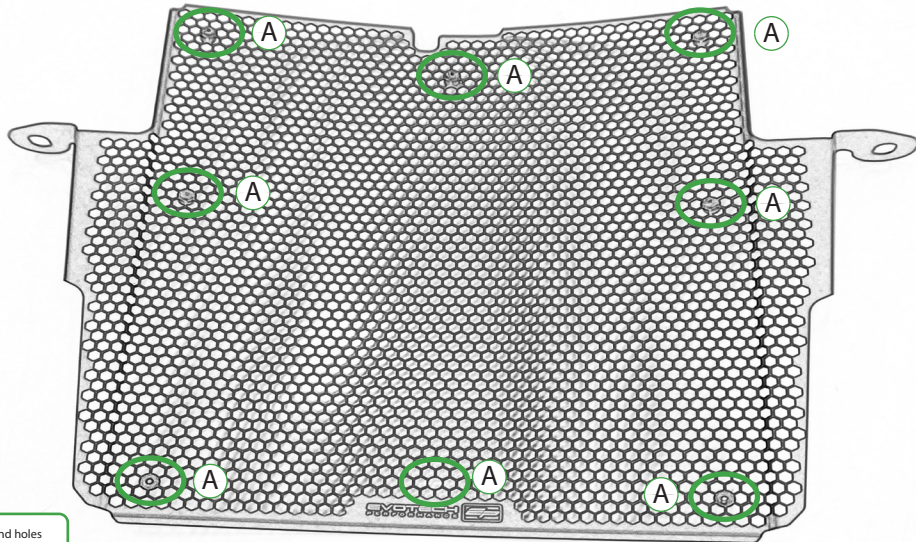


Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

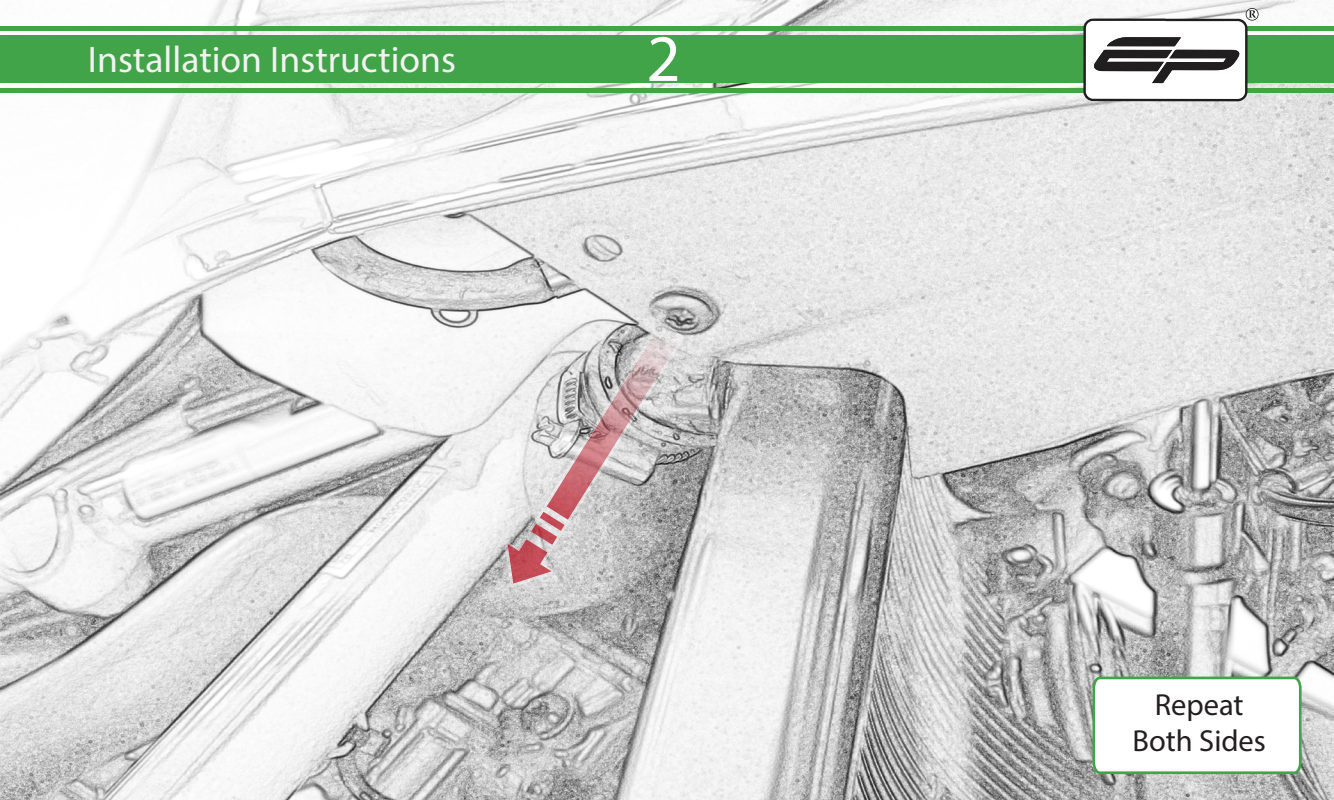


Repeat  
Both Sides



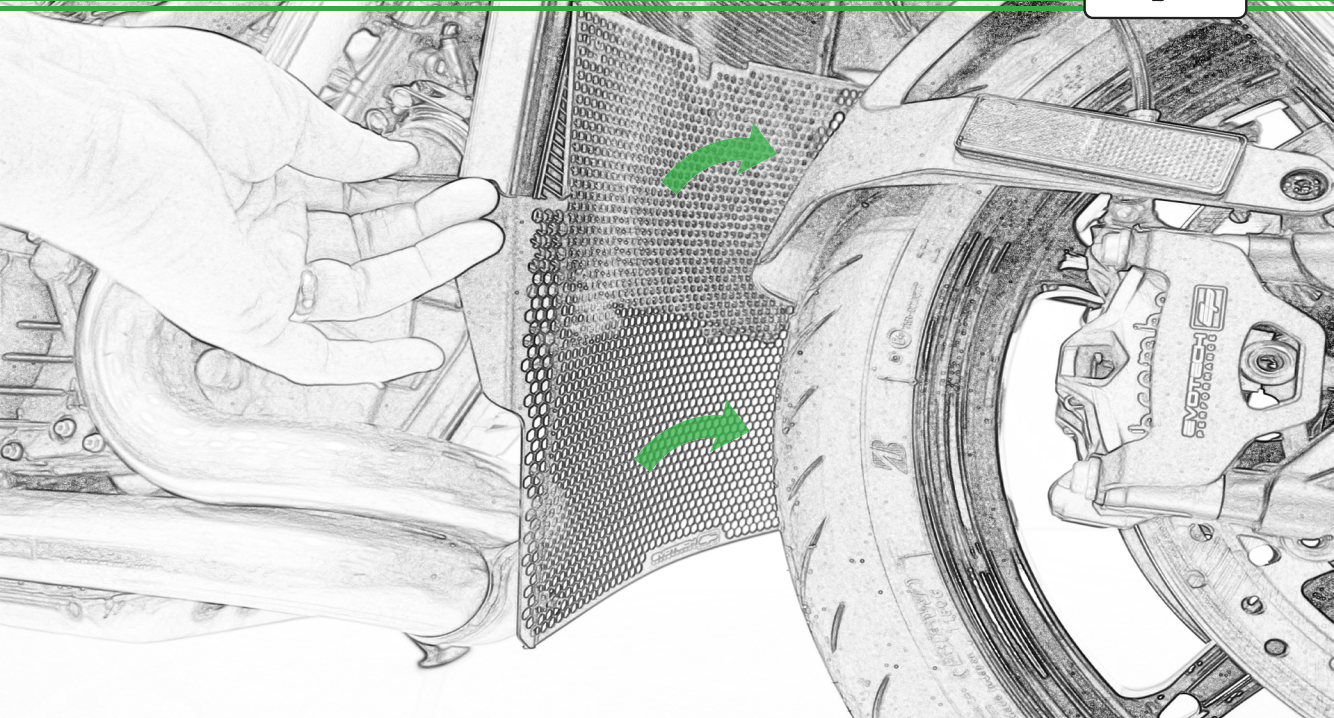

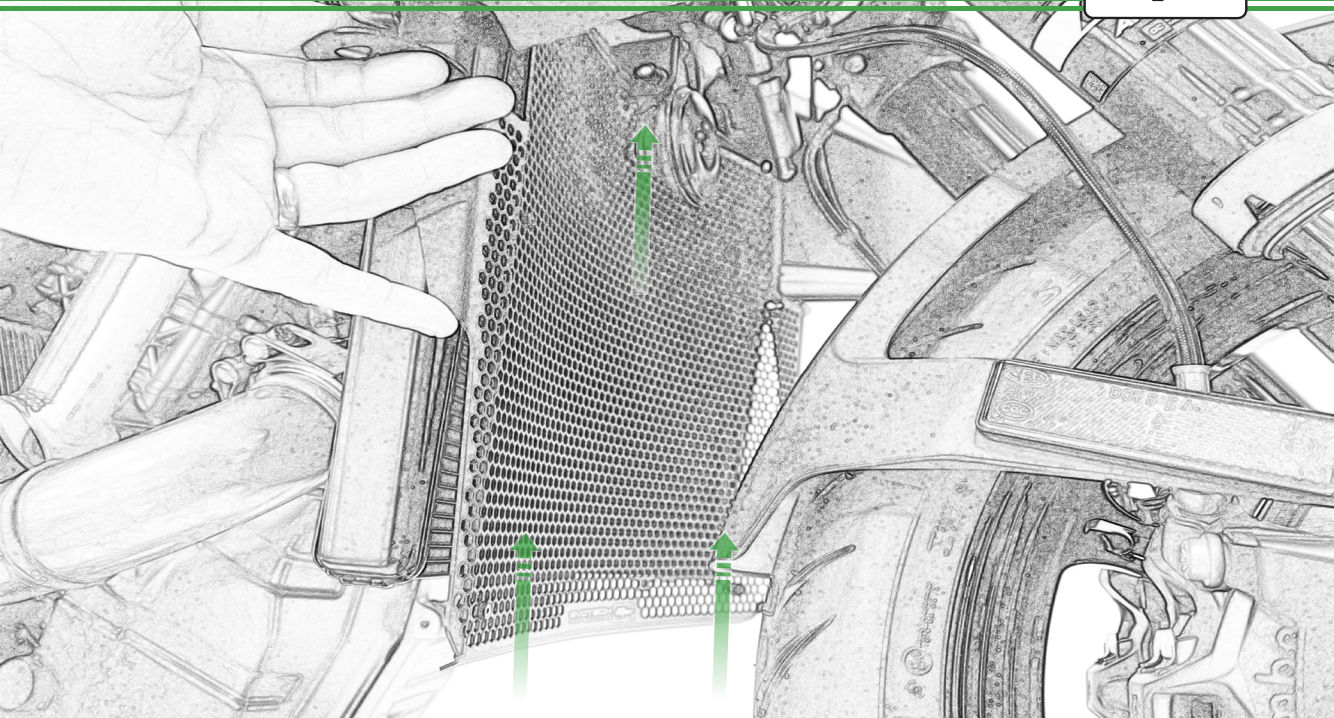

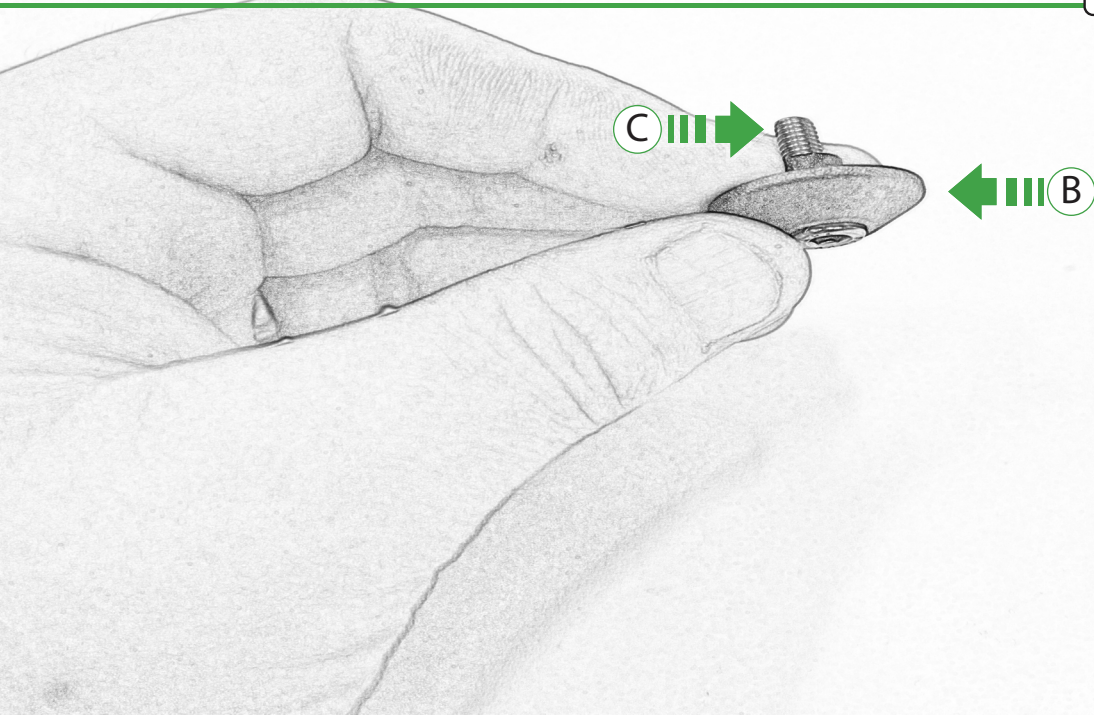






Caution

Do Not Fully Tighten

Repeat Both Sides

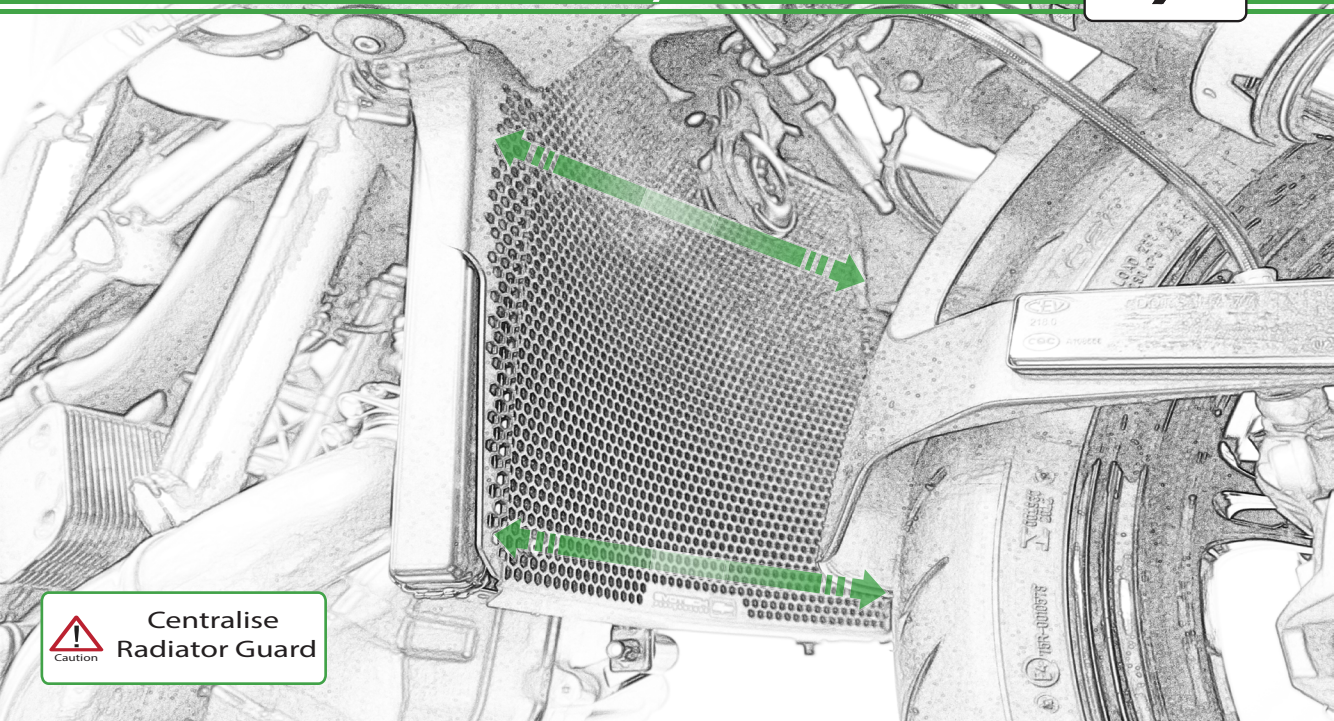

Caution

Centralise  
Radiator Guard



Caution

Compress Radiator Guard  
Against Radiator  
Fully Tighten in Position






## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

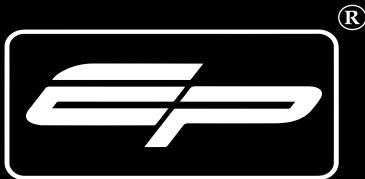

**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)