

EVOTECH®
P E R F O R M A N C E

KTM 1290 Super Duke R


Tail Tidy


Installation Instructions





Kit Contents PRN014798



- Ⓐ 1 x Reflector Kit
- Ⓑ 1 x Retro Light
- Ⓒ 1 x Loom Connector No.27
- Ⓓ 1 x M4 x 8 Button Head Bolt
- Ⓔ 1 x R /H Main Body
- Ⓕ 1 x L /H Main Body
- Ⓖ 1 x Retro Light Bracket
- Ⓗ 1 x Numberplate Bracket
- Ⓘ 2 x Standard Indicator Spacer
- Ⓙ 2 x Indicator Spacer Extension (For Wide Number Plate)
- Ⓚ 2 x M5 x 40 Caphead Bolt
- Ⓛ 2 x M5 x 12 Caphead Bolt
- Ⓜ 2 x M4 Nyloc nuts
- Ⓝ 2 x M5 x 10 Button Head Bolt
- Ⓞ 4 x M6 x 12 Button head Bolts


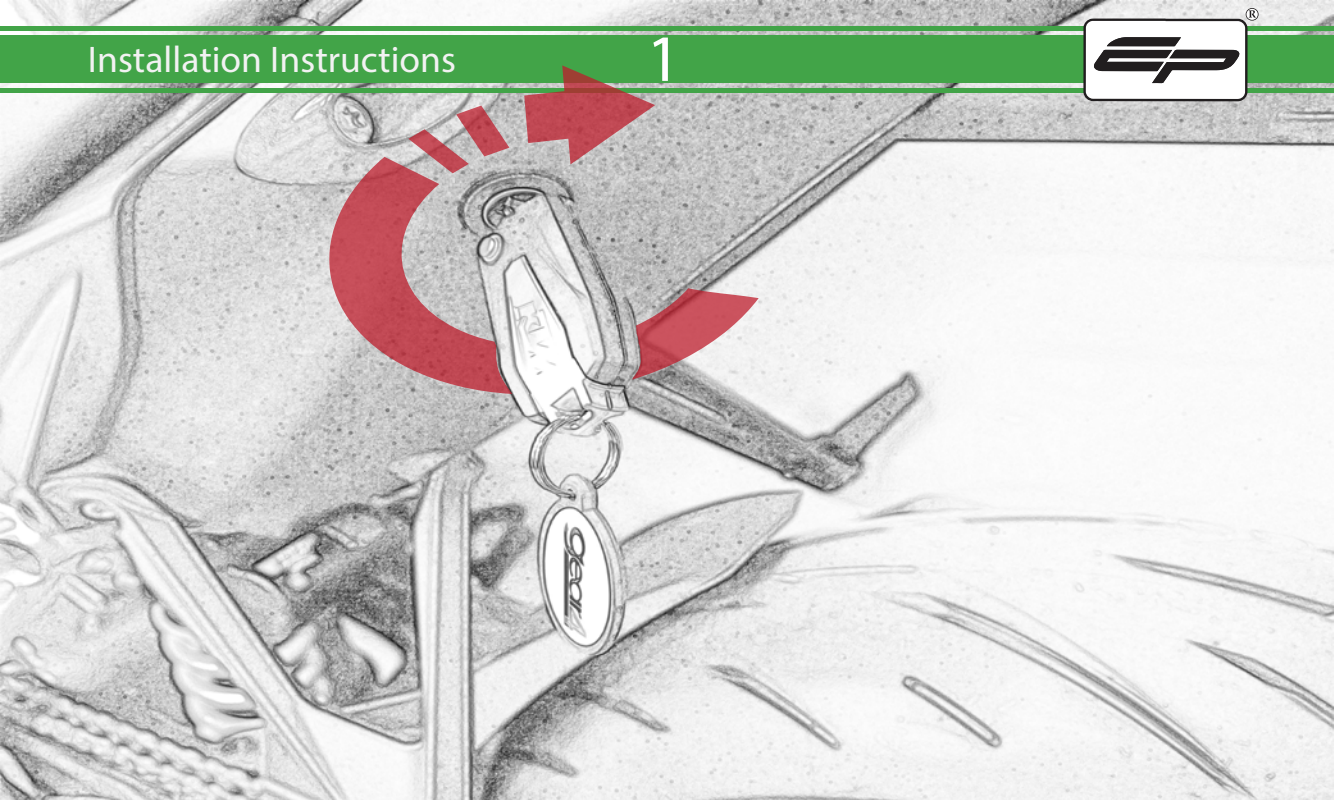


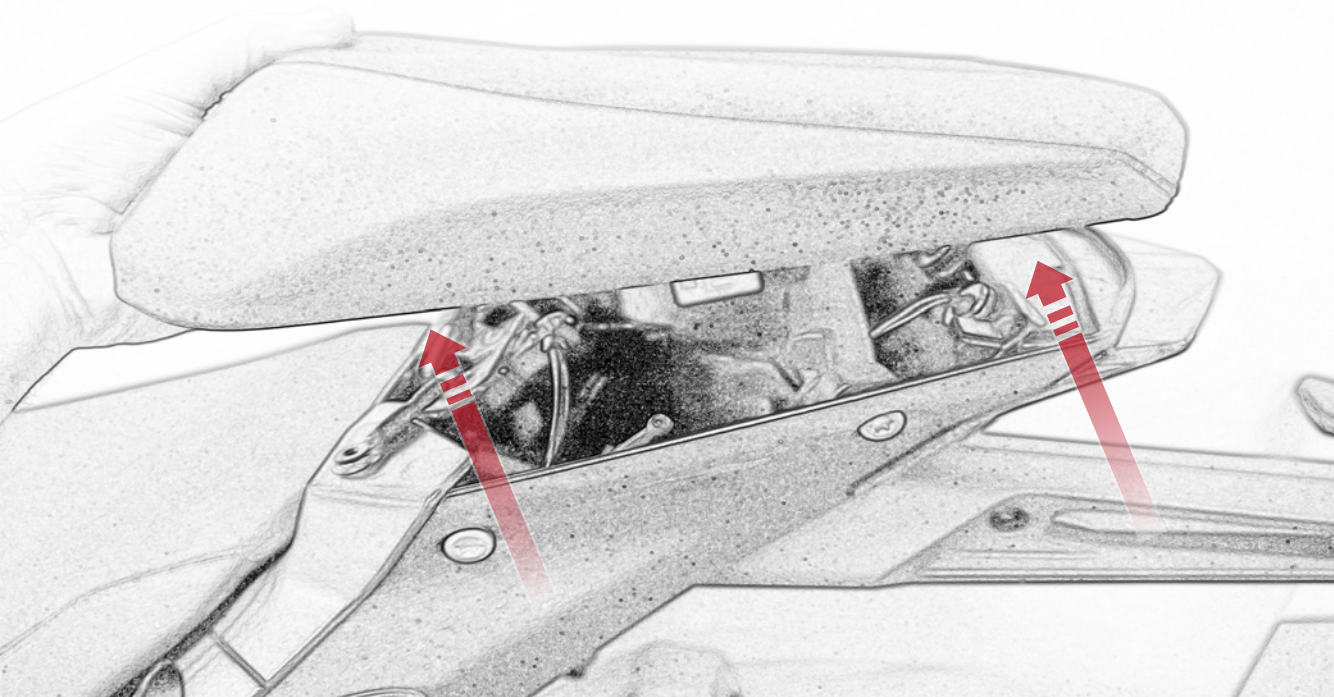


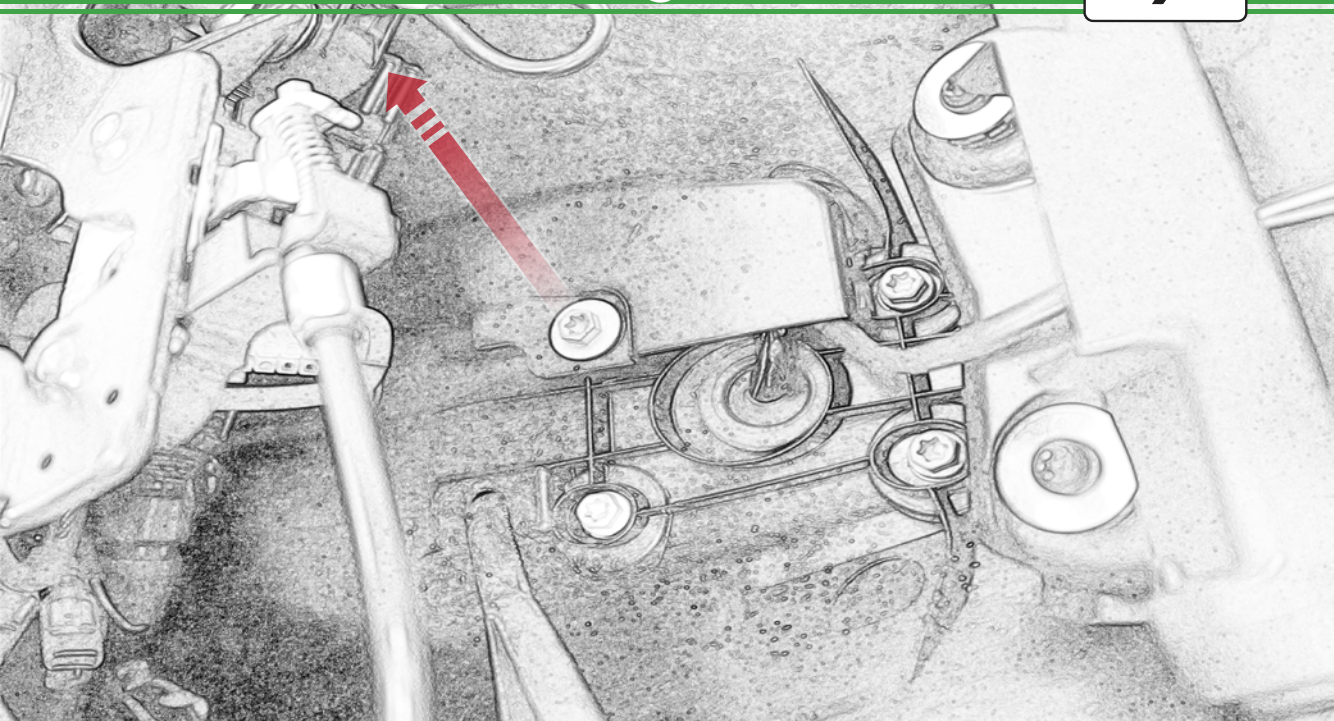


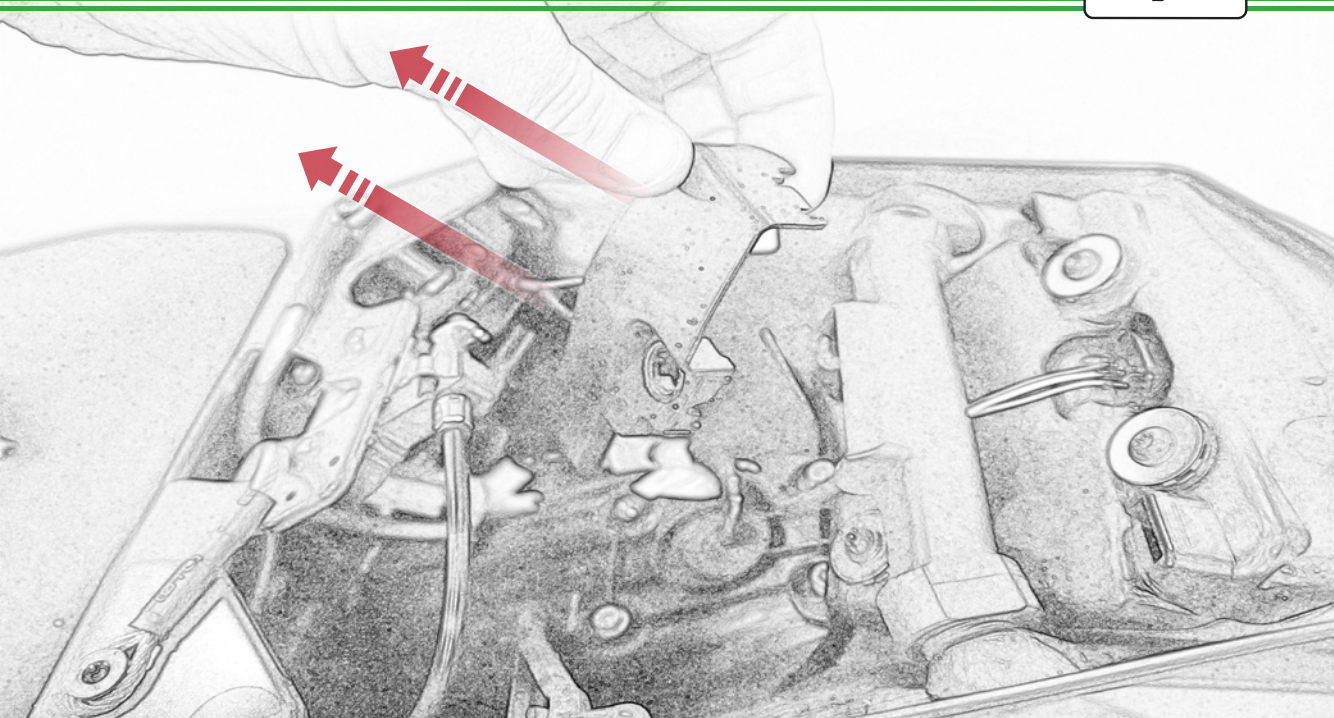


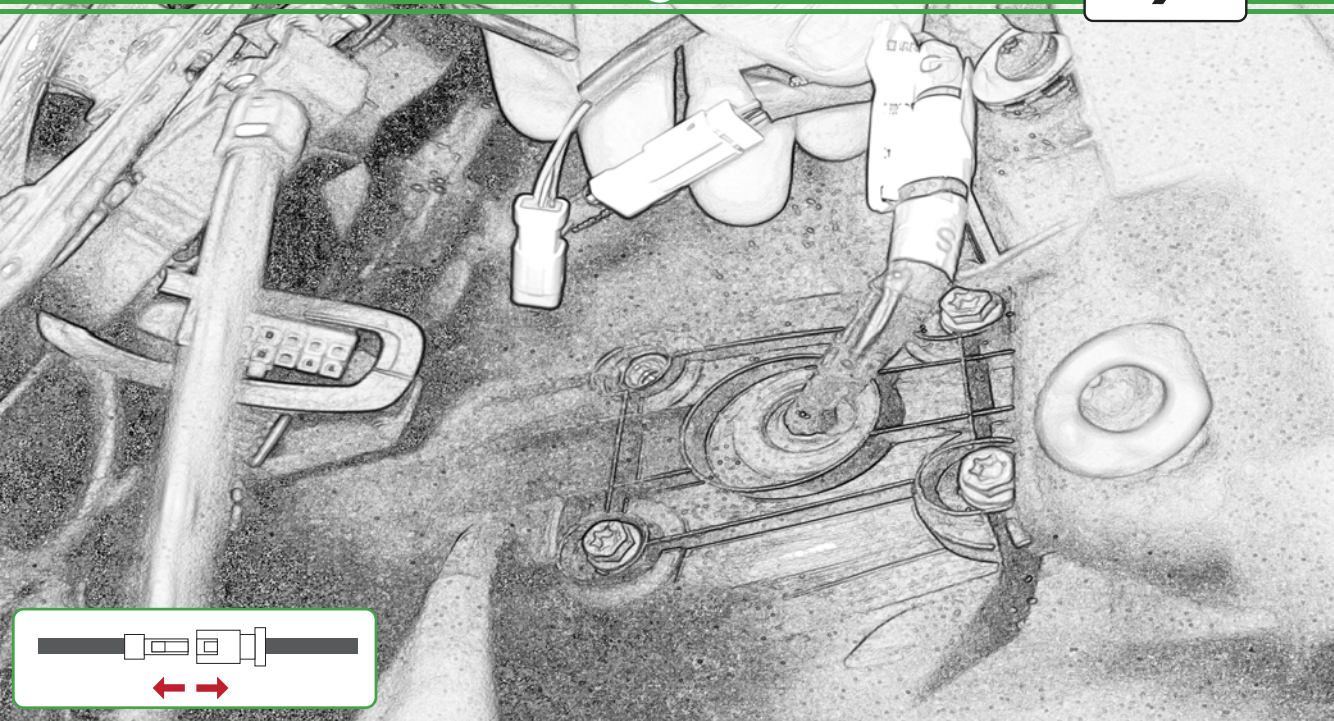



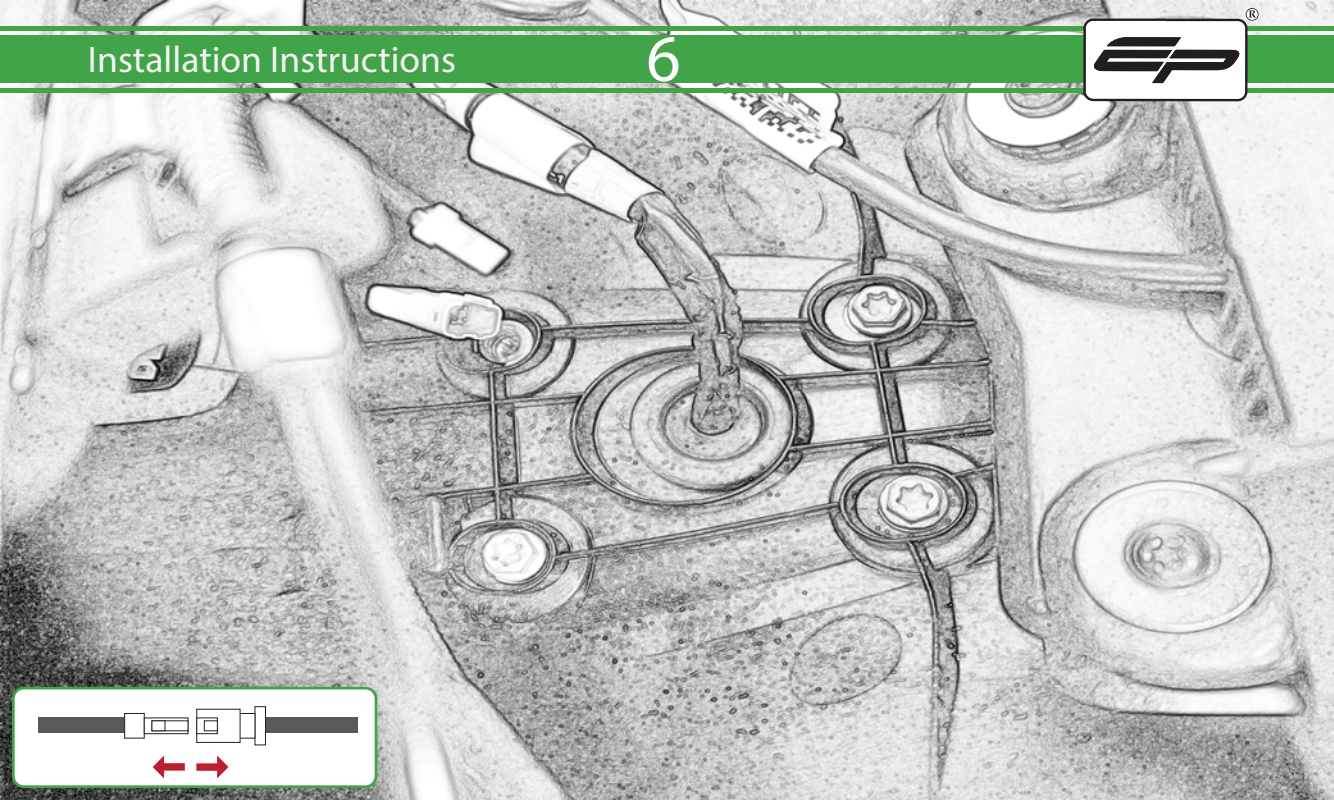



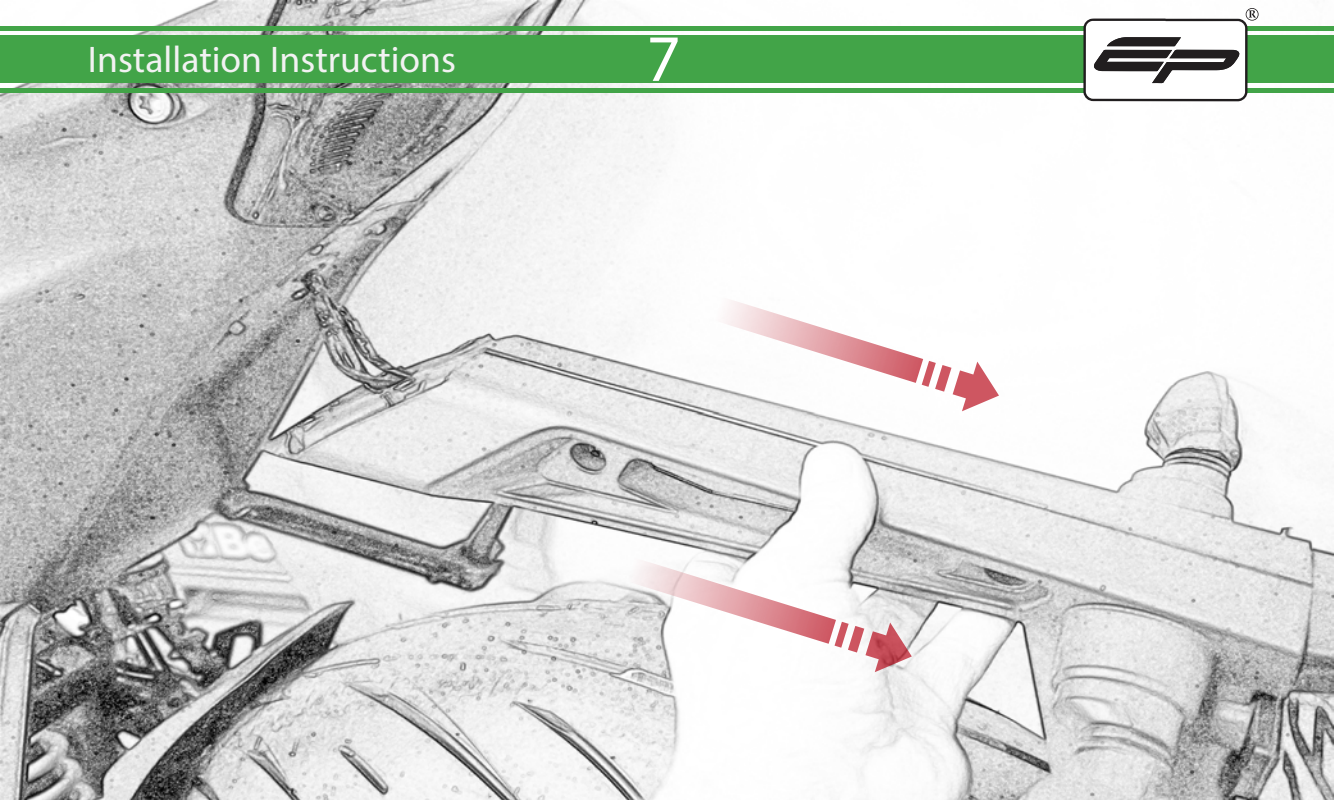


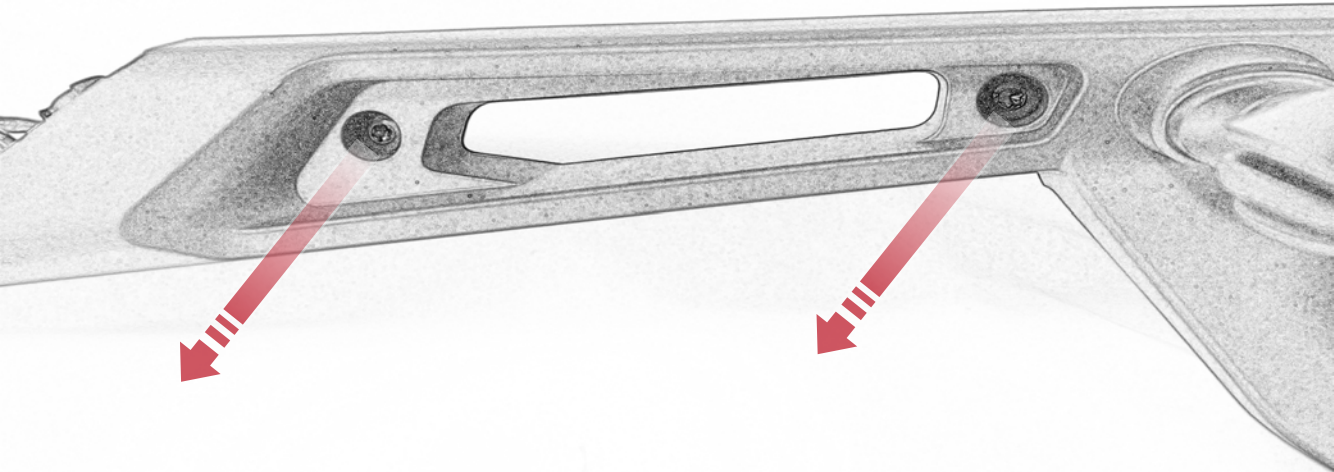


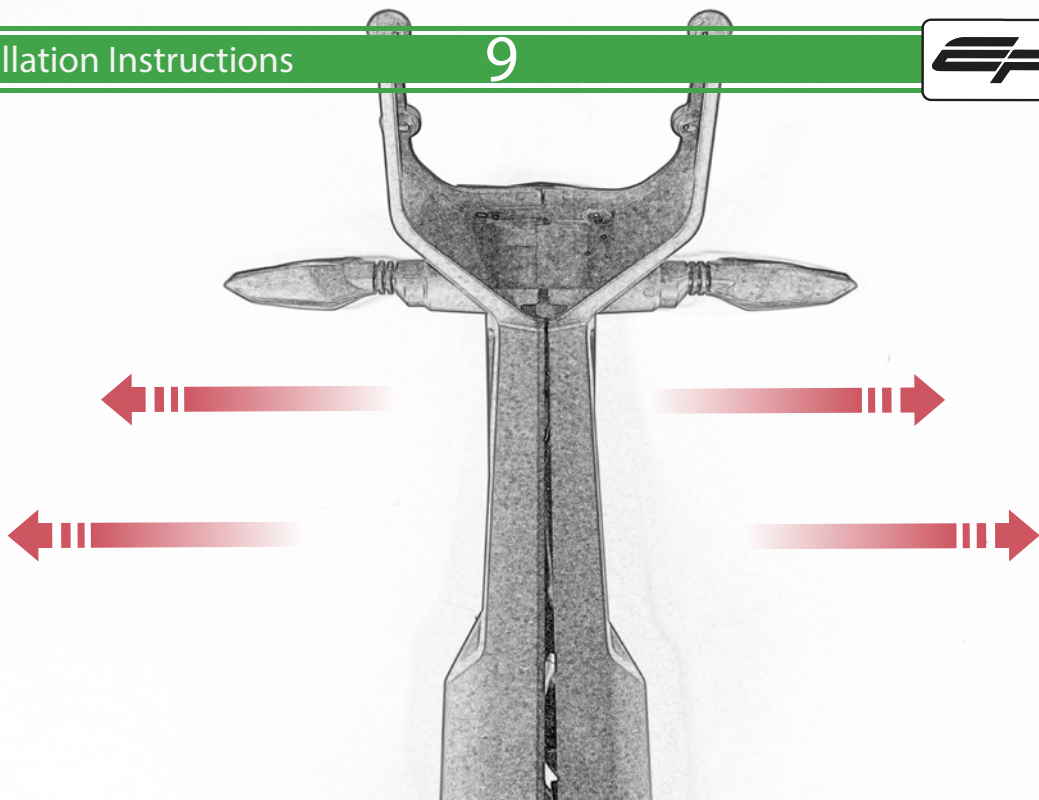

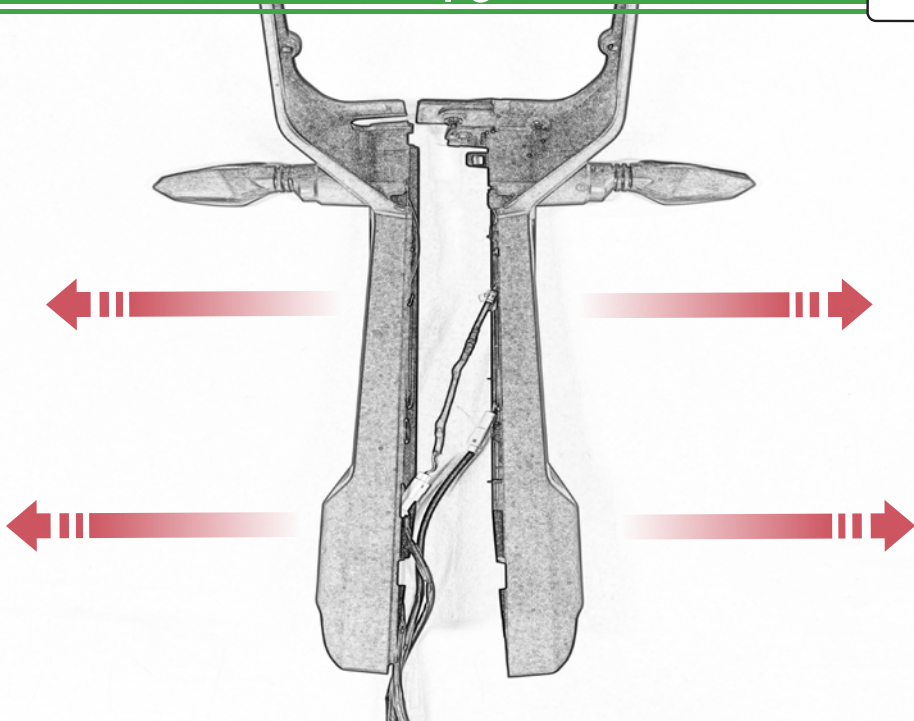


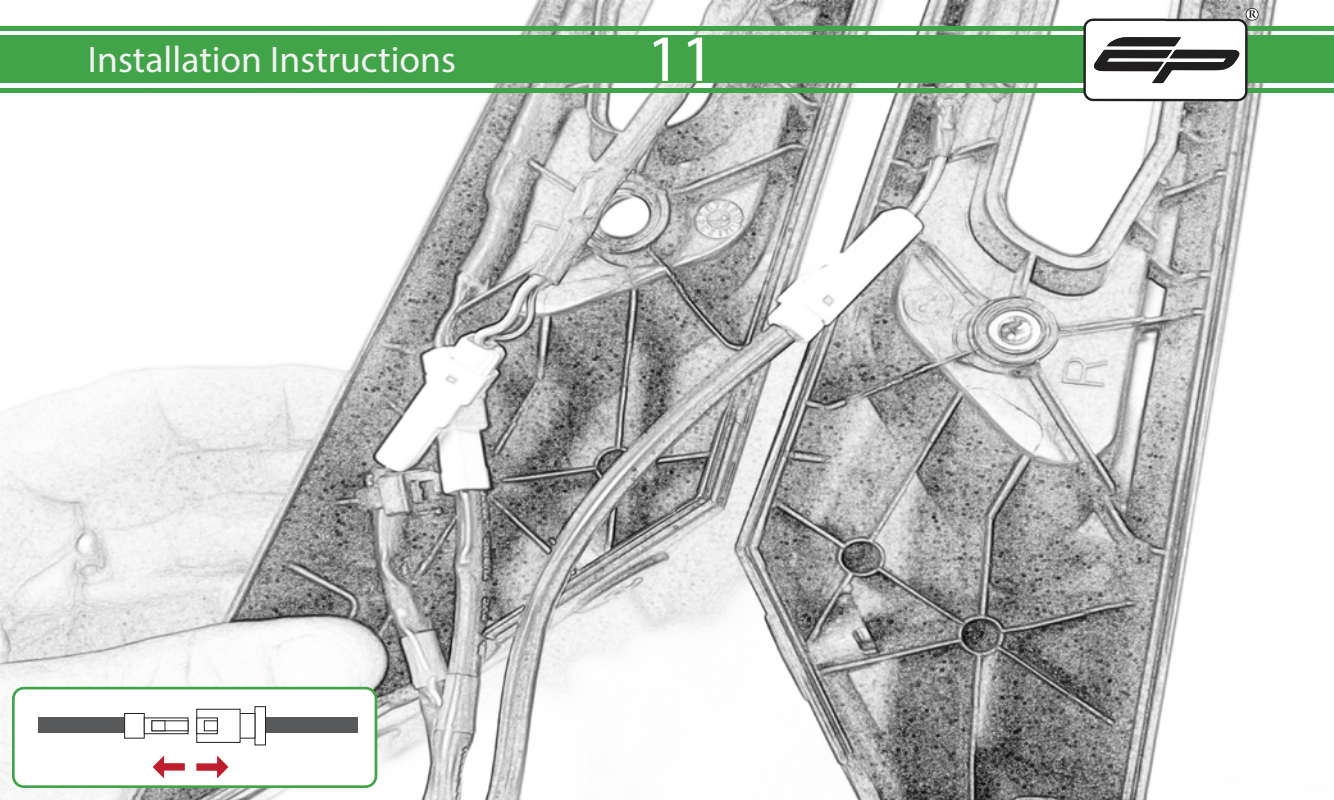

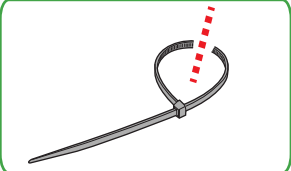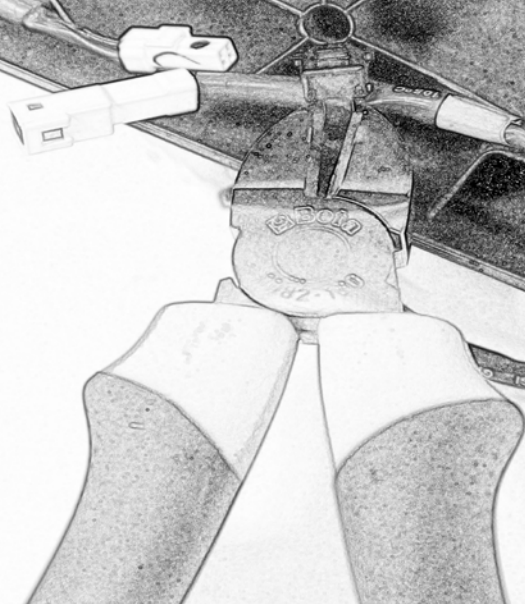


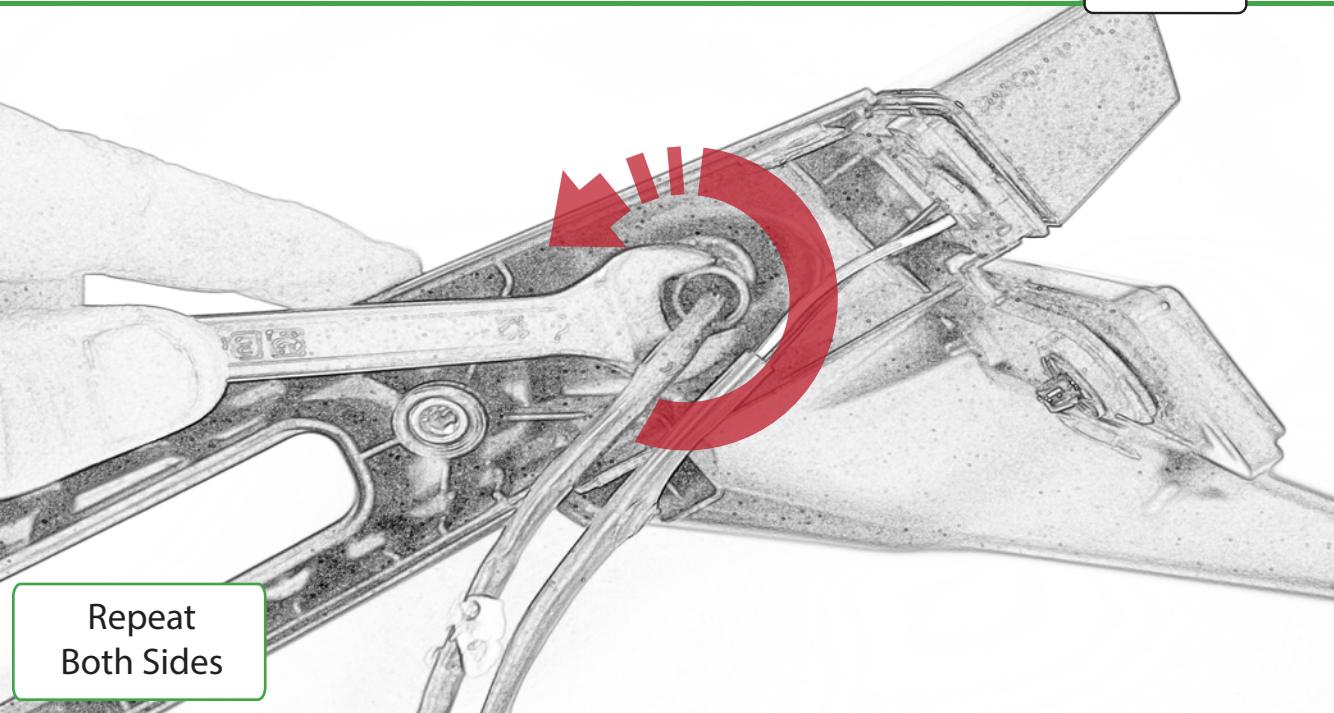


Repeat
Both Sides

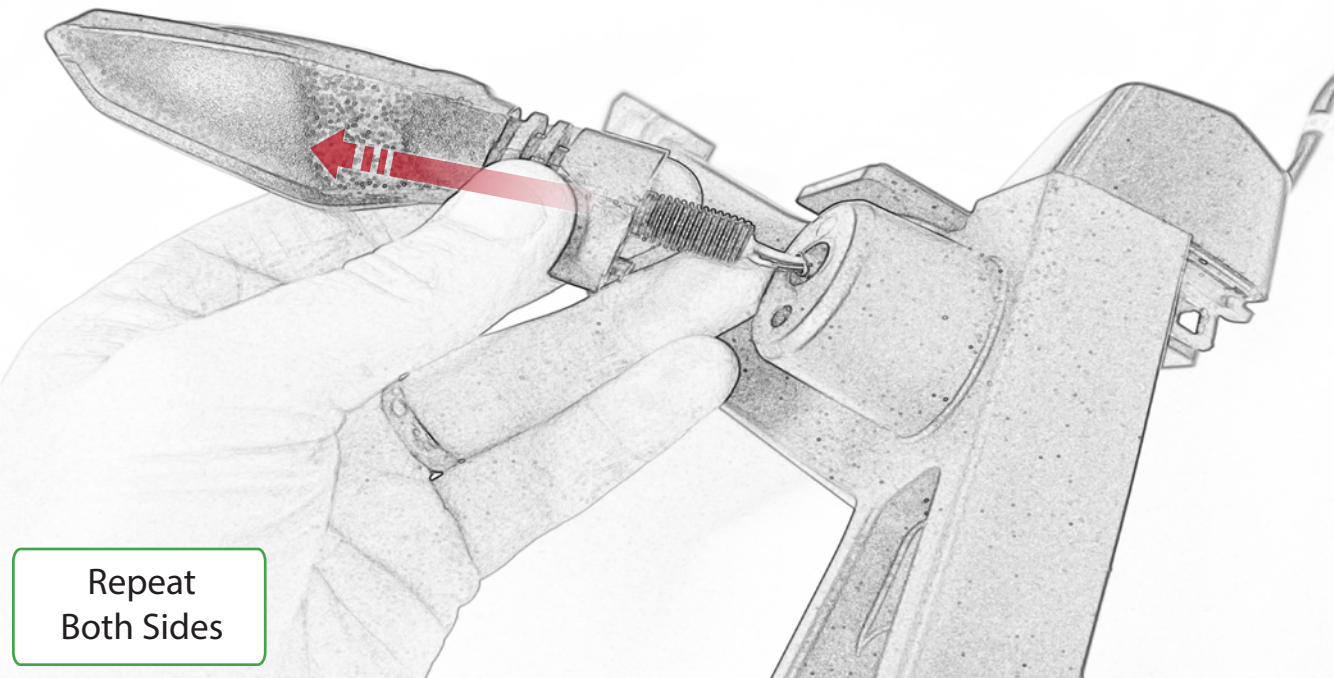


Repeat
Both Sides

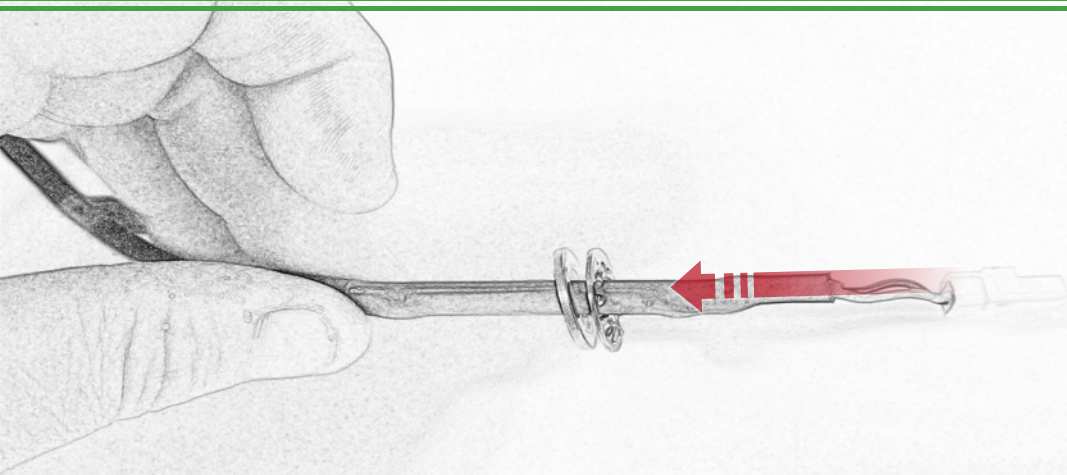


Repeat
Both Sides

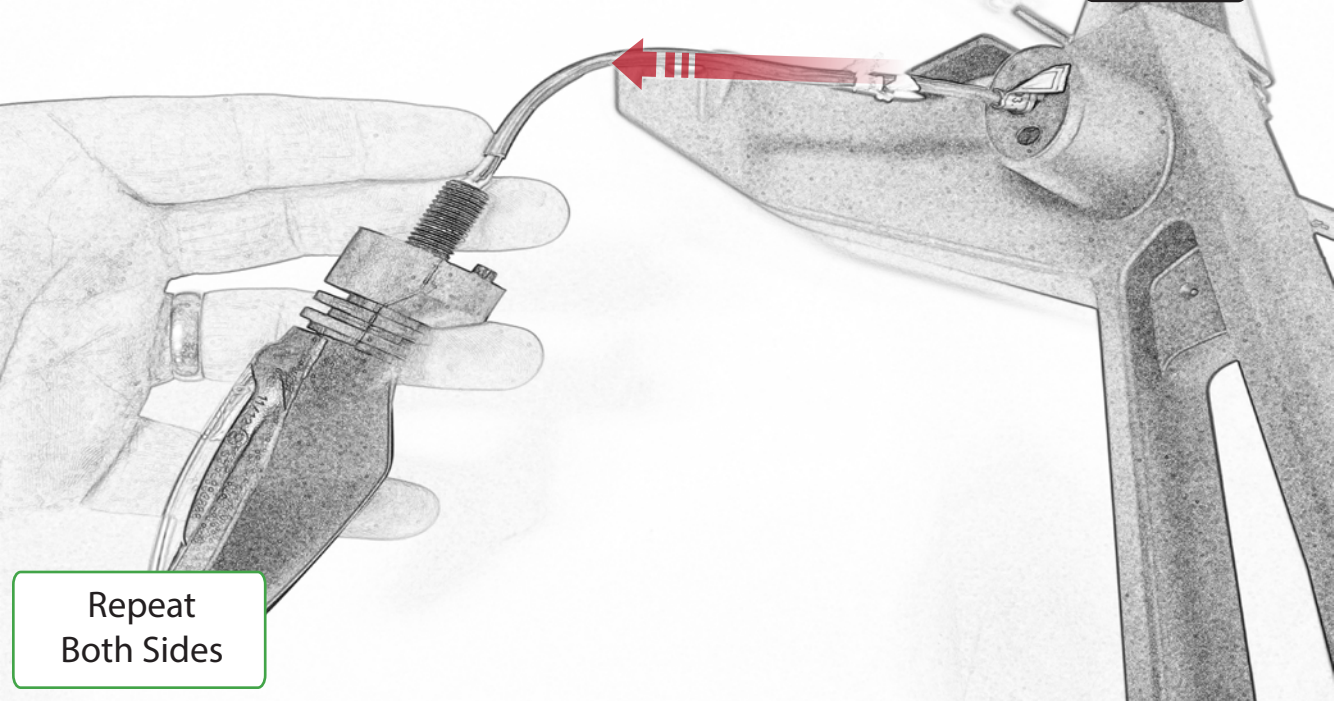

Repeat
Both Sides

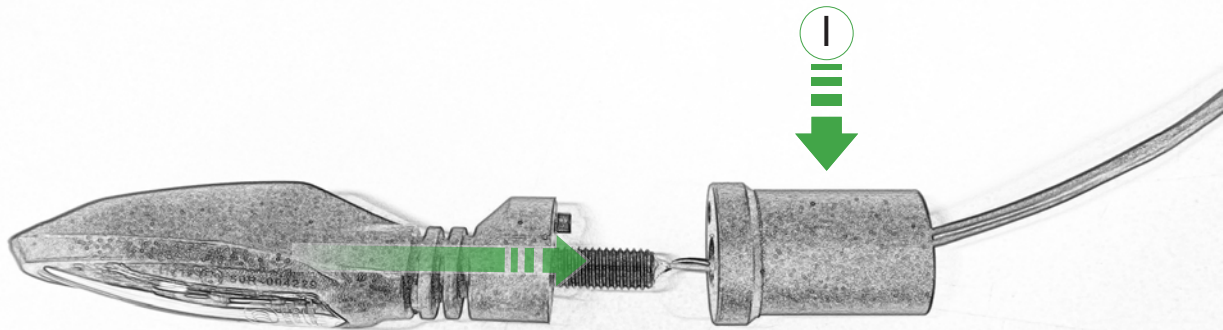


Repeat
Both Sides

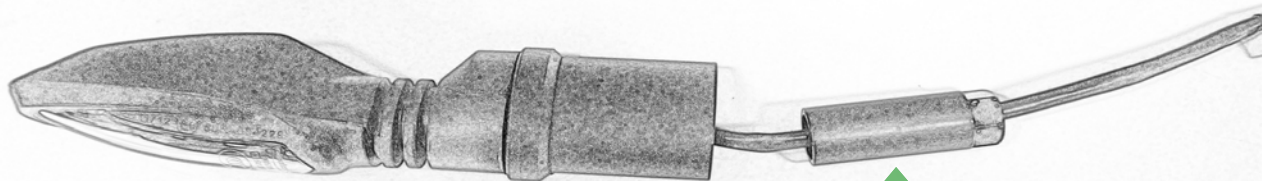


OEM PART

Repeat
Both Sides

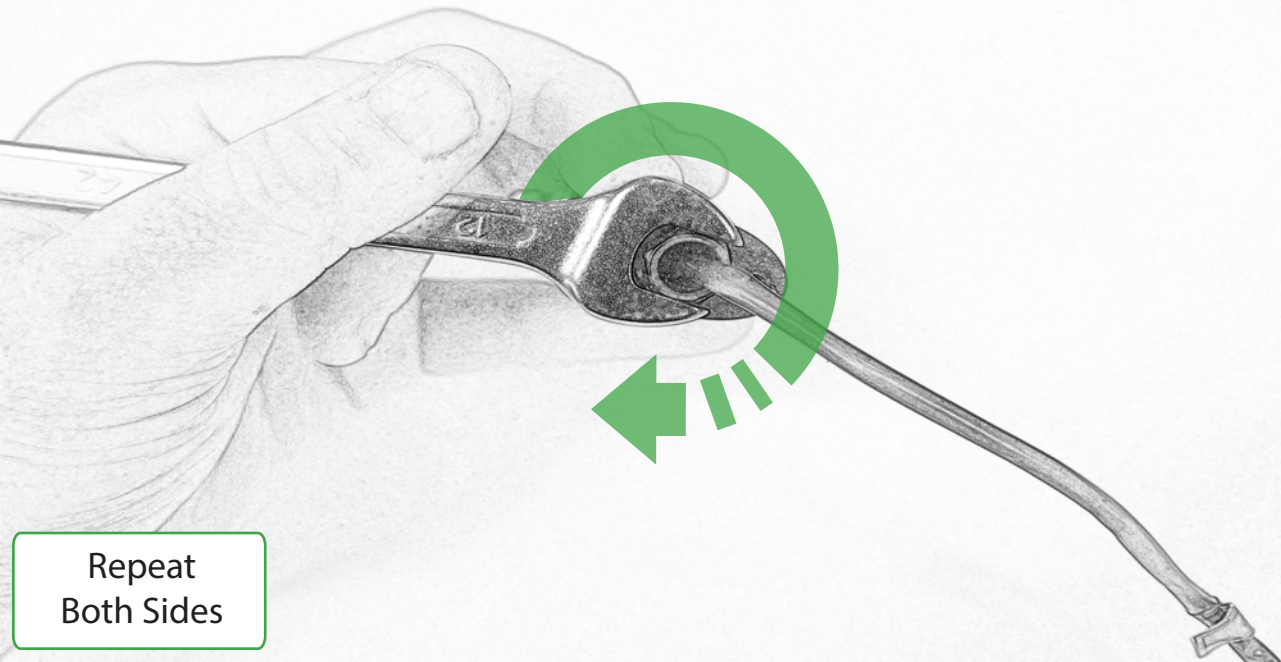


Repeat
Both Sides

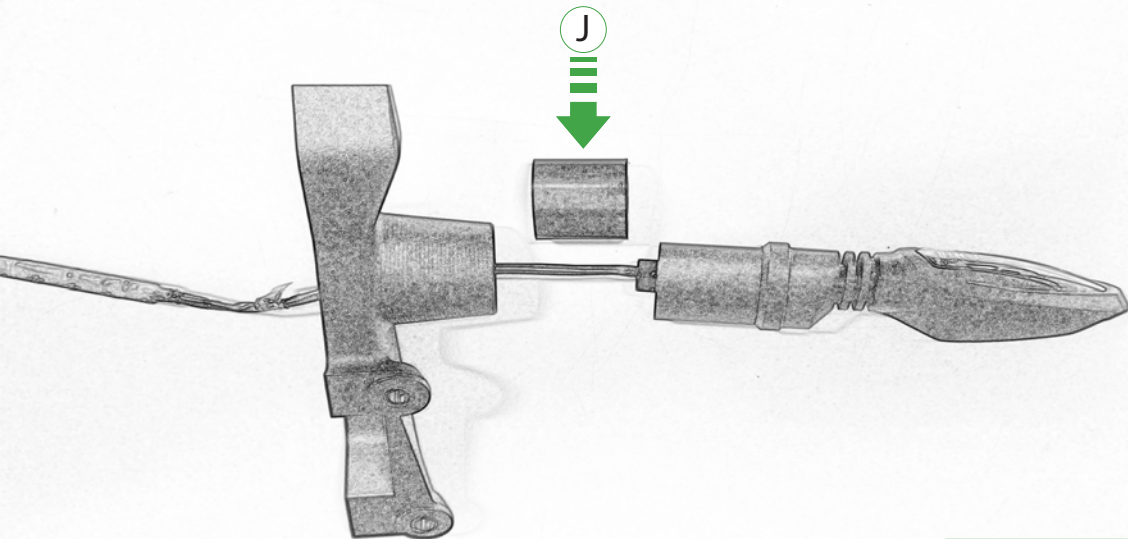

Repeat
Both Sides



J = Optional
For Wide Plates

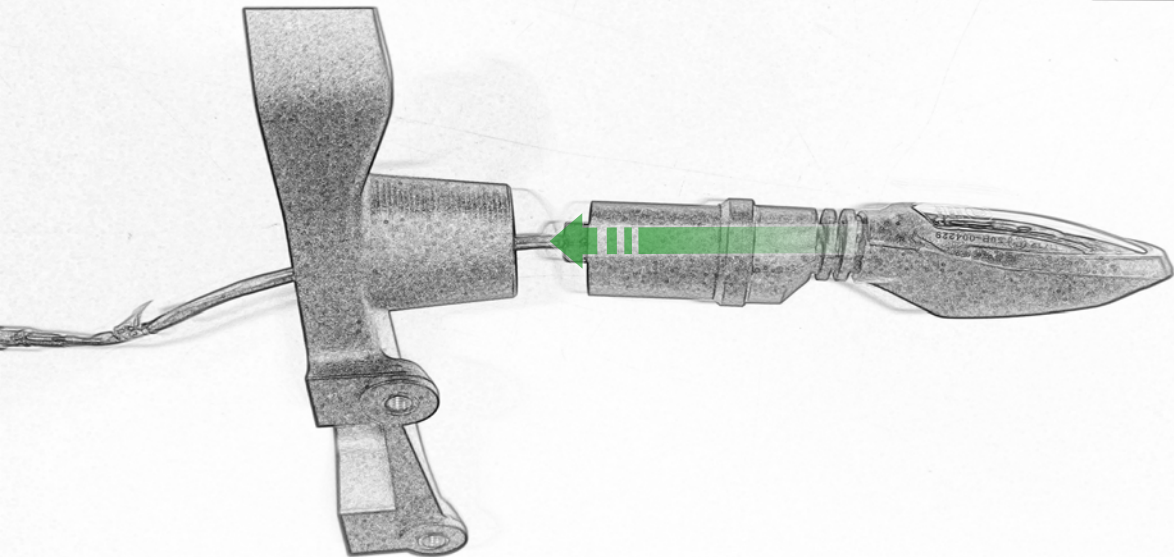



Repeat
Both Sides




Repeat
Both Sides


K = Extension Version
L = Standard Version

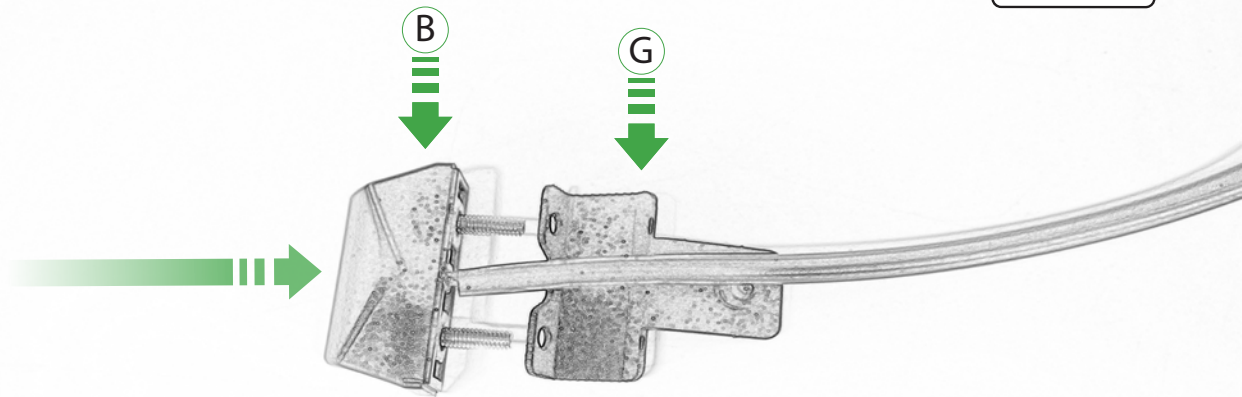


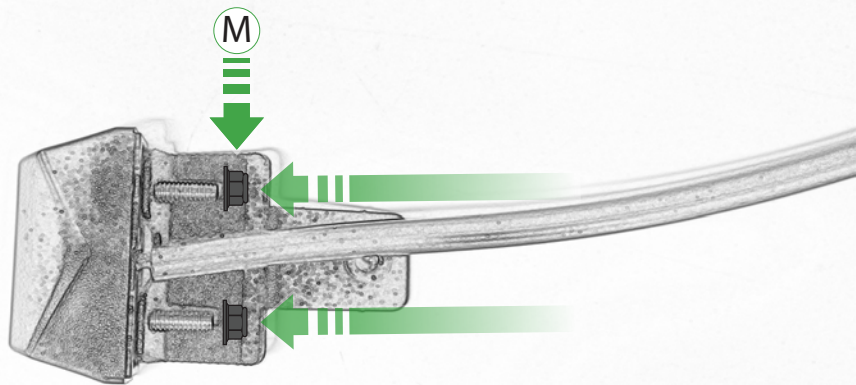


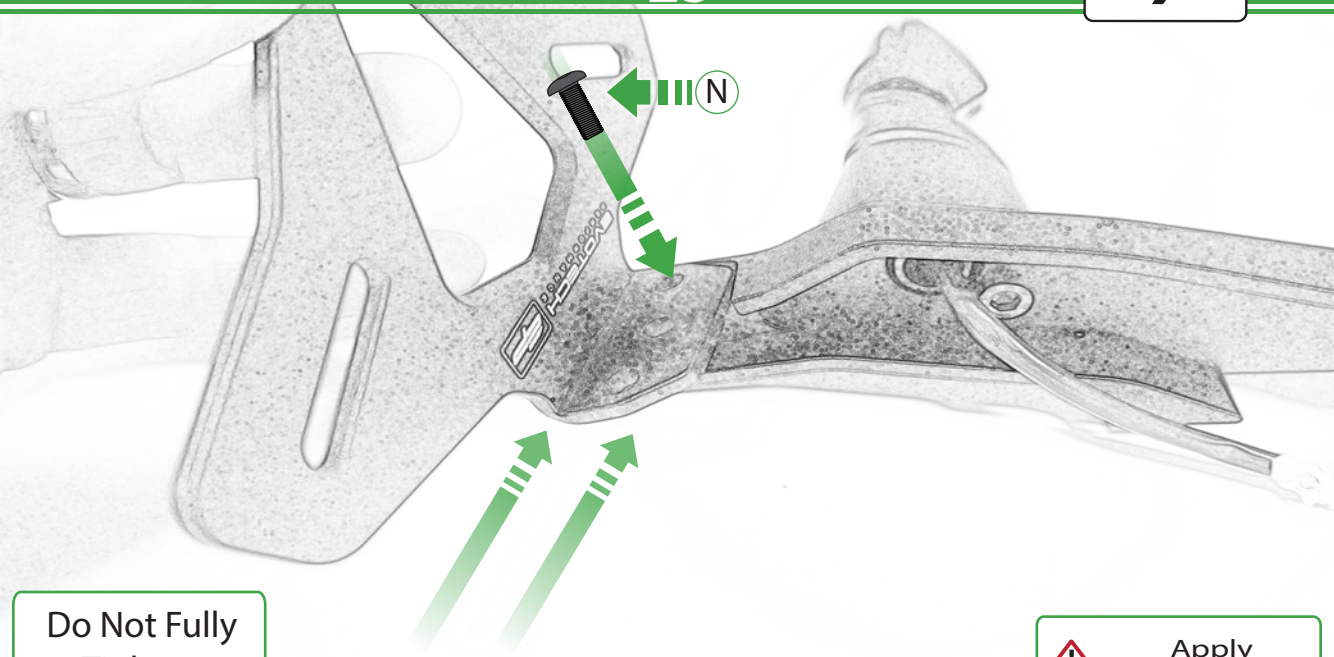

Do Not Fully Tighten

 Caution Apply Threadlock

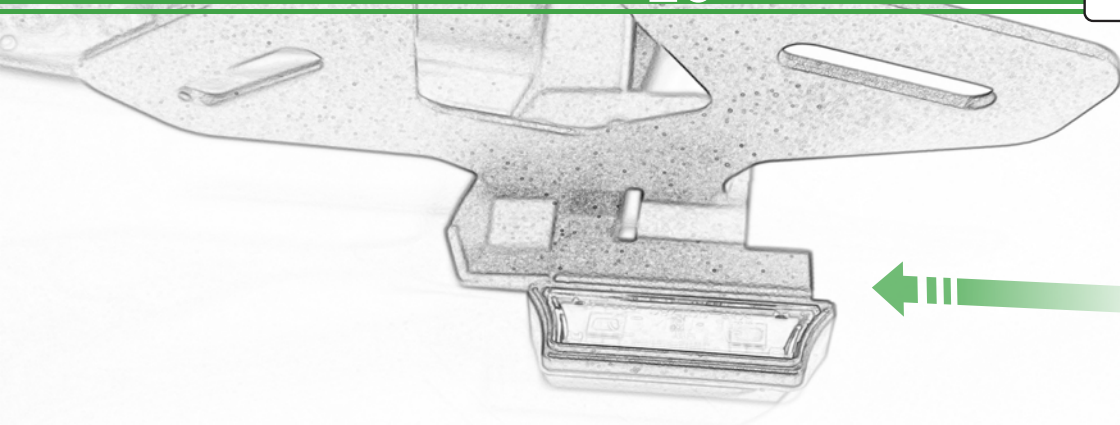

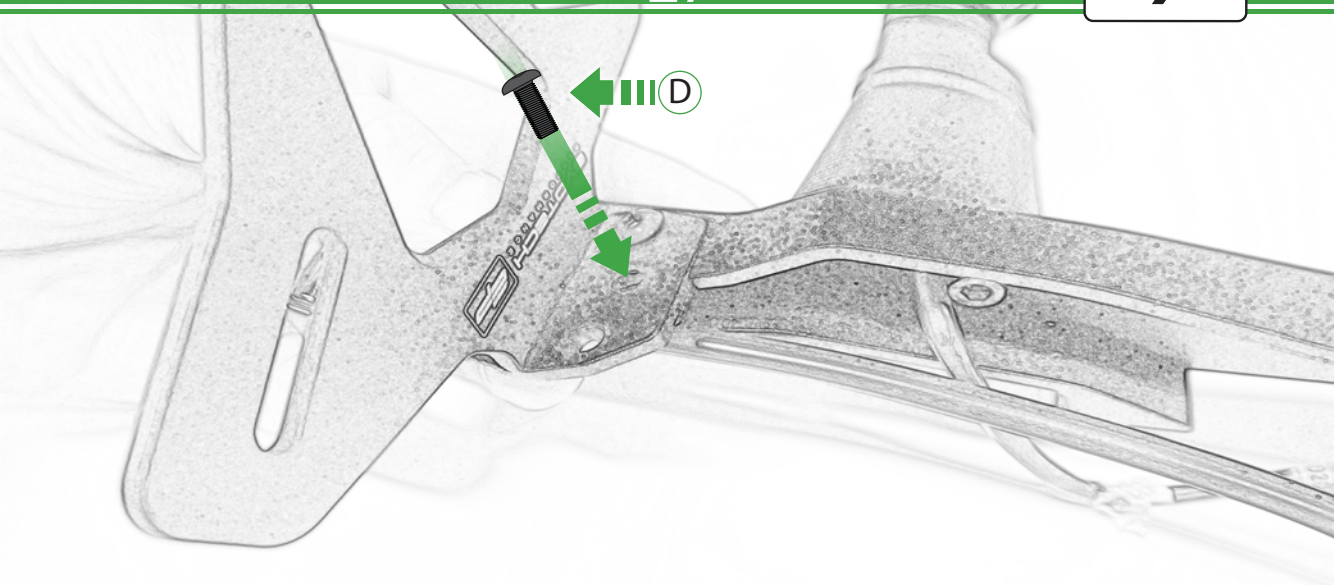


Do Not Fully Tighten




Caution


Apply Threadlock

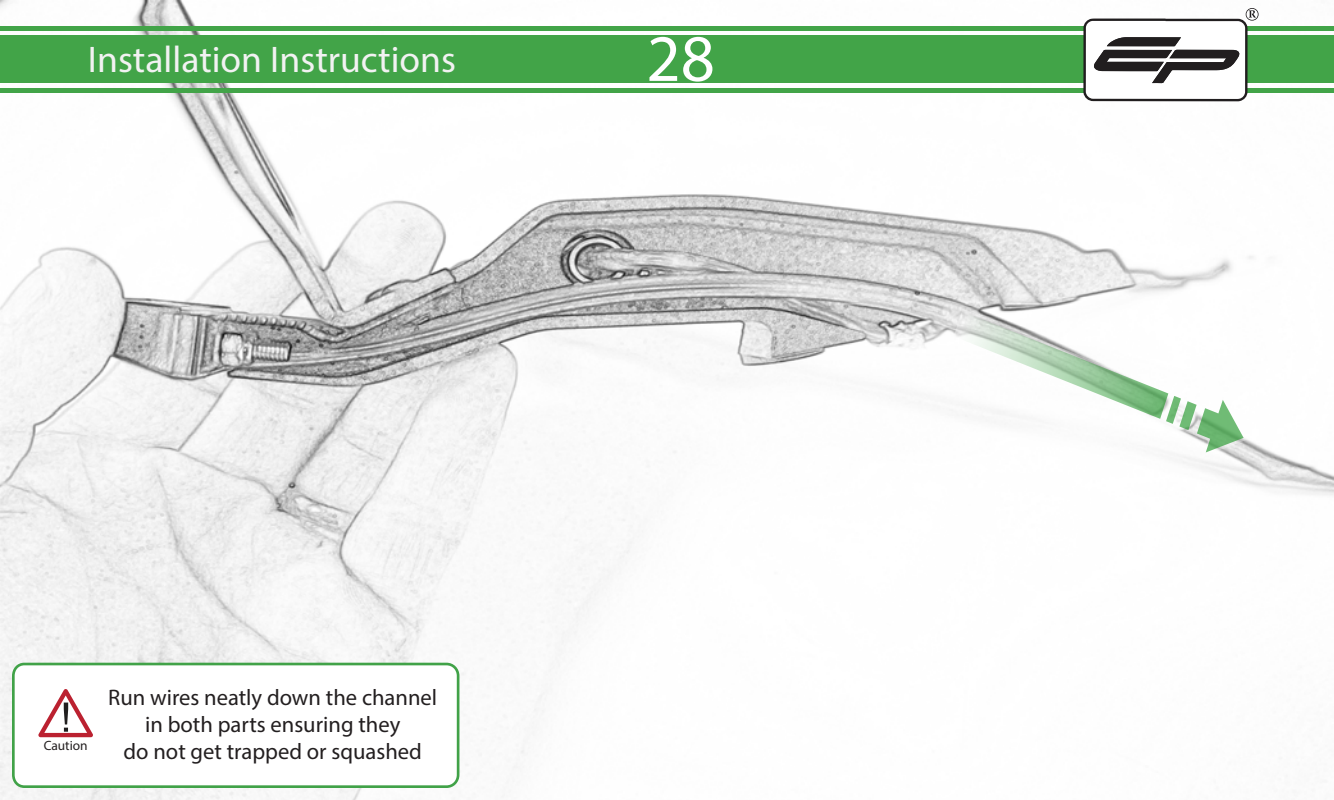


Caution

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

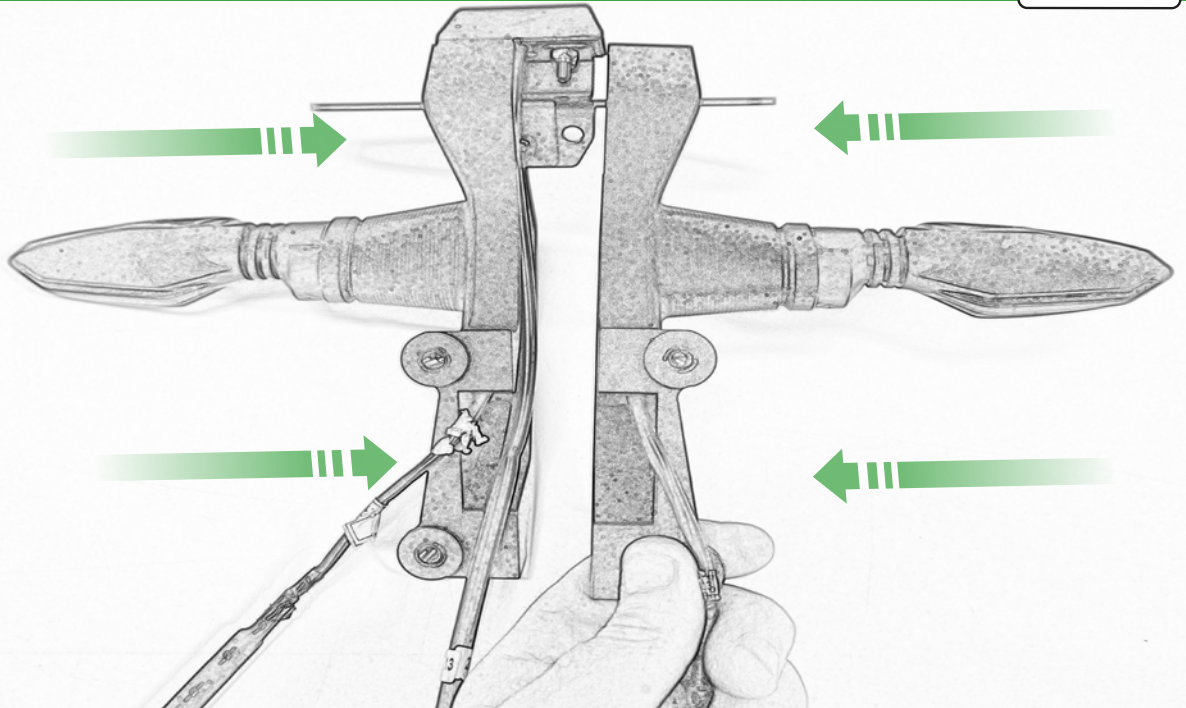

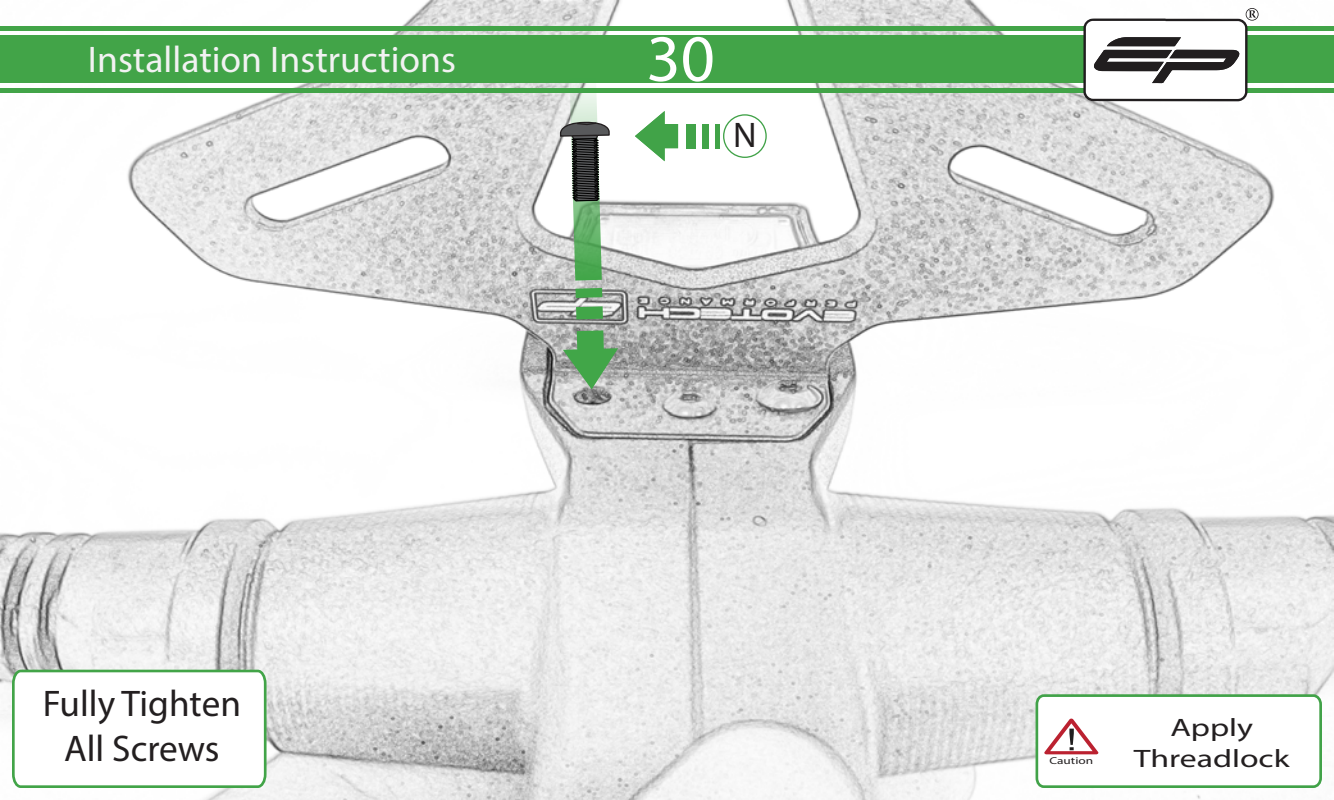



Fully Tighten
All Screws






Caution



Apply
Threadlock


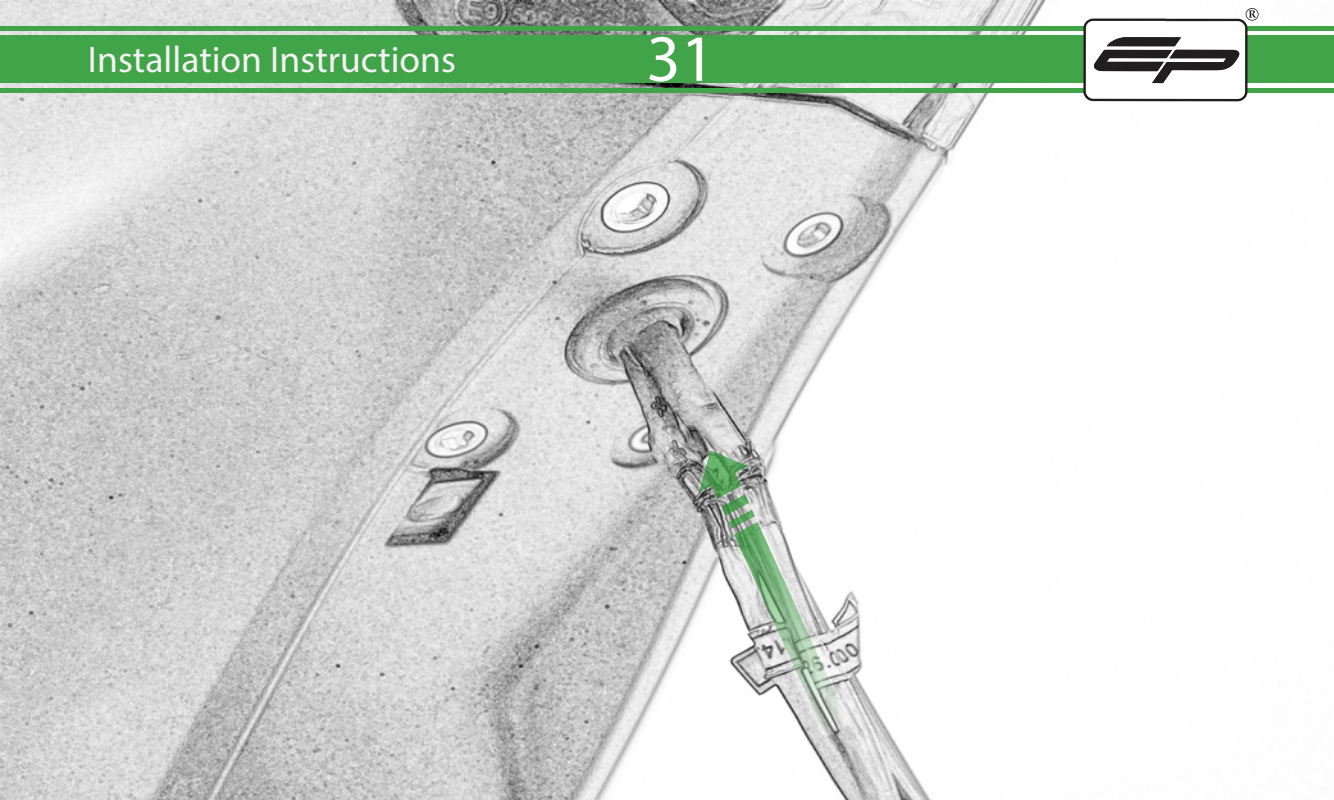



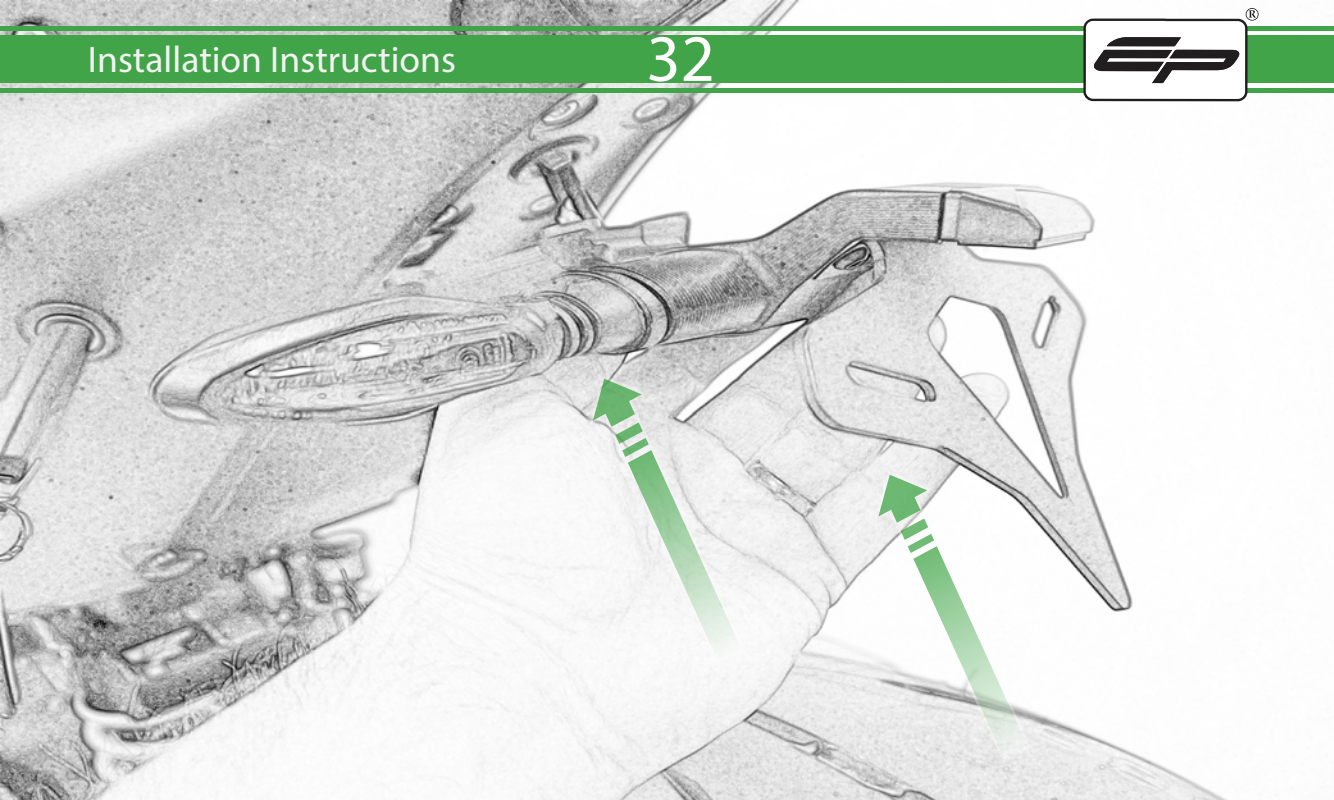



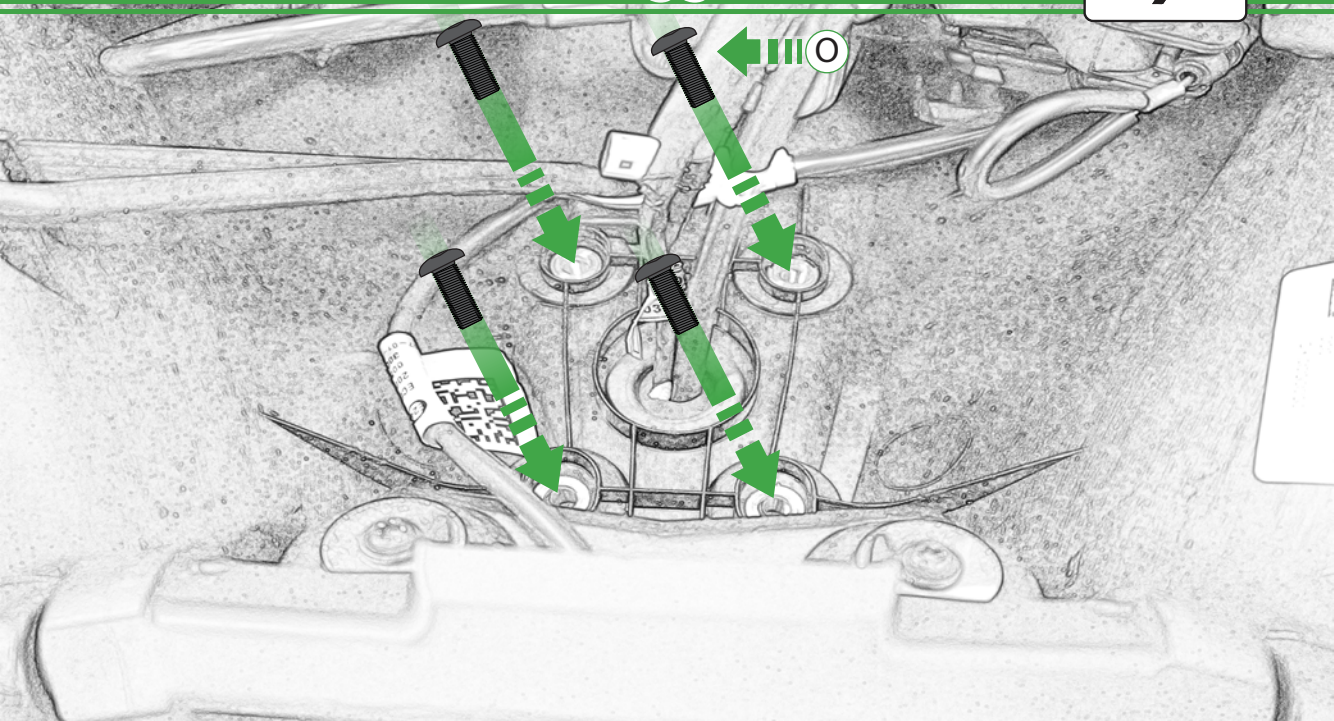



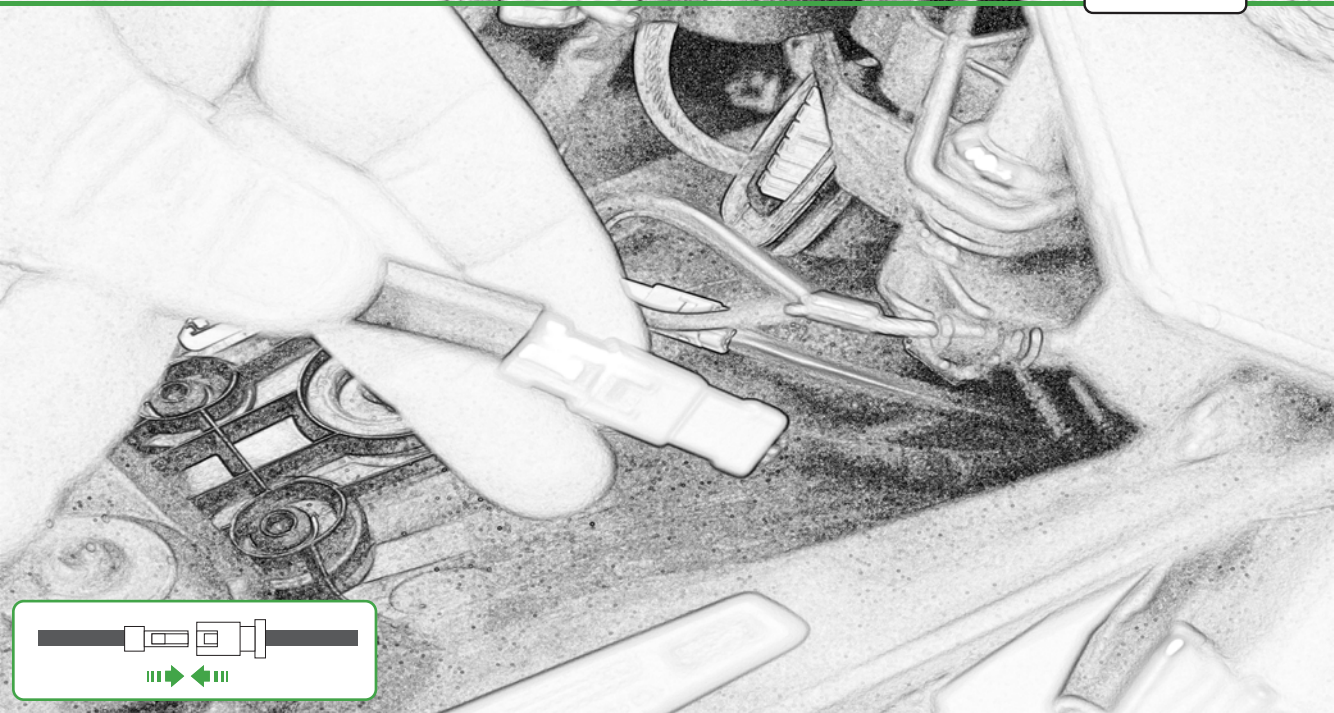


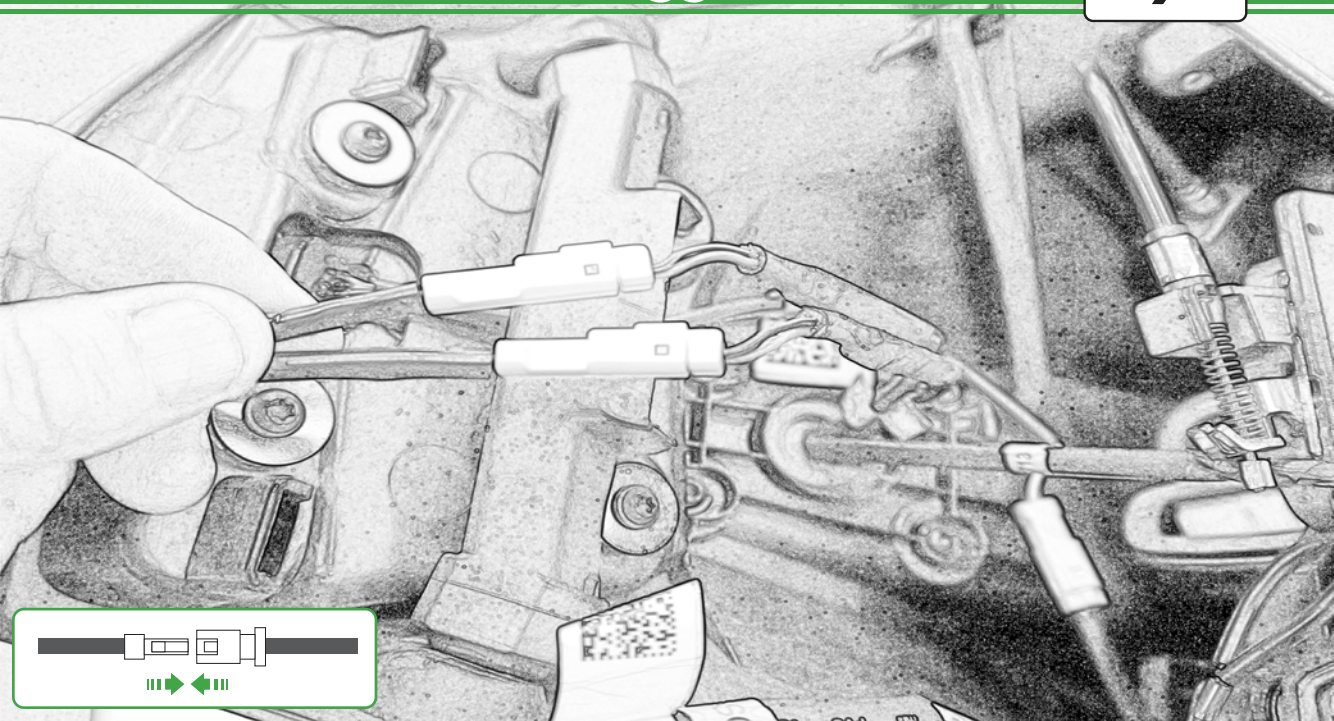


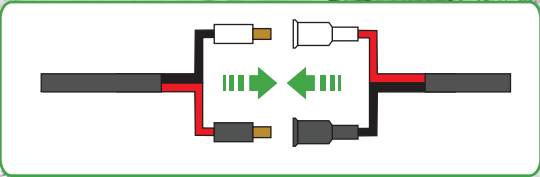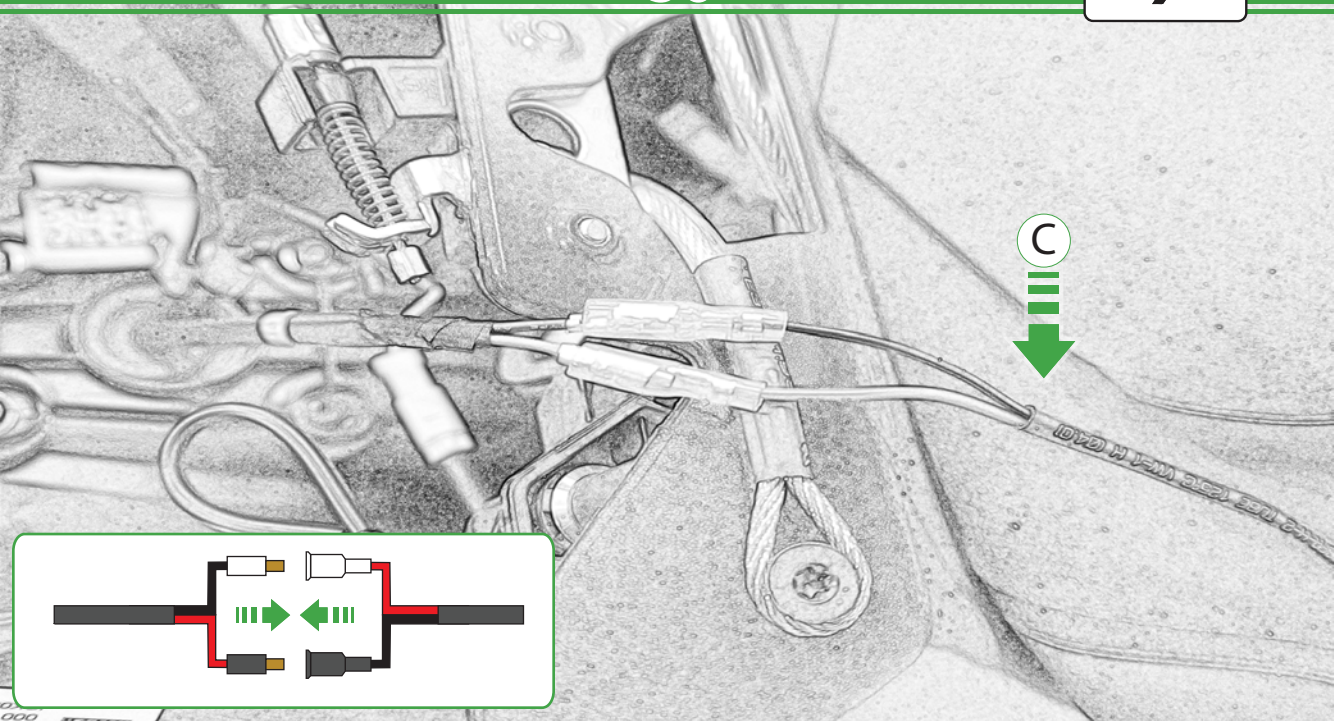

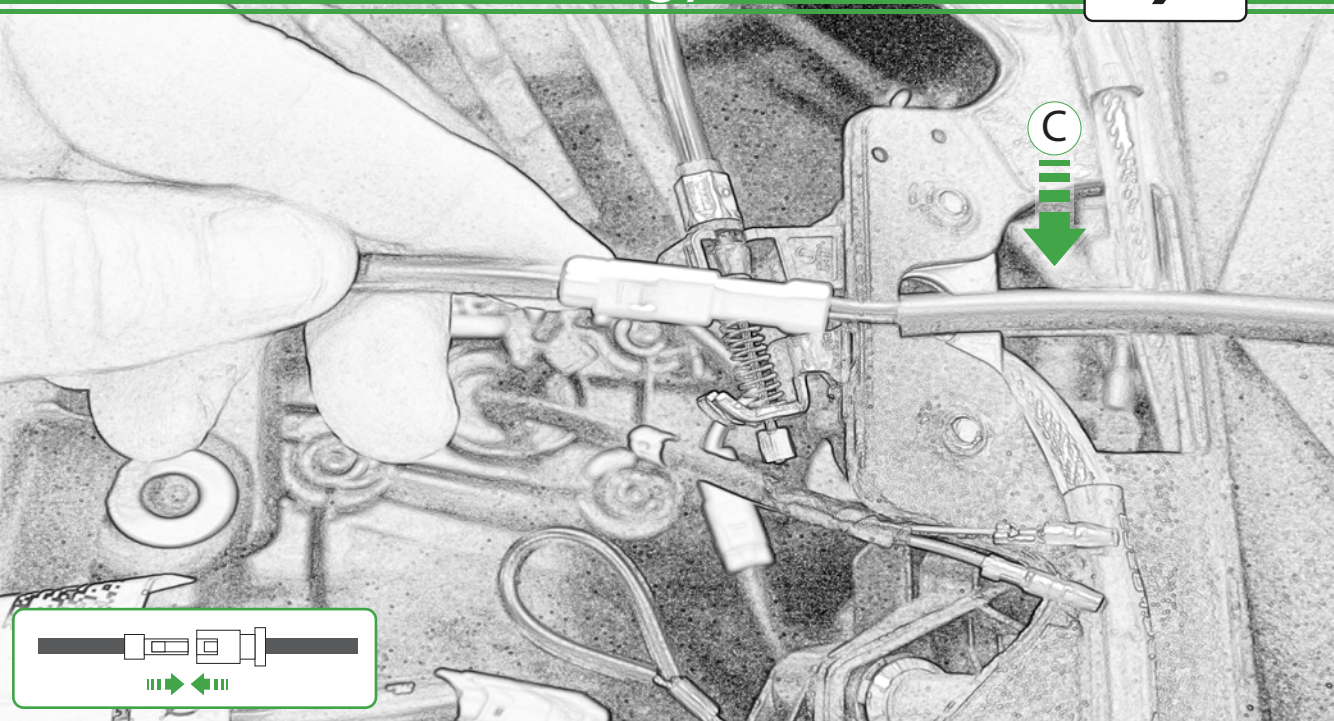

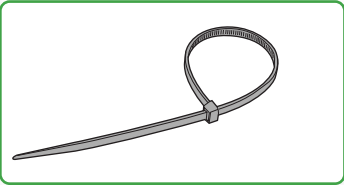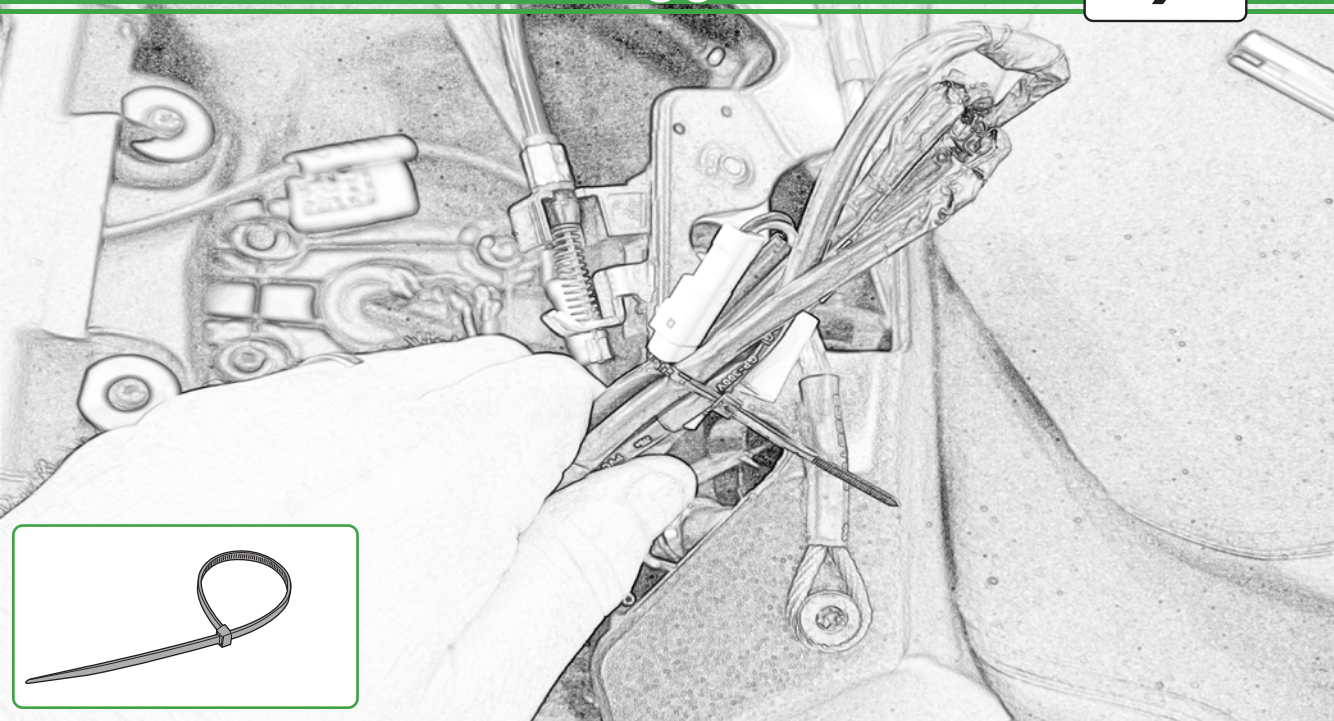


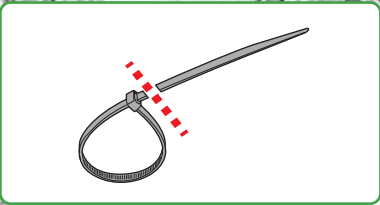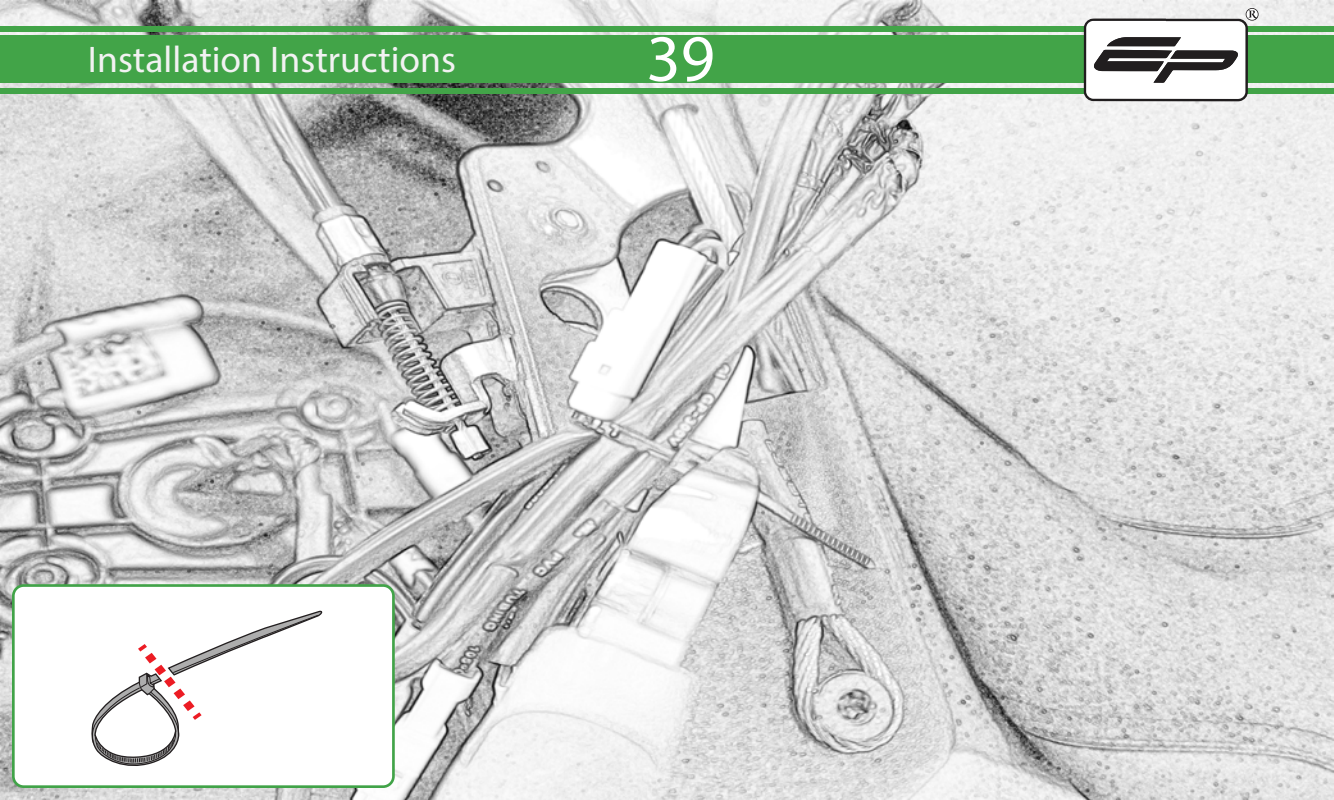


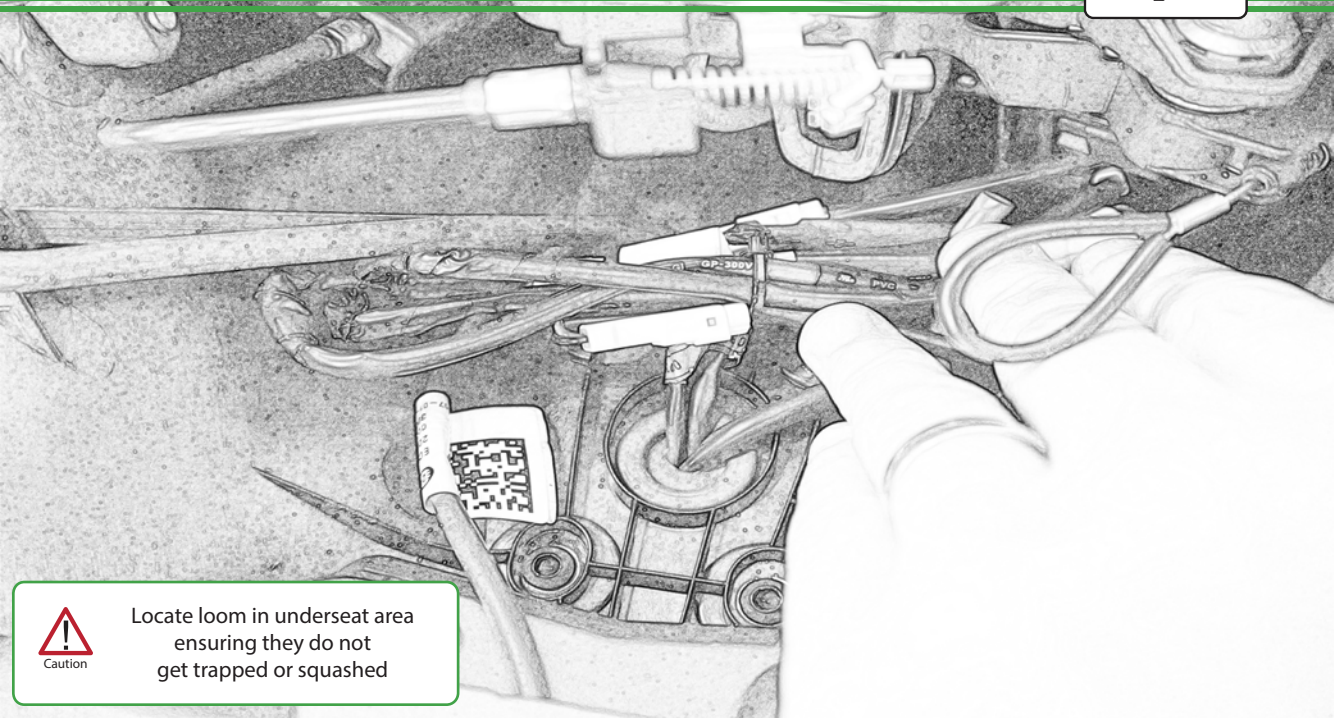


Caution

Locate loom in underseat area ensuring they do not get trapped or squashed

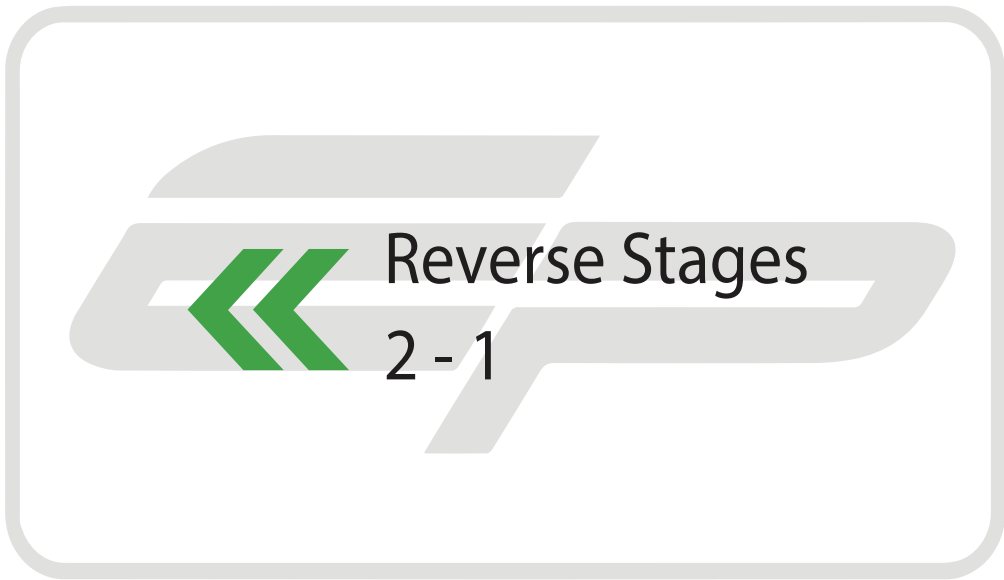

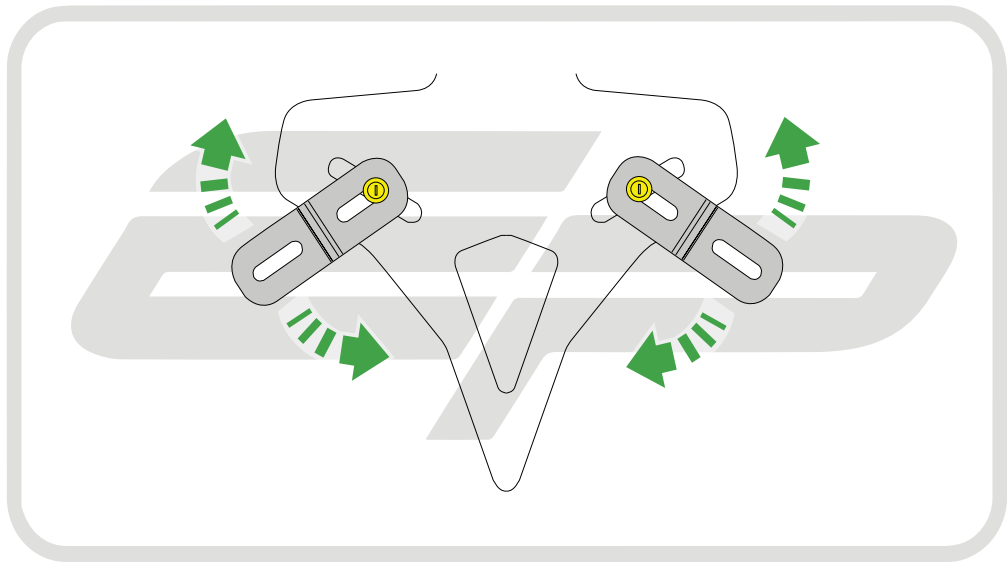

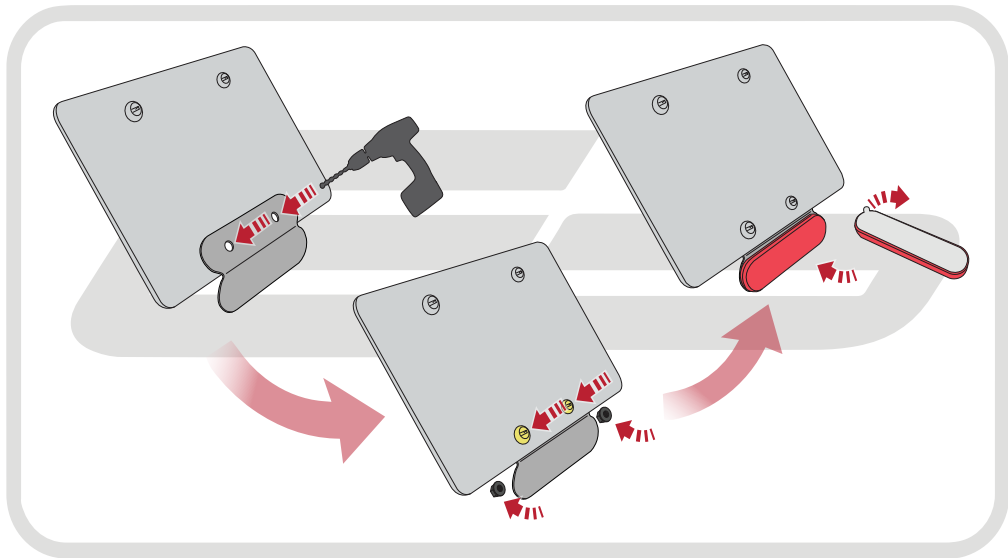



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com