



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)

BMW S 1000 XR / TE Crash Protection

Installation Instructions




## Kit Contents PRN015039


- (A) 1 x R/H Bobbin Bracket
- (B) 1 x L/H Bobbin Bracket
- (C) 1 x M10 x 80 Caphead
- (D) 2 x M10 x 35 Caphead
- (E) 2 x M12 x 55 Caphead
- (F) 2 x M12 Washer
- (G) 2 x Poly Washer
- (H) 2 x Bobbin Spacer
- (I) 2 x Large Bobbin Head








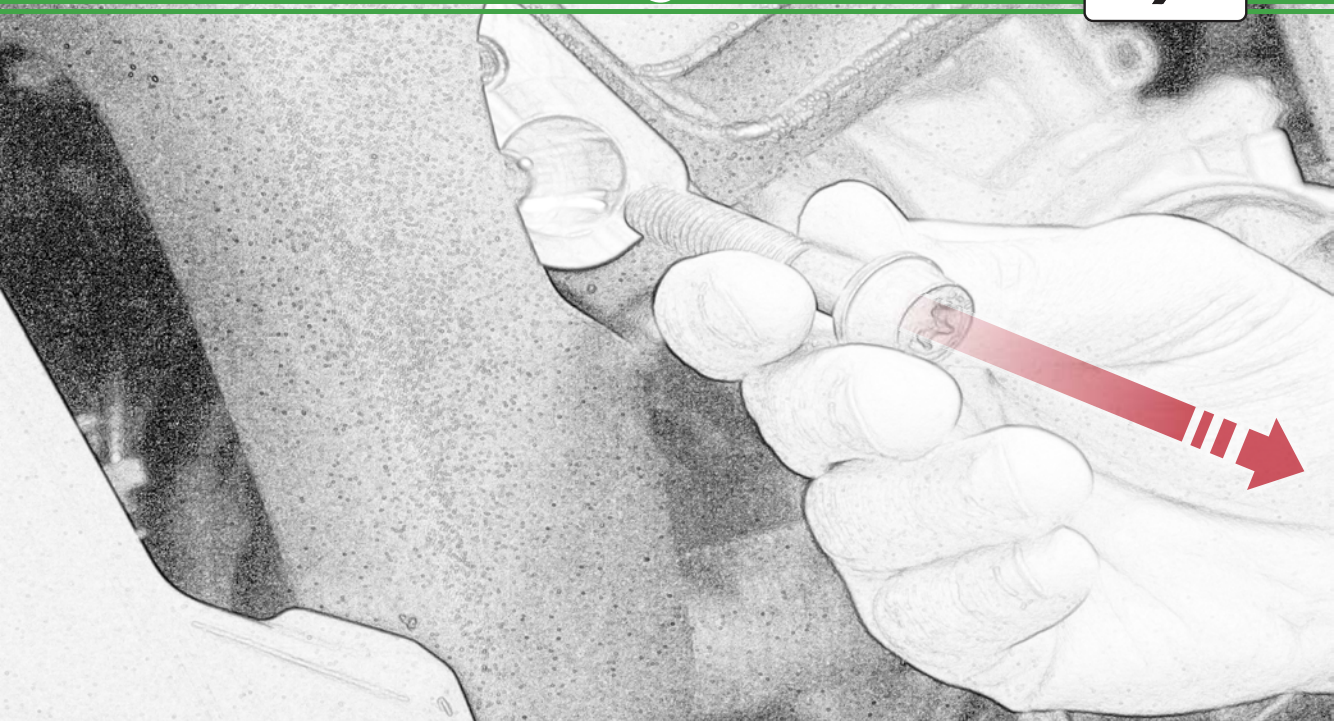


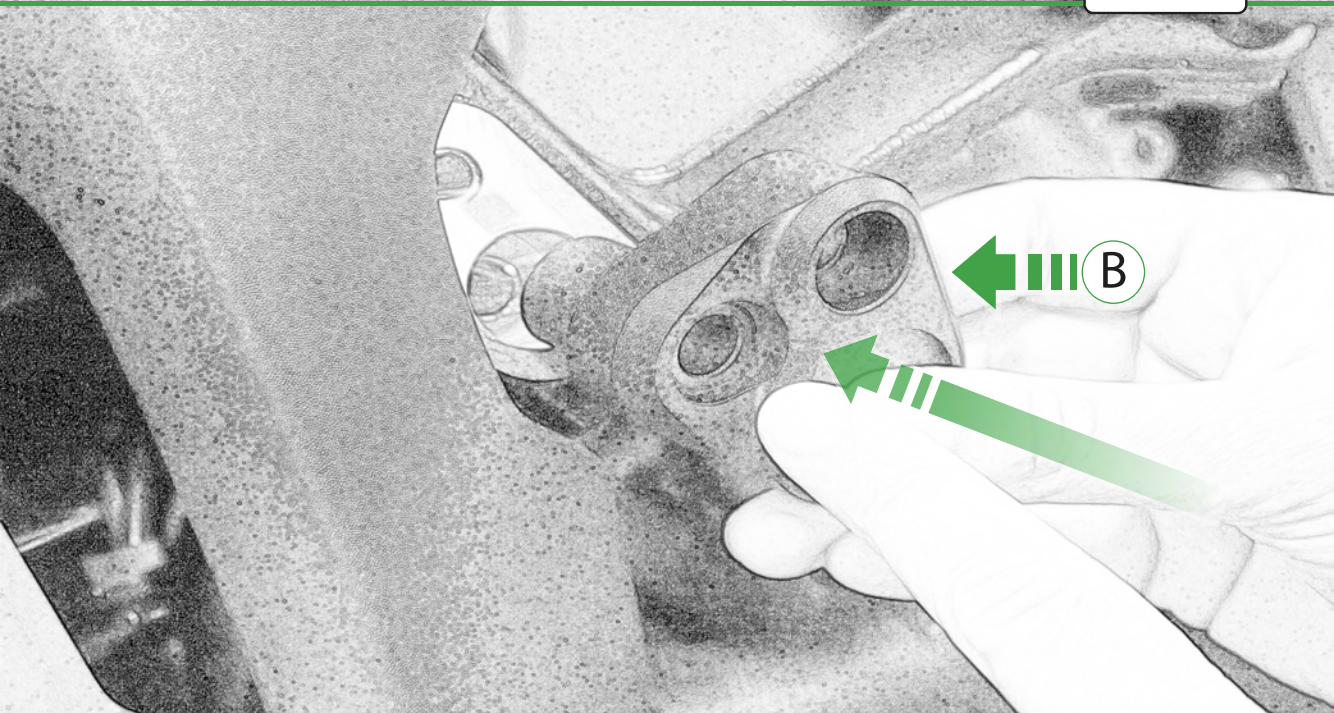





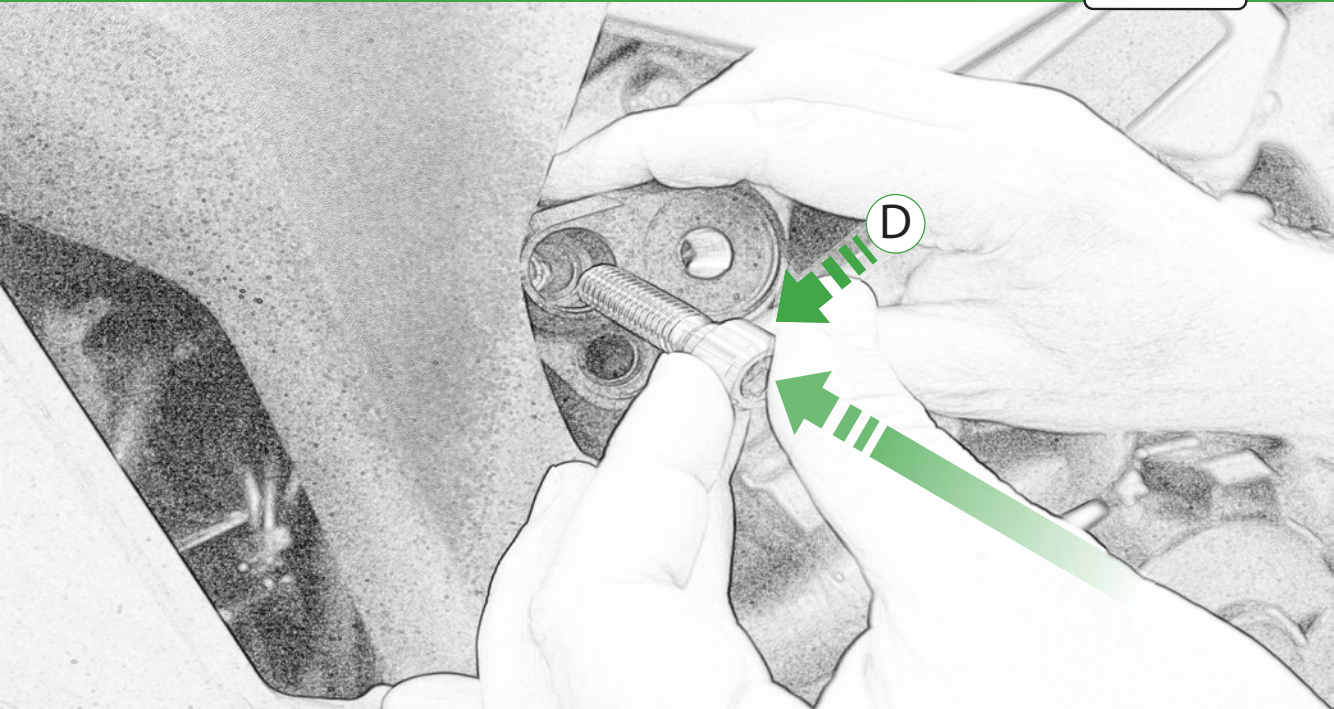


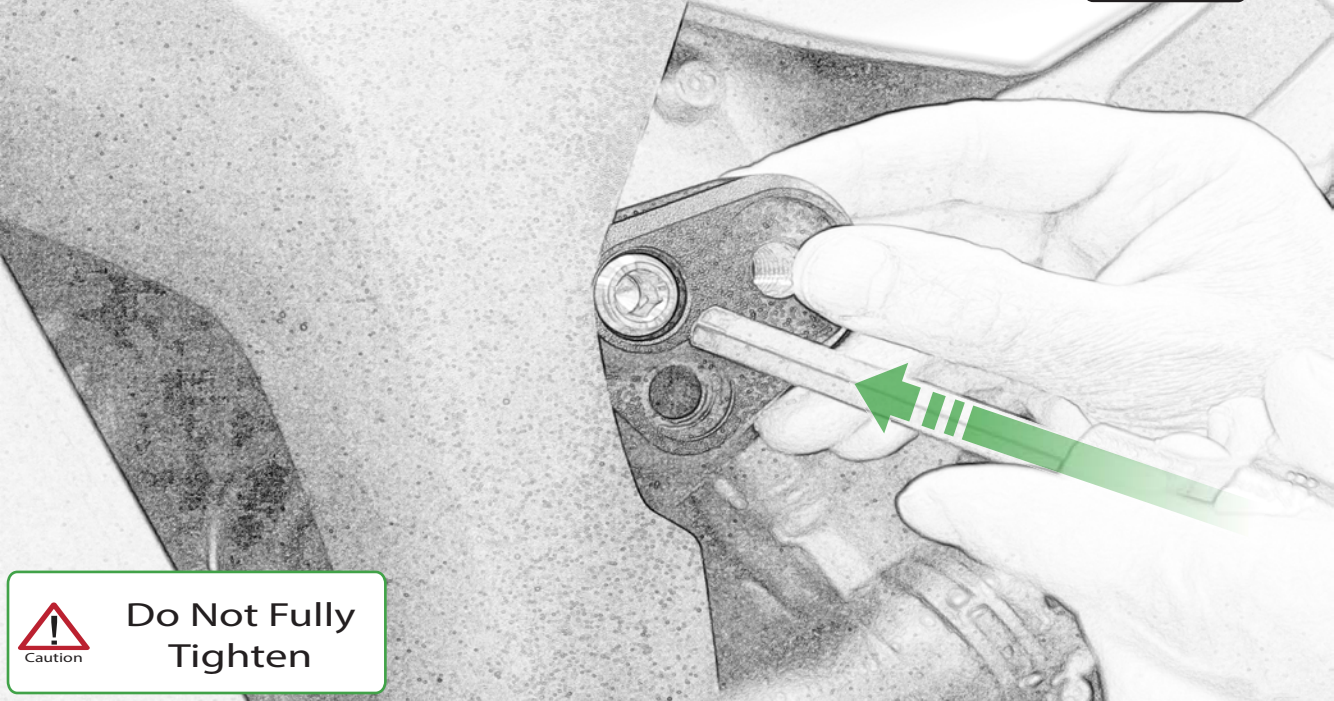

Do Not Fully Tighten






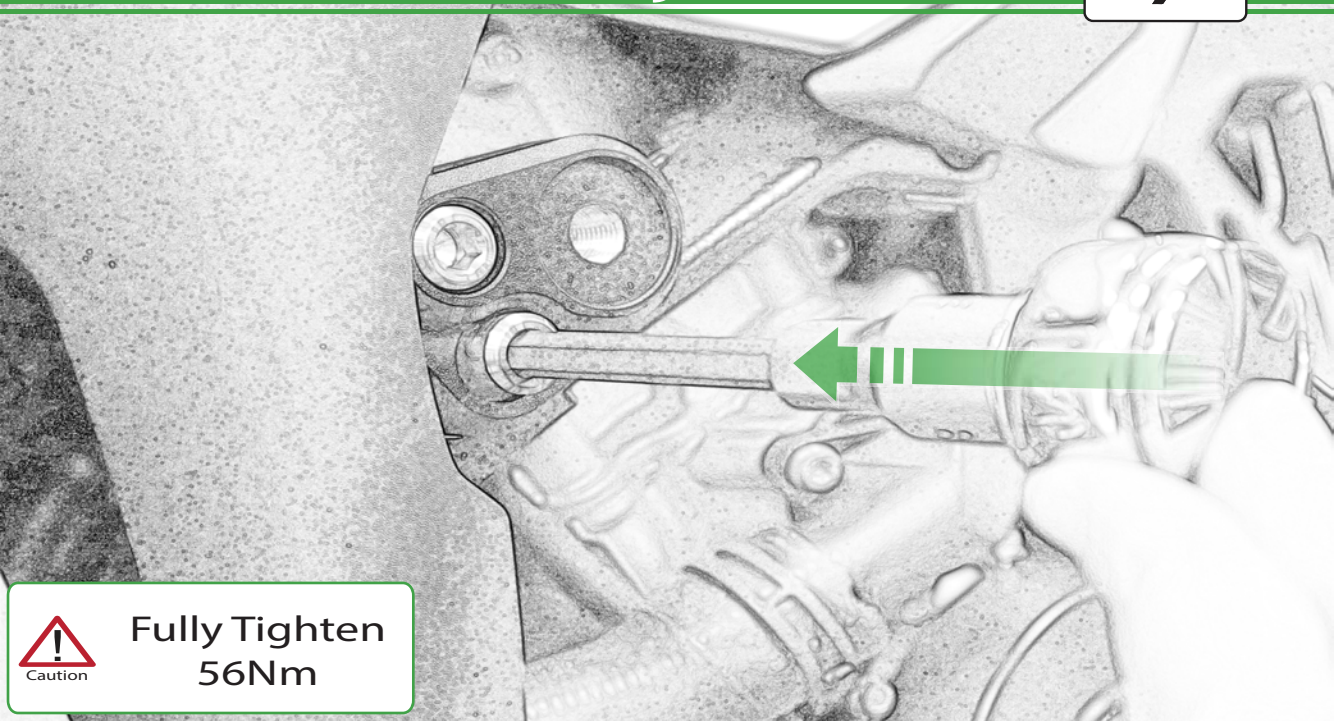

Caution

Fully Tighten  
56Nm

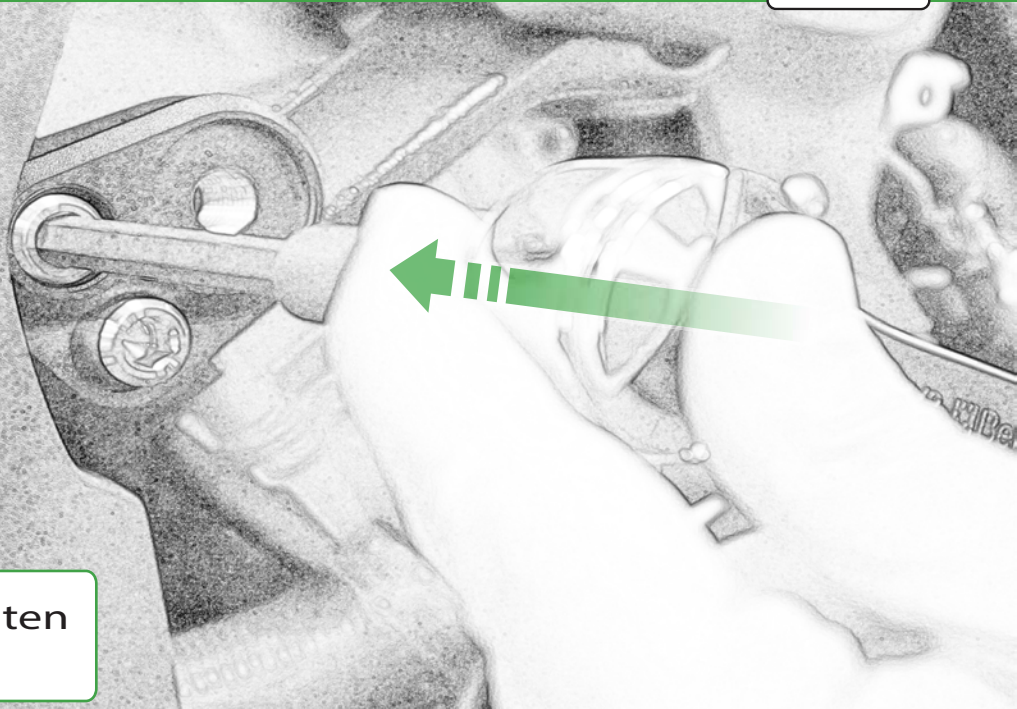

Caution


Fully Tighten  
56Nm



E

F



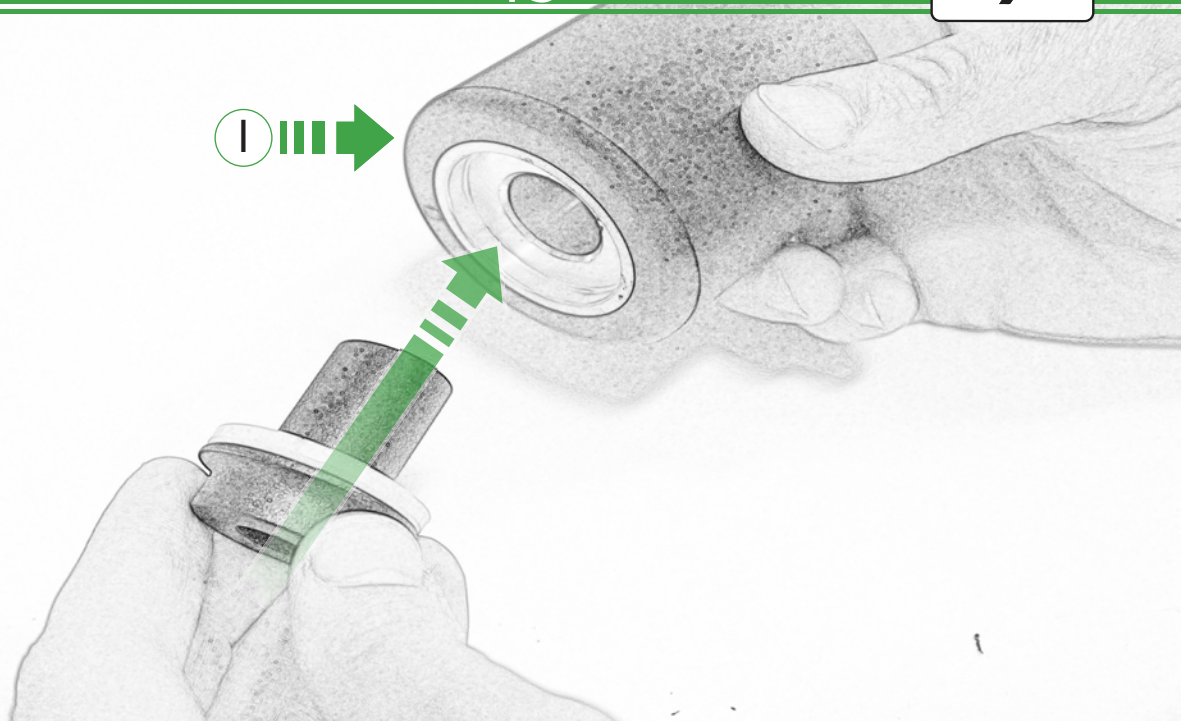










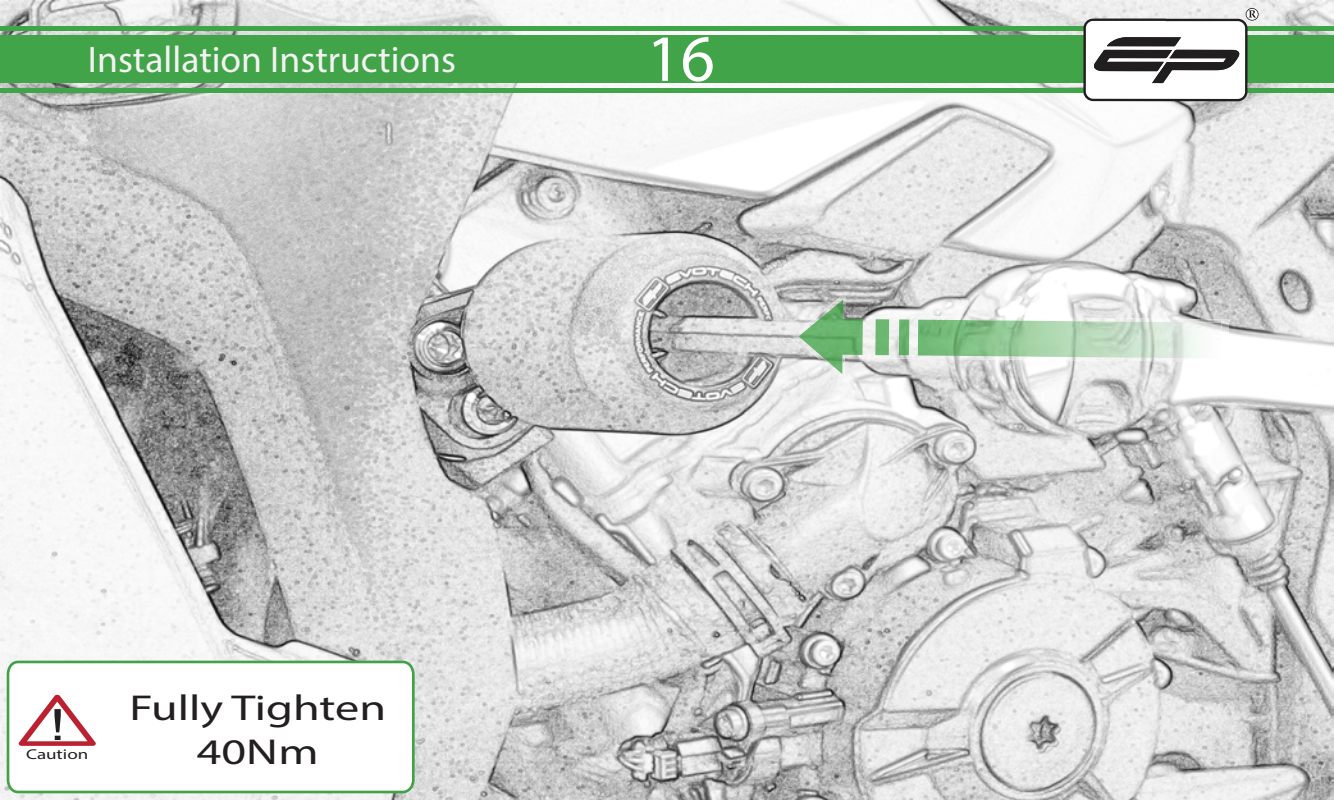


Caution


Fully Tighten  
40Nm








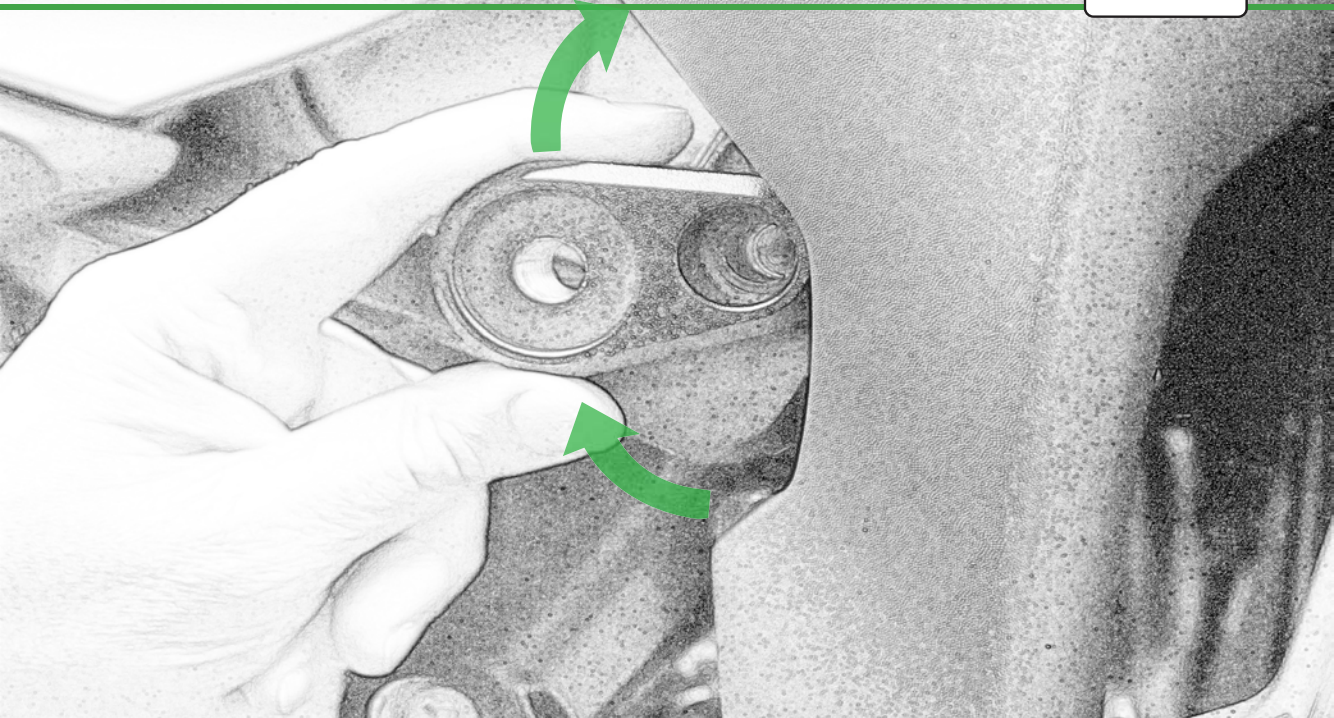

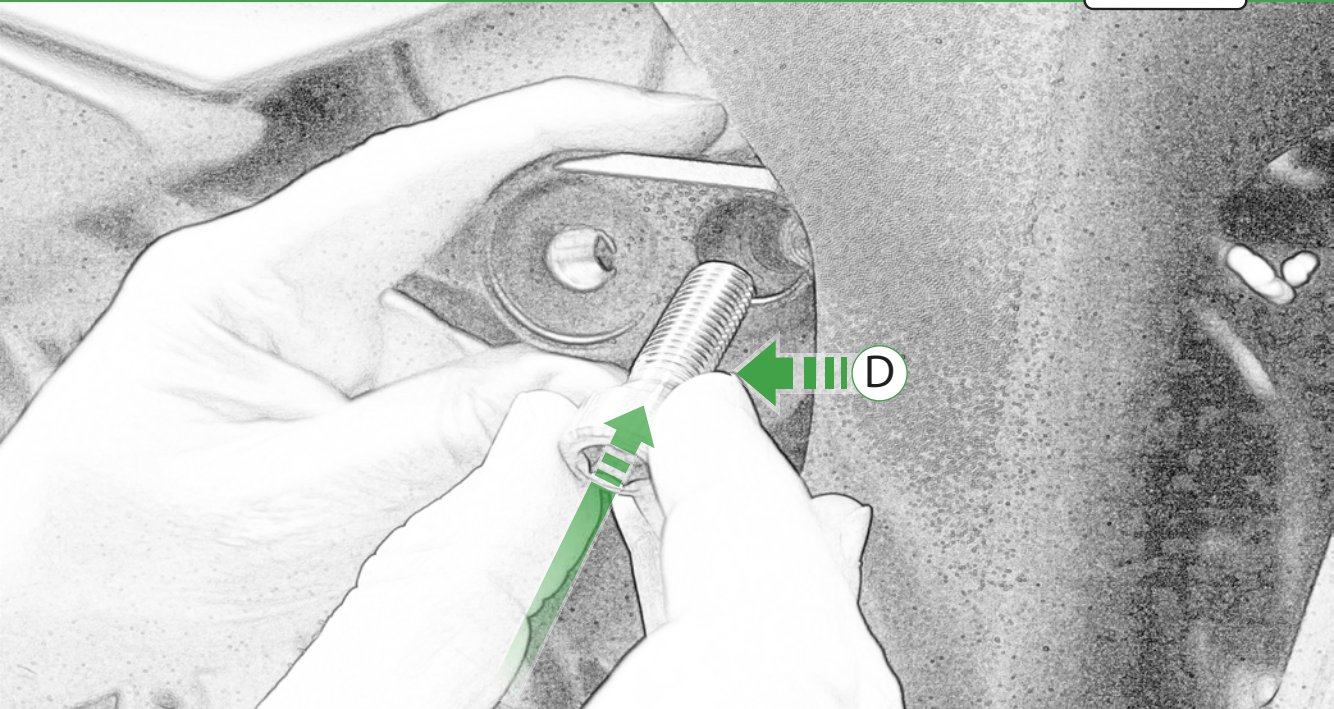




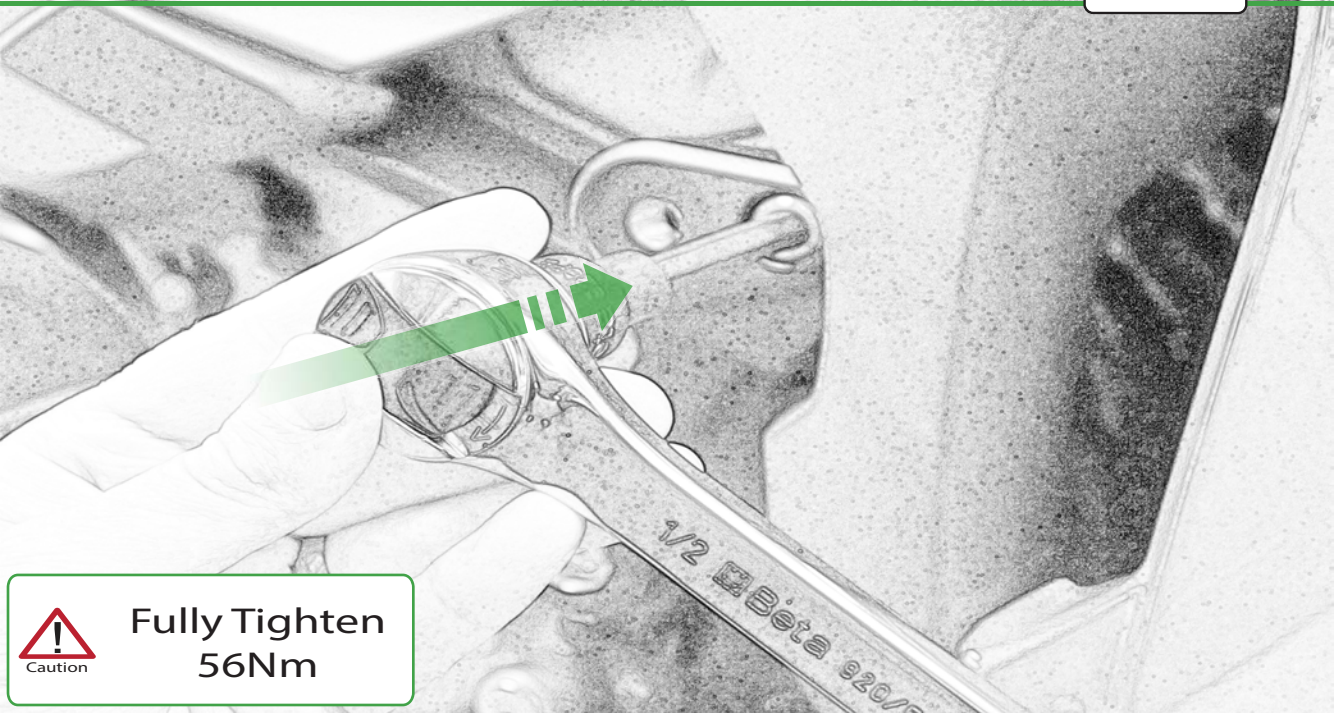



Caution

Fully Tighten  
56Nm




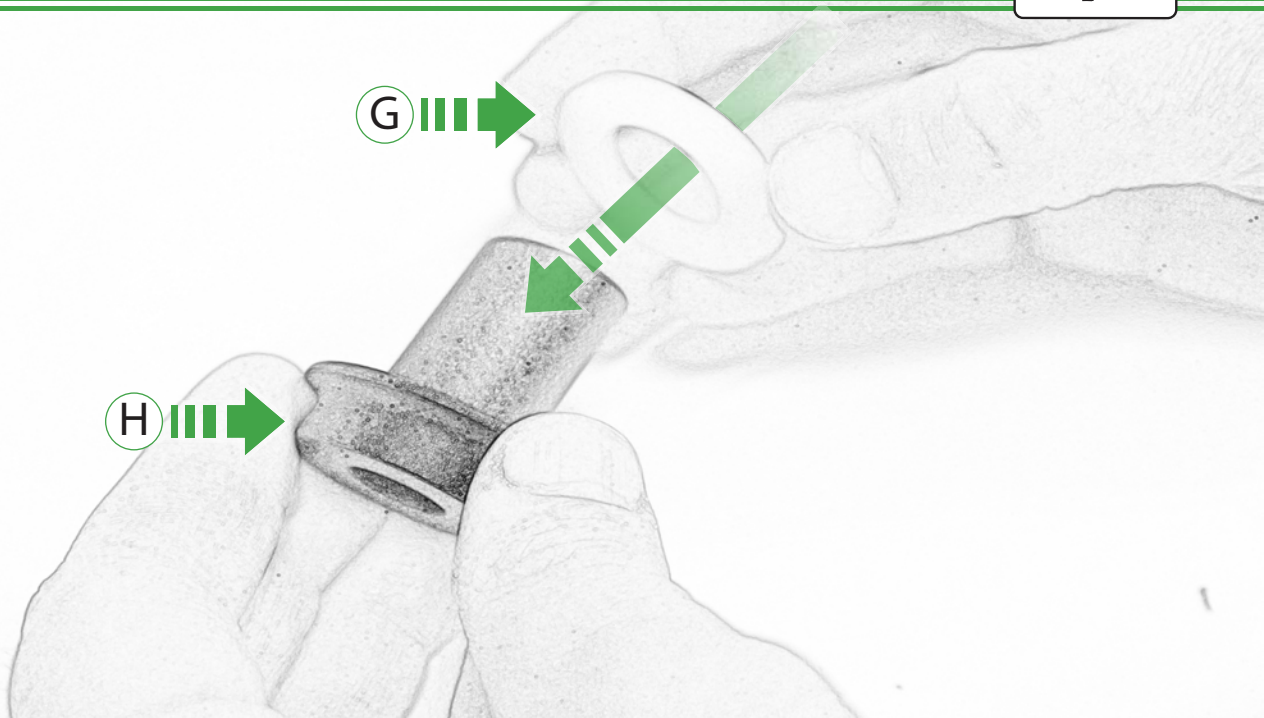

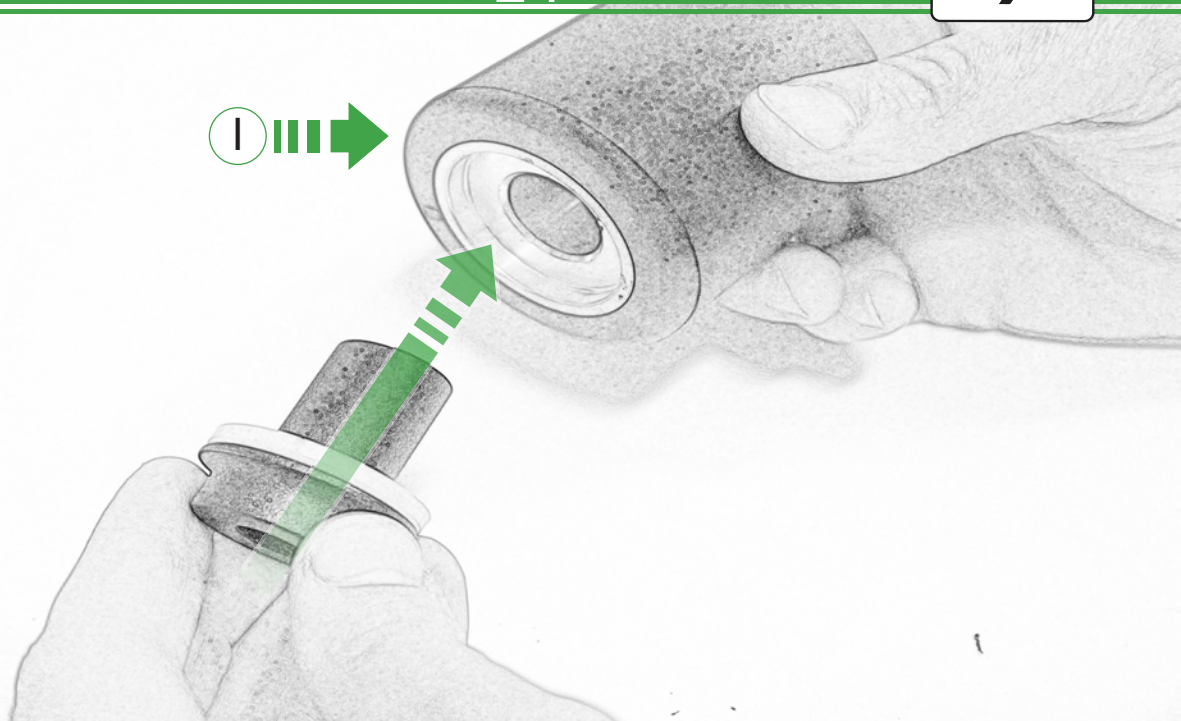


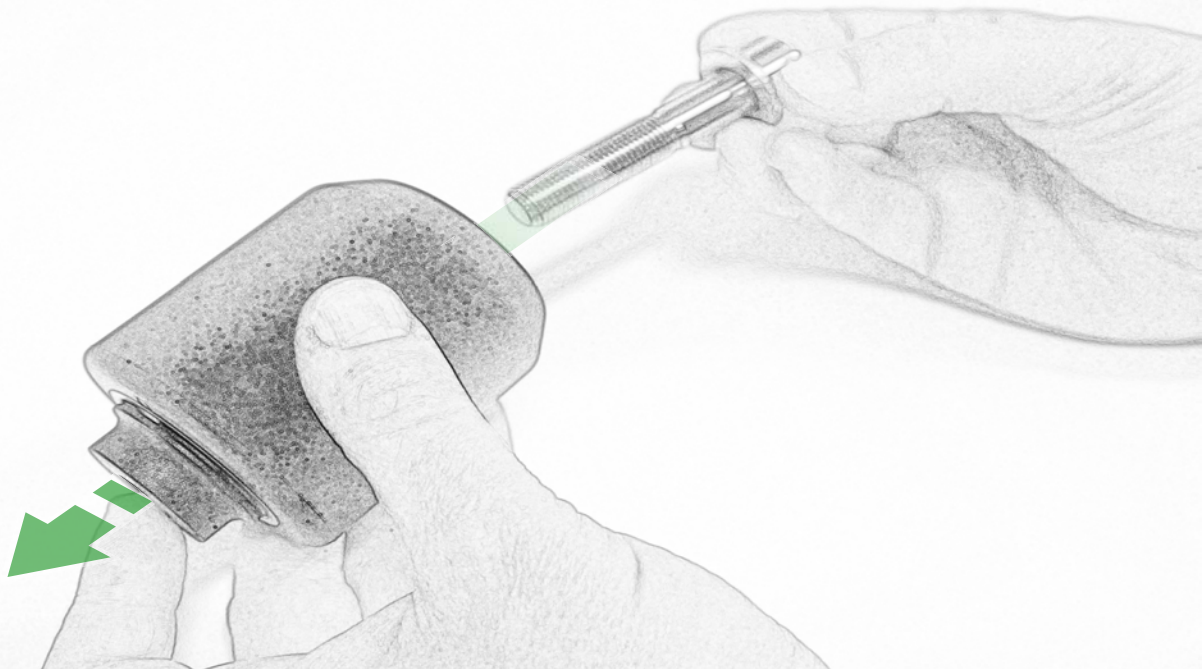



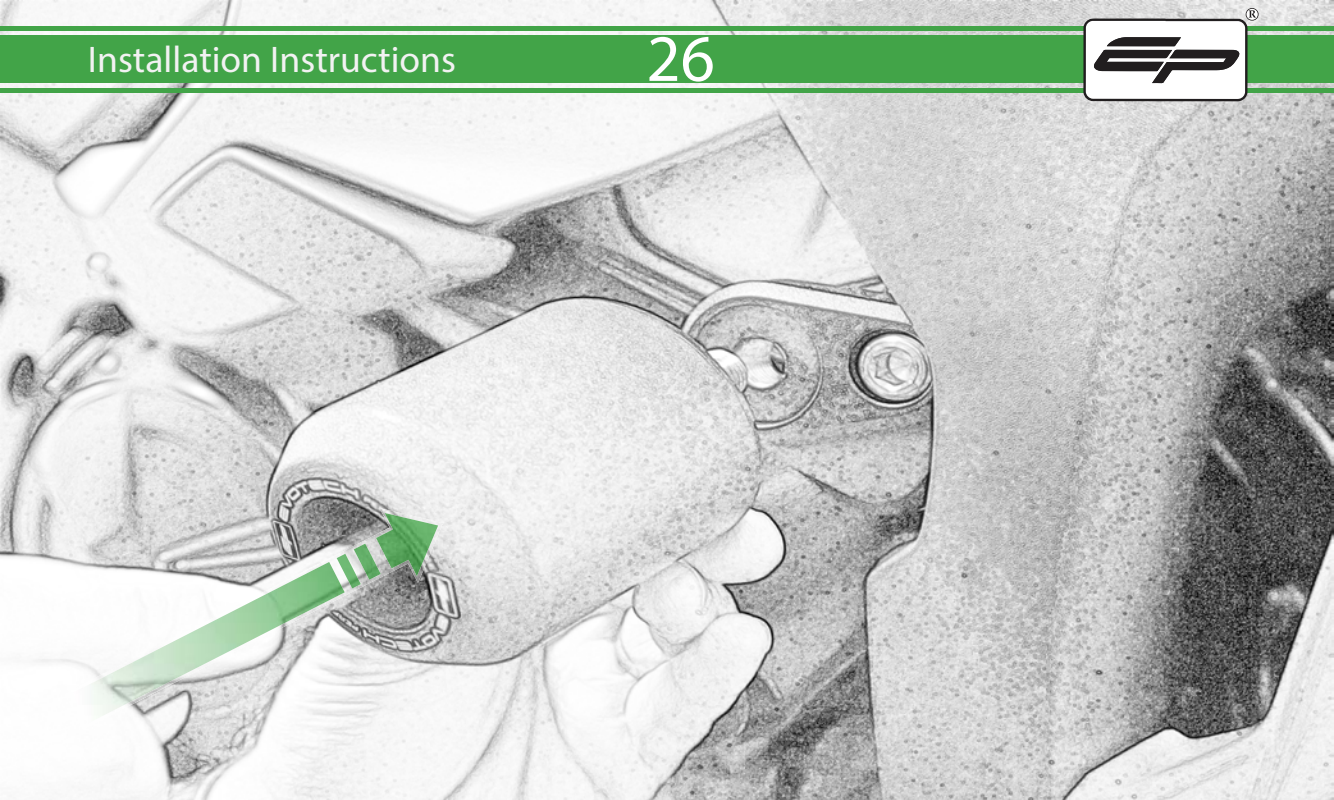



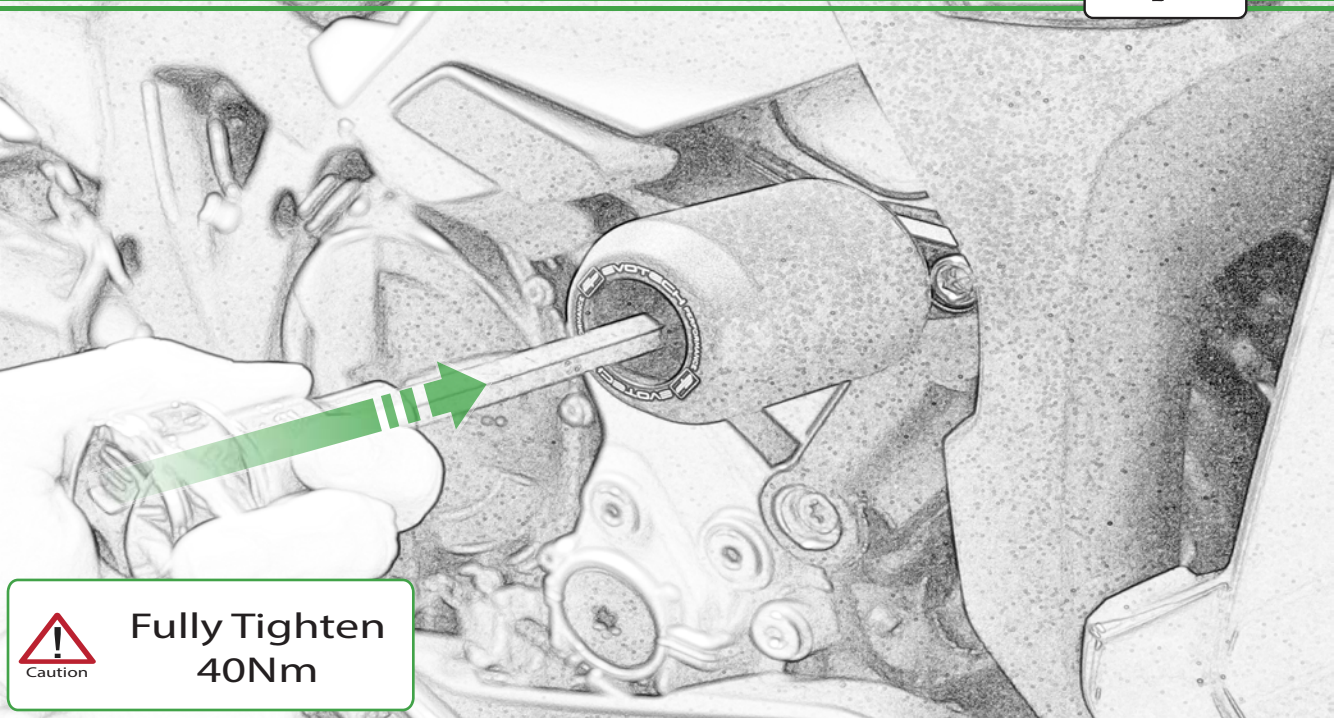

Caution

Fully Tighten  
40Nm



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)