



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


BMW F 900 R / XR Tail Tidy


Installation Instructions




## Kit Contents PRN015165

- (A) 1 x Light Body
- (B) 1 x Undertray
- (C) 1 x Undertray Plate
- (D) 1 x Numberplate Bracket
- (E) 1 x Inner Support Bracket
- (F) 2 x Indicator Spacer
- (G) 2 x M4 x 10 Button Head Bolts
- (H) 2 x Special Washer
- (I) 2 x M5 x 16 Button Head Bolts
- (J) 2 x Undertray Spacer A
- (K) 2 x Undertray Spacer B
- (L) 4 x M6 x 16mm Button Head Bolts

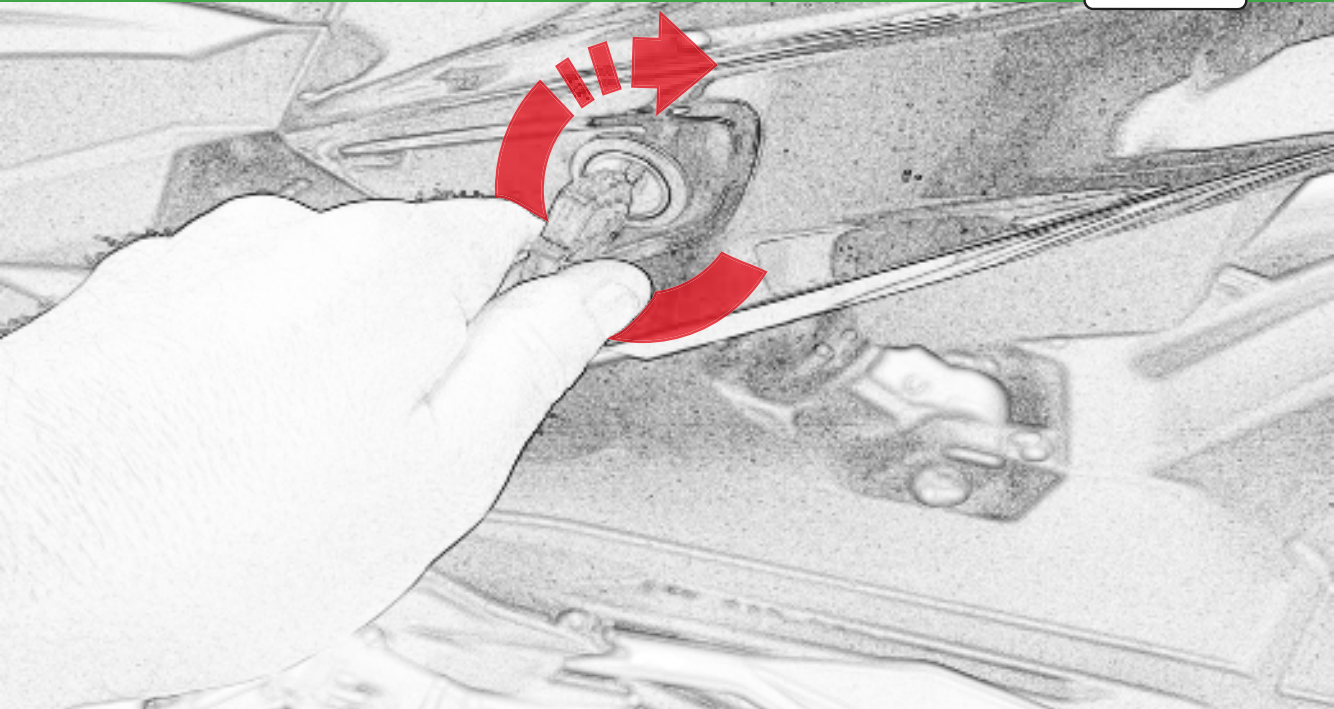


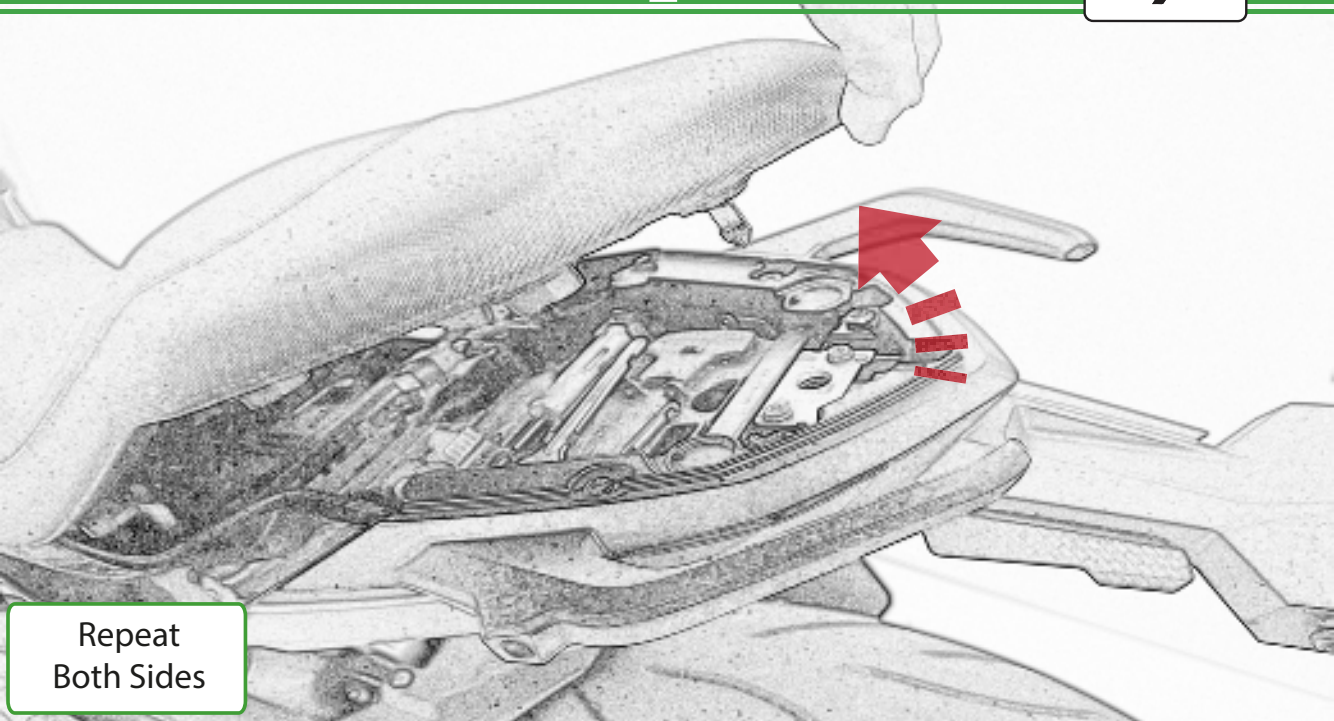


Repeat  
Both Sides

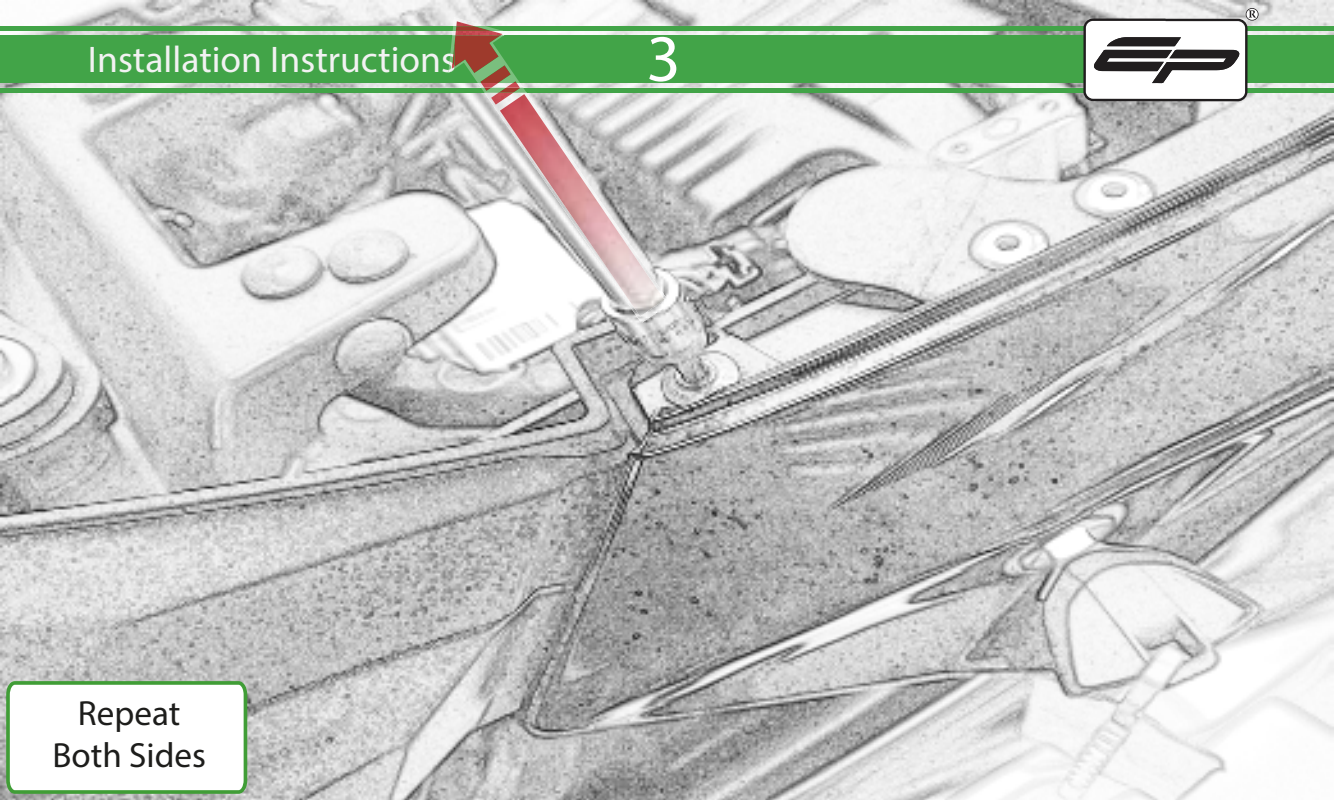


Repeat  
Both Sides

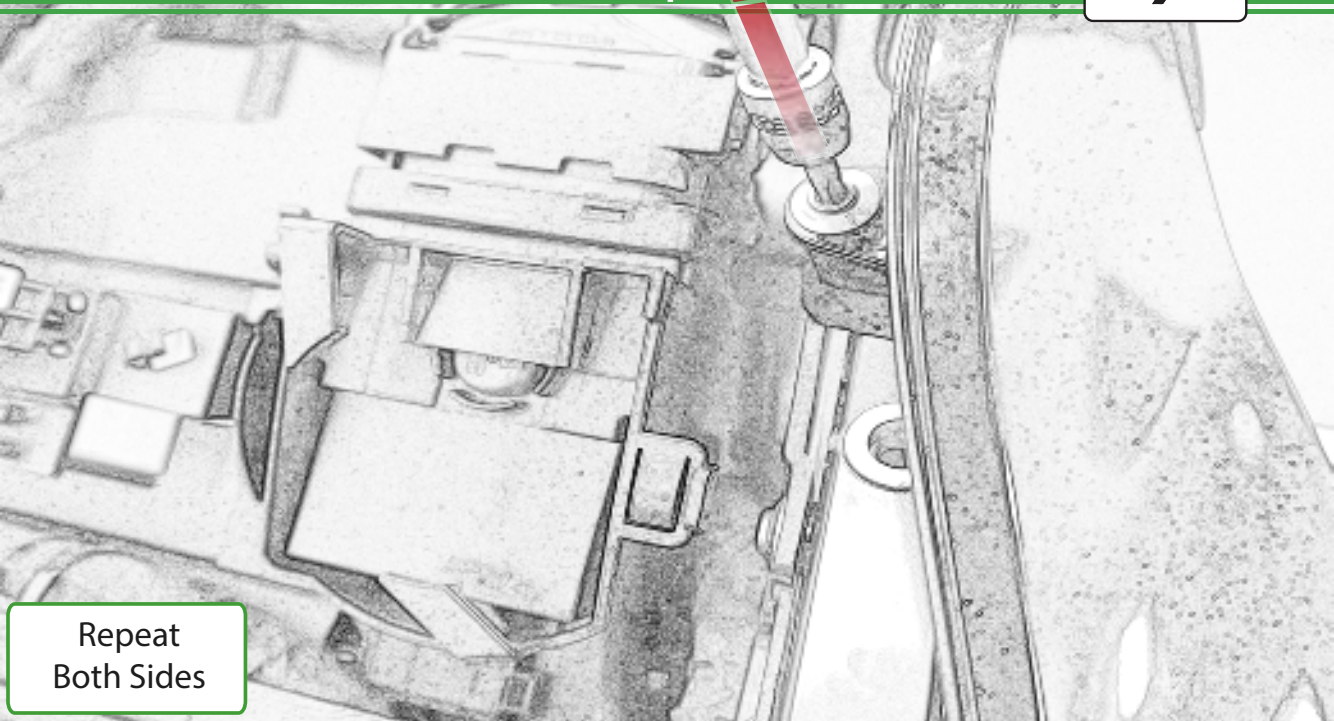

Repeat  
Both Sides

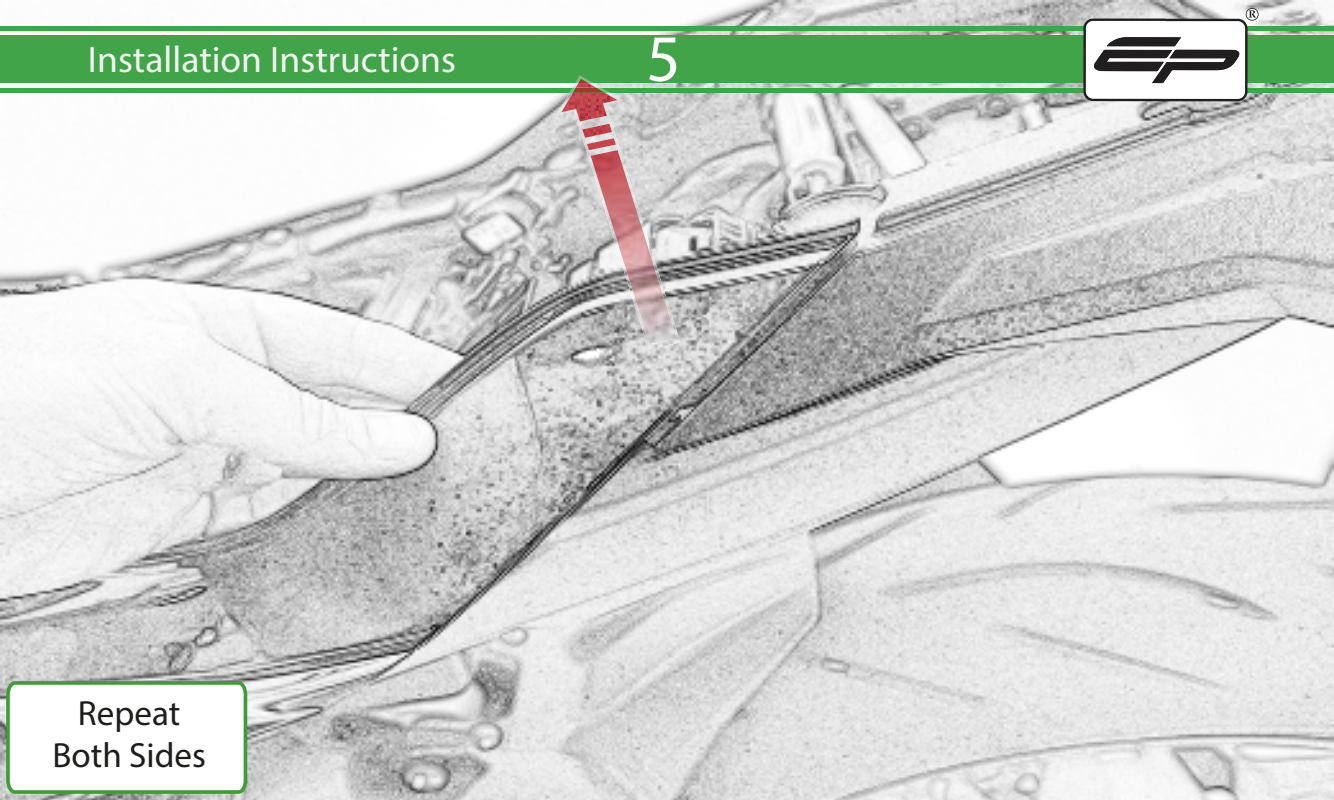


Repeat  
Both Sides

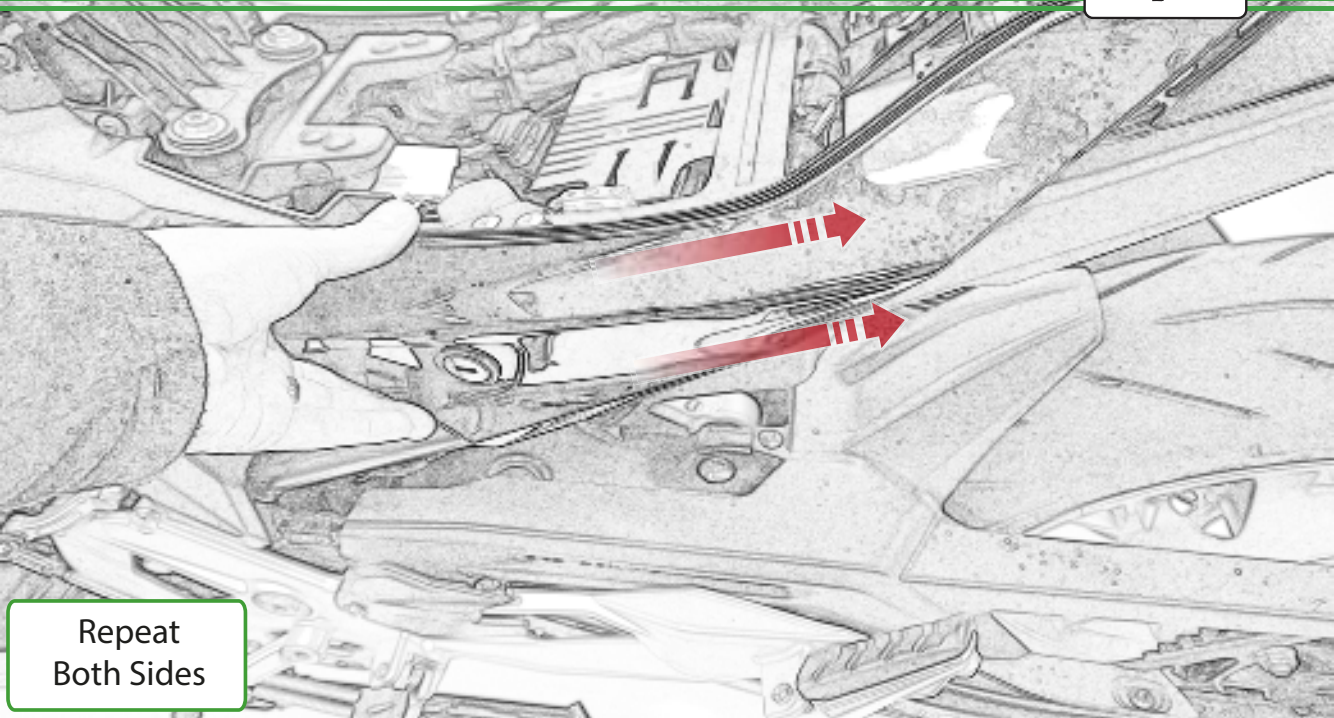


Repeat  
Both Sides




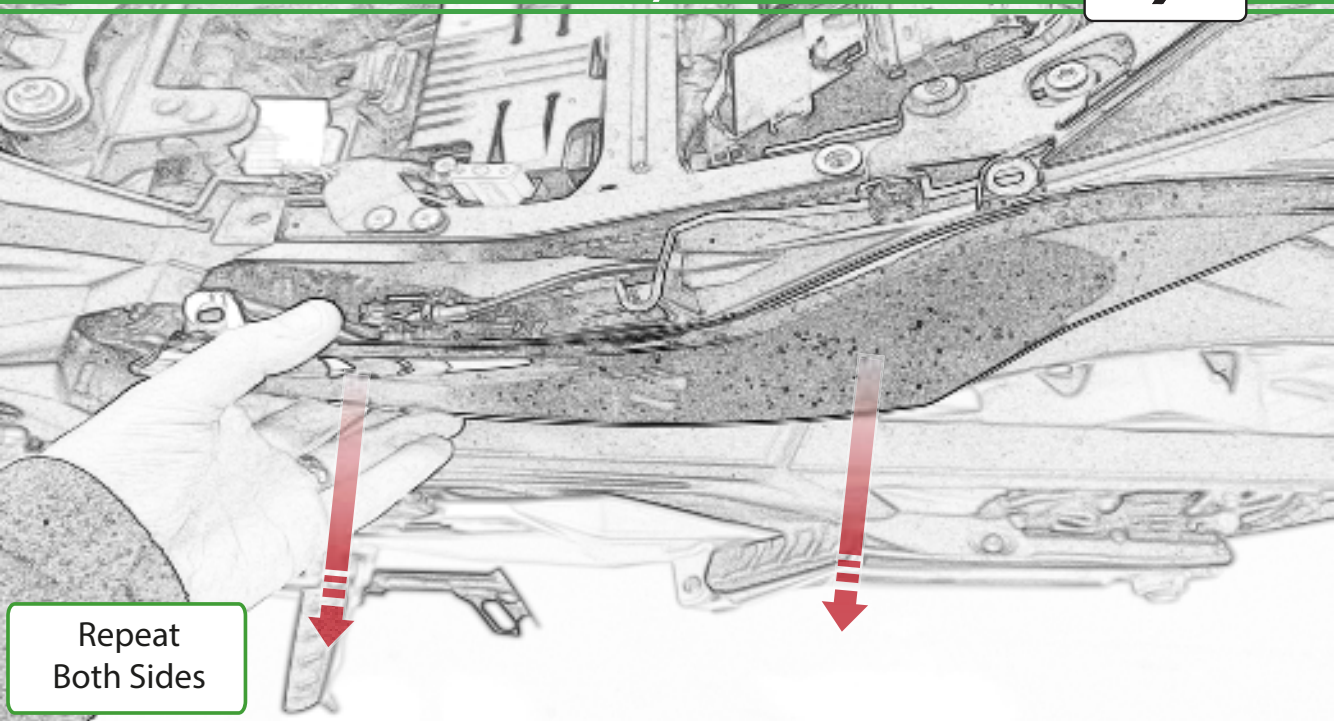


Repeat  
Both Sides

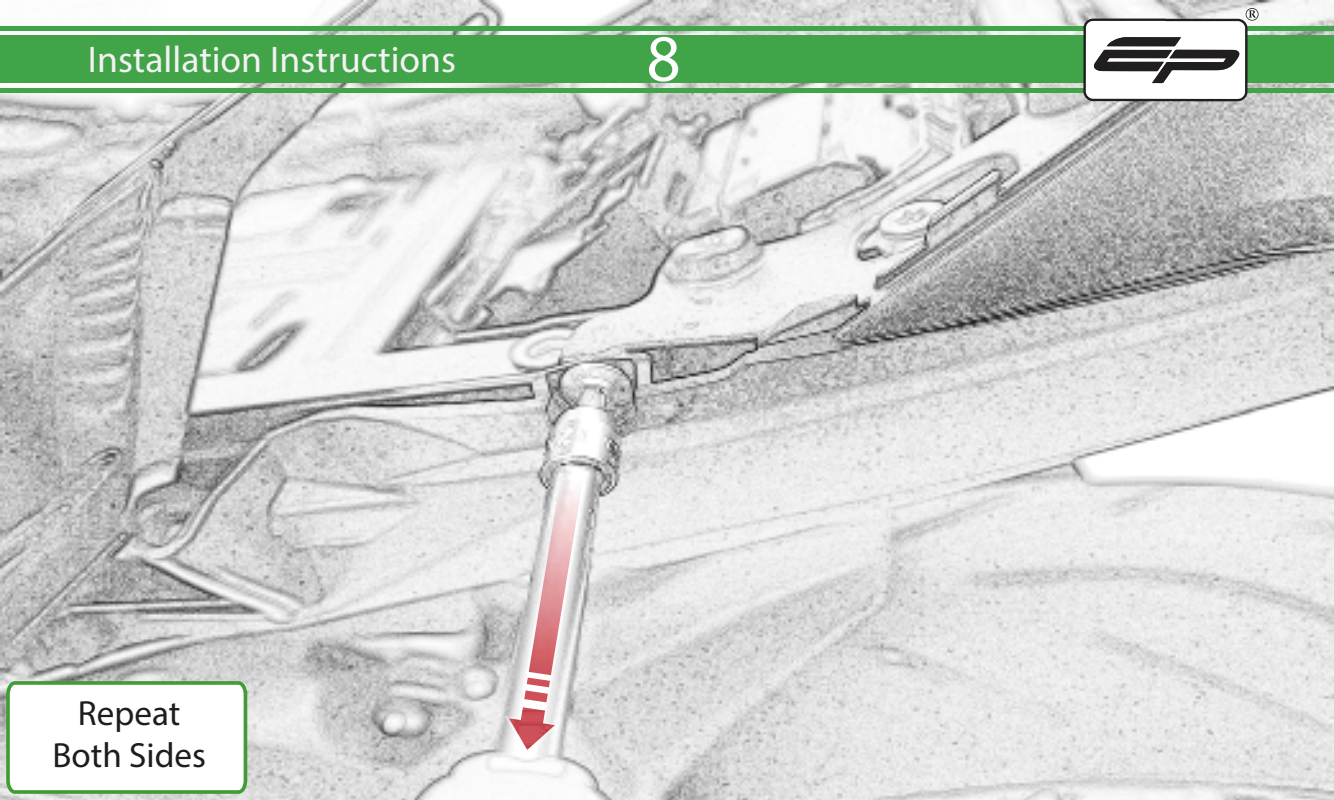


Repeat  
Both Sides

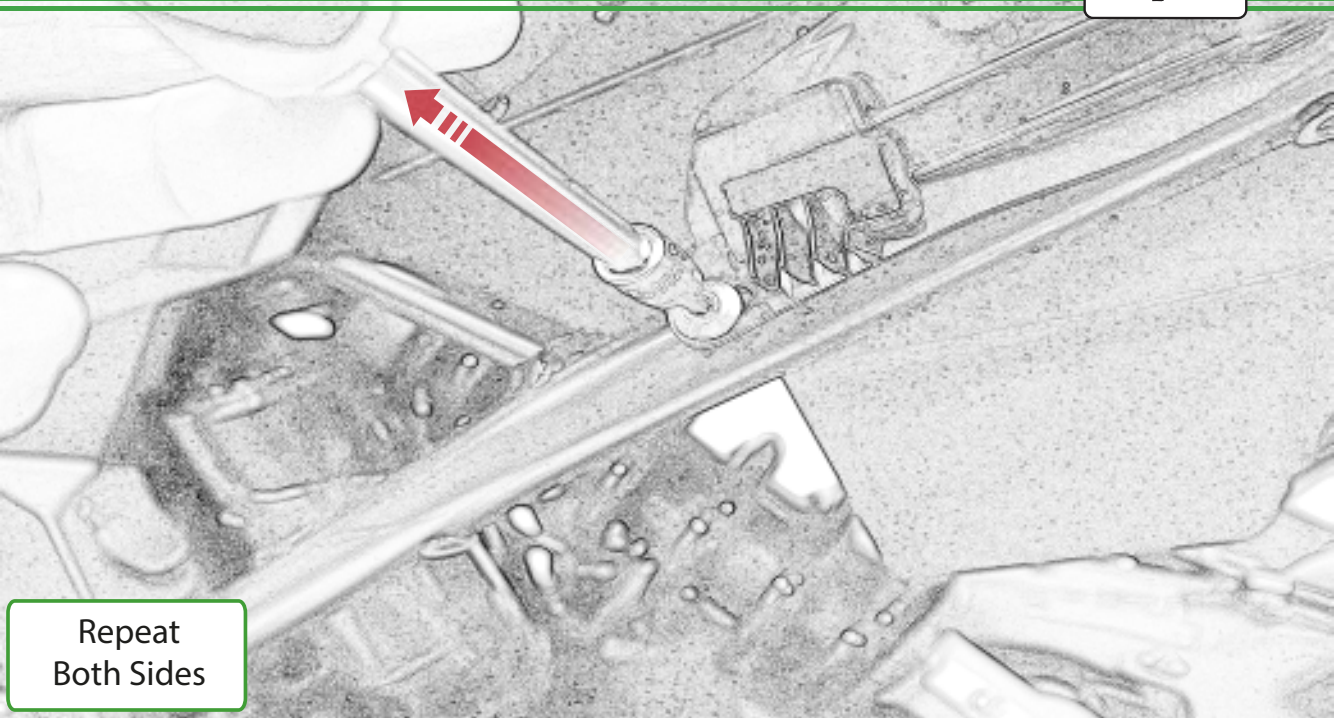


Repeat  
Both Sides

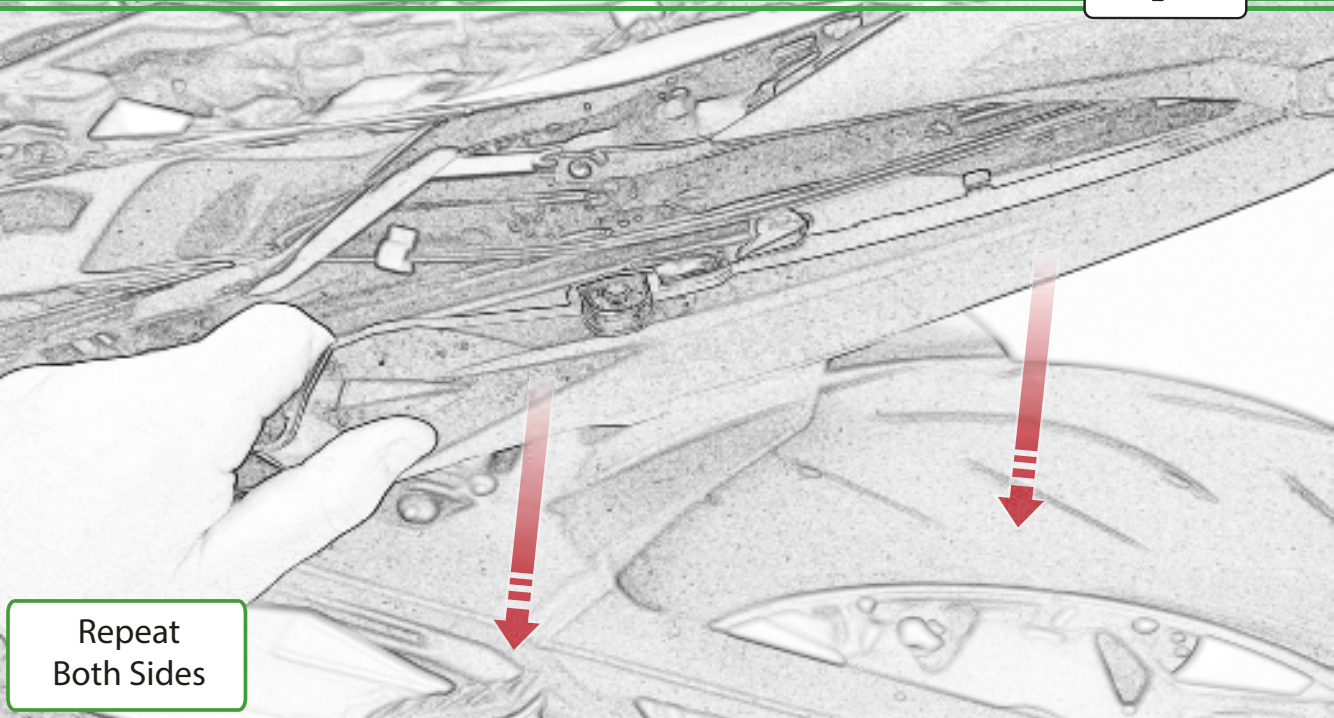


Repeat  
Both Sides

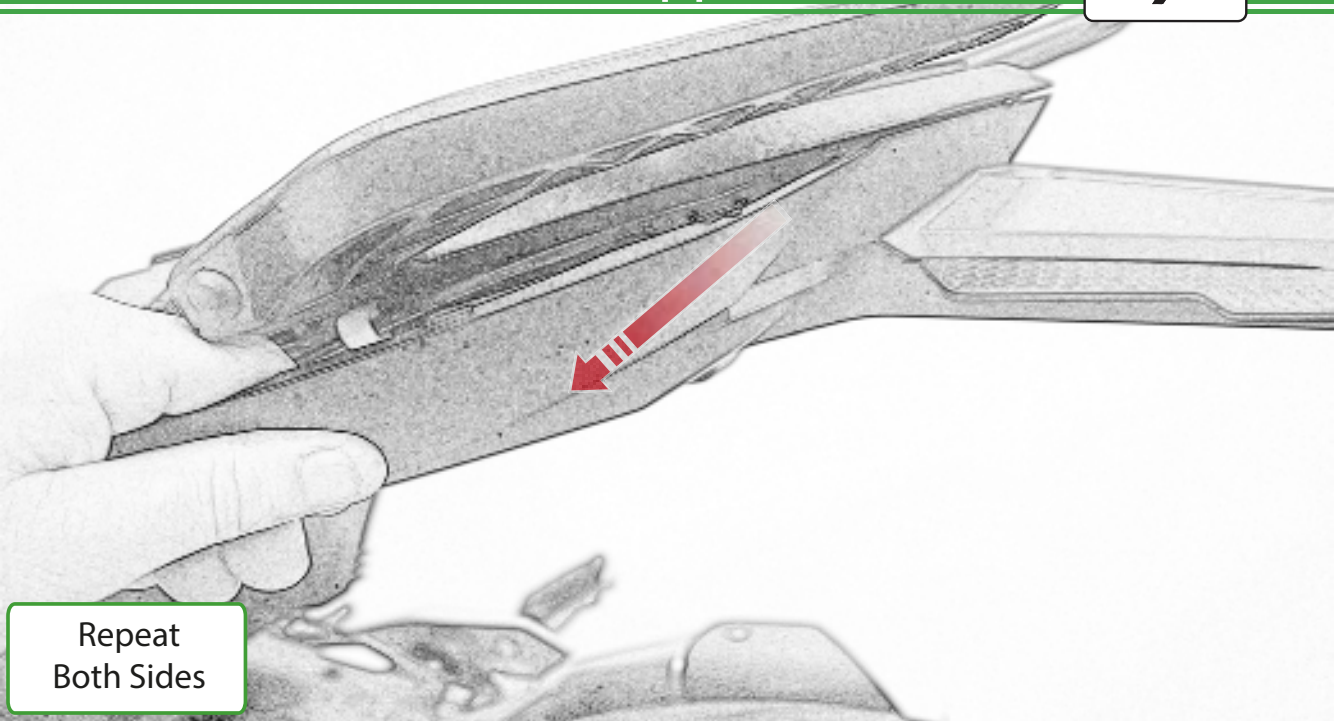


Repeat  
Both Sides

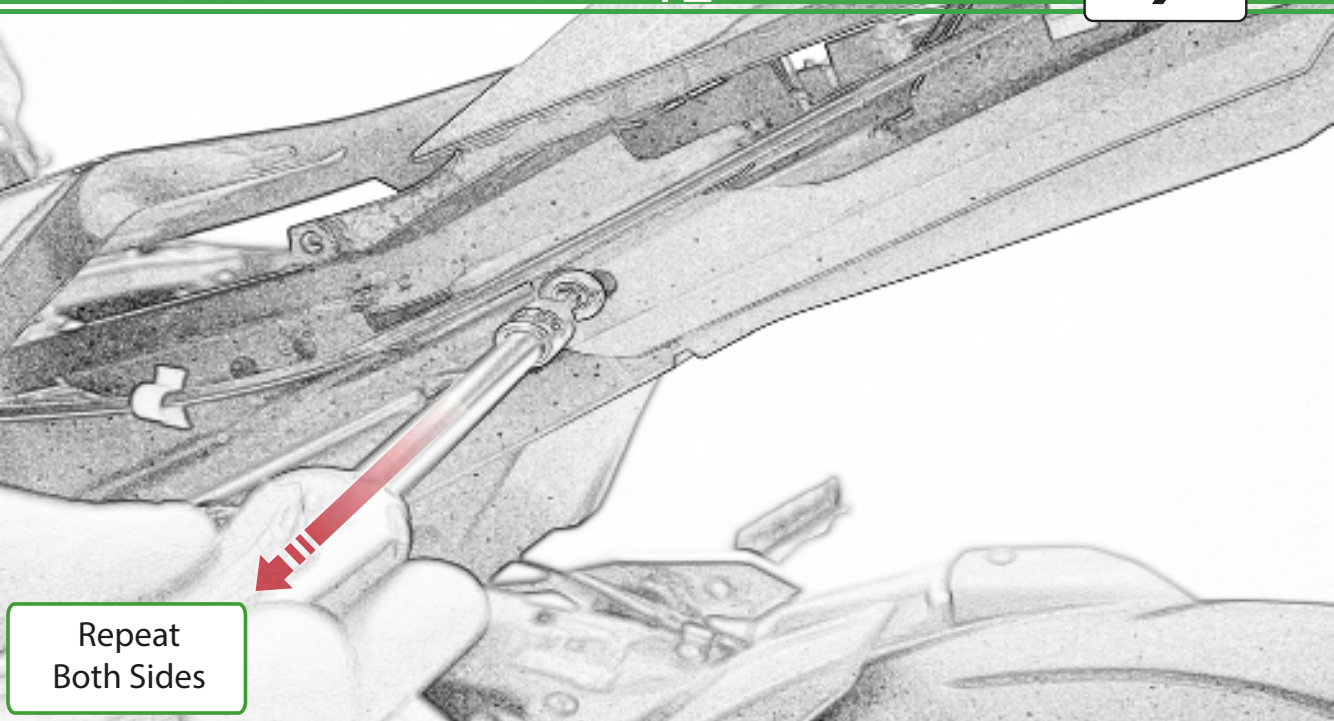


Repeat  
Both Sides

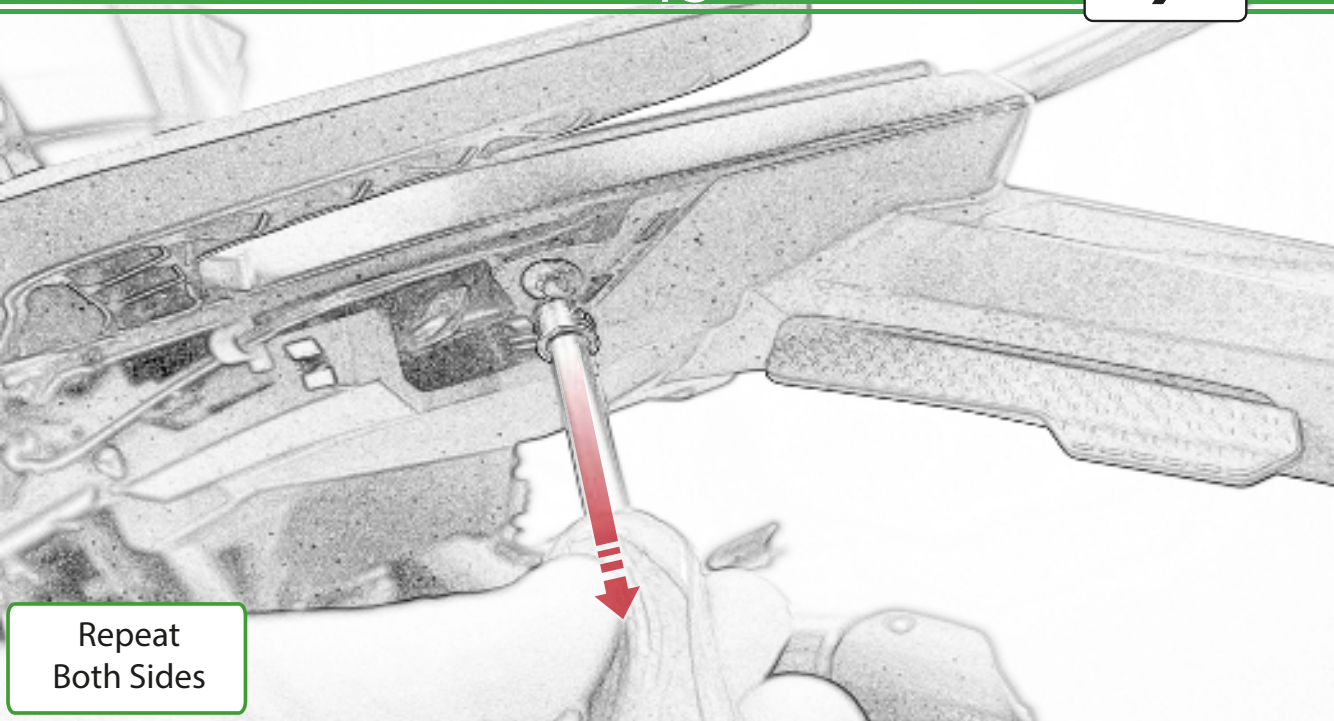


Repeat  
Both Sides

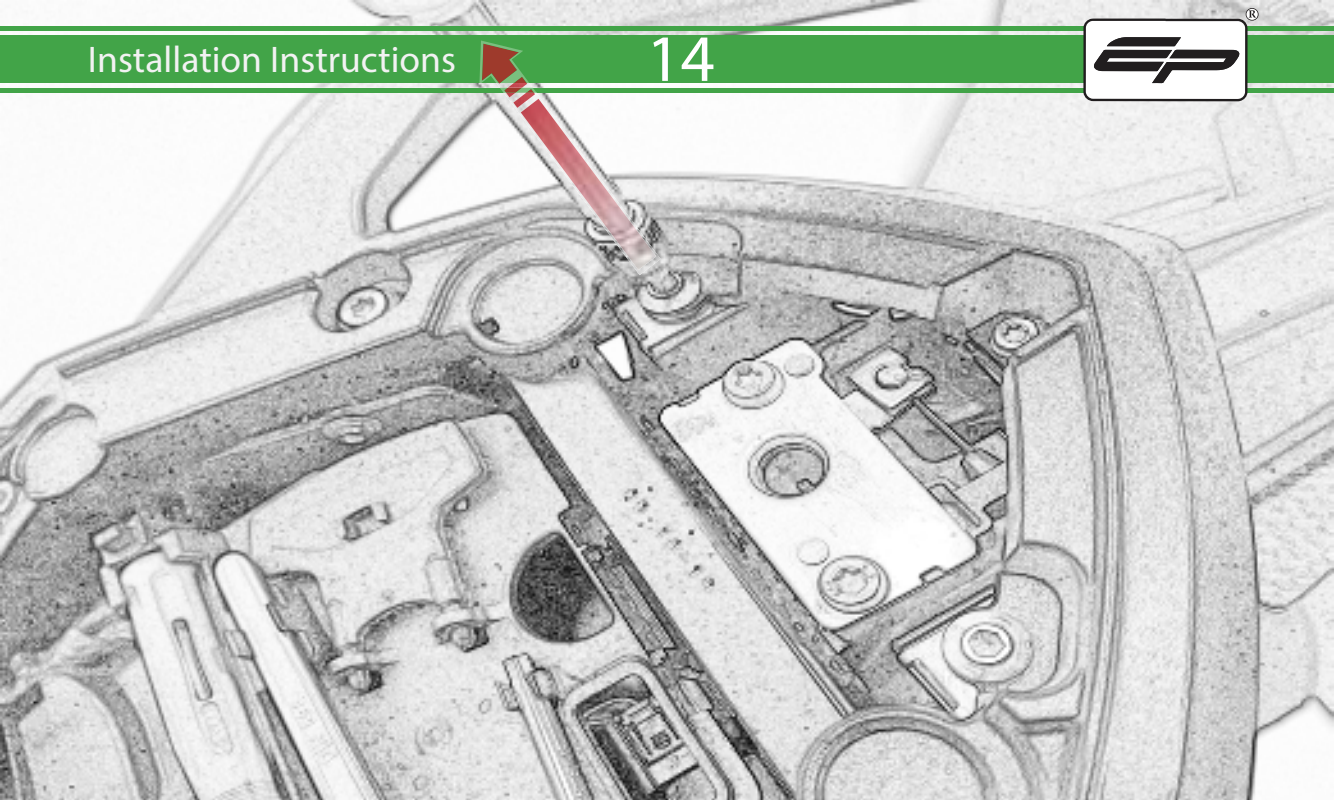





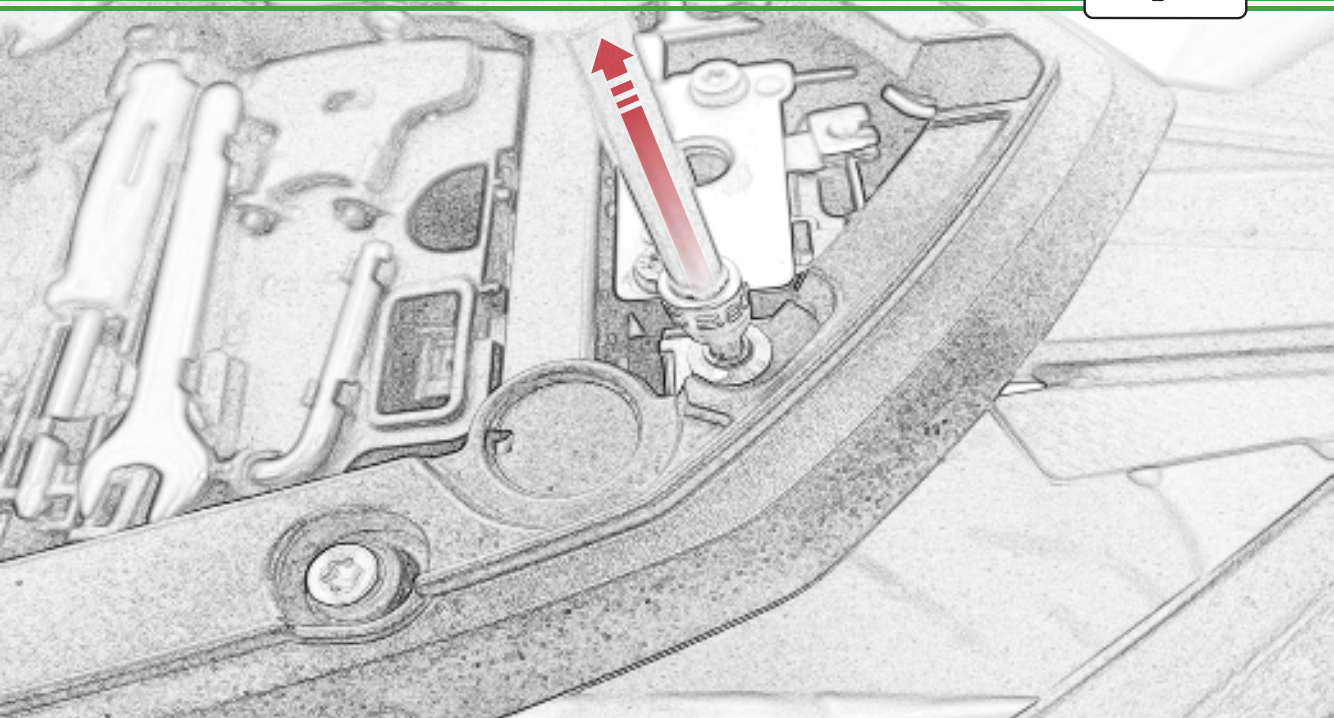


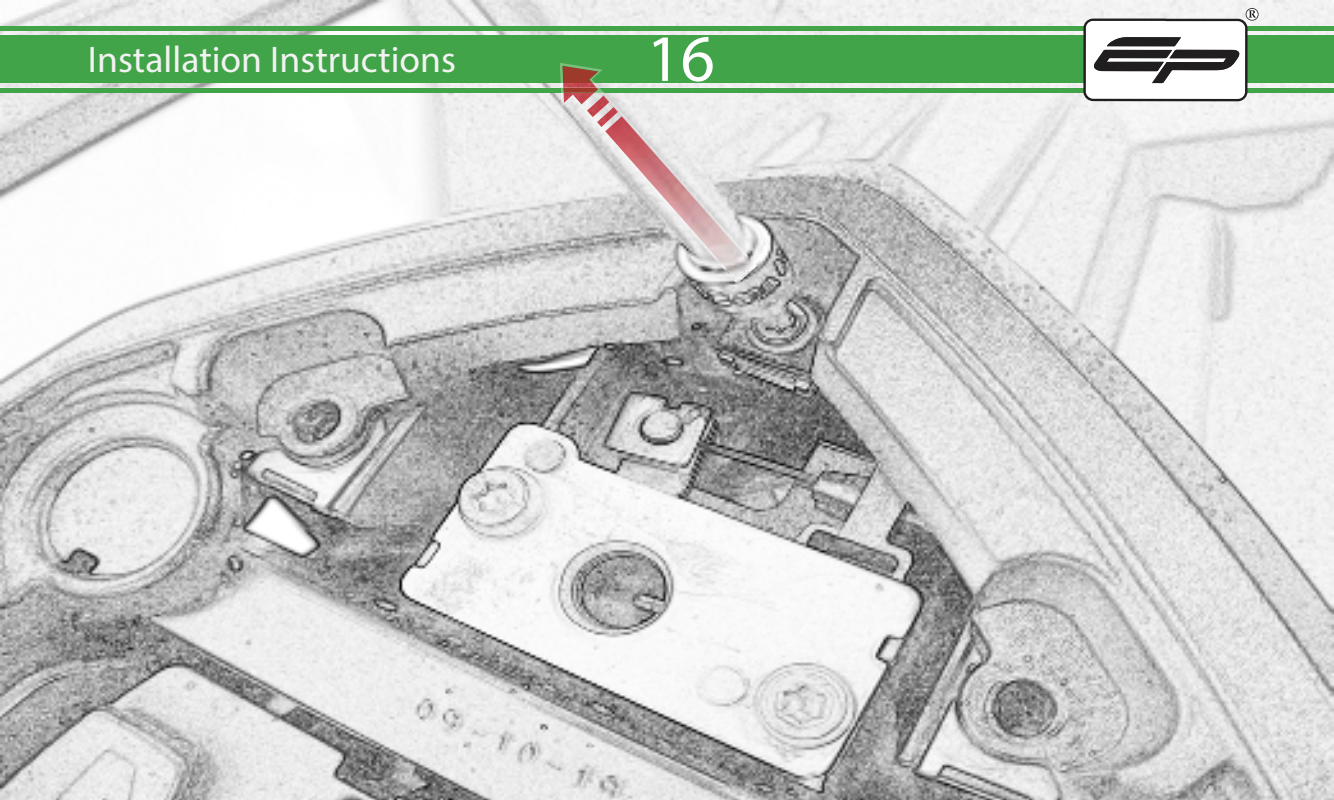





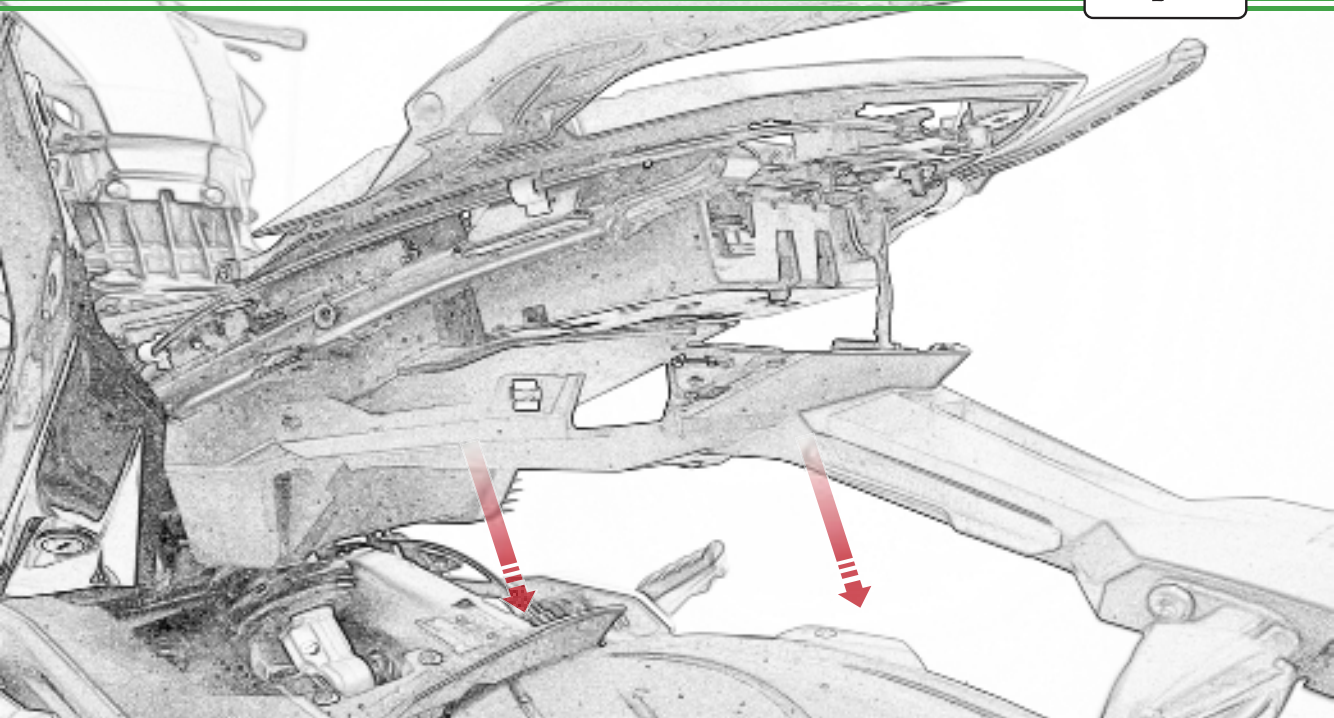

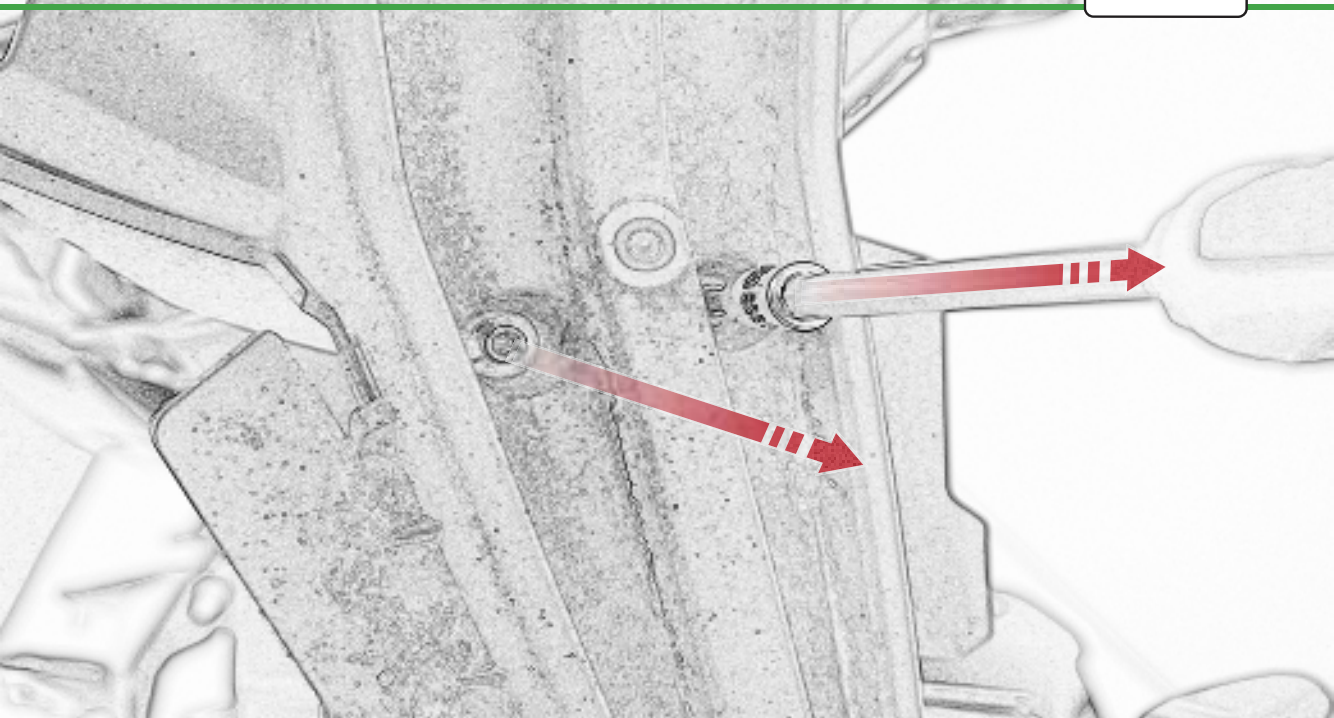



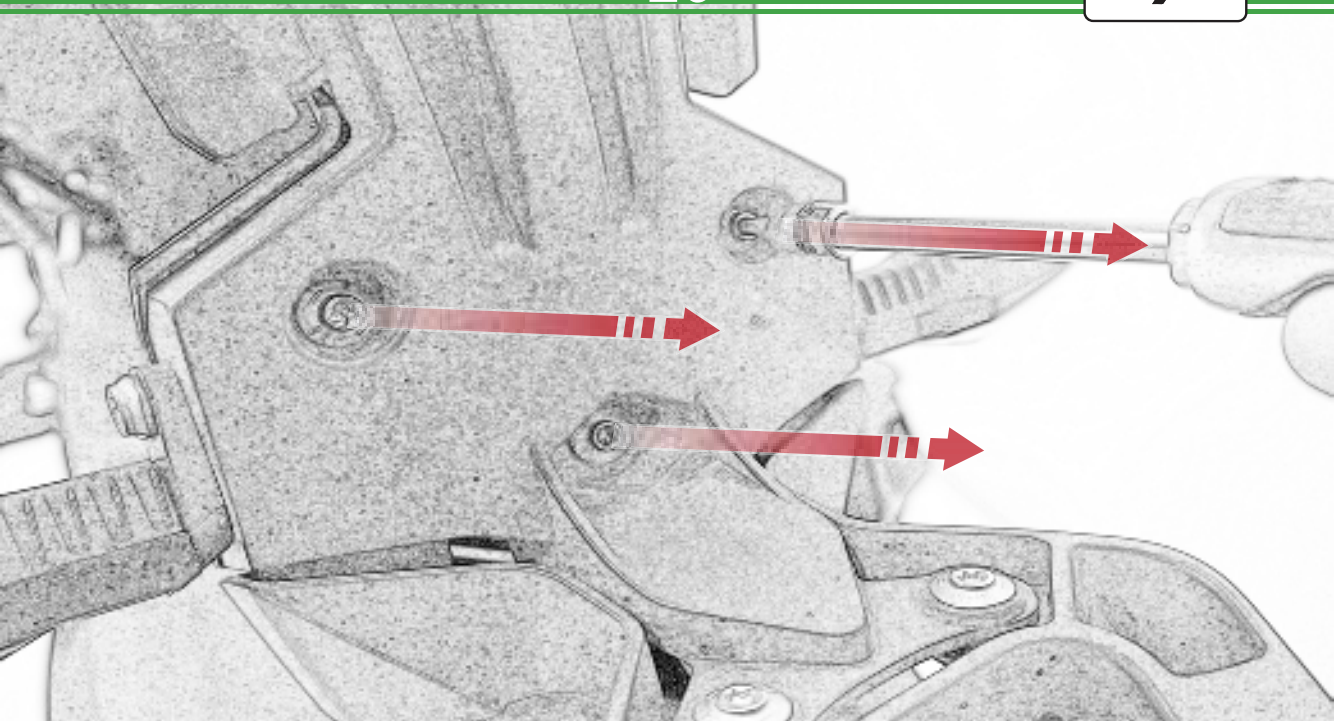



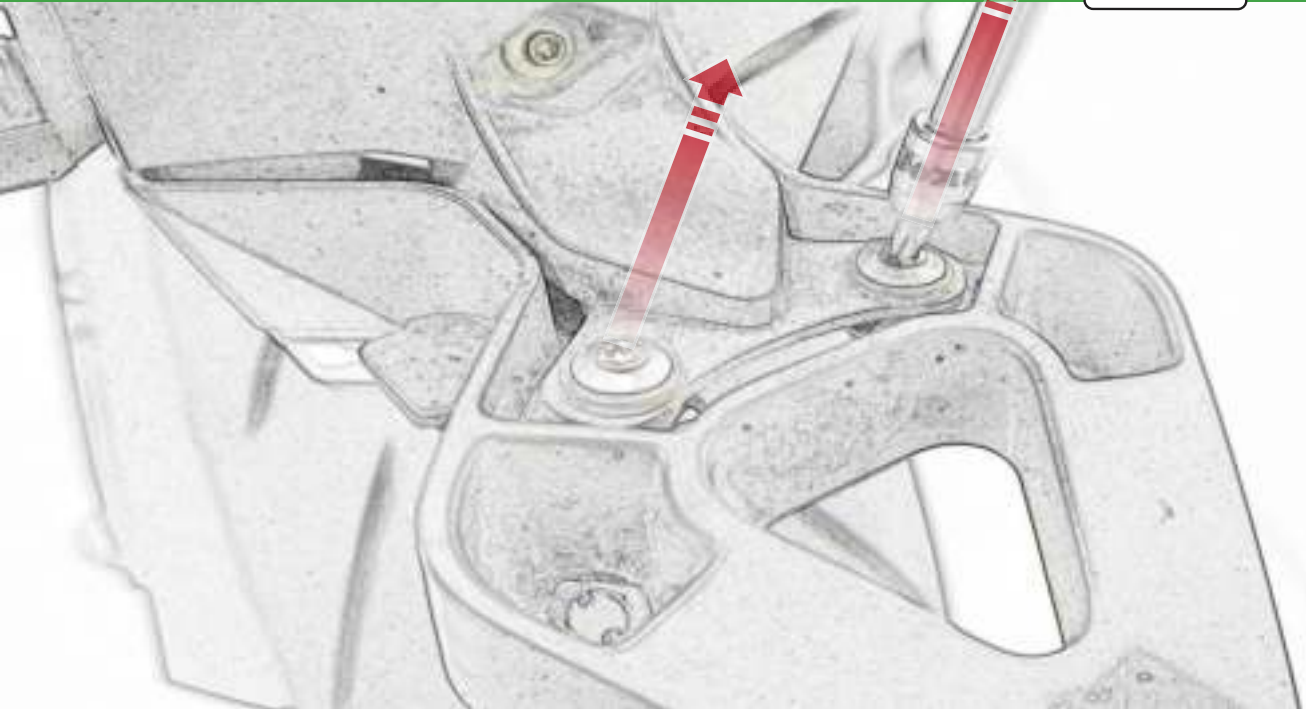


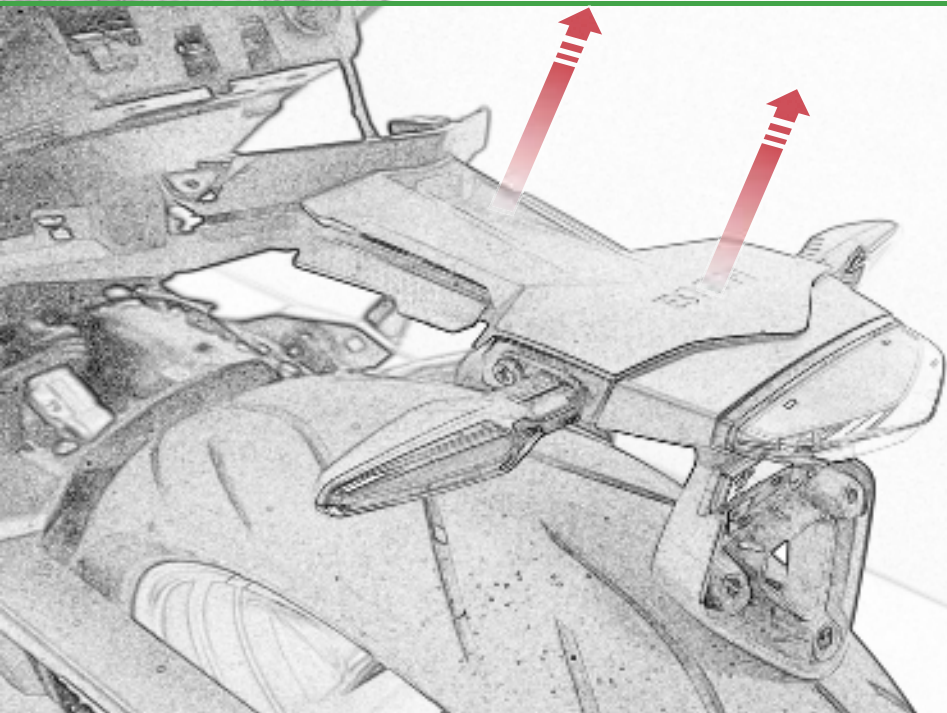





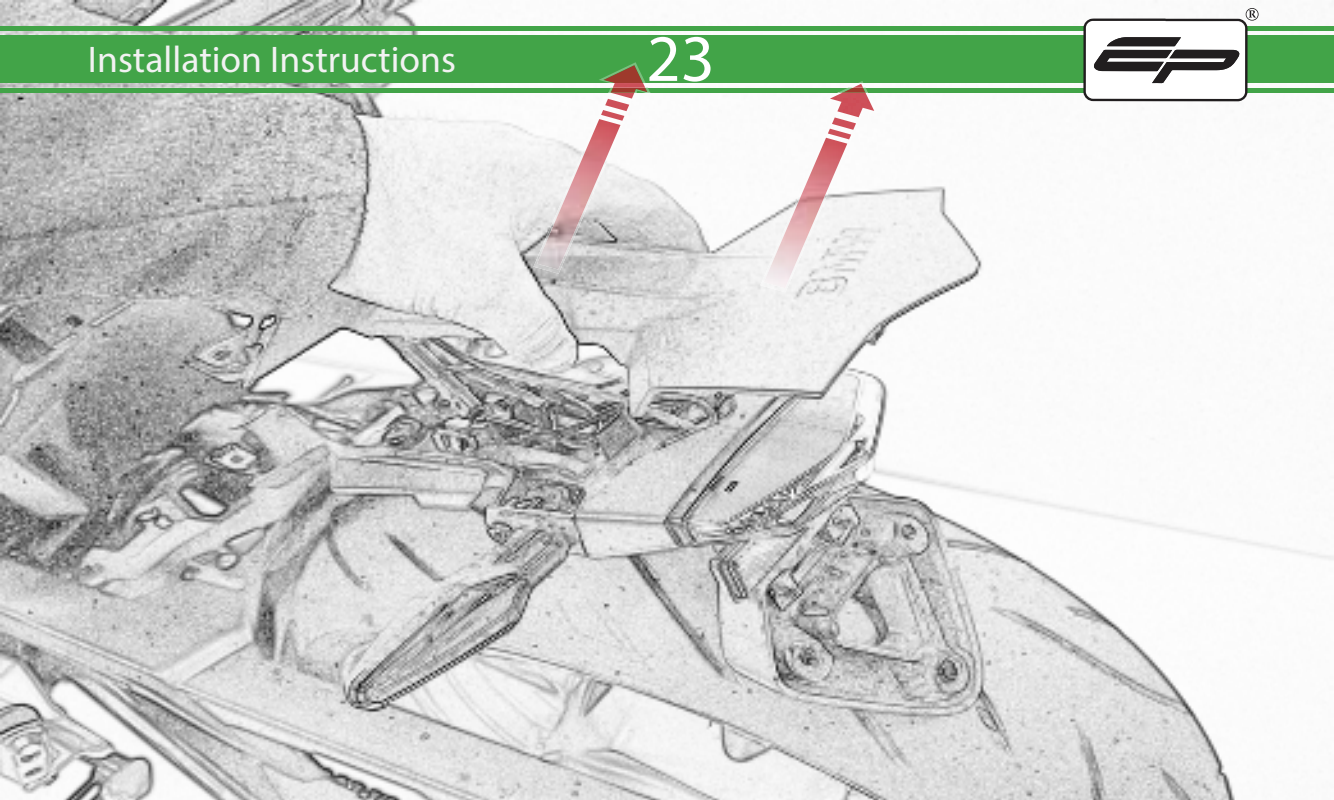

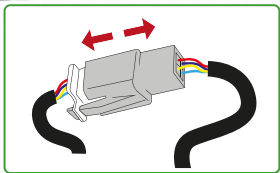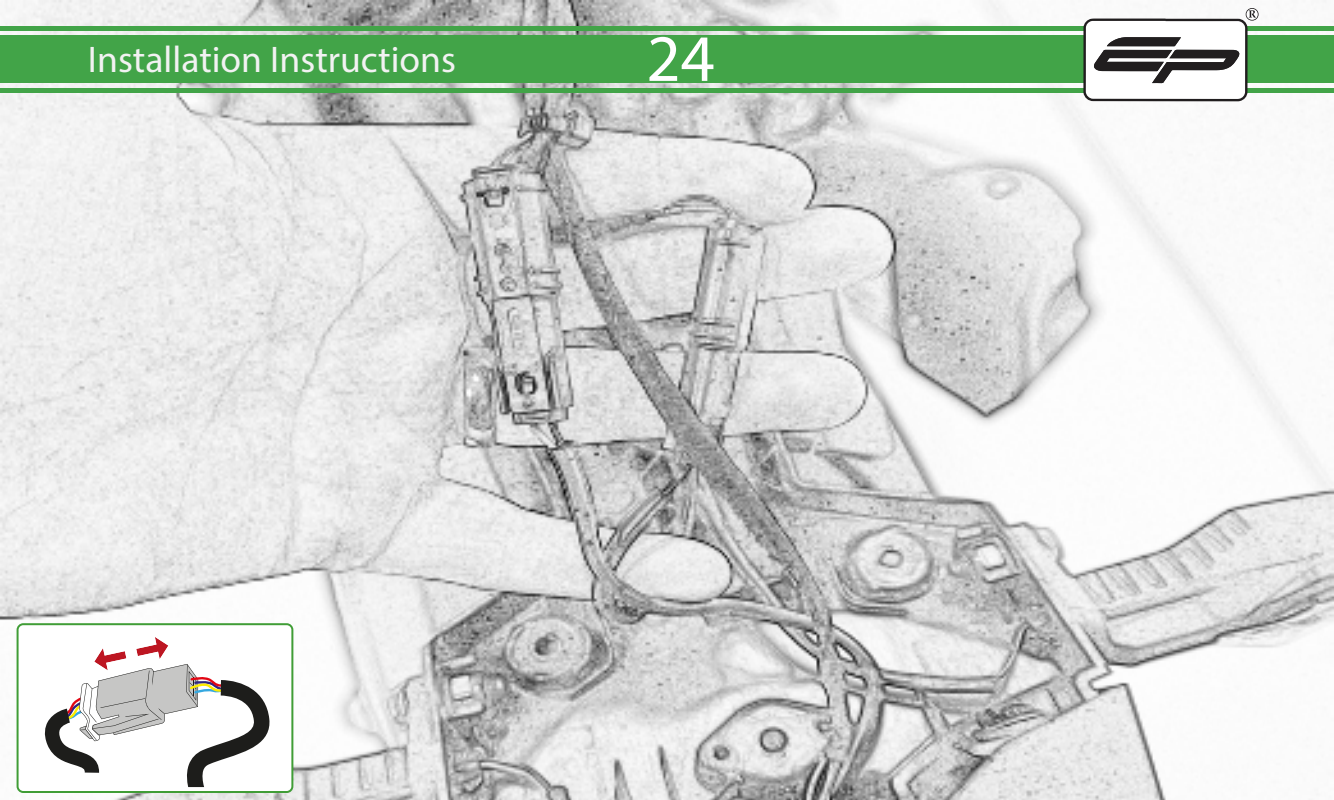


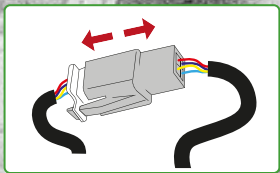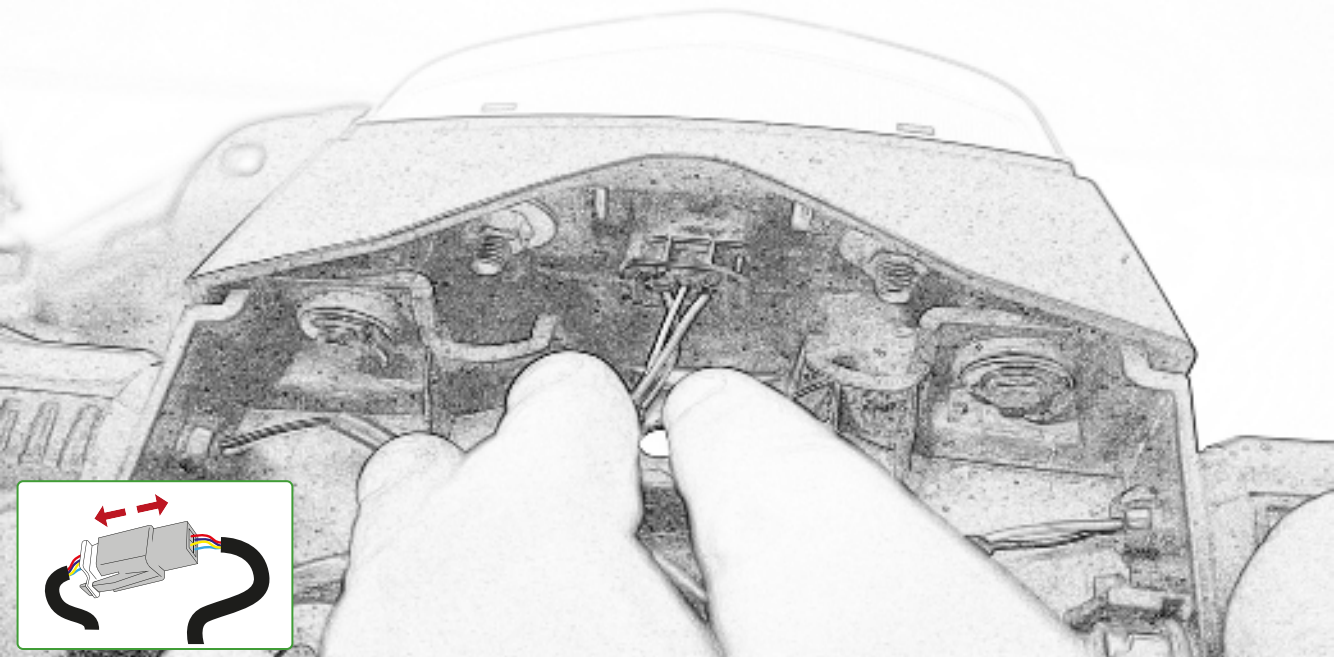

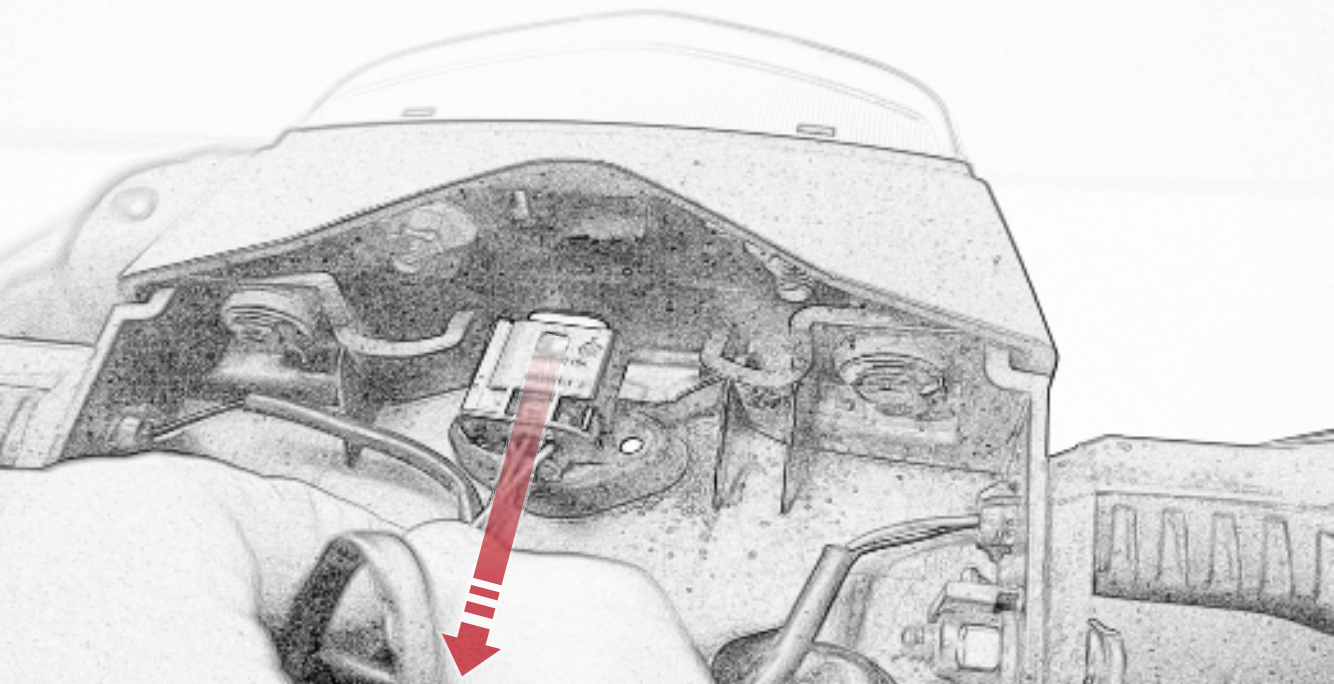


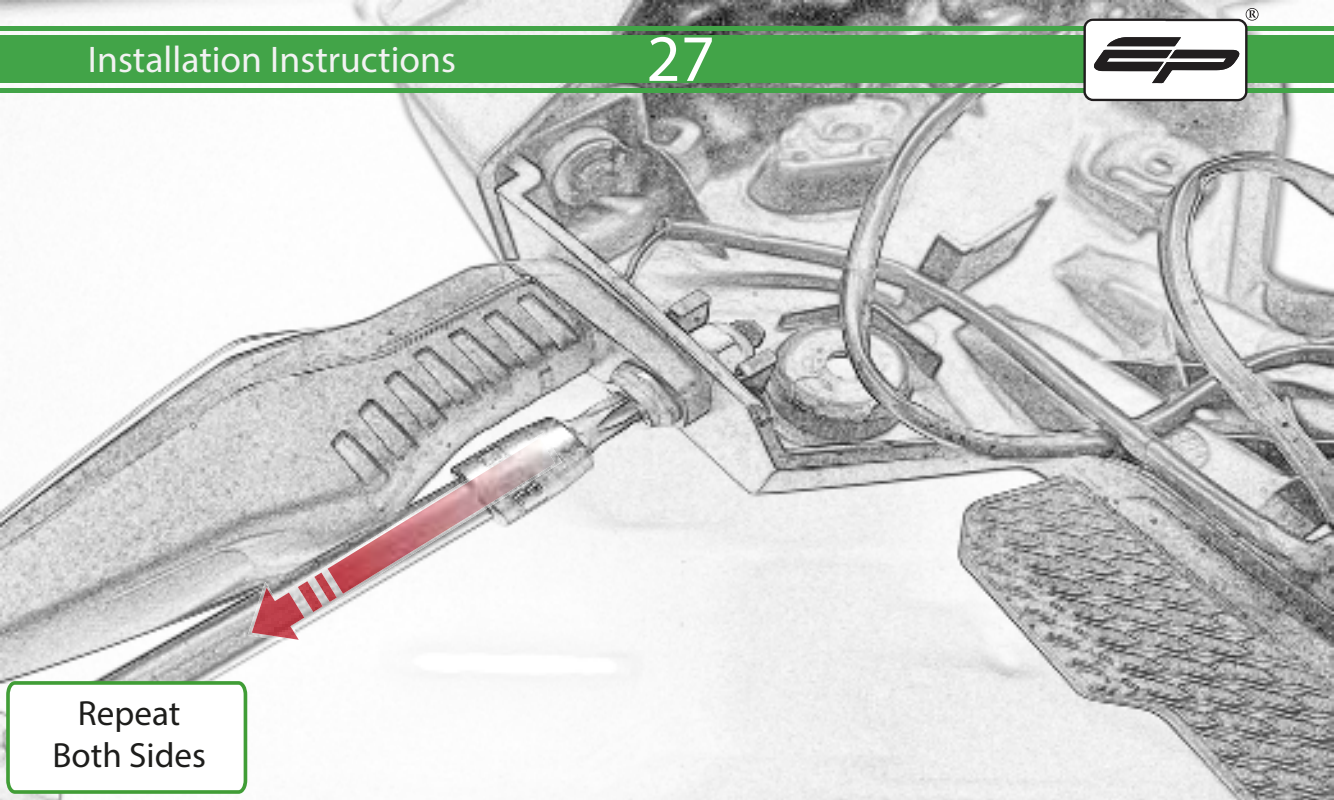


Repeat  
Both Sides

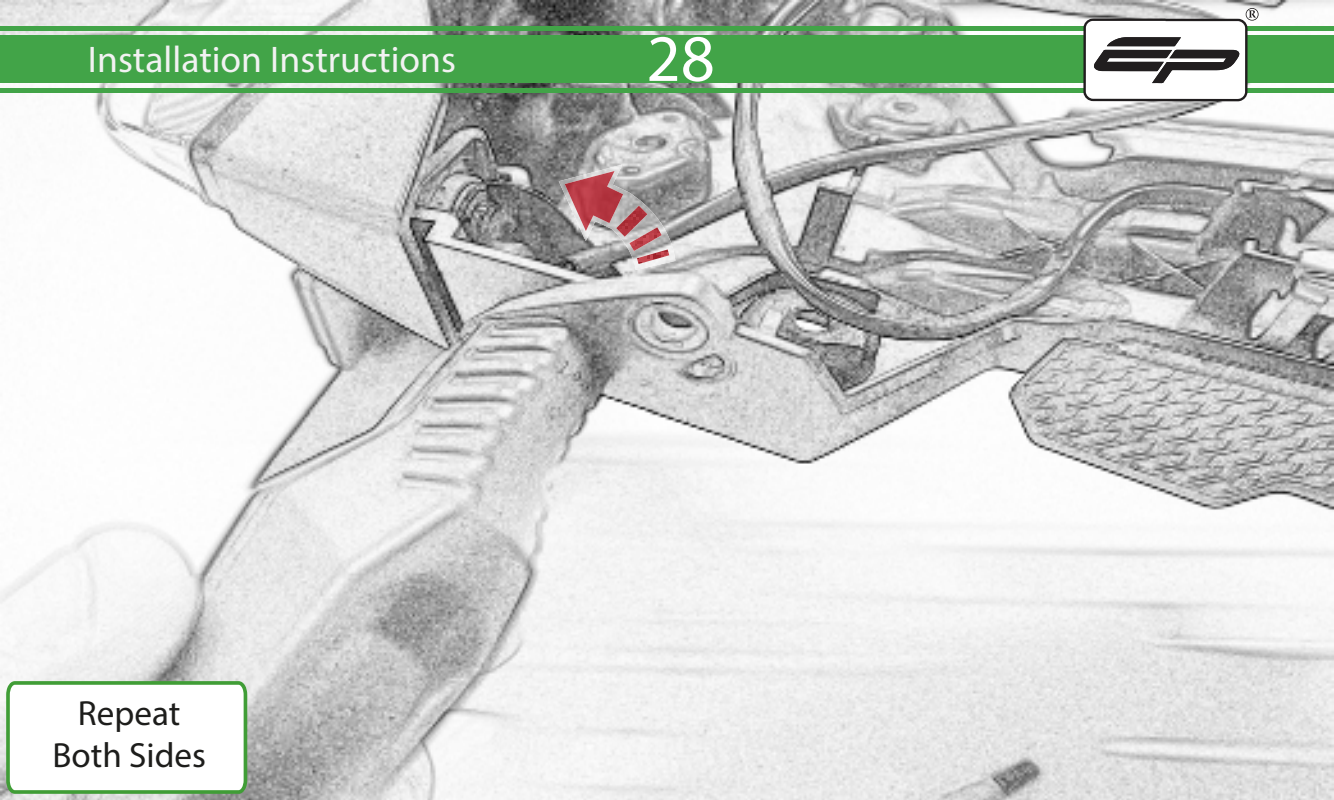

Repeat  
Both Sides

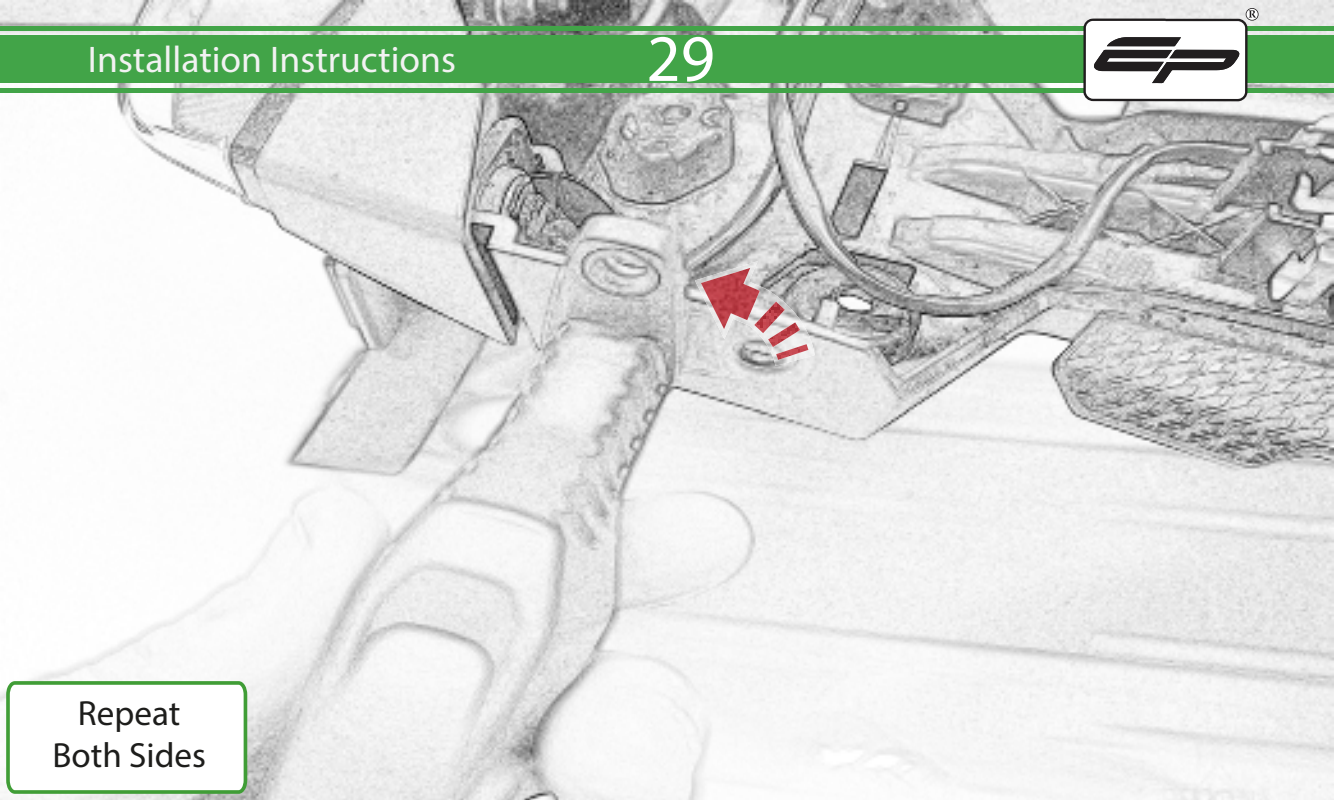



Repeat  
Both Sides

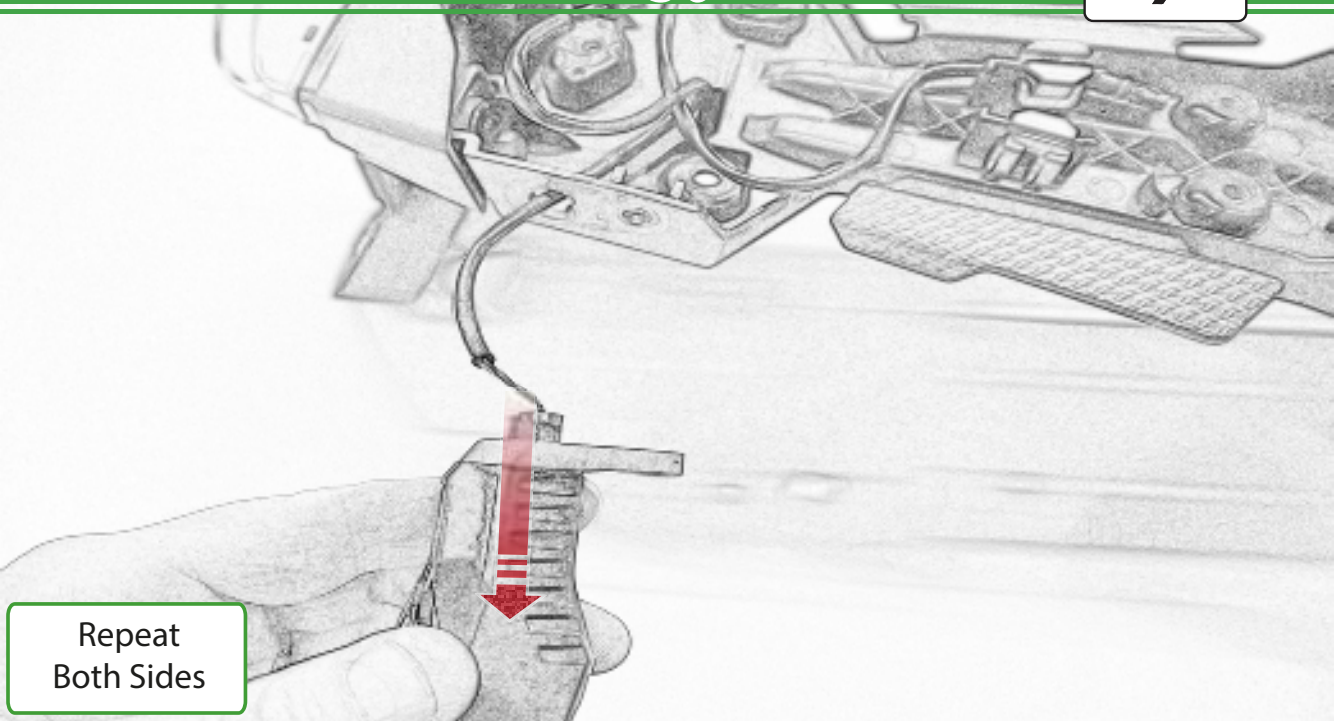



Repeat  
Both Sides




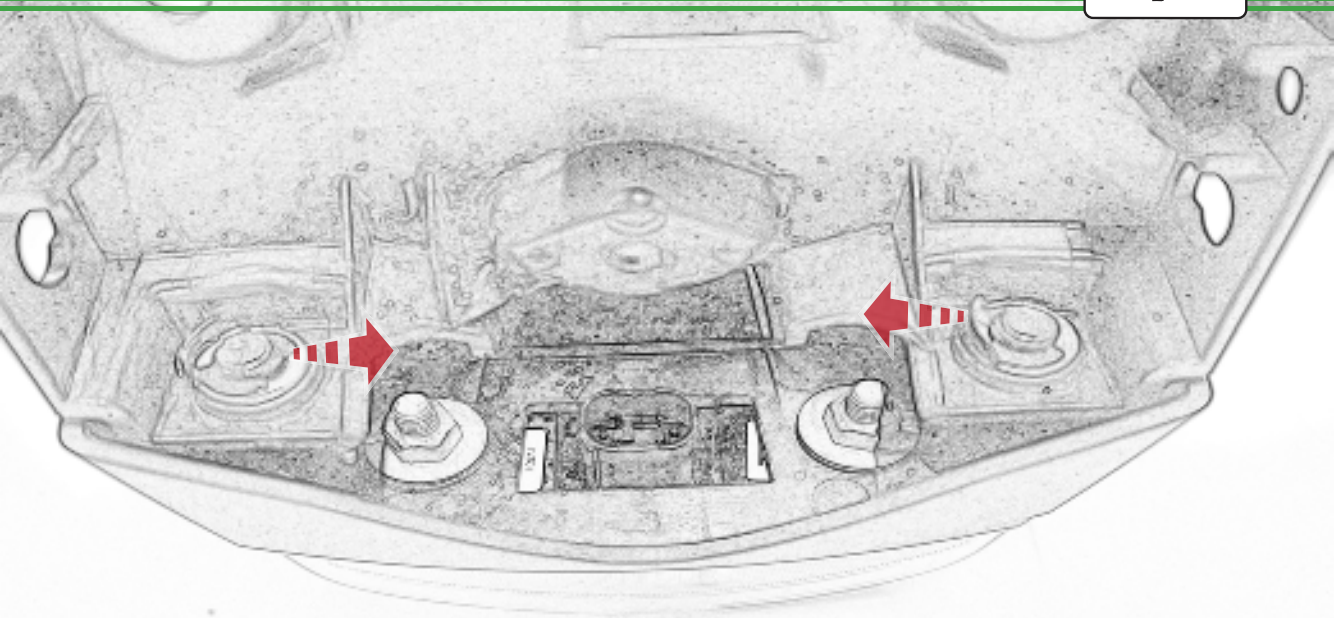


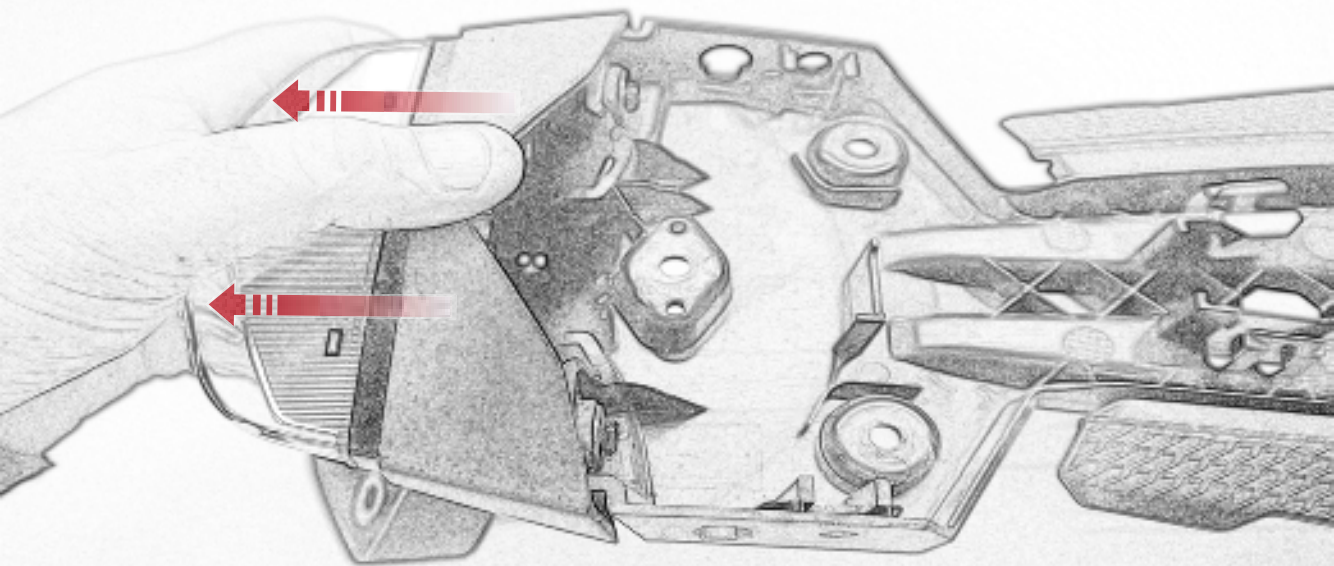


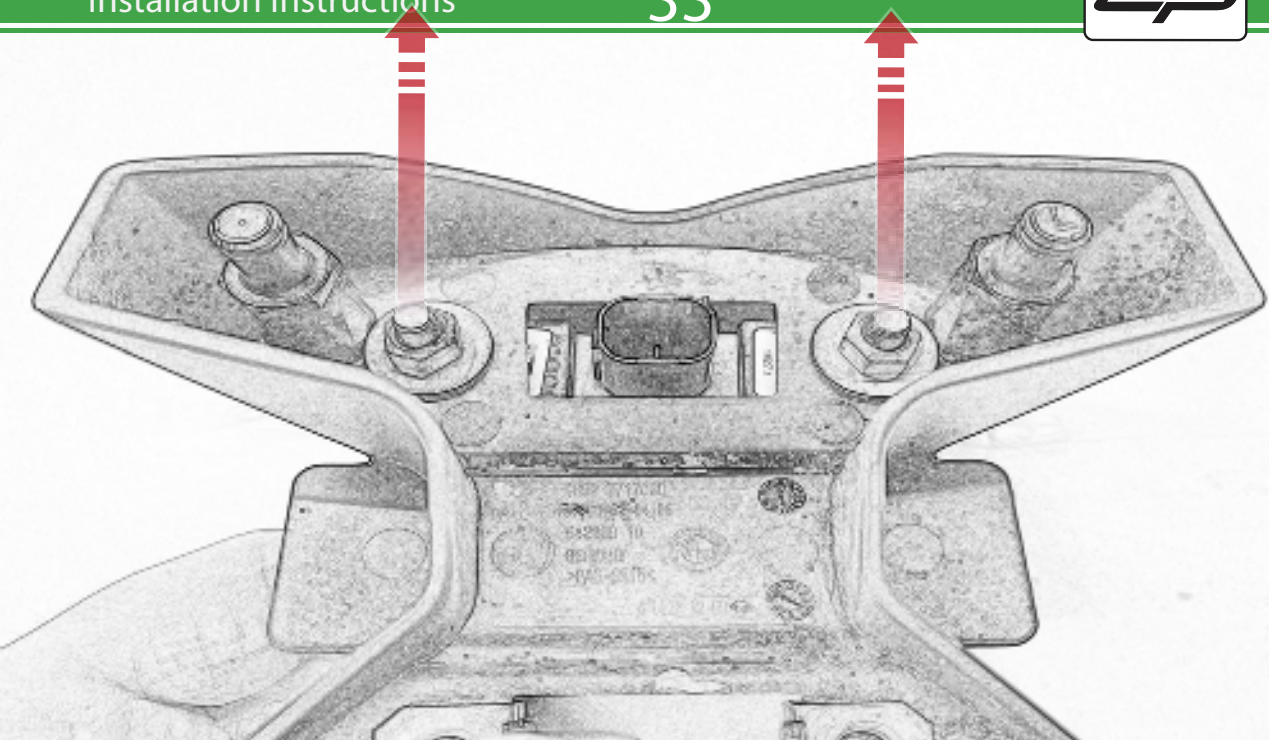

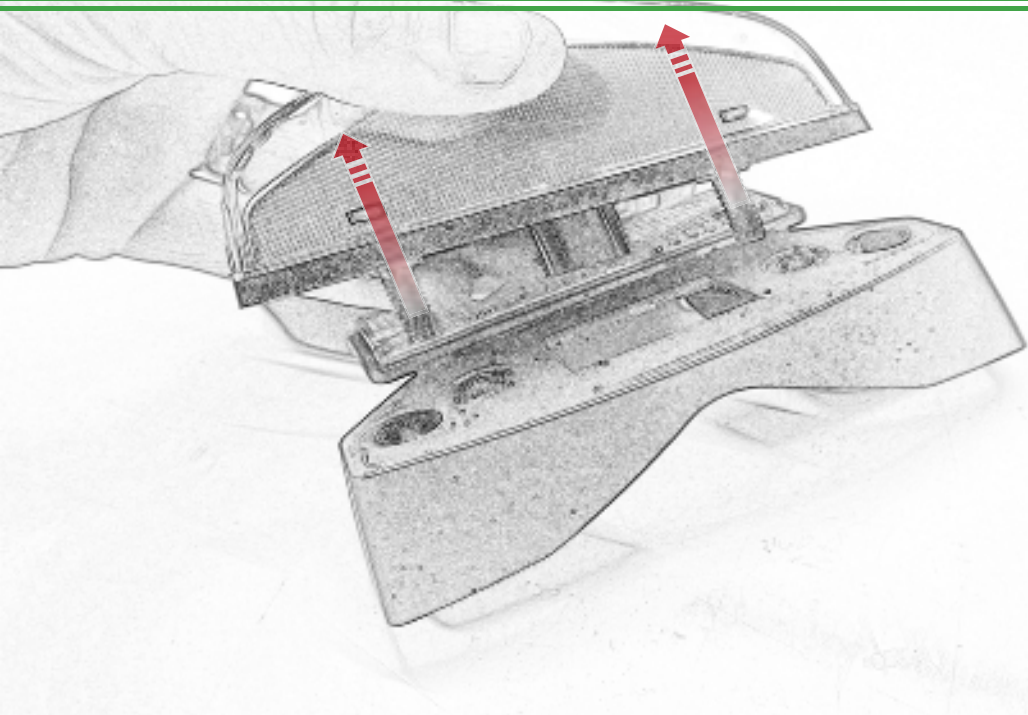


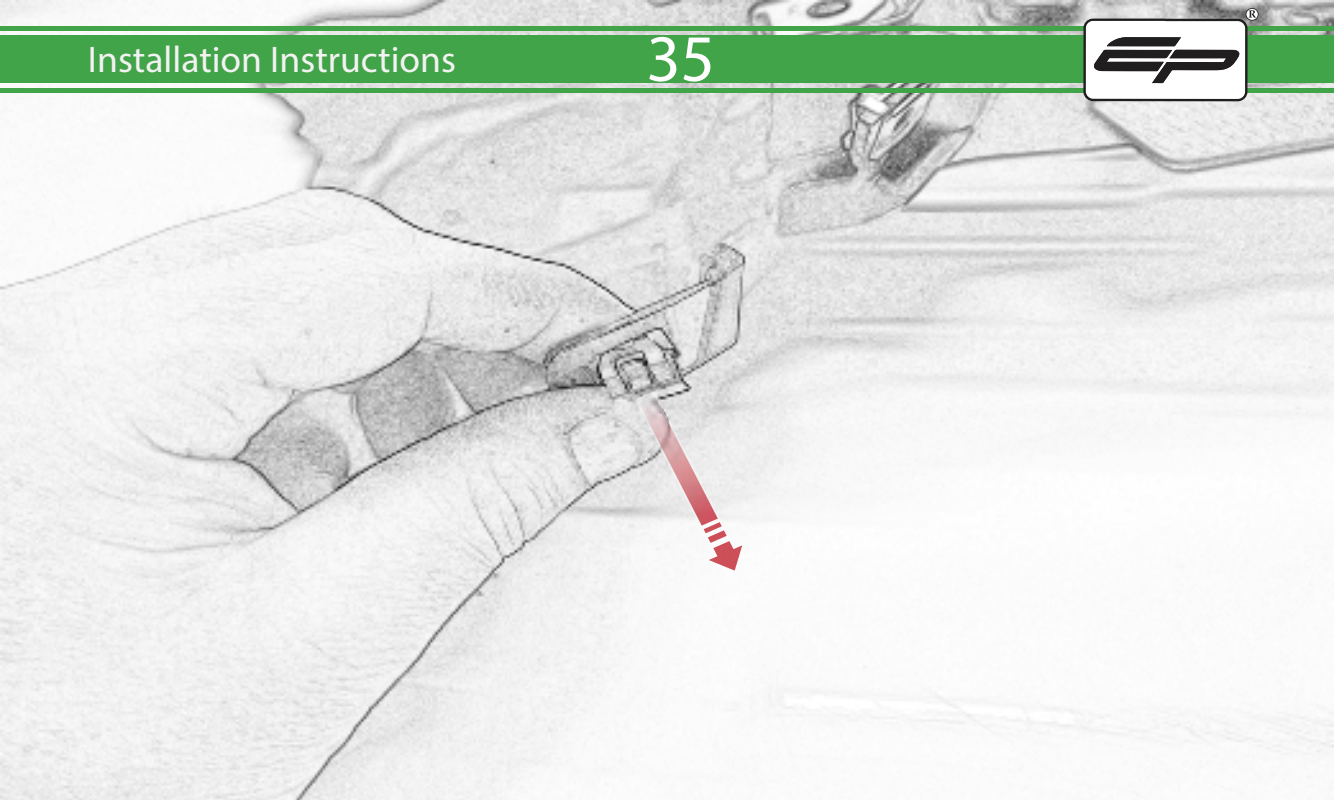

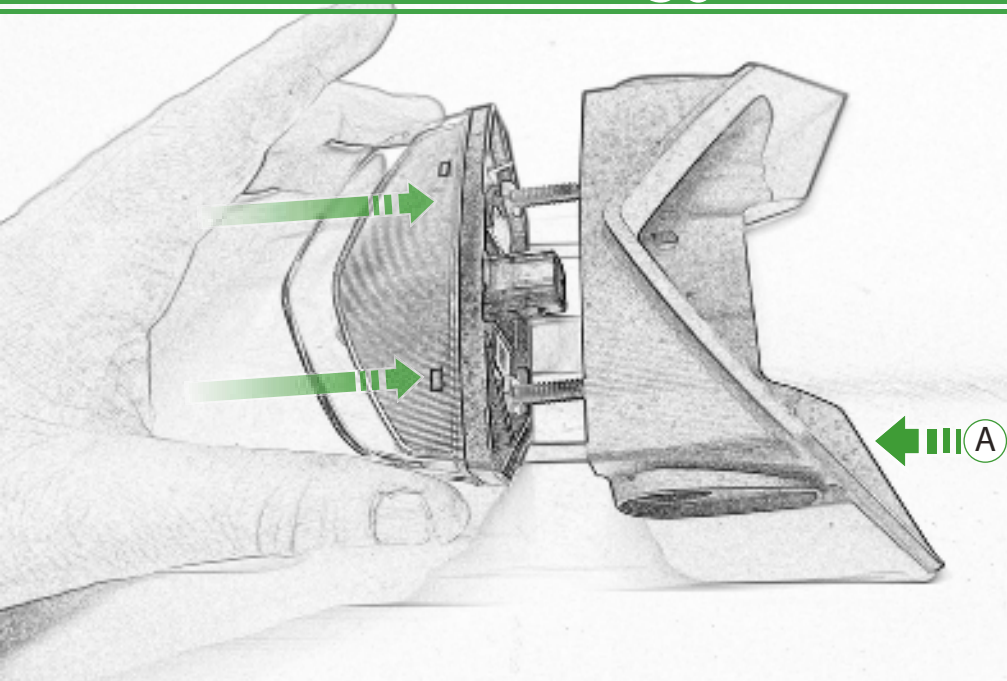

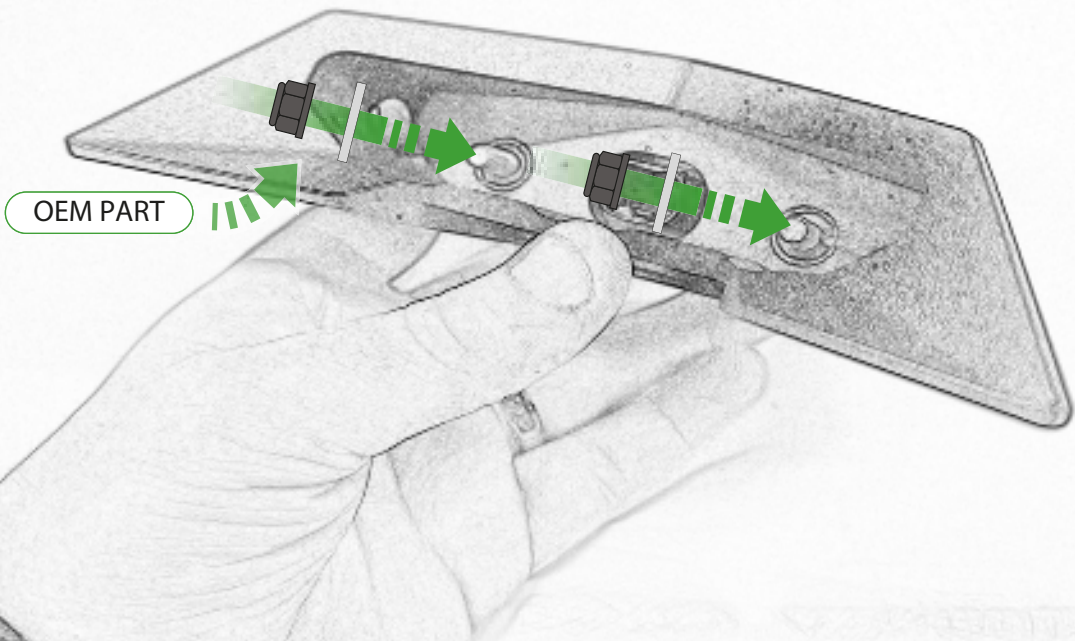


OEM PART

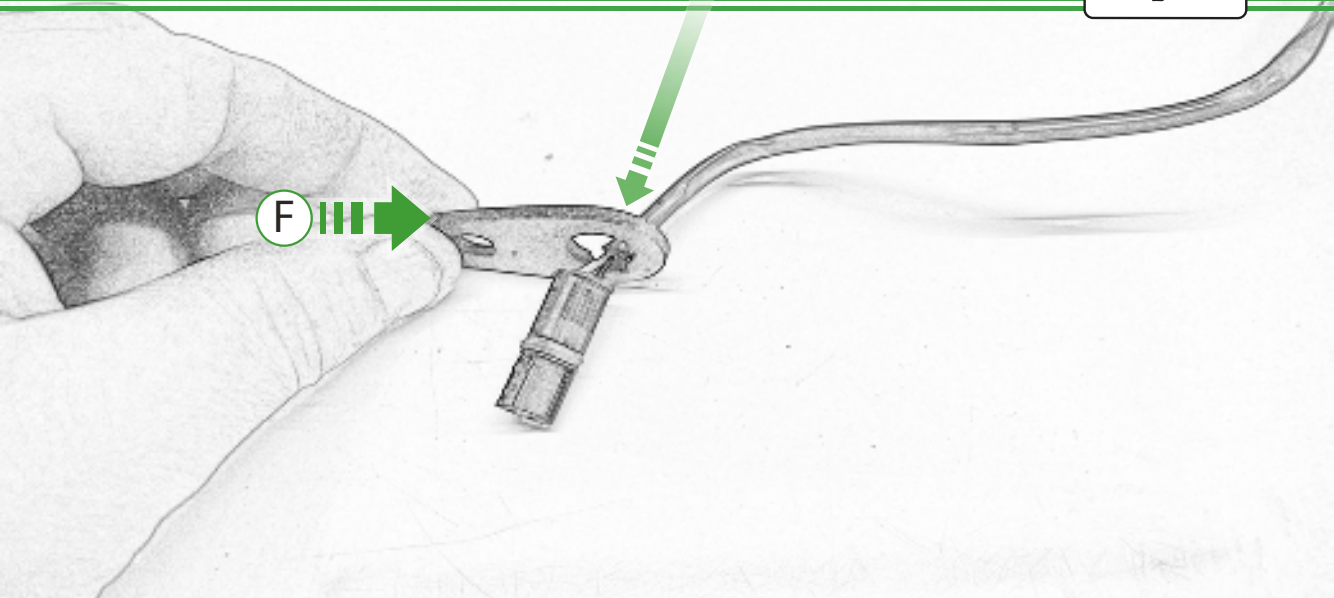


Repeat  
Both Sides




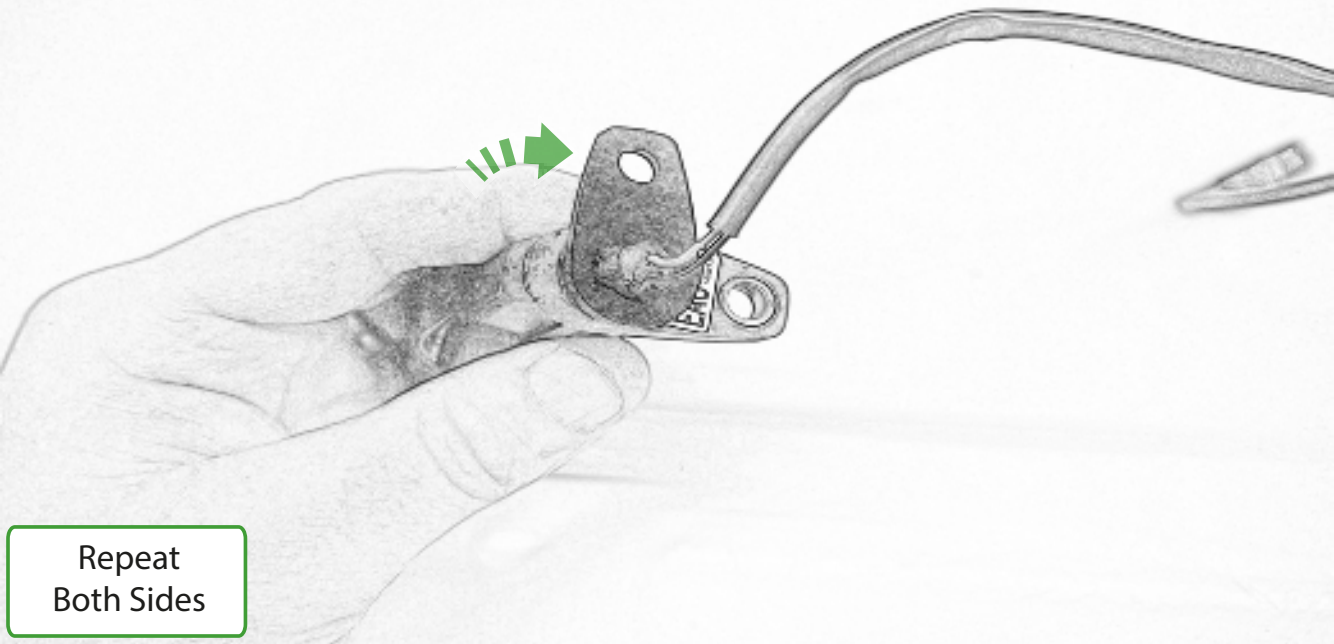


Repeat  
Both Sides

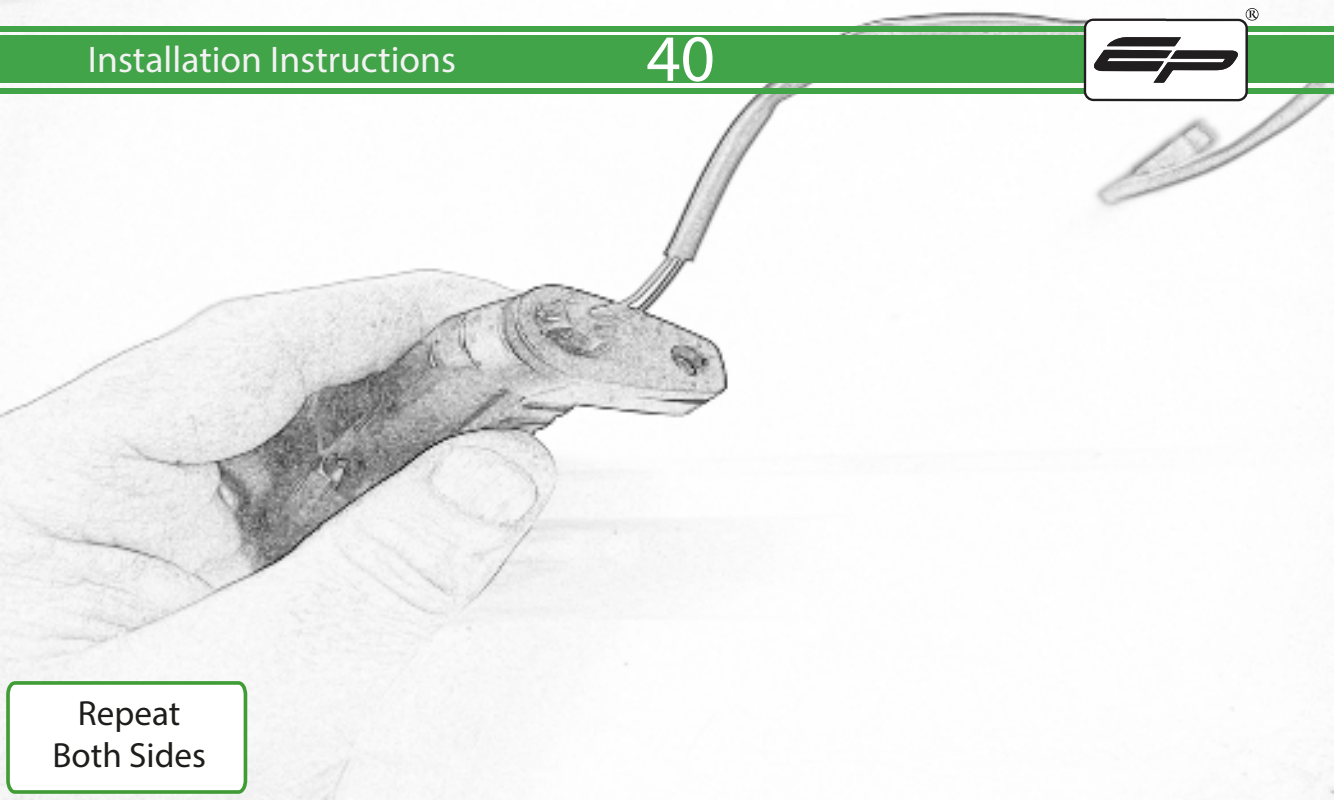


Repeat  
Both Sides

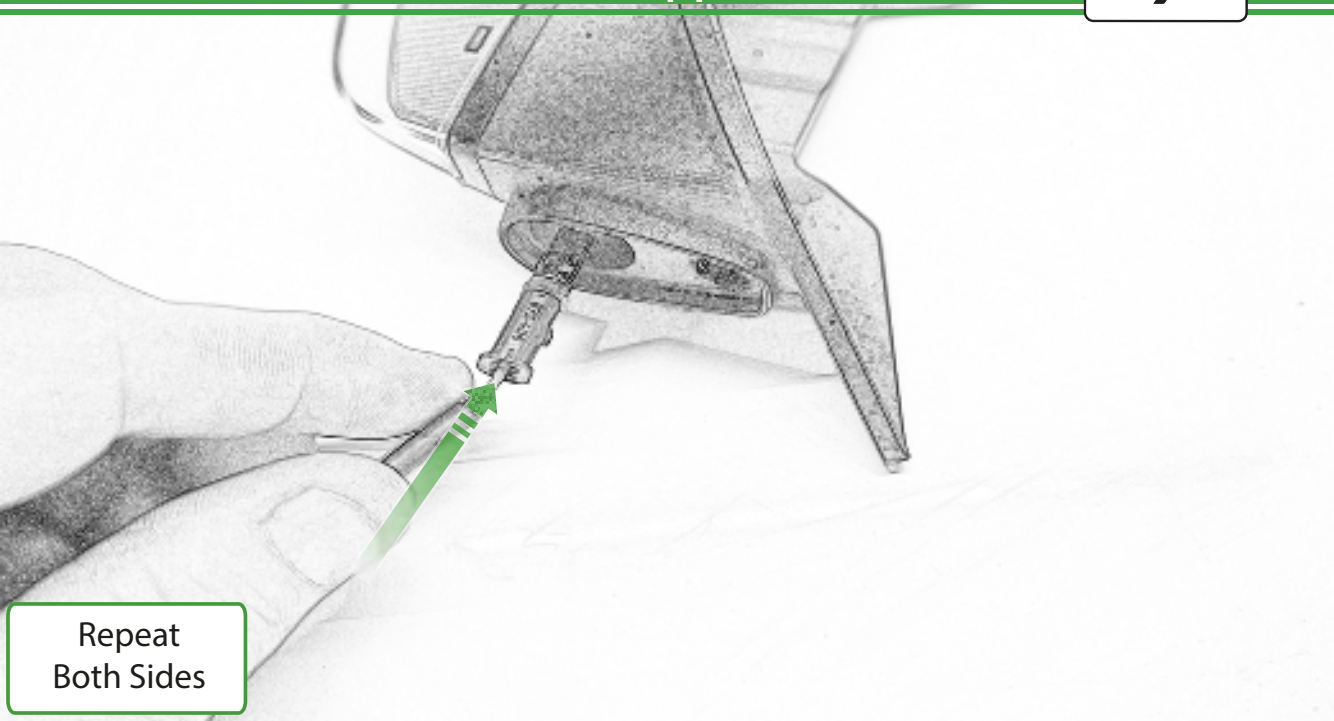


Repeat  
Both Sides

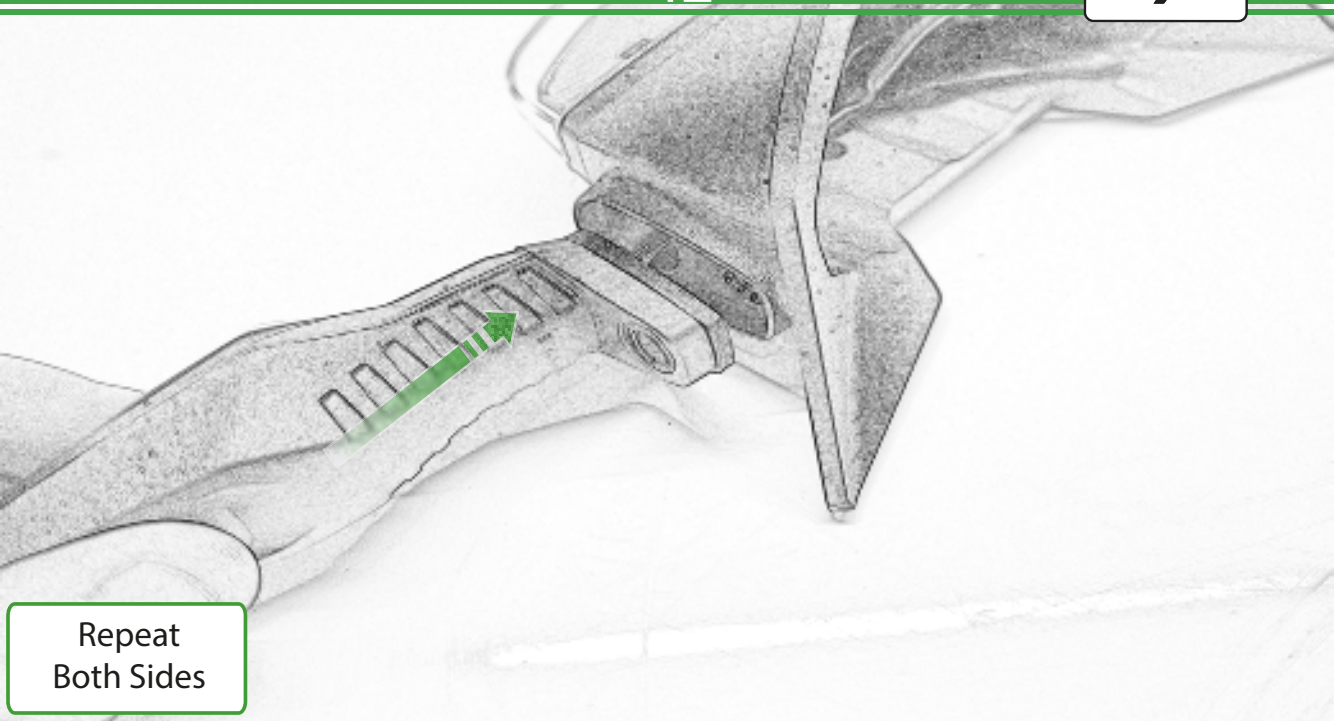

Repeat  
Both Sides


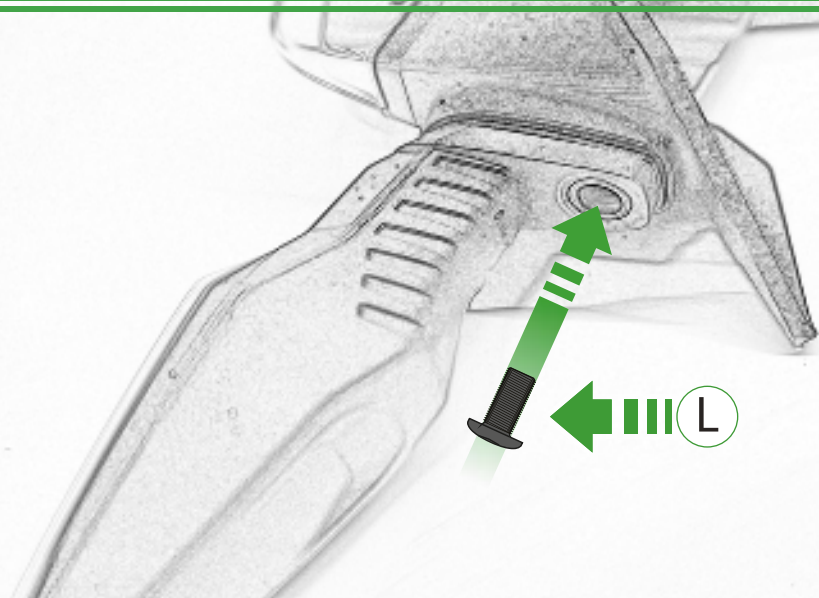


Repeat  
Both Sides

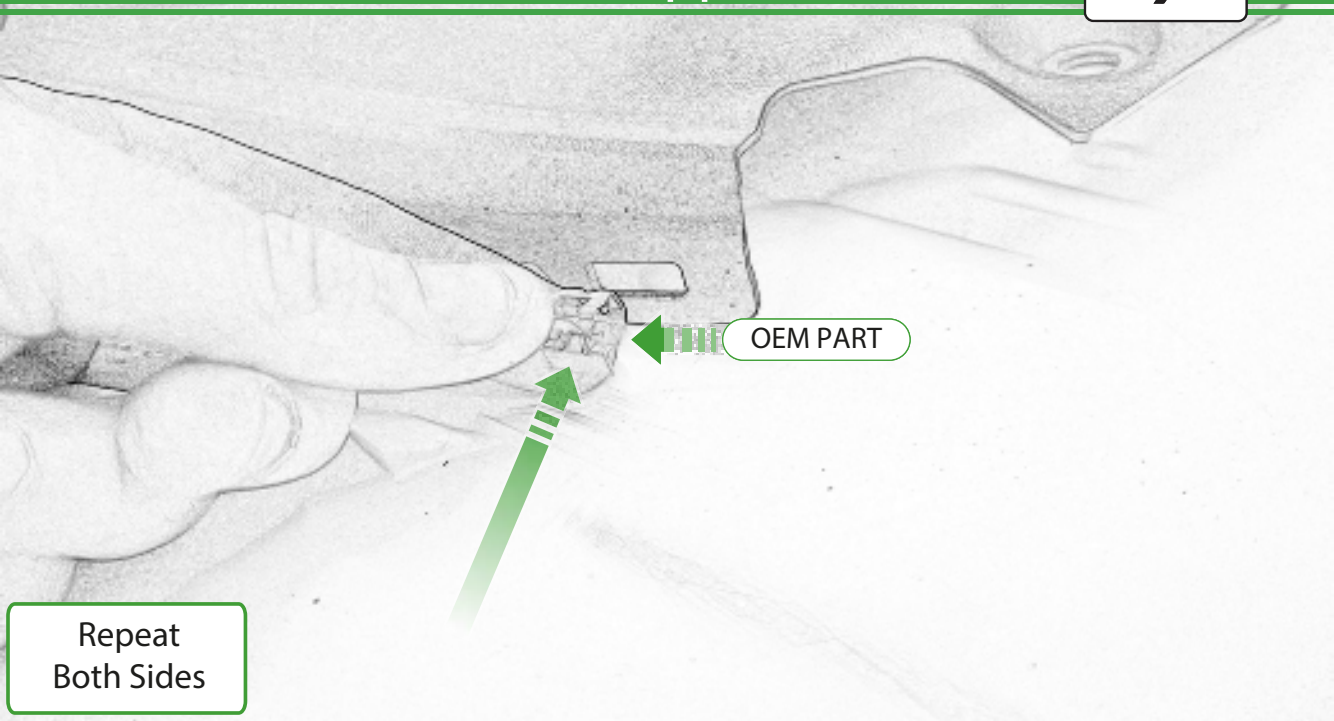


OEM PART


Repeat  
Both Sides

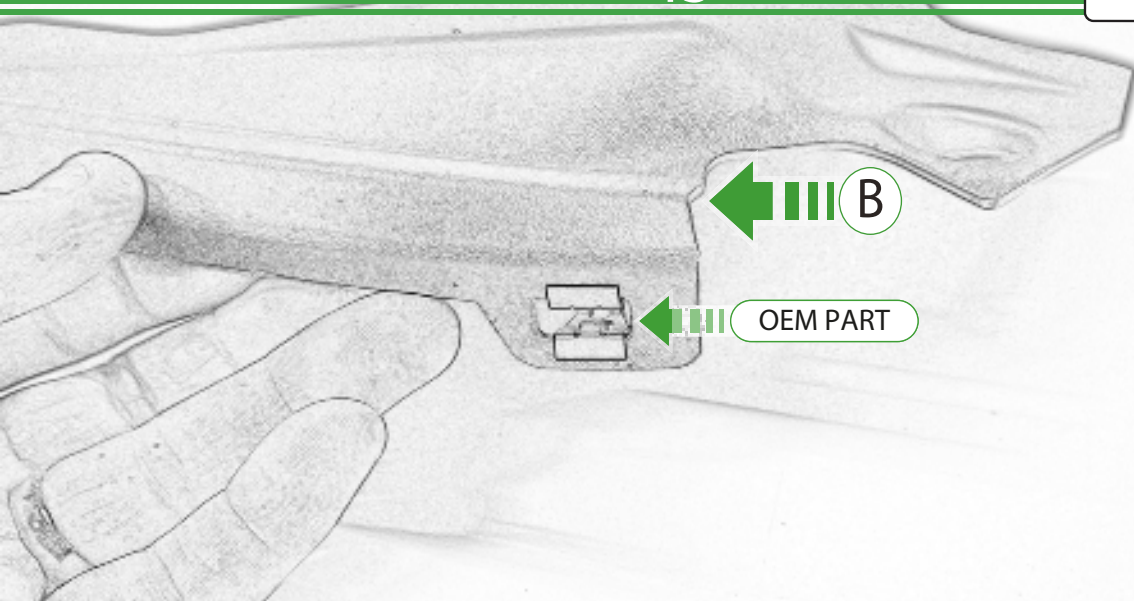


Repeat  
Both Sides

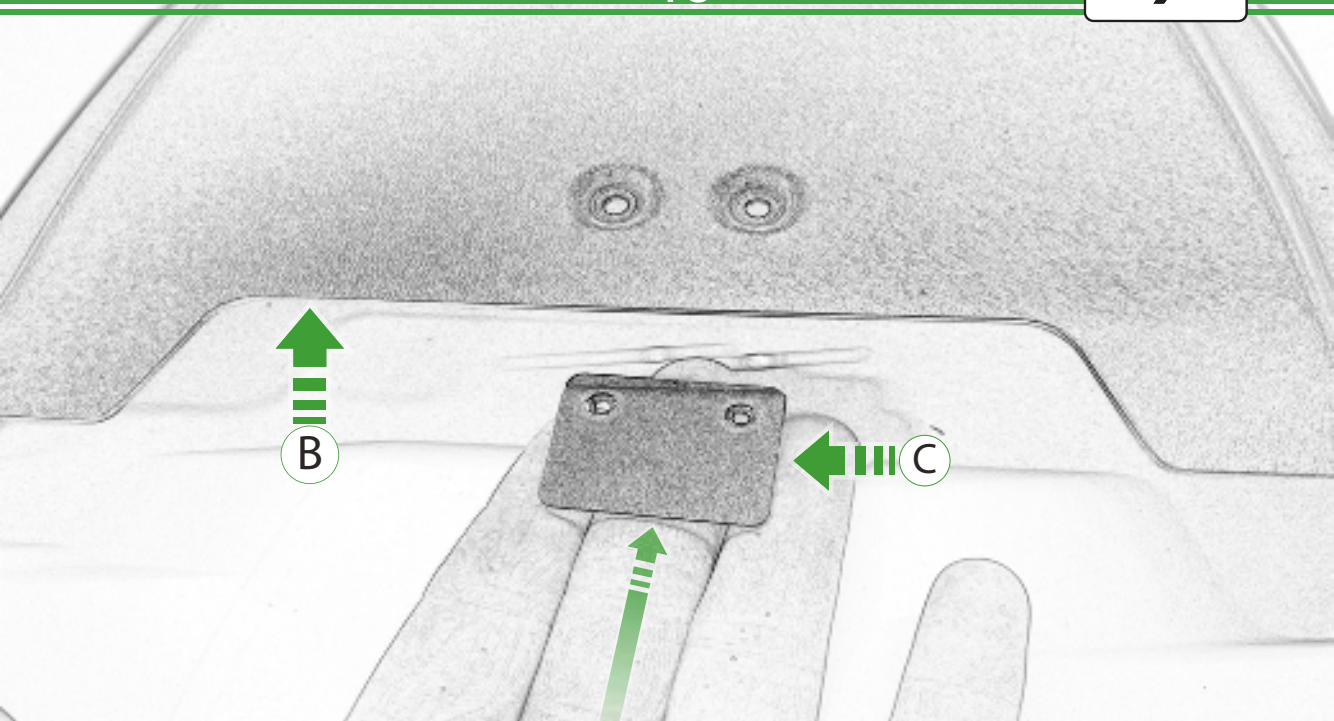




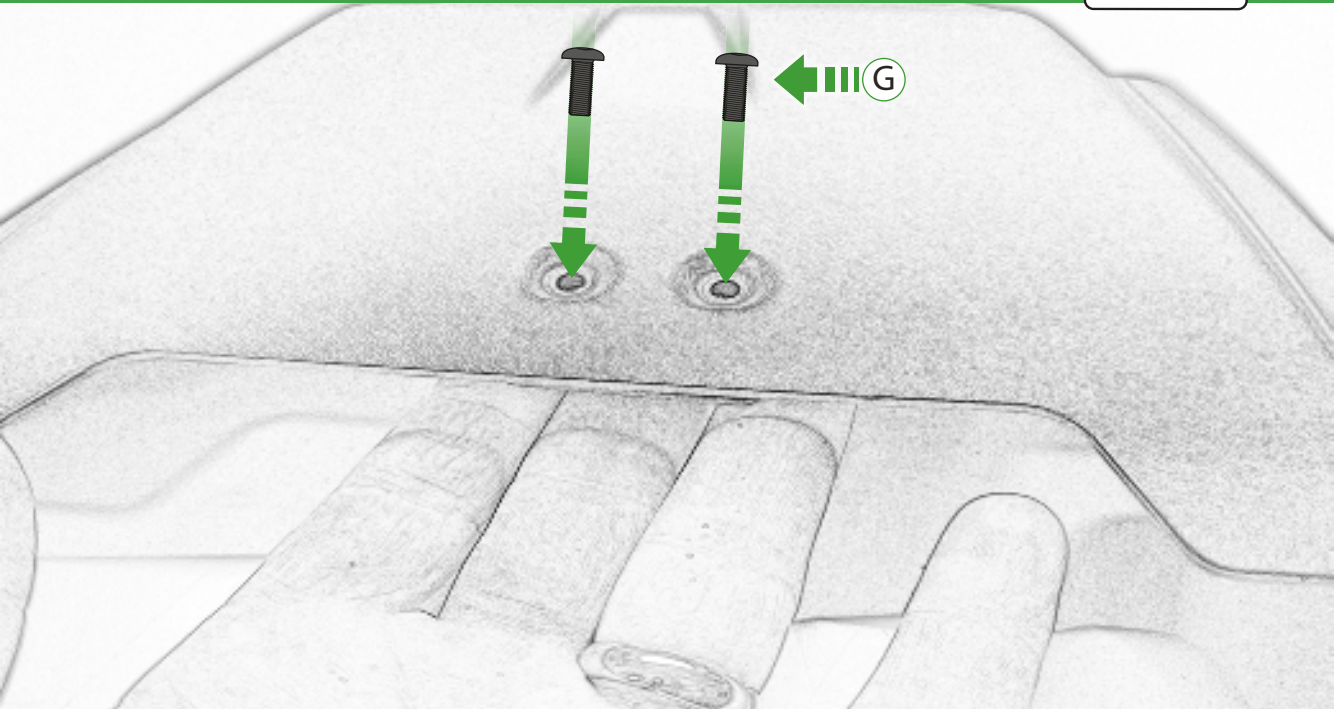

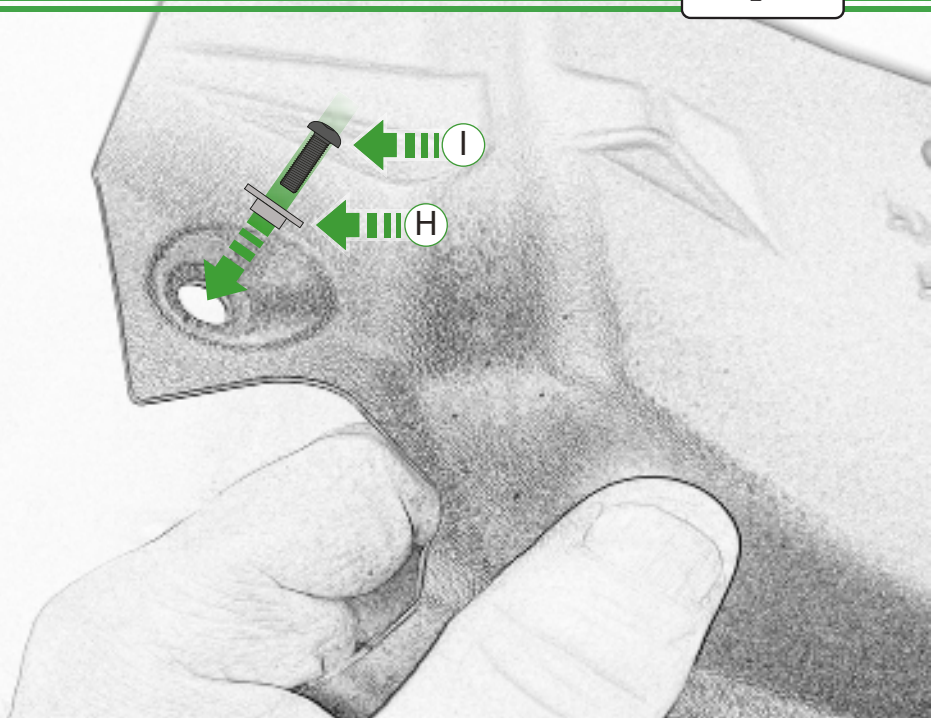


Repeat  
Both Sides

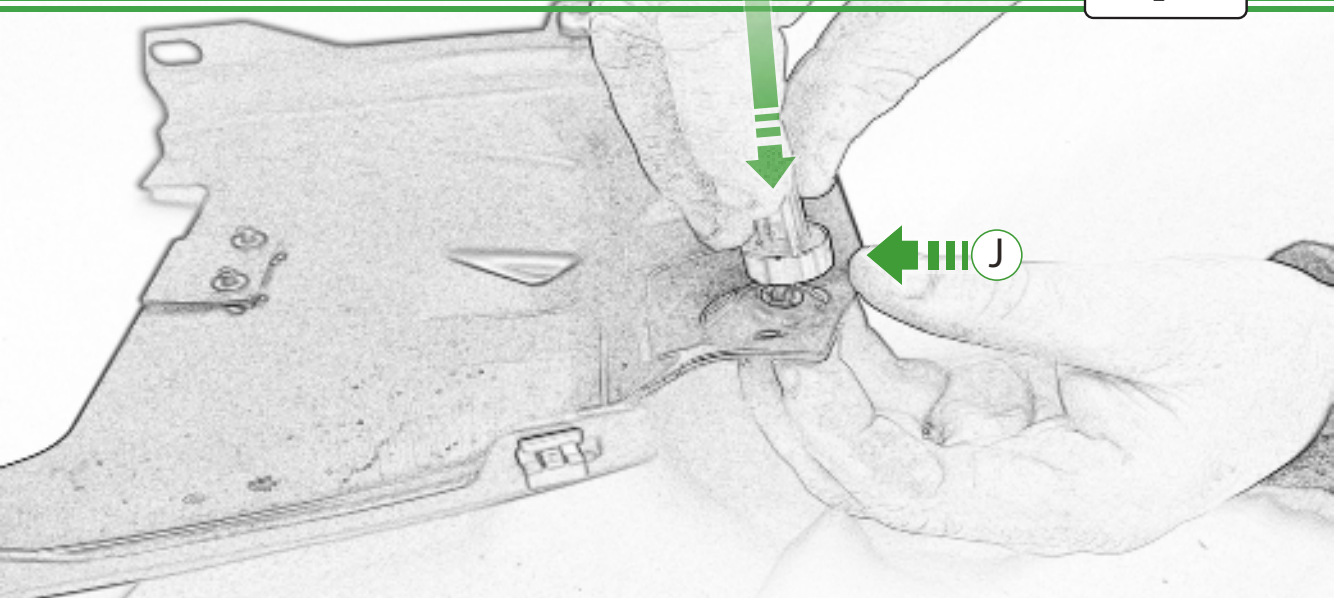



Repeat  
Both Sides





Do Not Fully  
Tighten

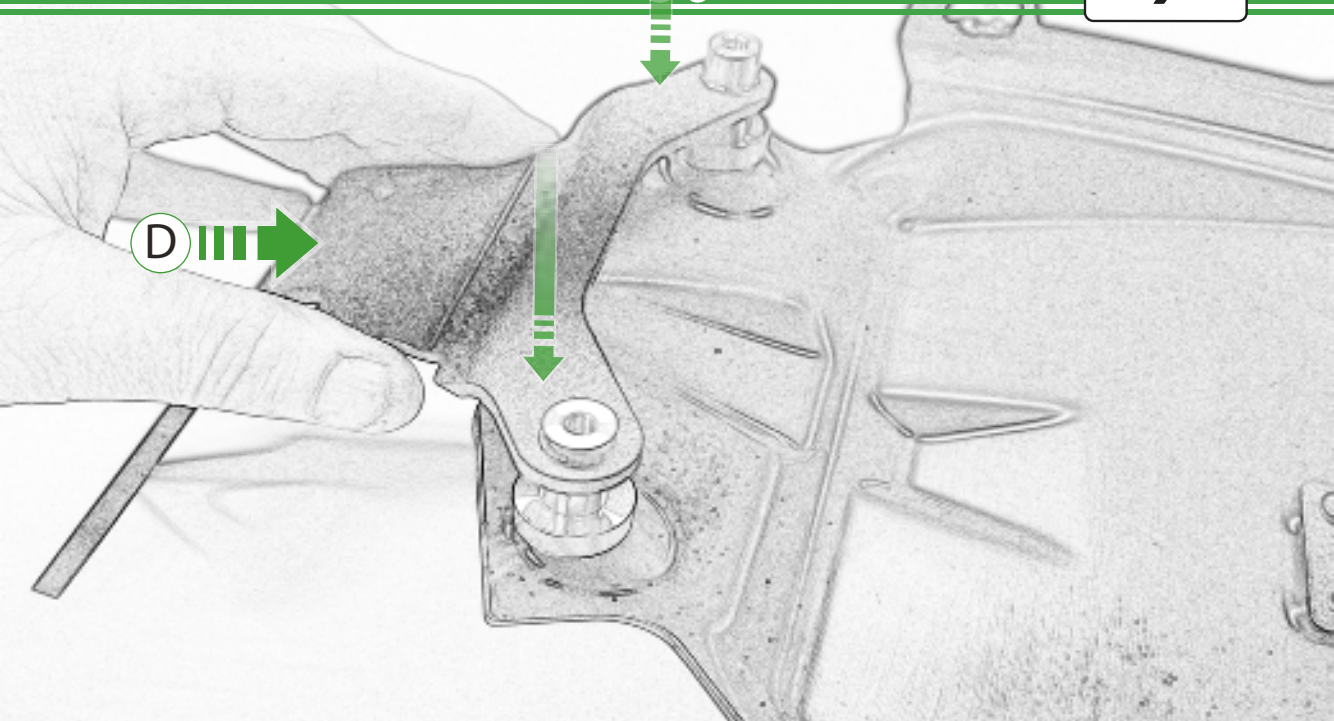


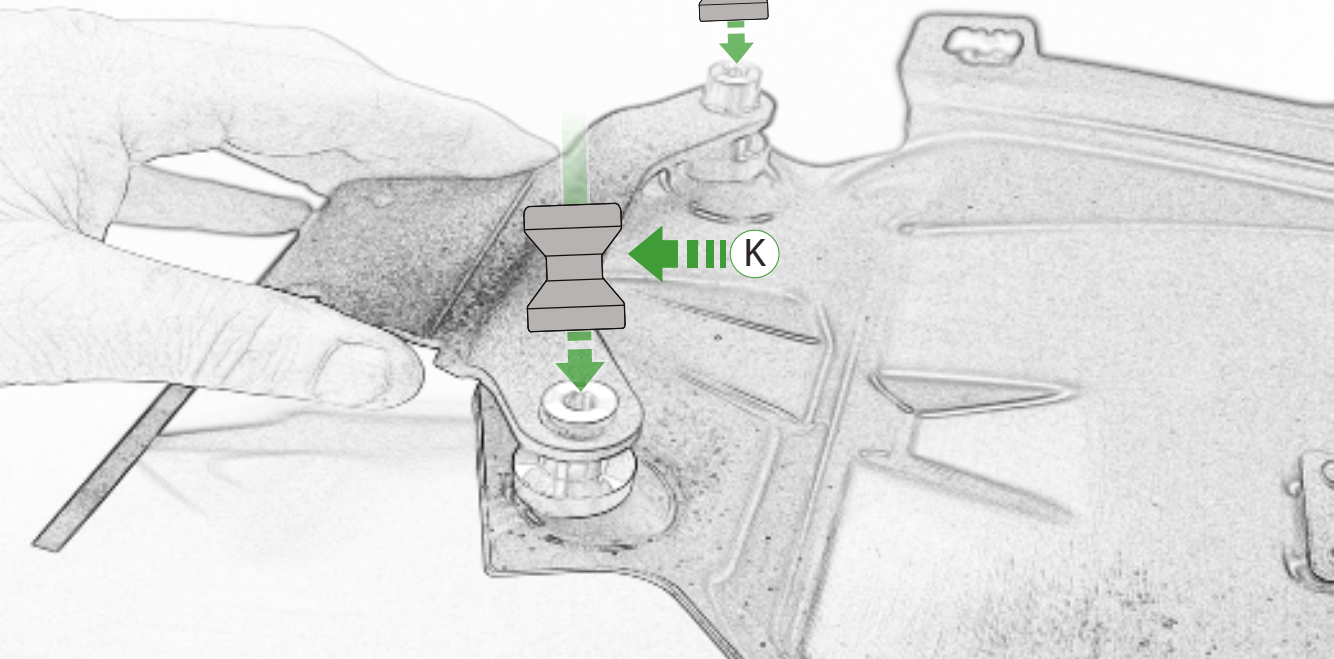



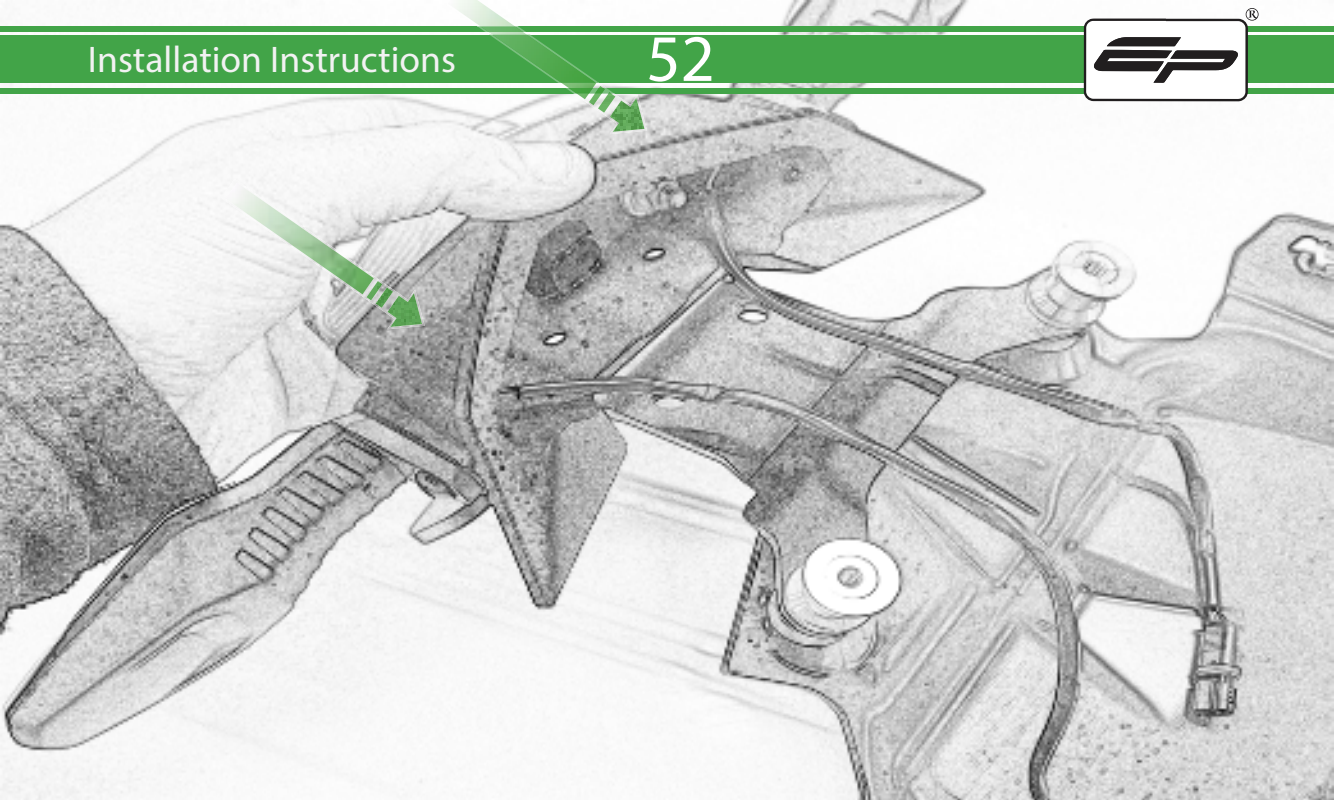



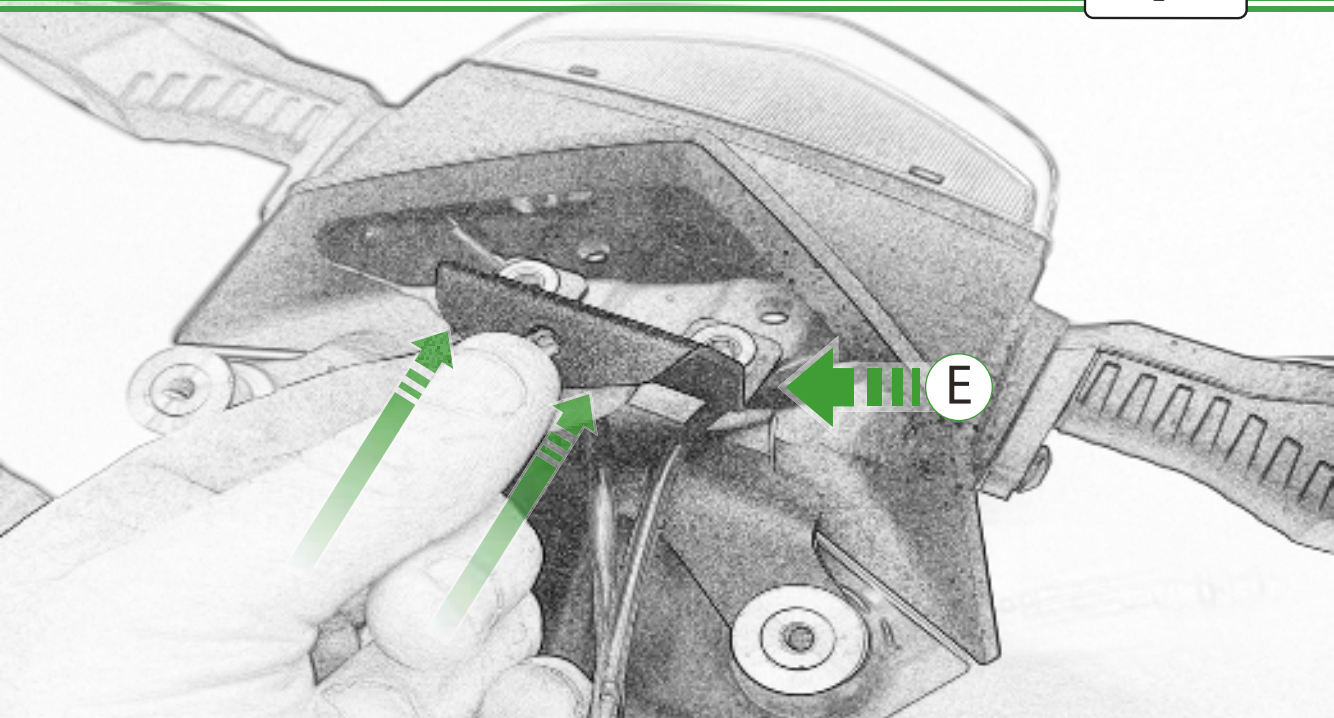


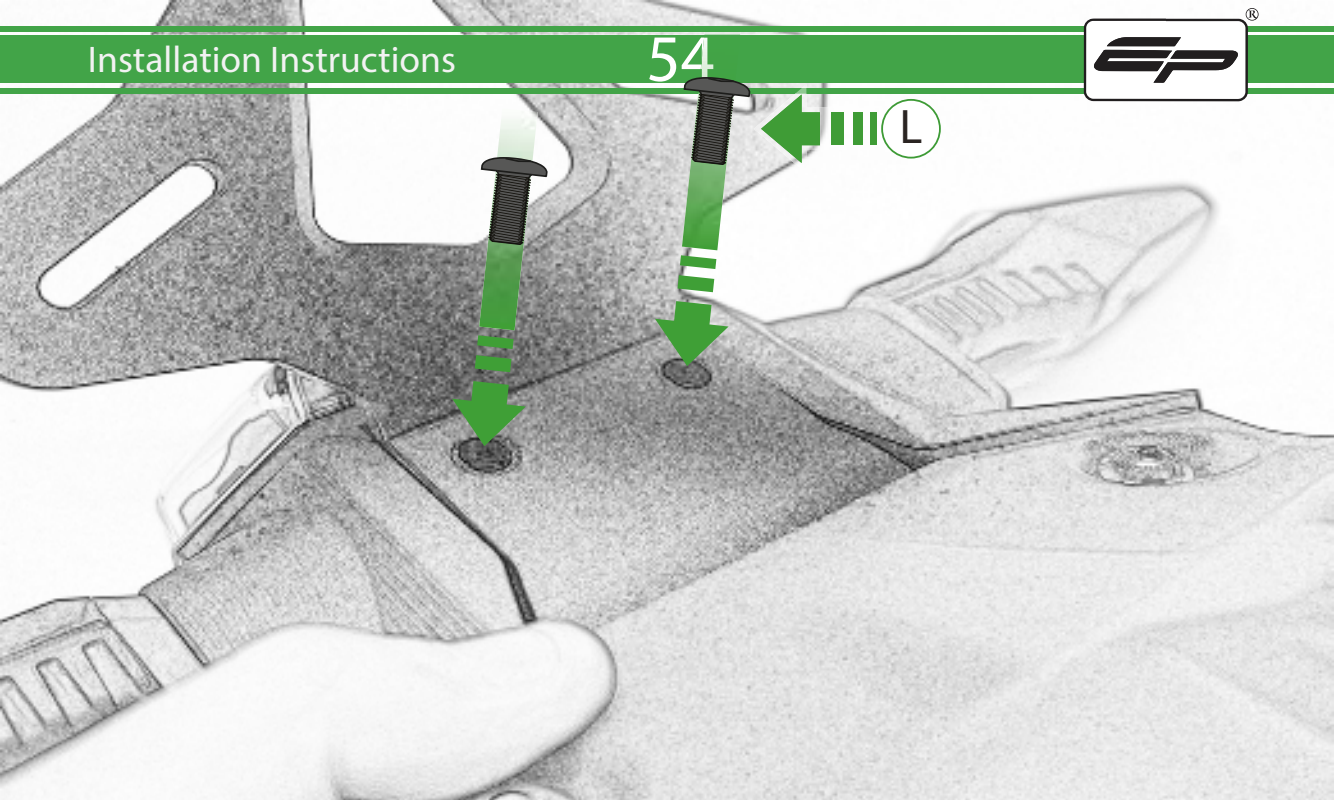





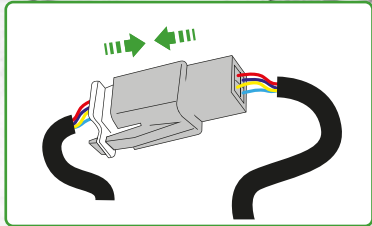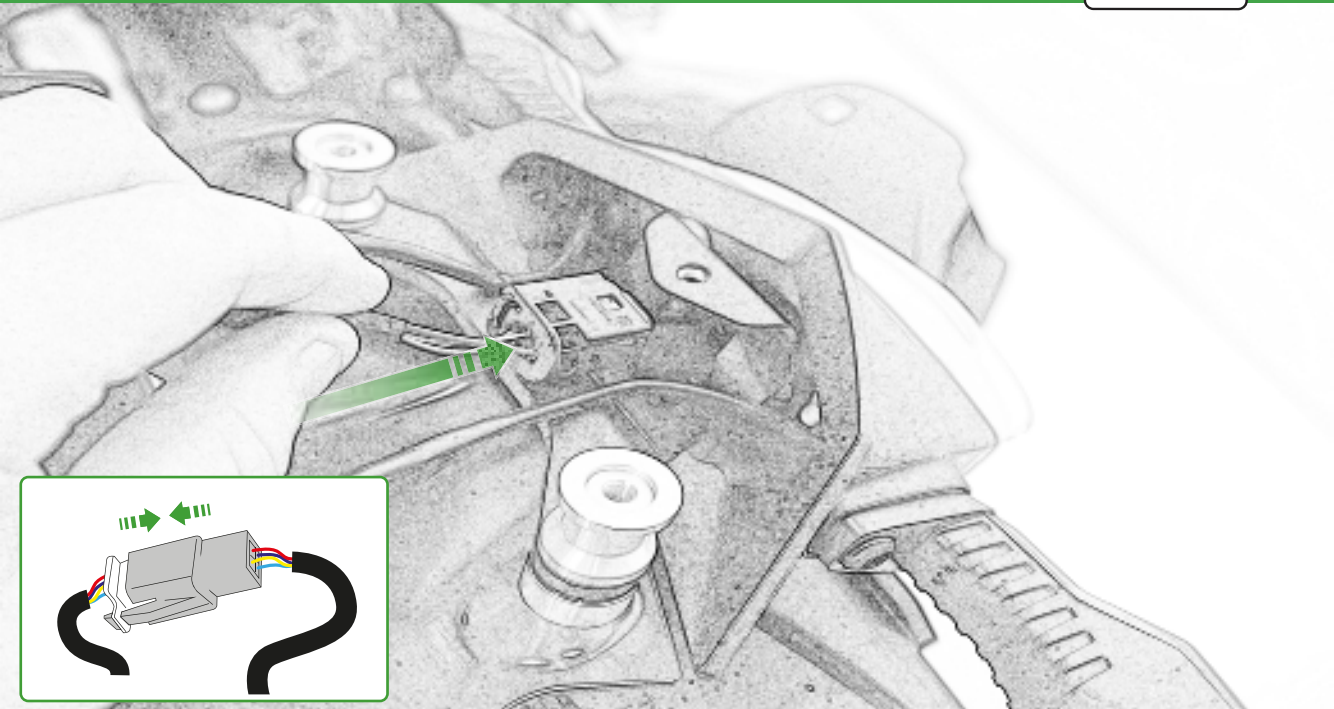

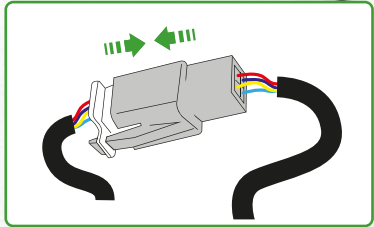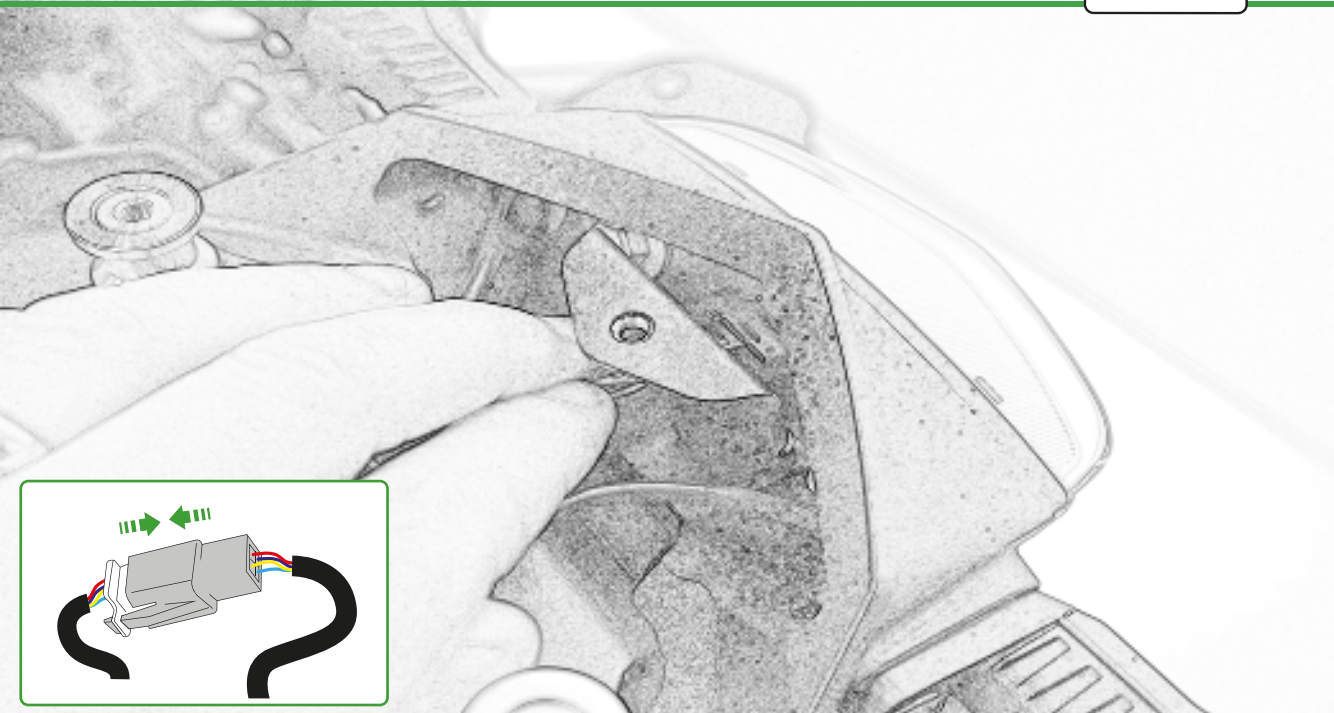

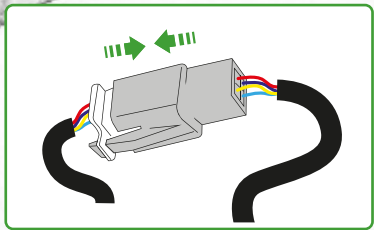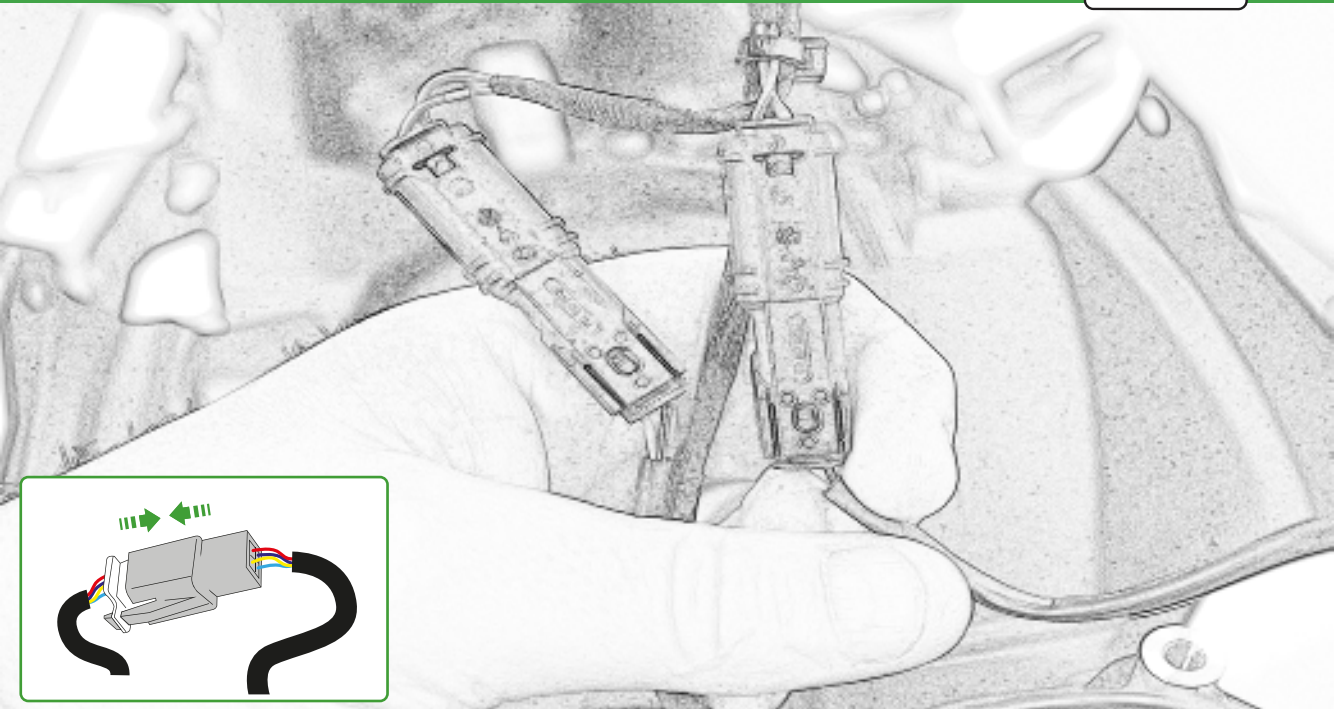

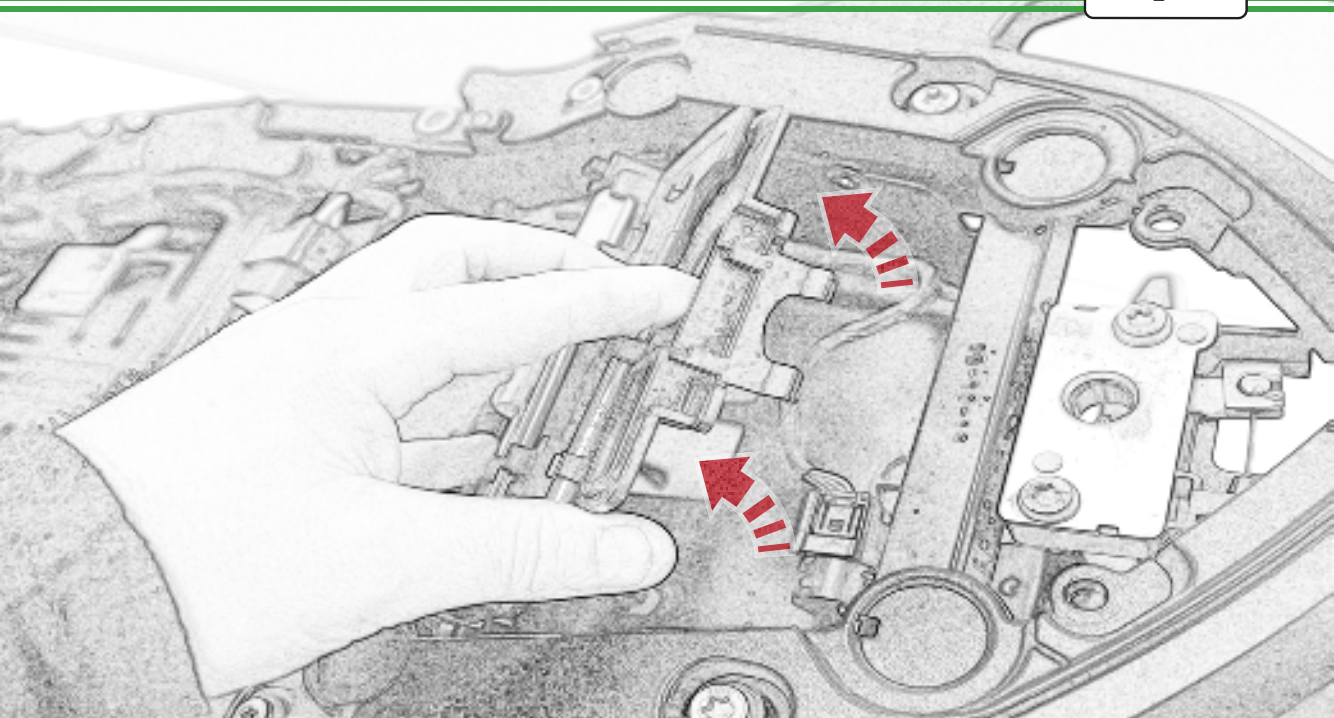


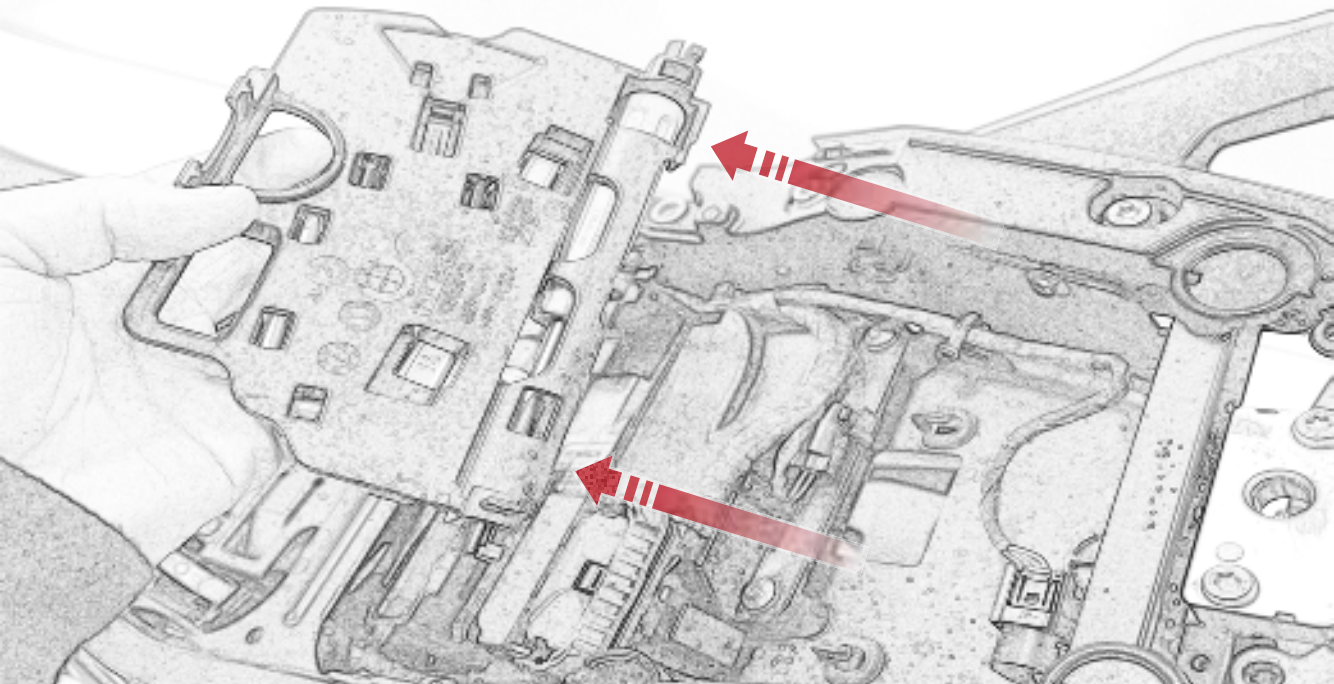




Caution

Locate loom in underseat area ensuring they do not get trapped or squashed

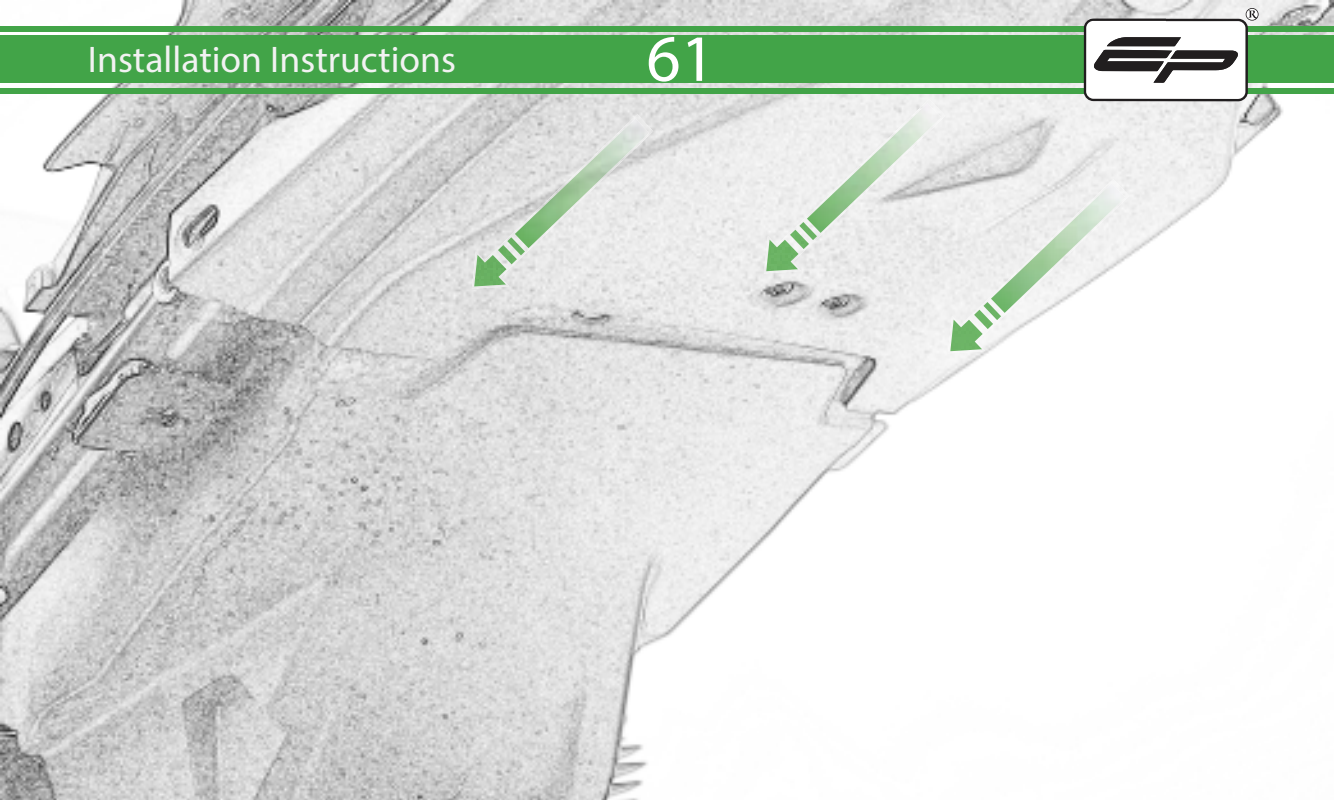

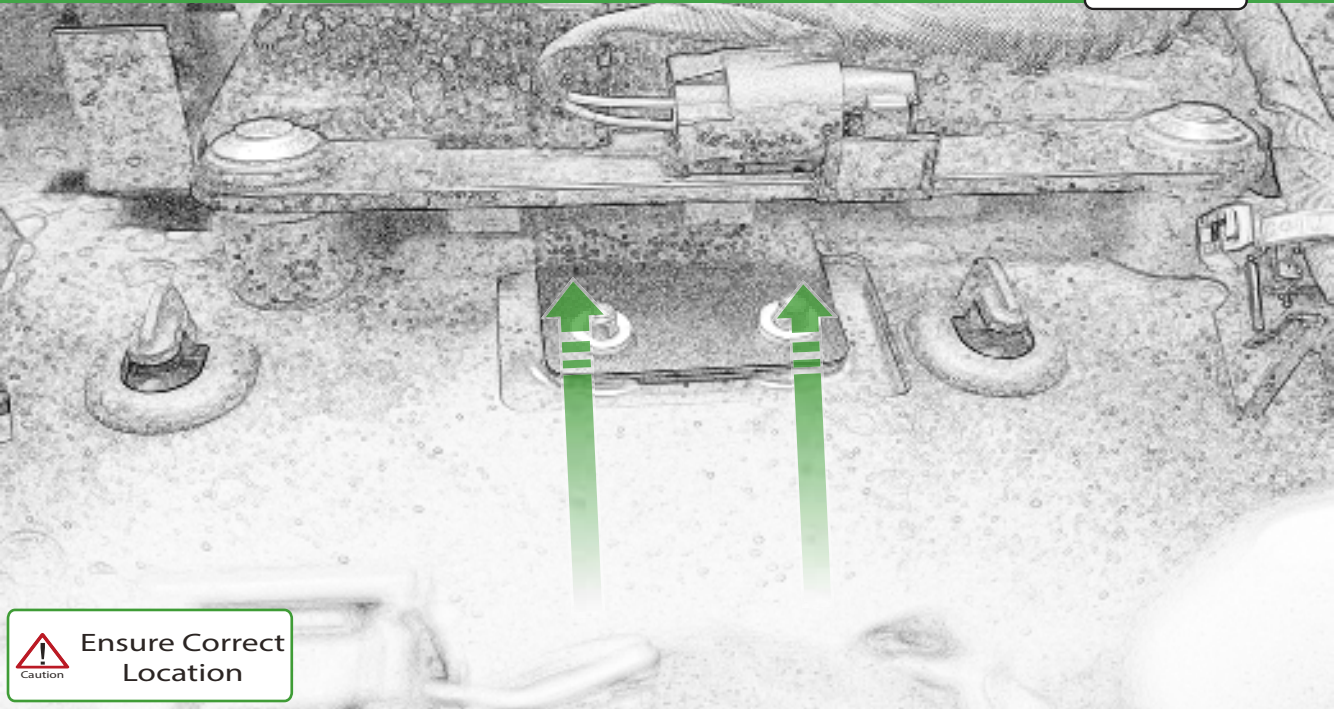



Ensure Correct  
Location






OEM PART

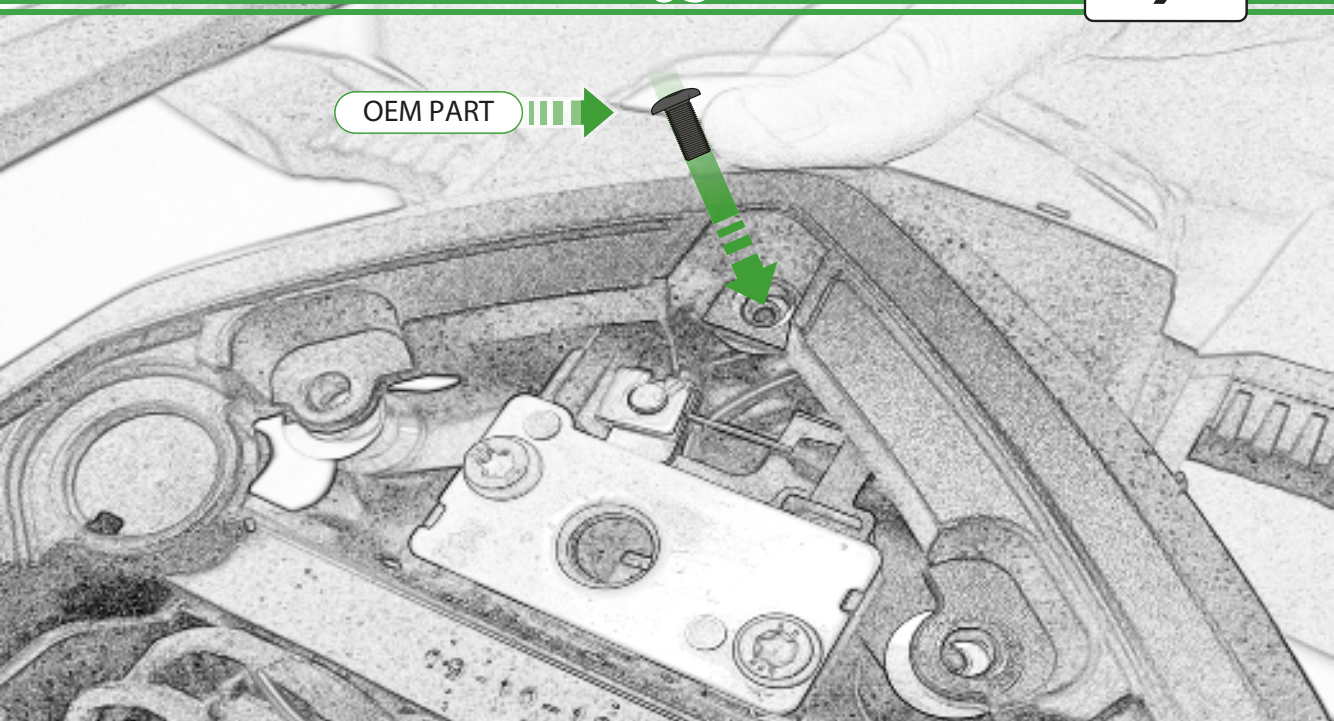


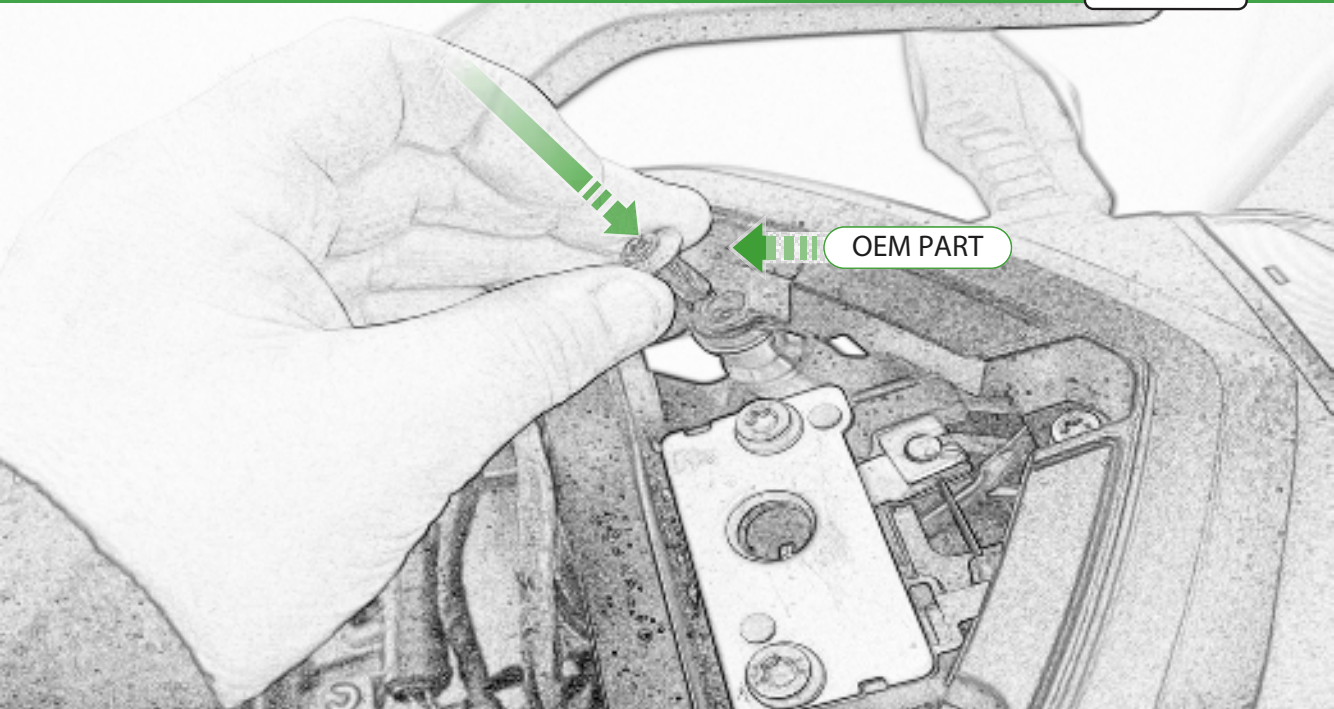

OEM PART

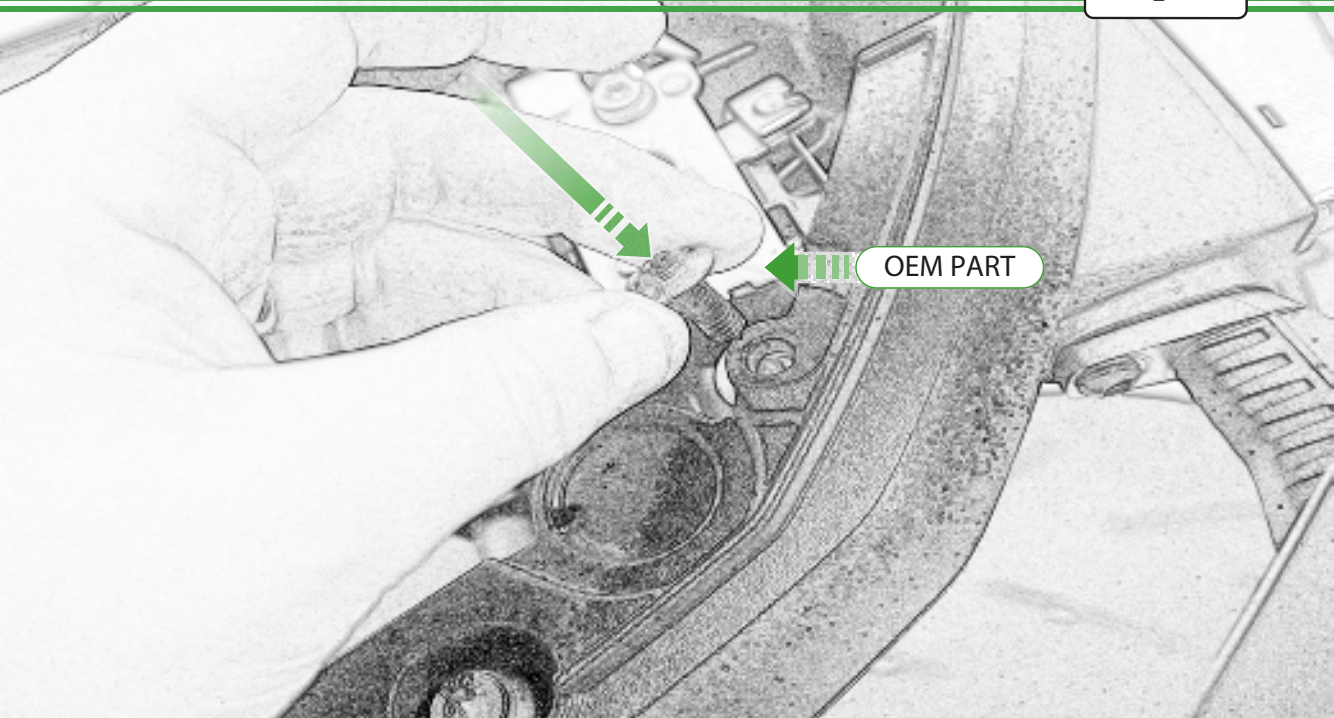


OEM PART

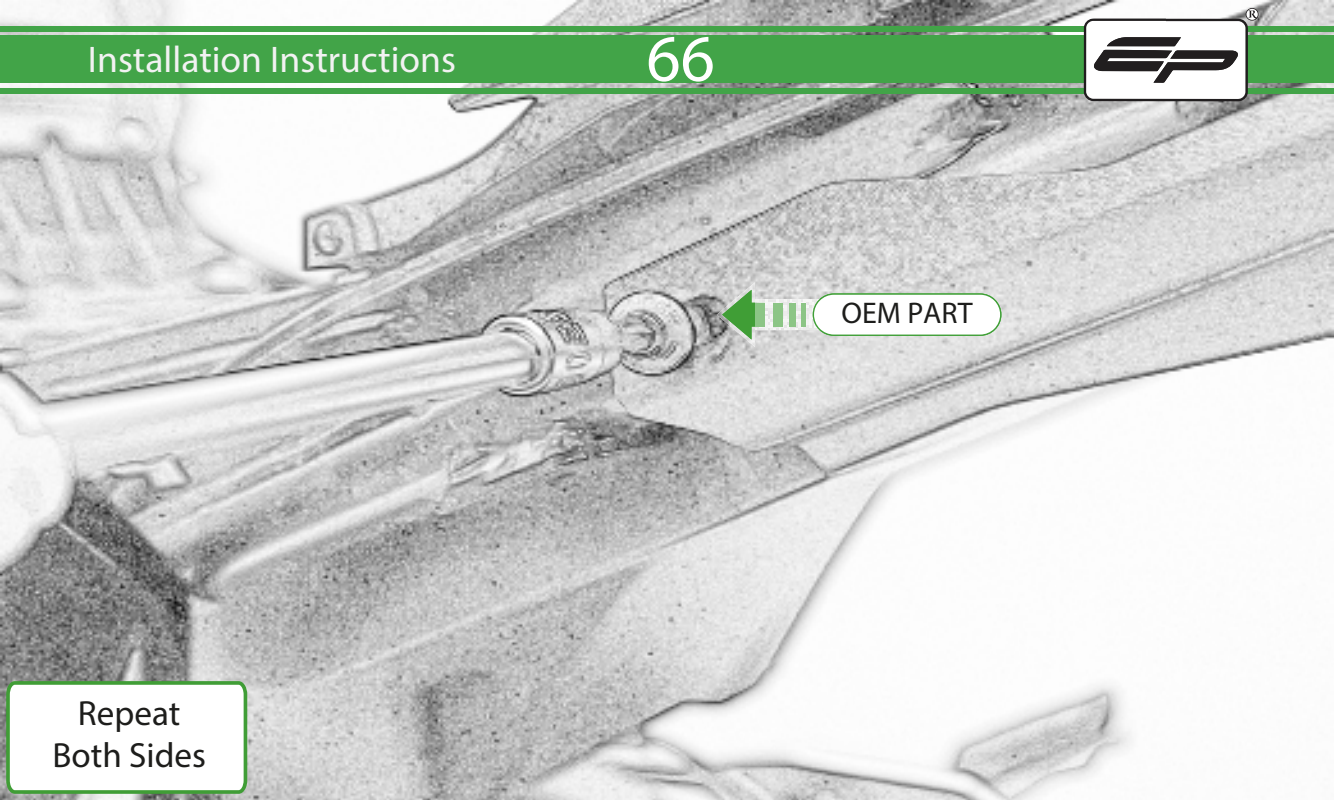

OEM PART


Repeat  
Both Sides

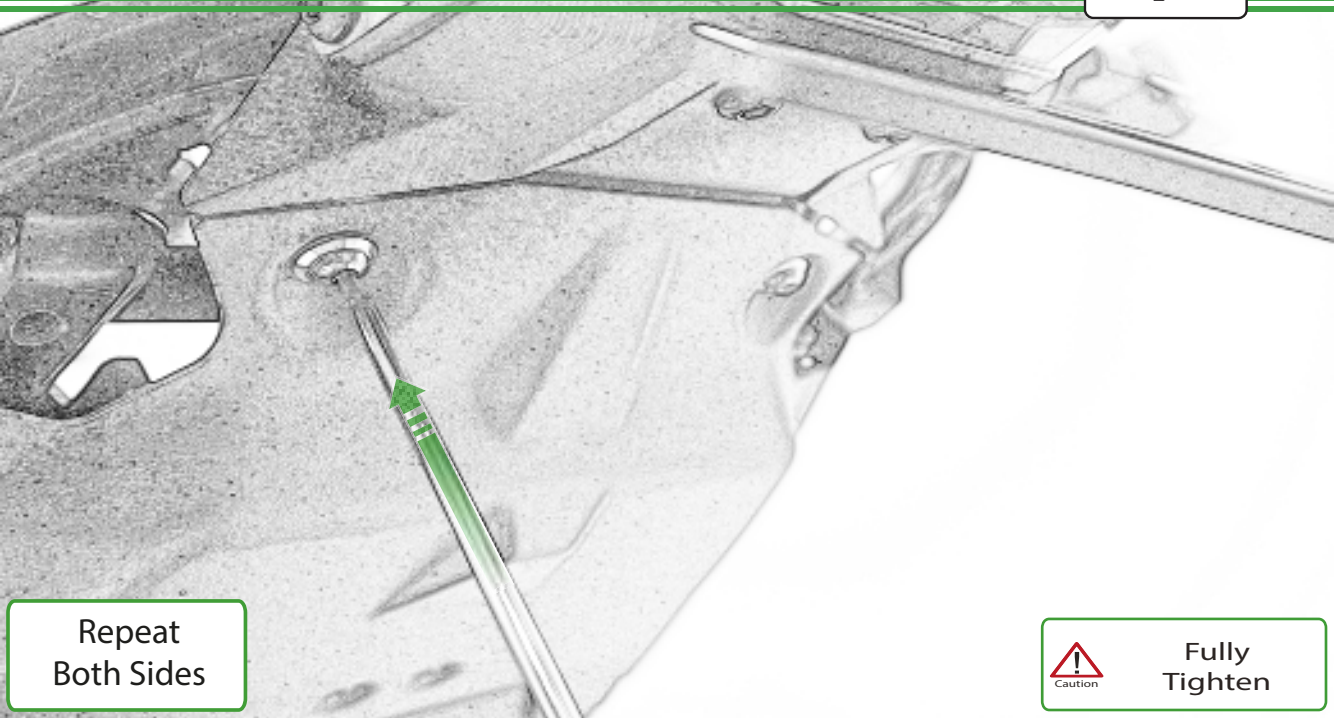



Repeat  
Both Sides




Fully  
Tighten

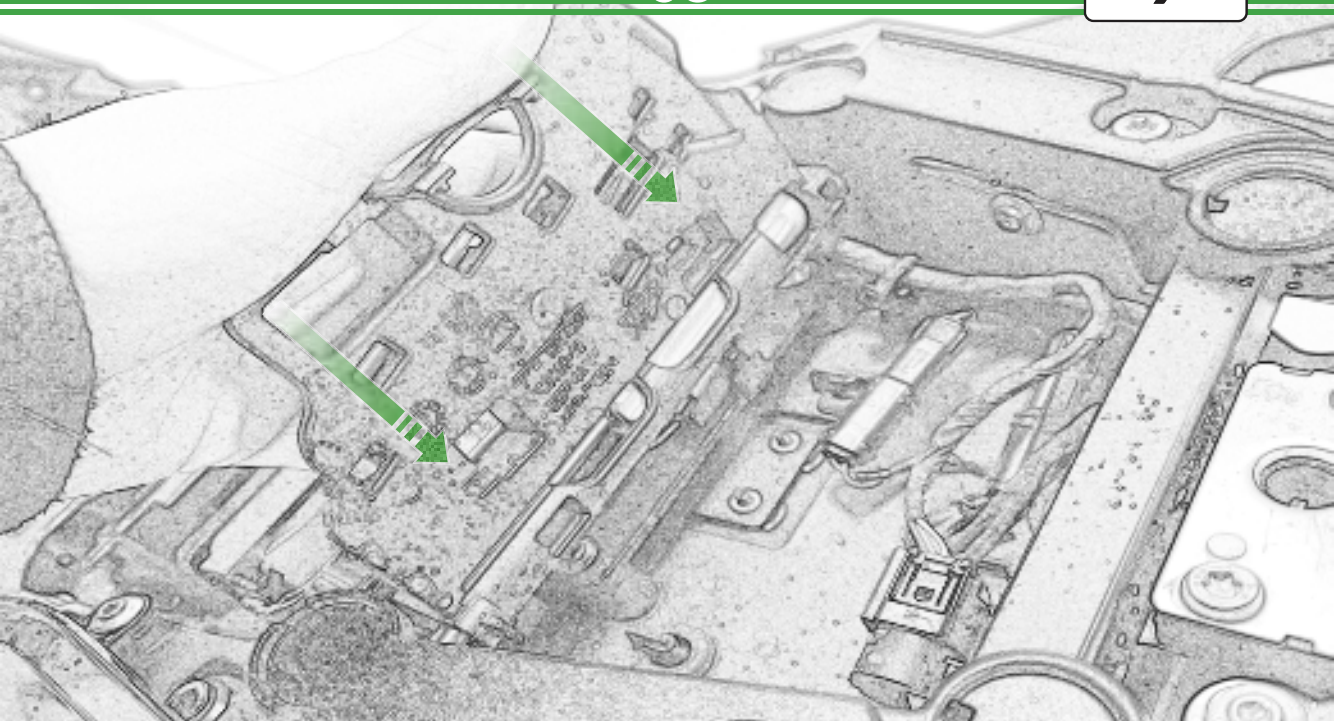


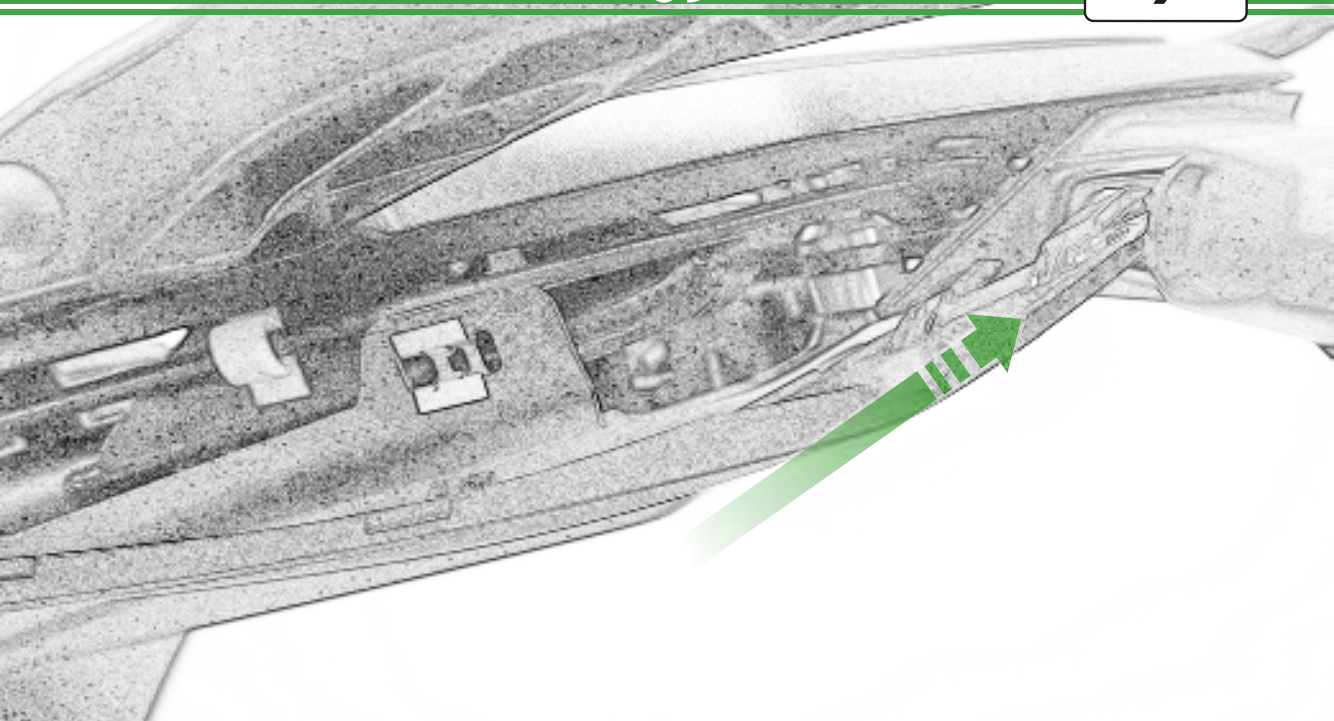


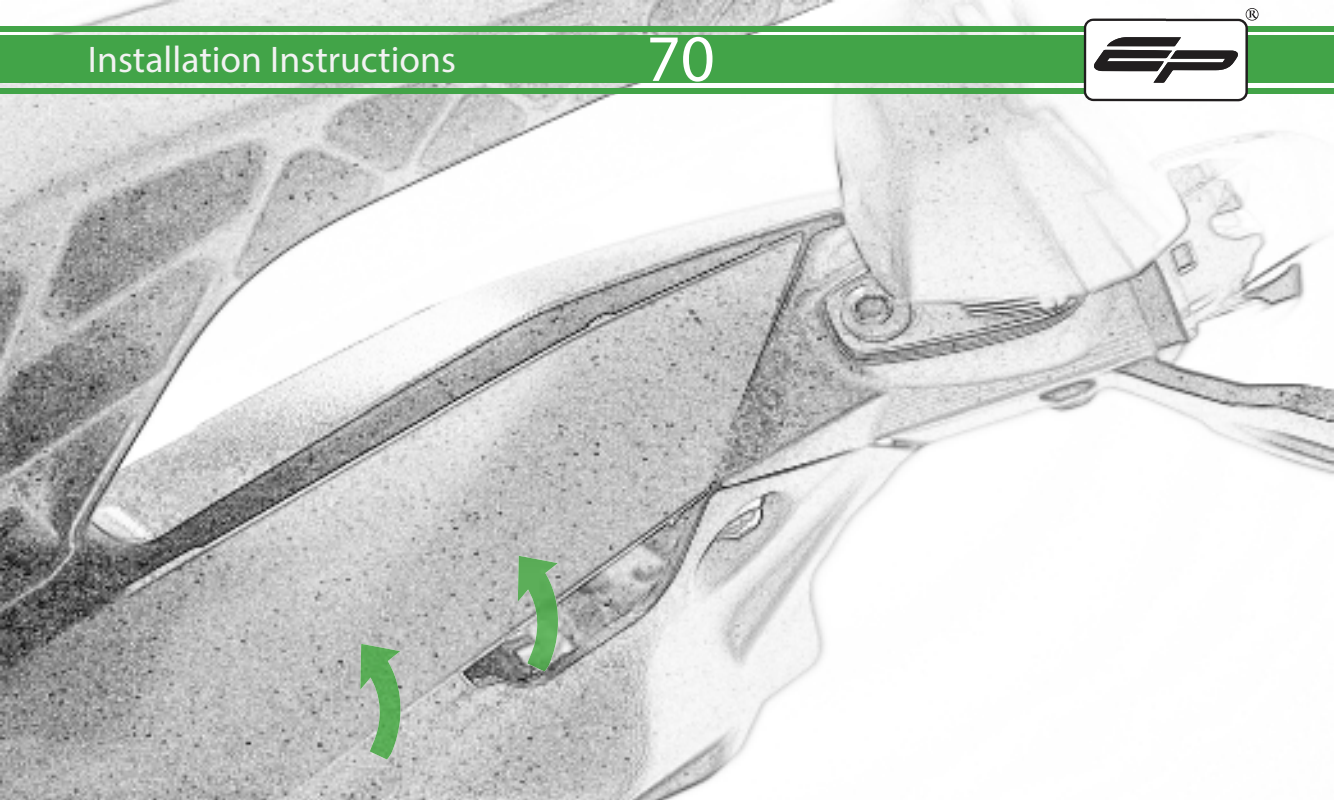



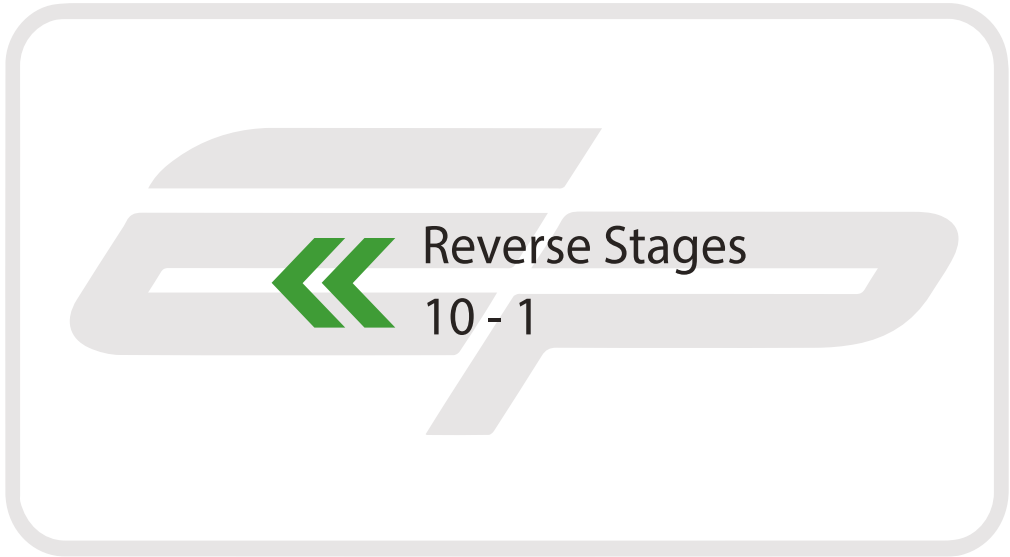

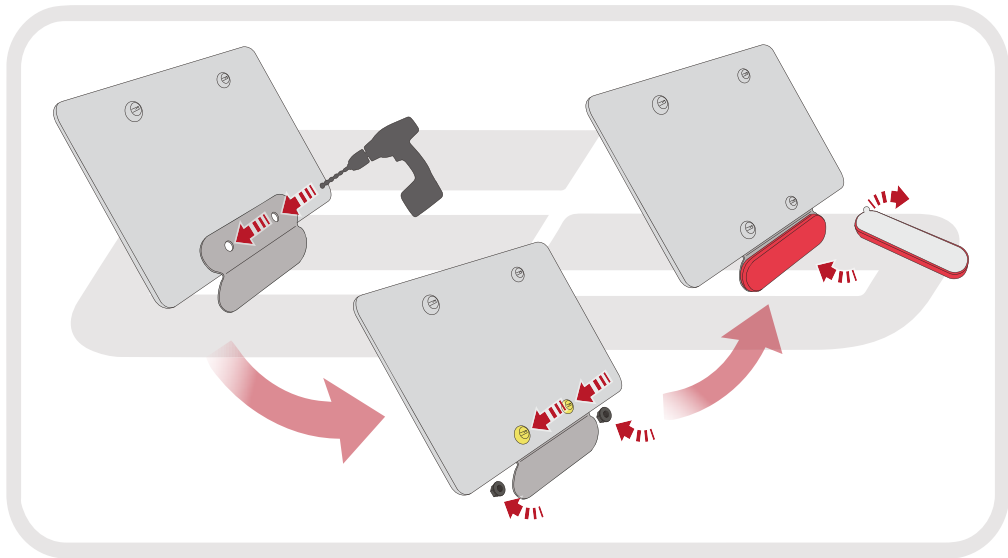

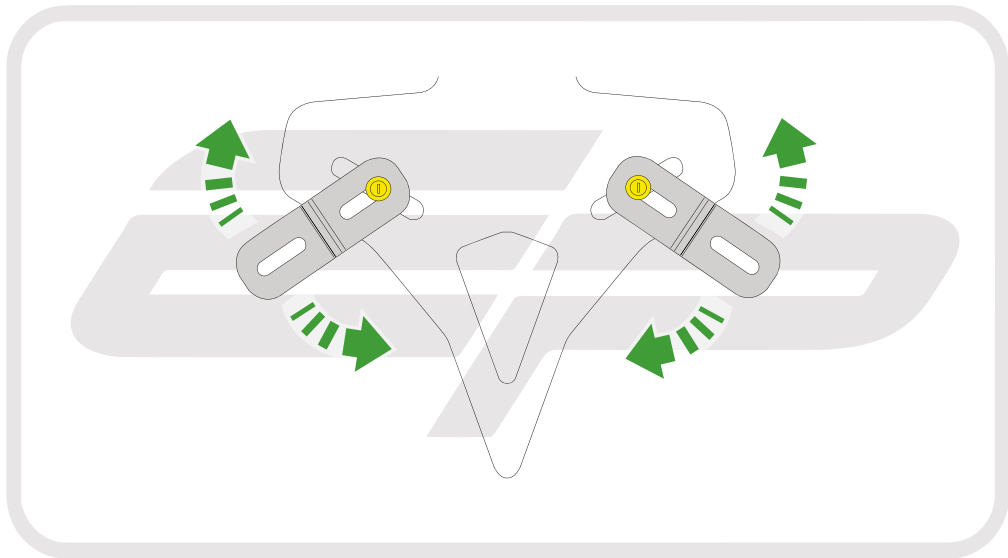



## ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)