



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Suzuki V-Strom 650/ 650XT
Hand Guard Instructions





Kit Contents PRN015175


- (A) 1 x R/H Mirror Bracket
- (B) 1 x L/H Mirror Bracket
- (C) 1 x R/H Hand Guard Assembly
- (D) 1 x L/H Hand Guard Assembly
- (E) 4 x M5 x 16 Black Button Head Bolts
- (F) 4 x M5 Black Washers





1

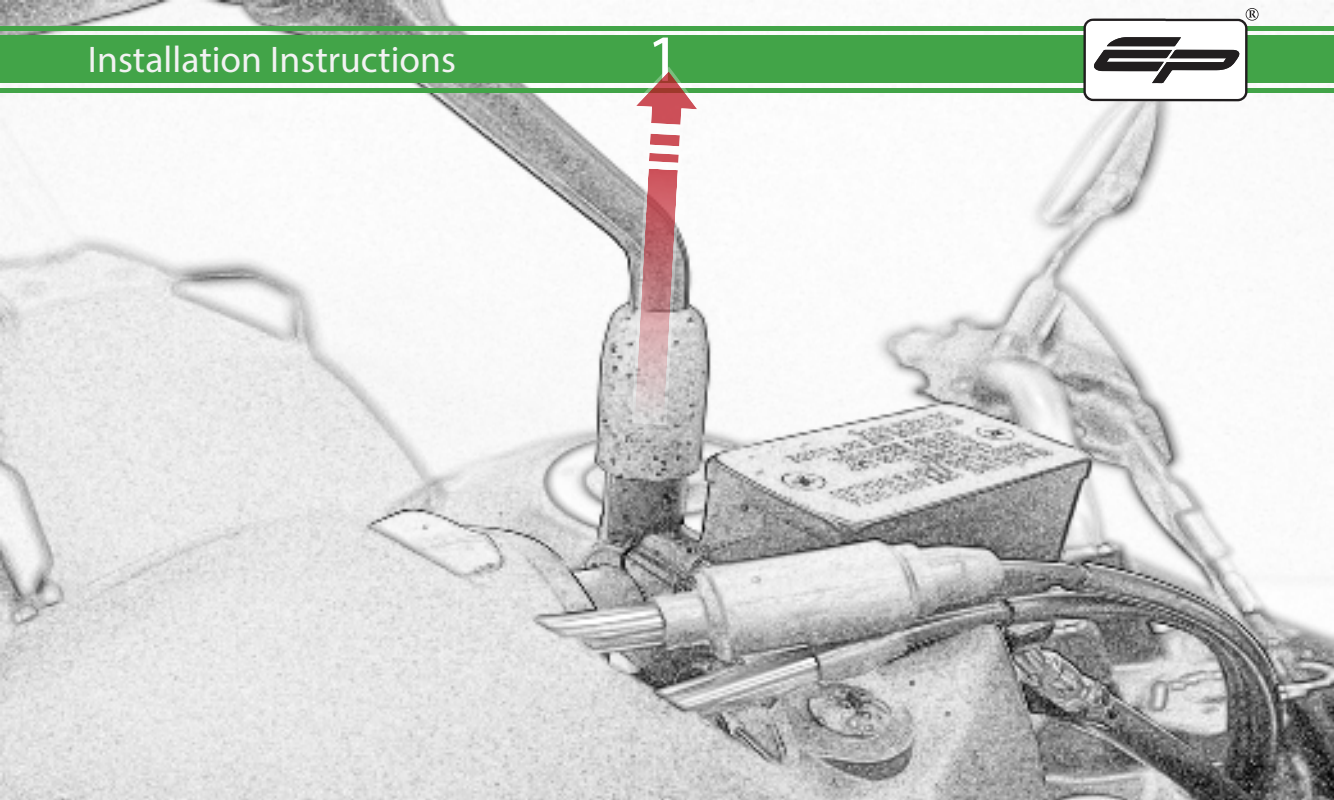


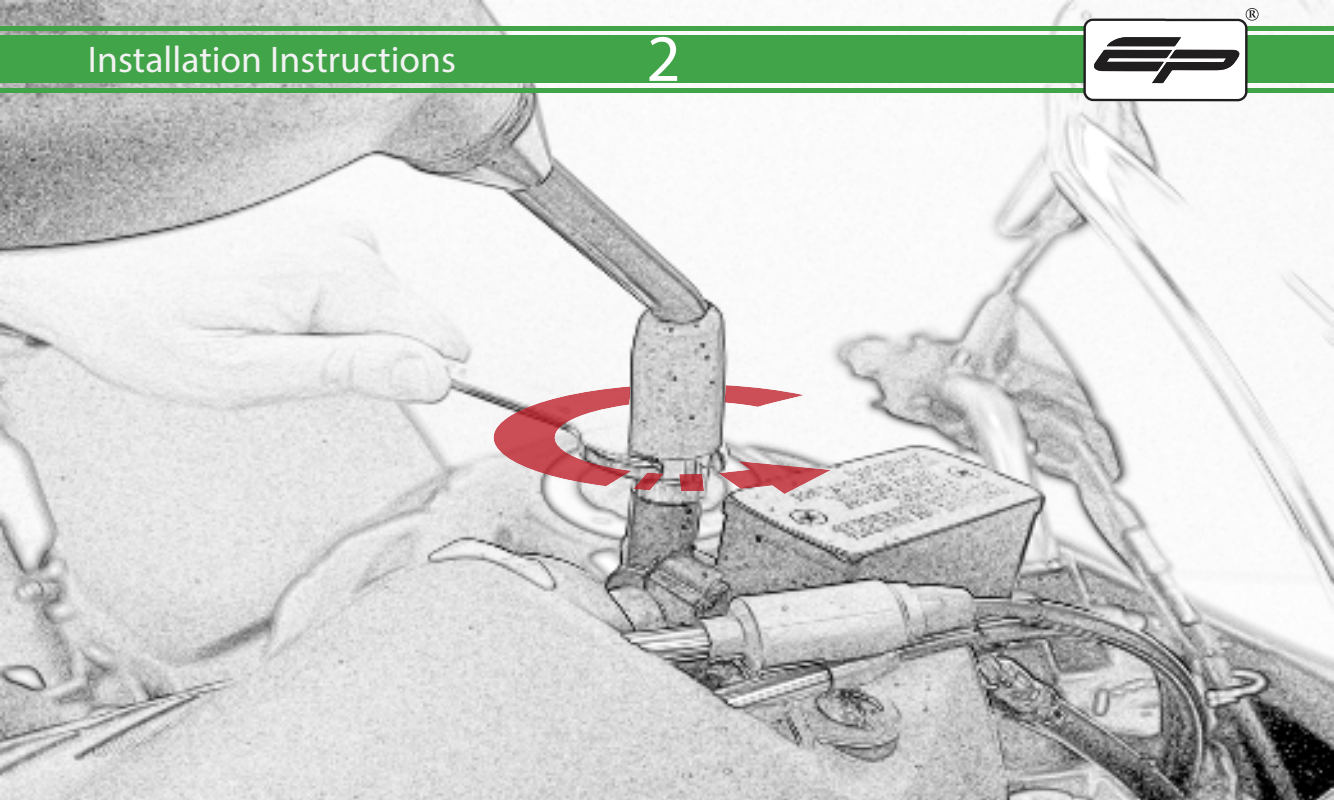


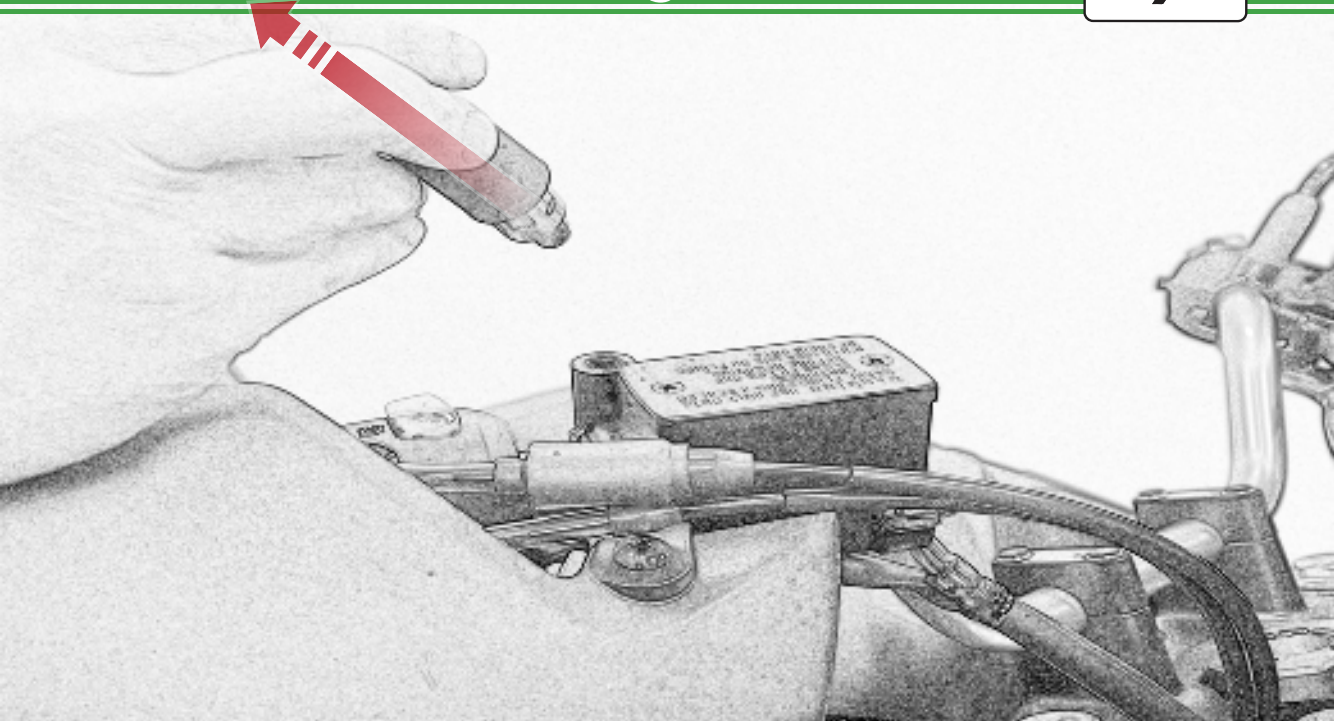


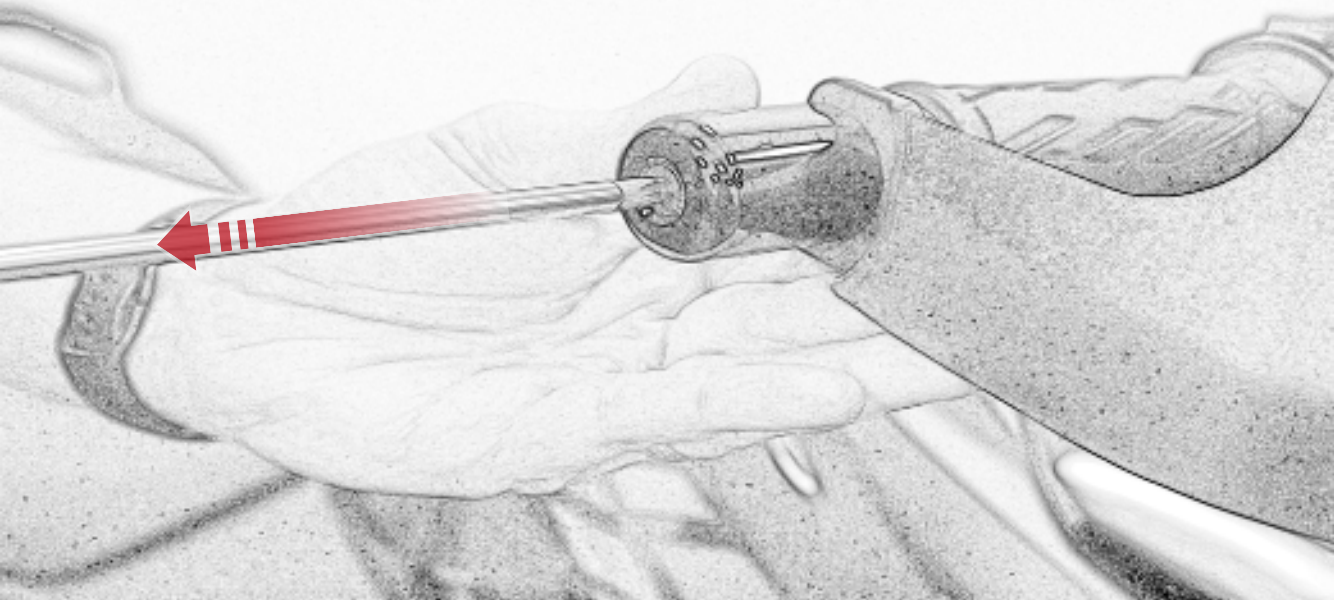


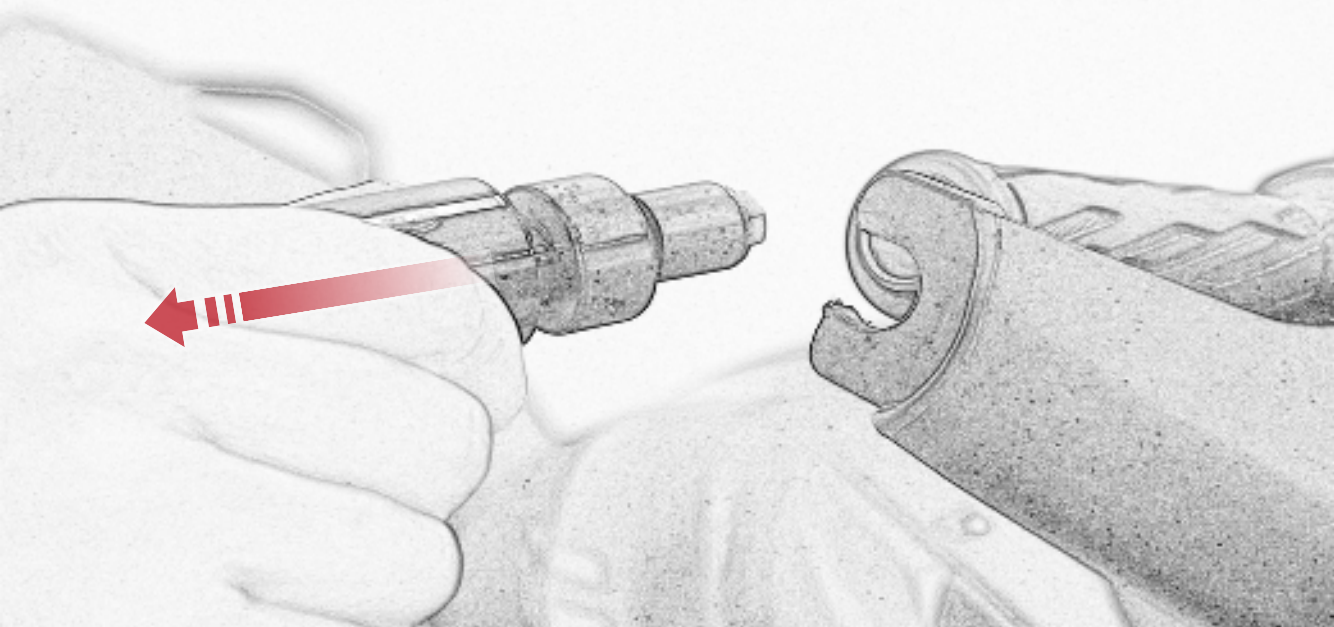


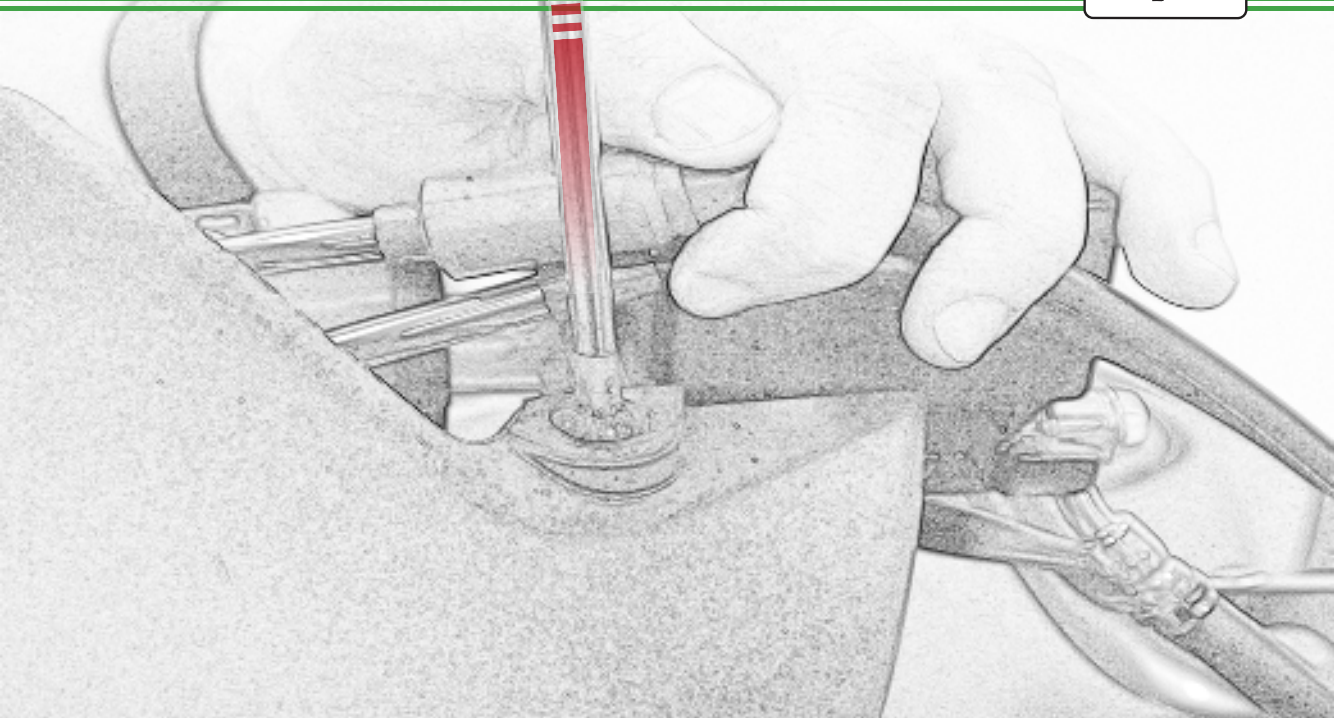


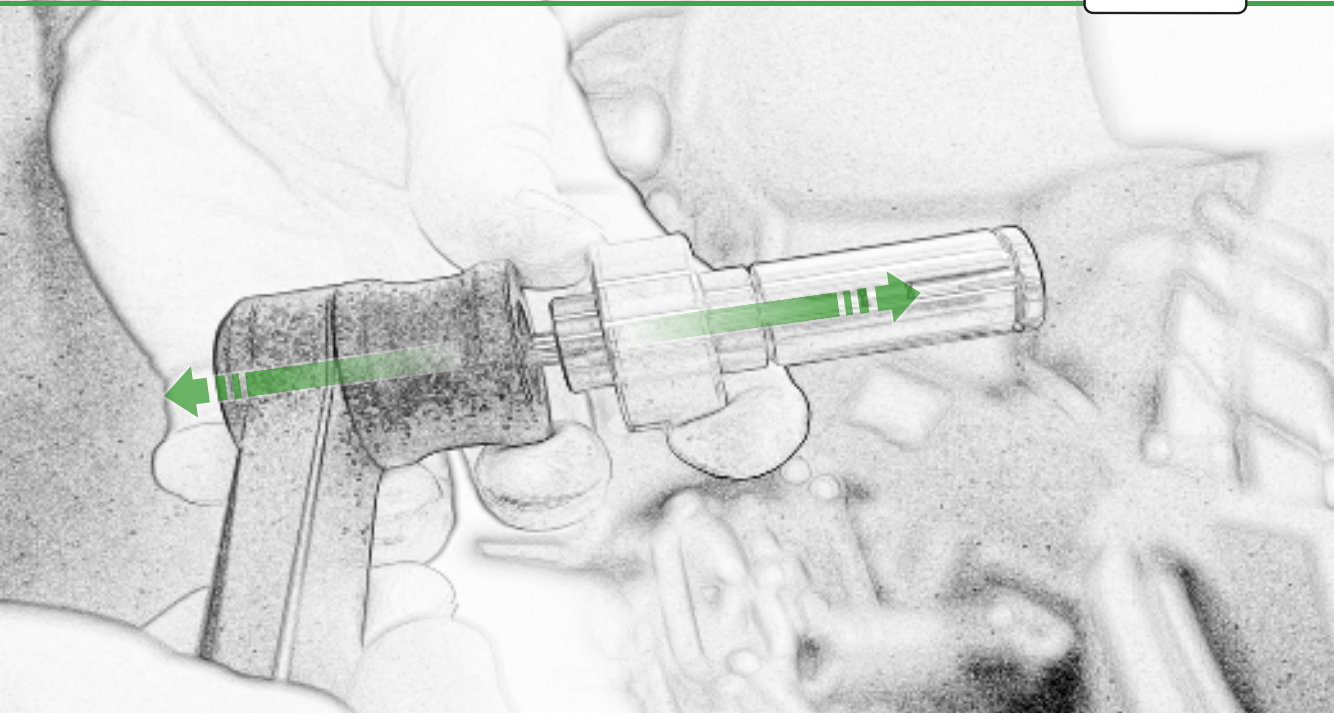


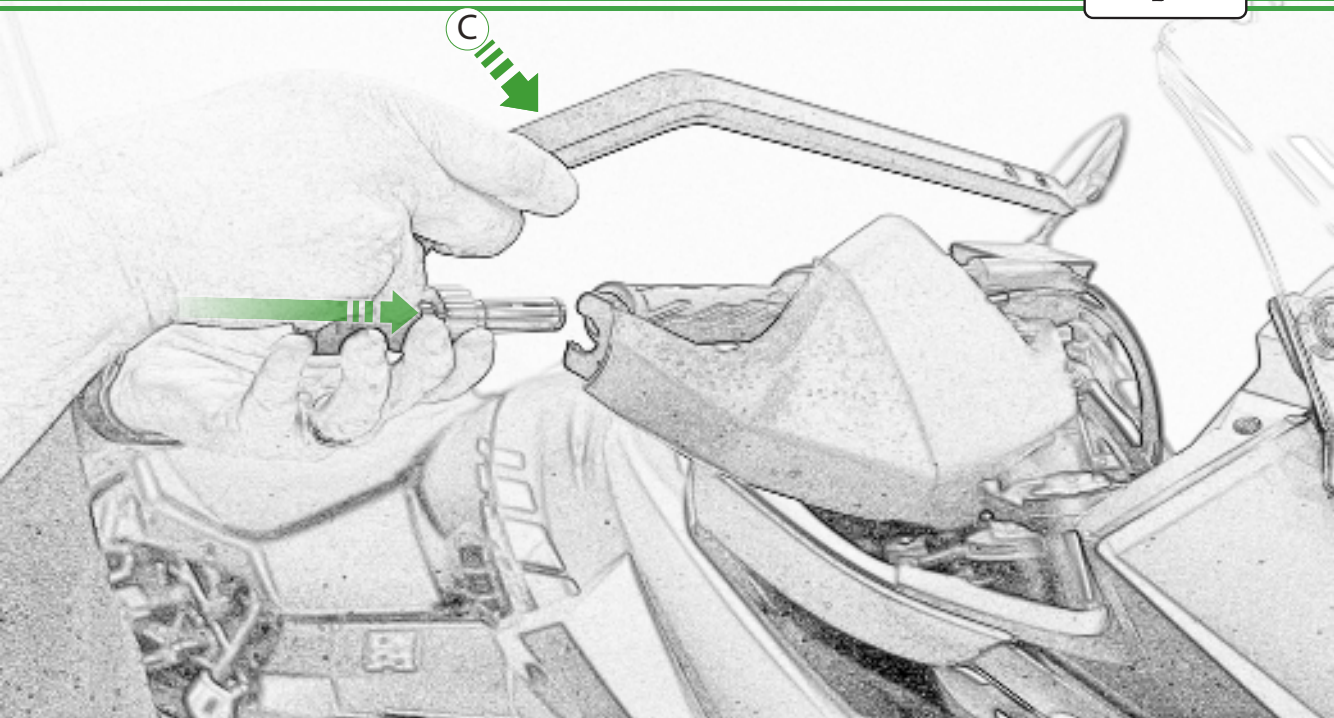


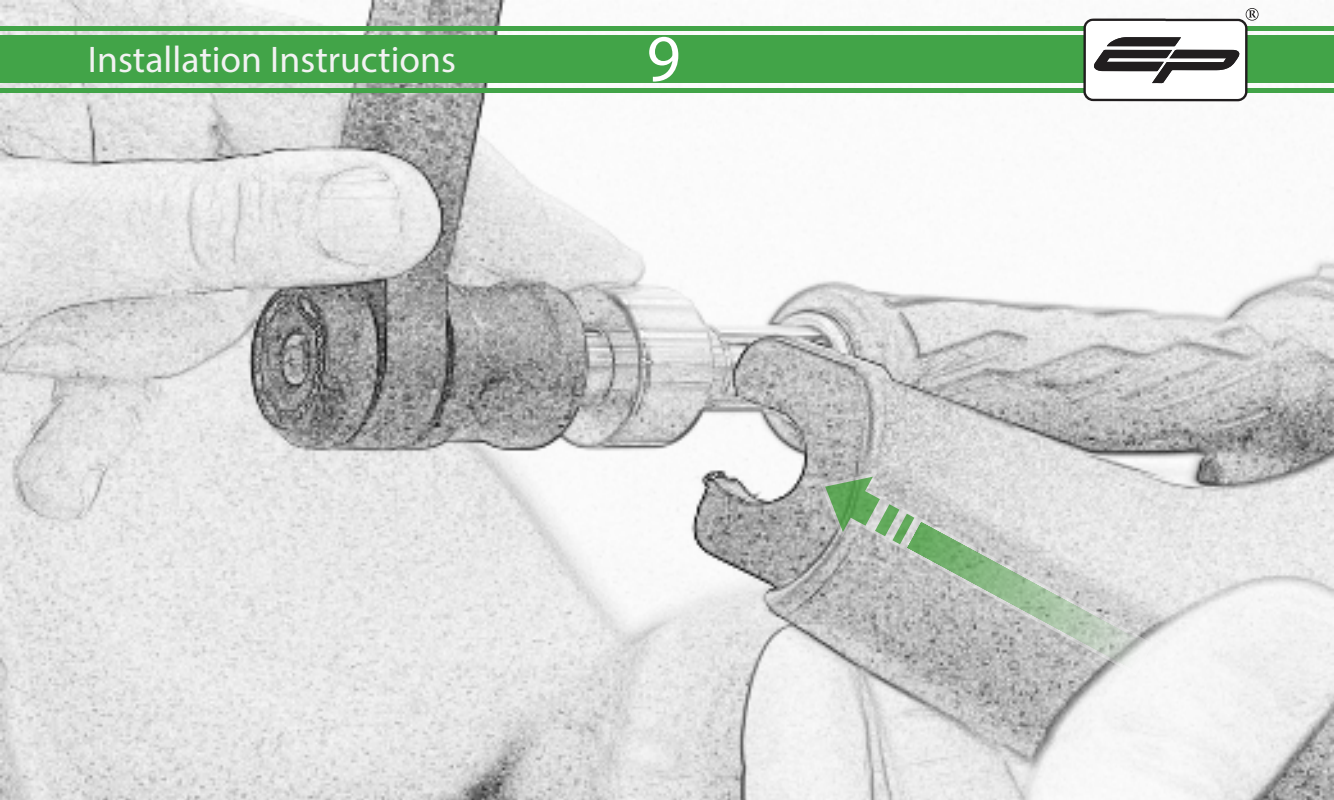

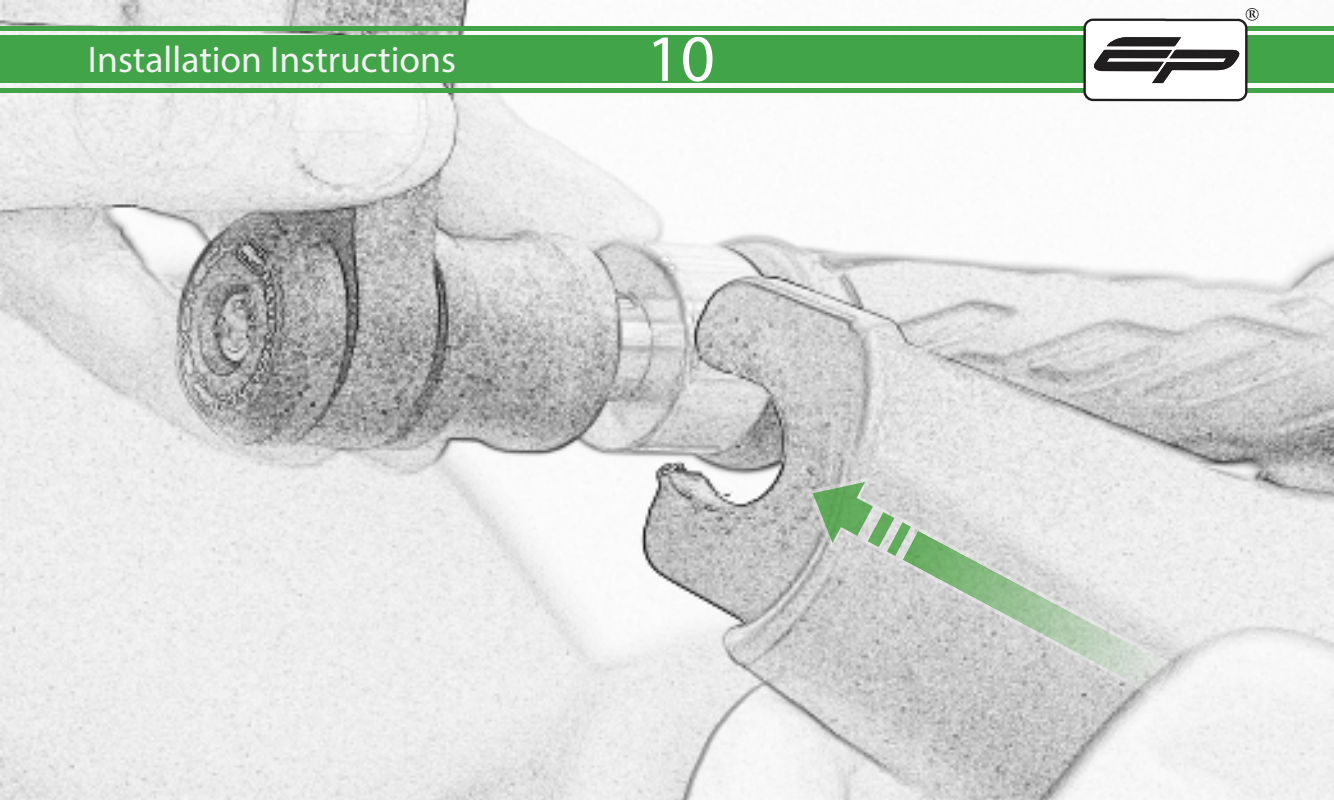

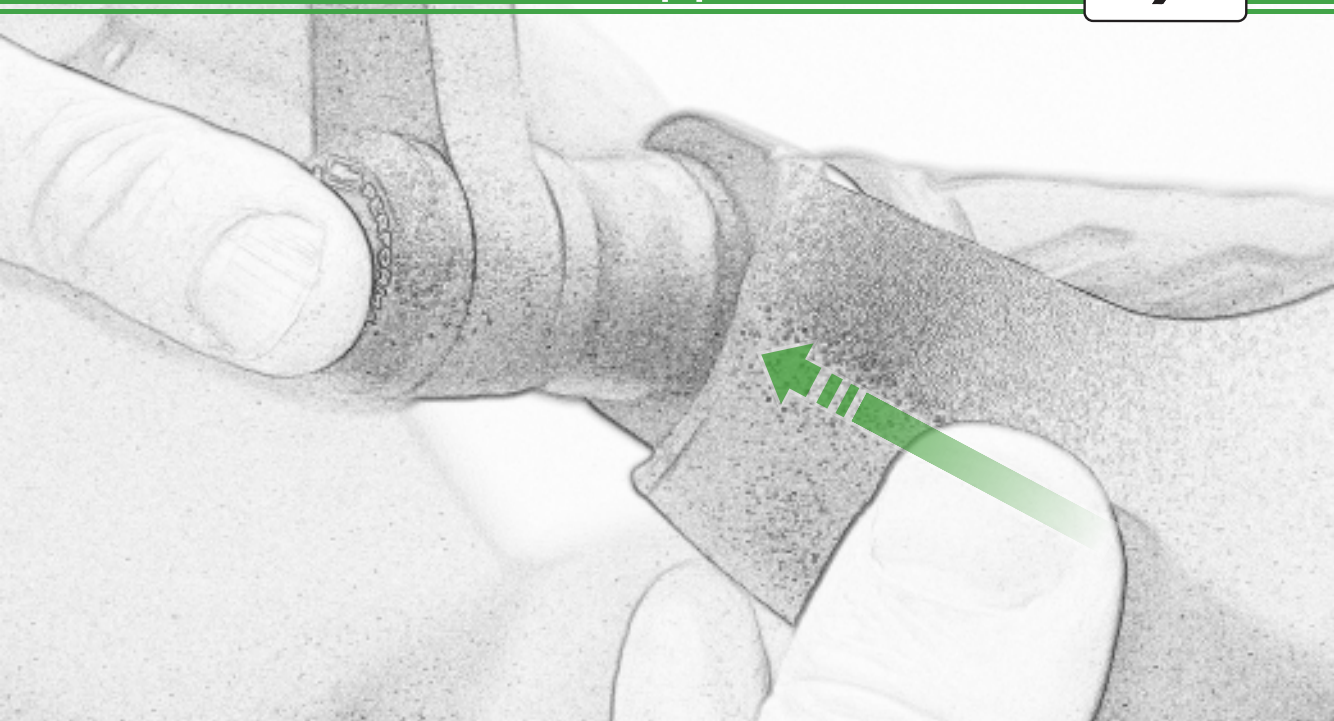


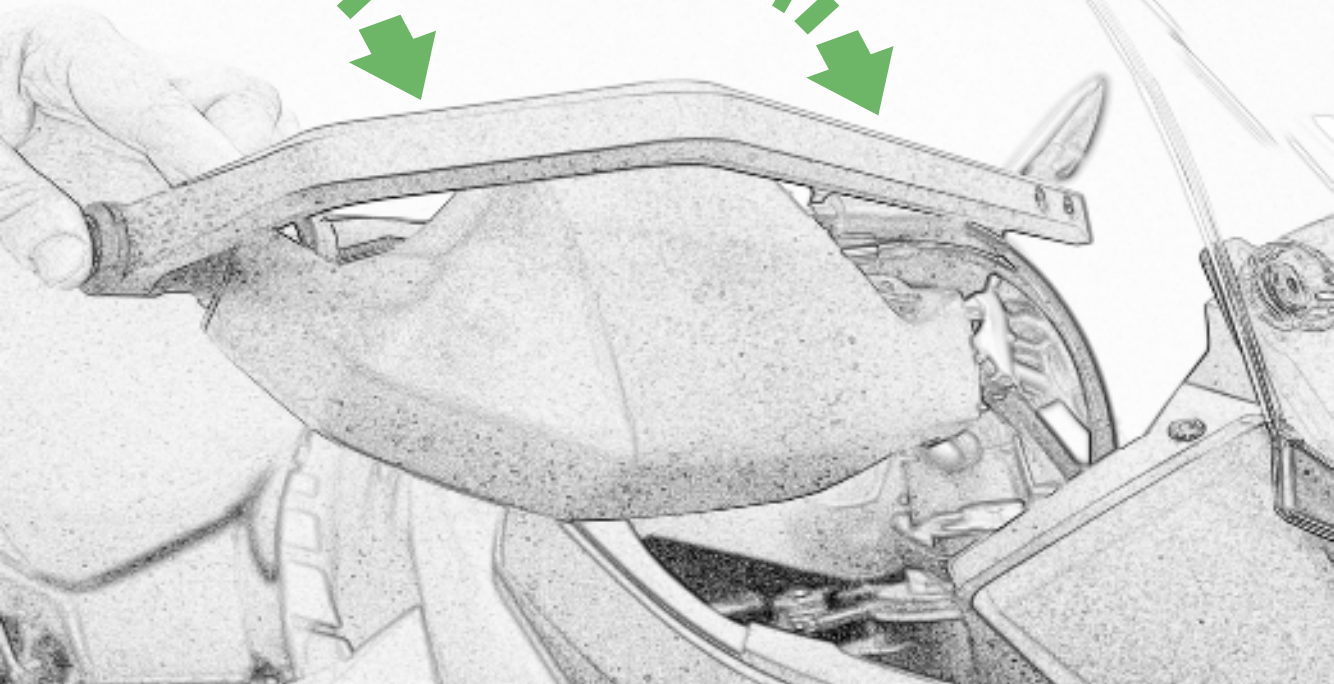


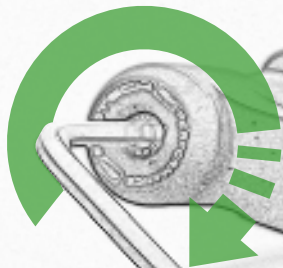



Caution

**Do Not Fully
Tighten**

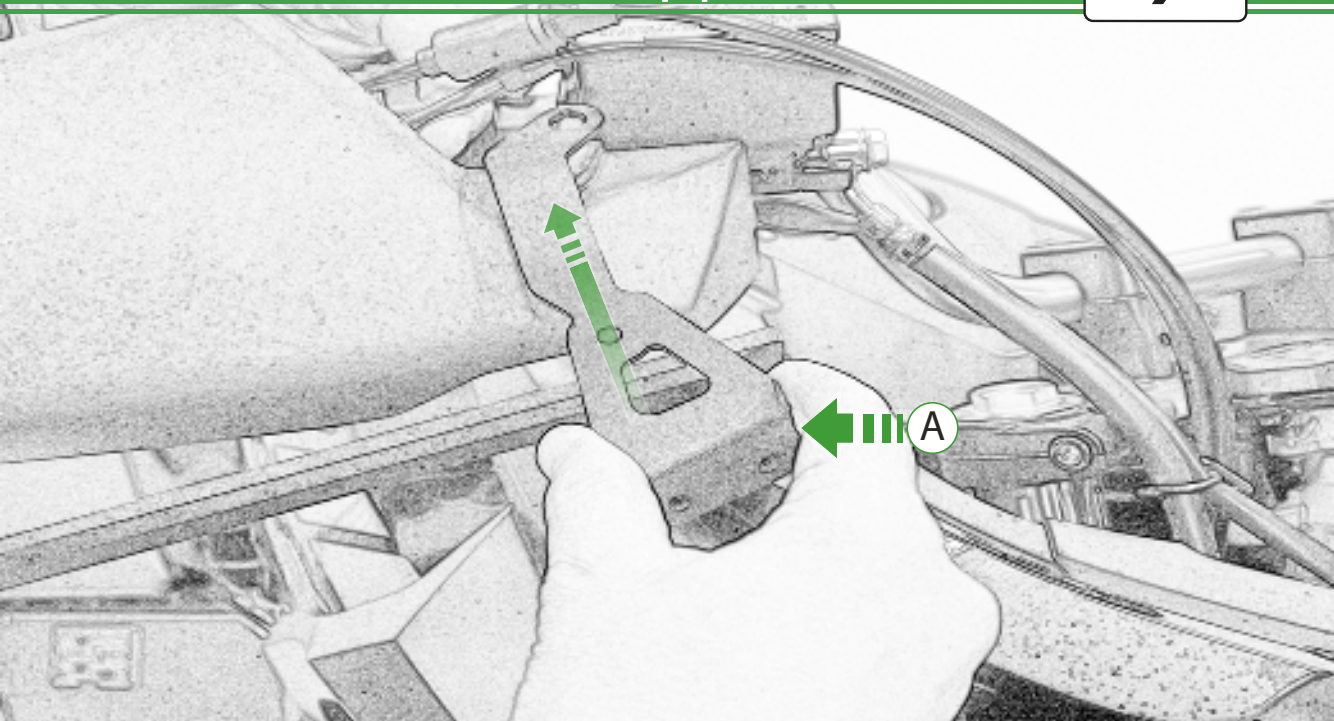

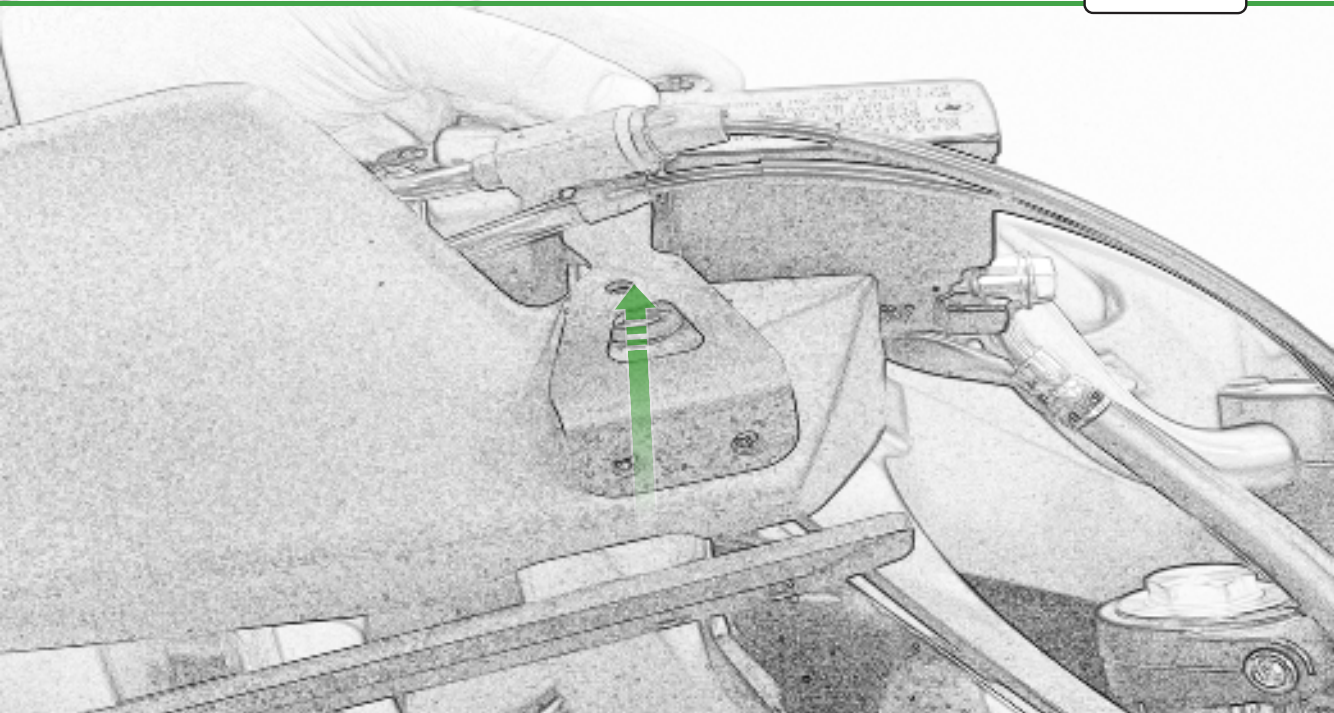


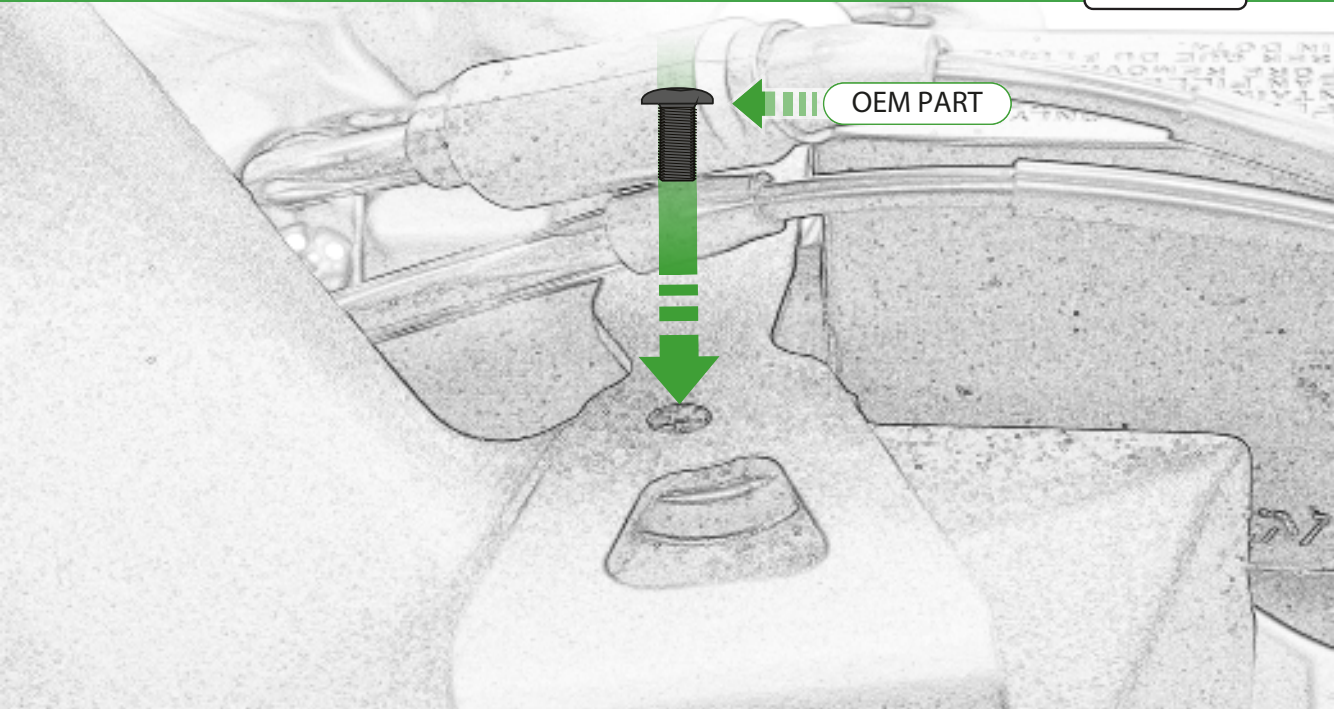


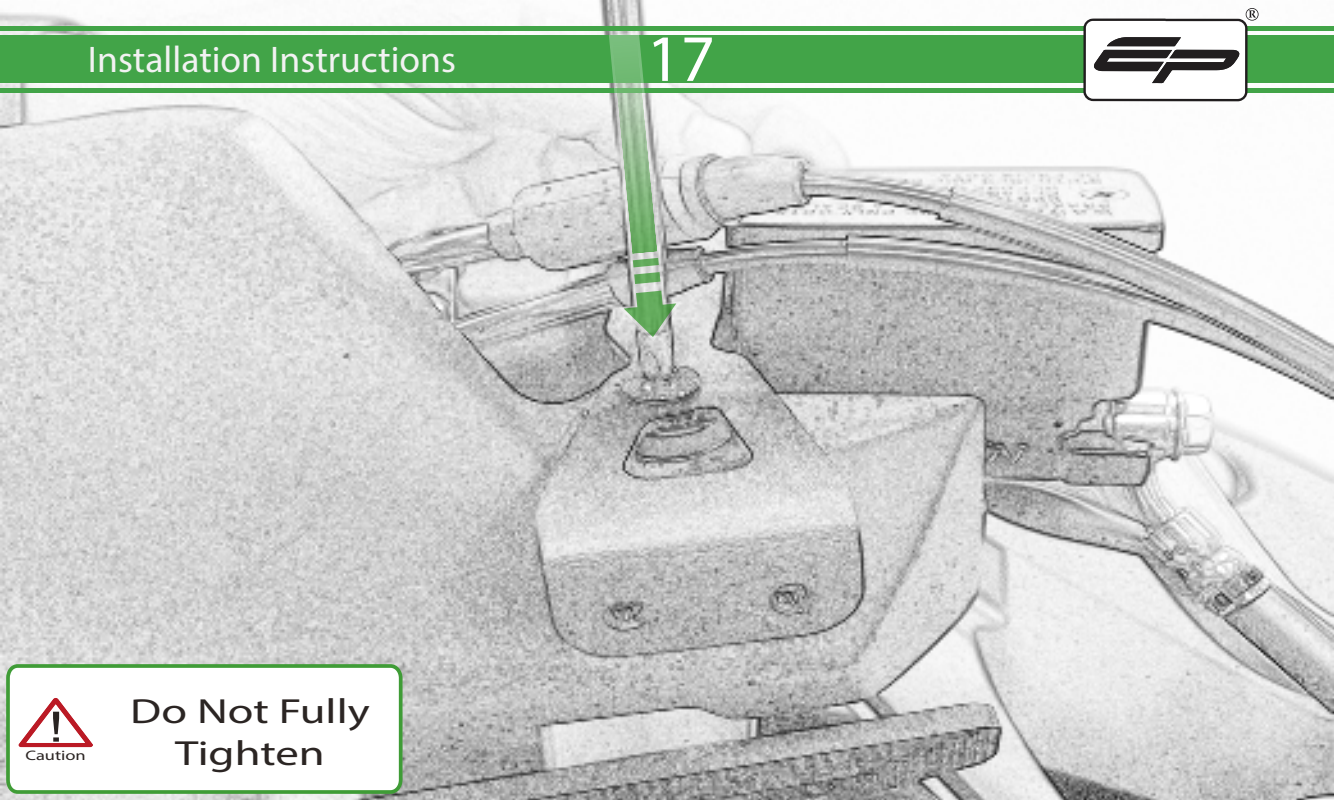

Caution


Do Not Fully
Tighten

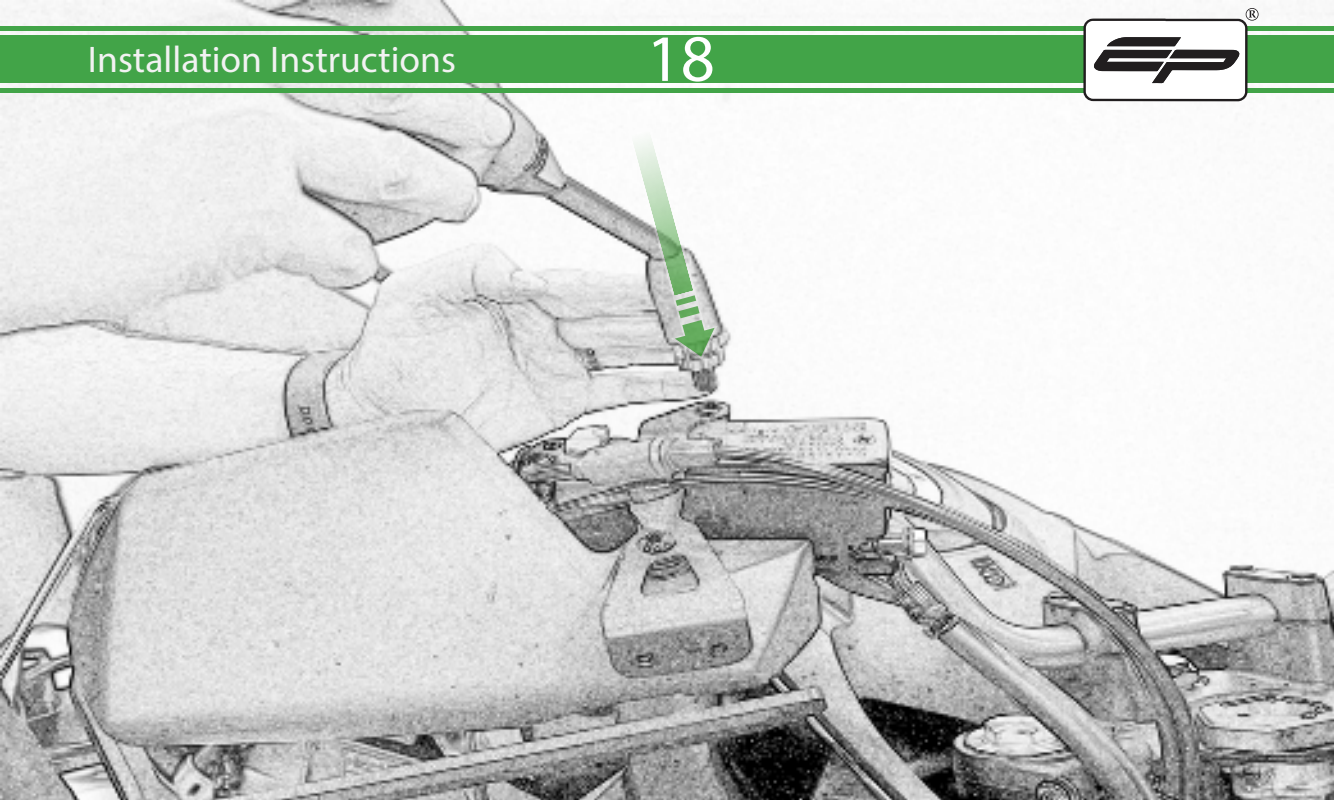


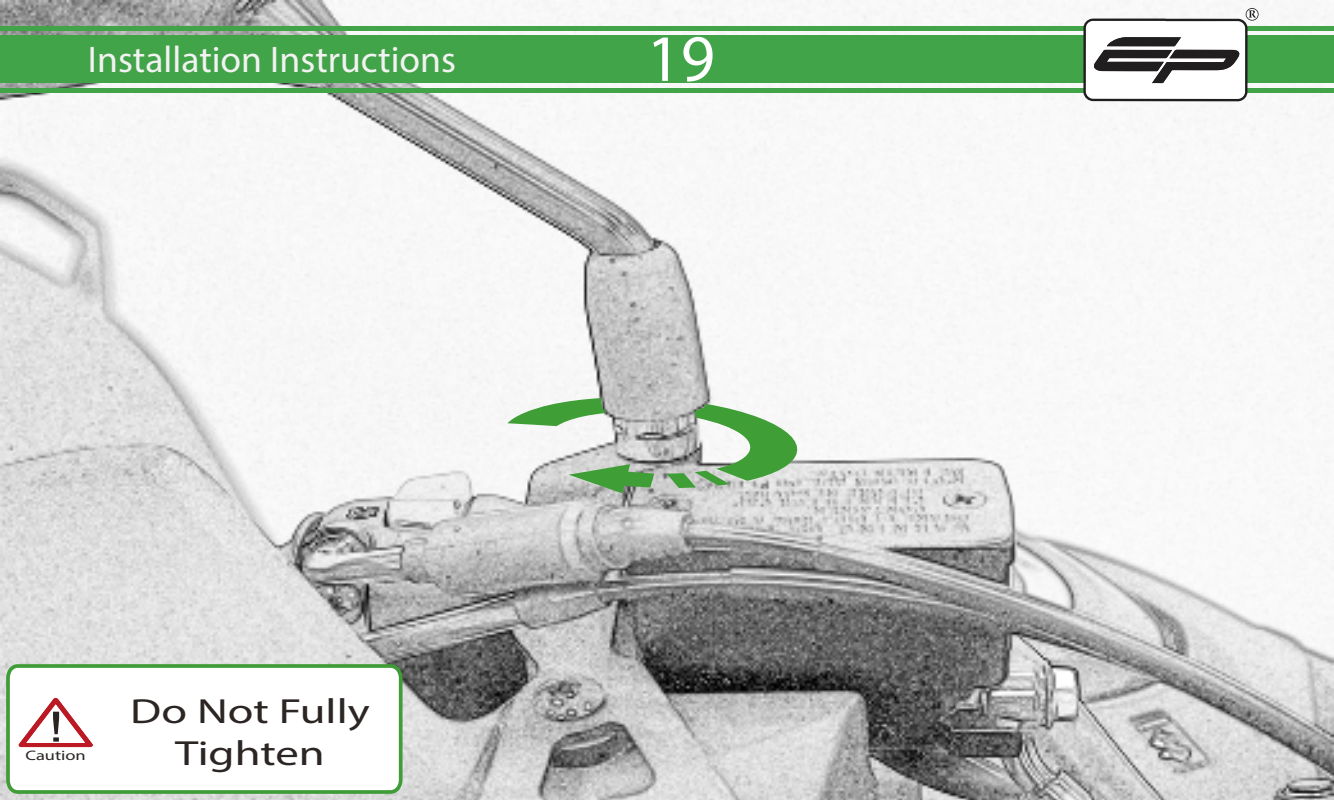

Caution


Do Not Fully Tighten

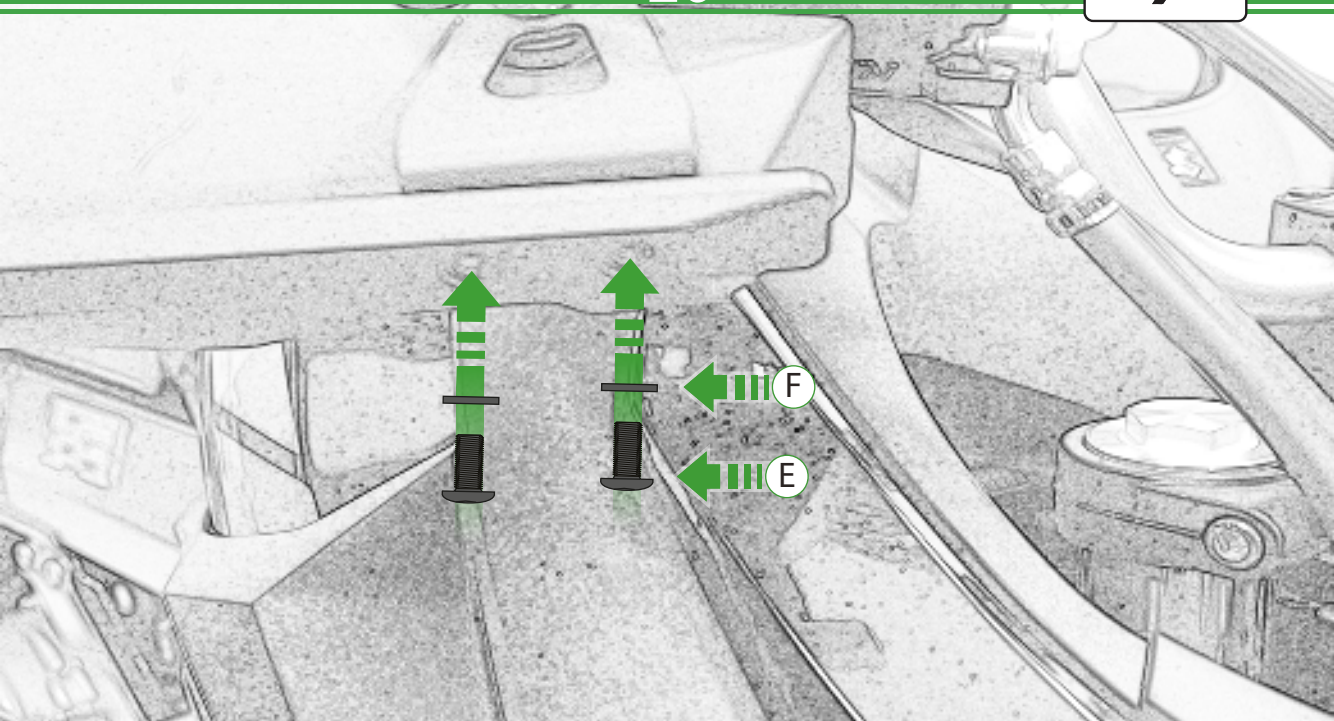

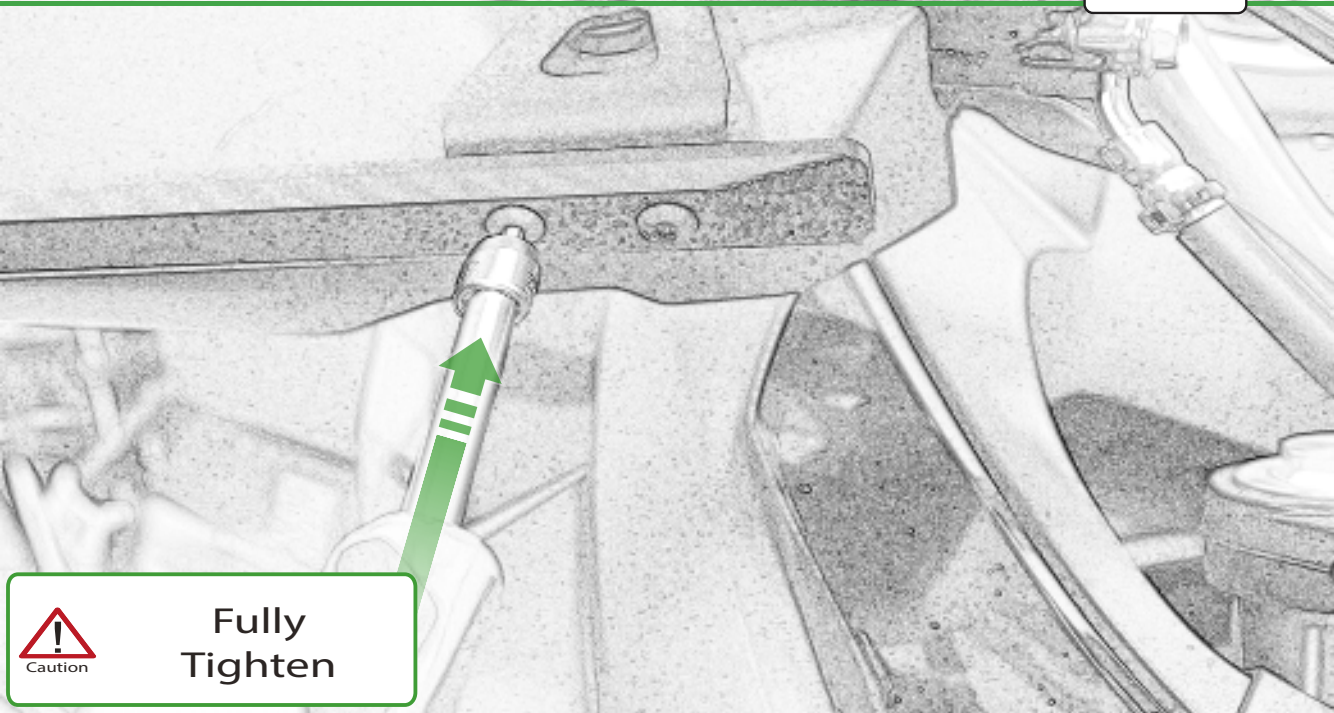


Caution

Fully
Tighten

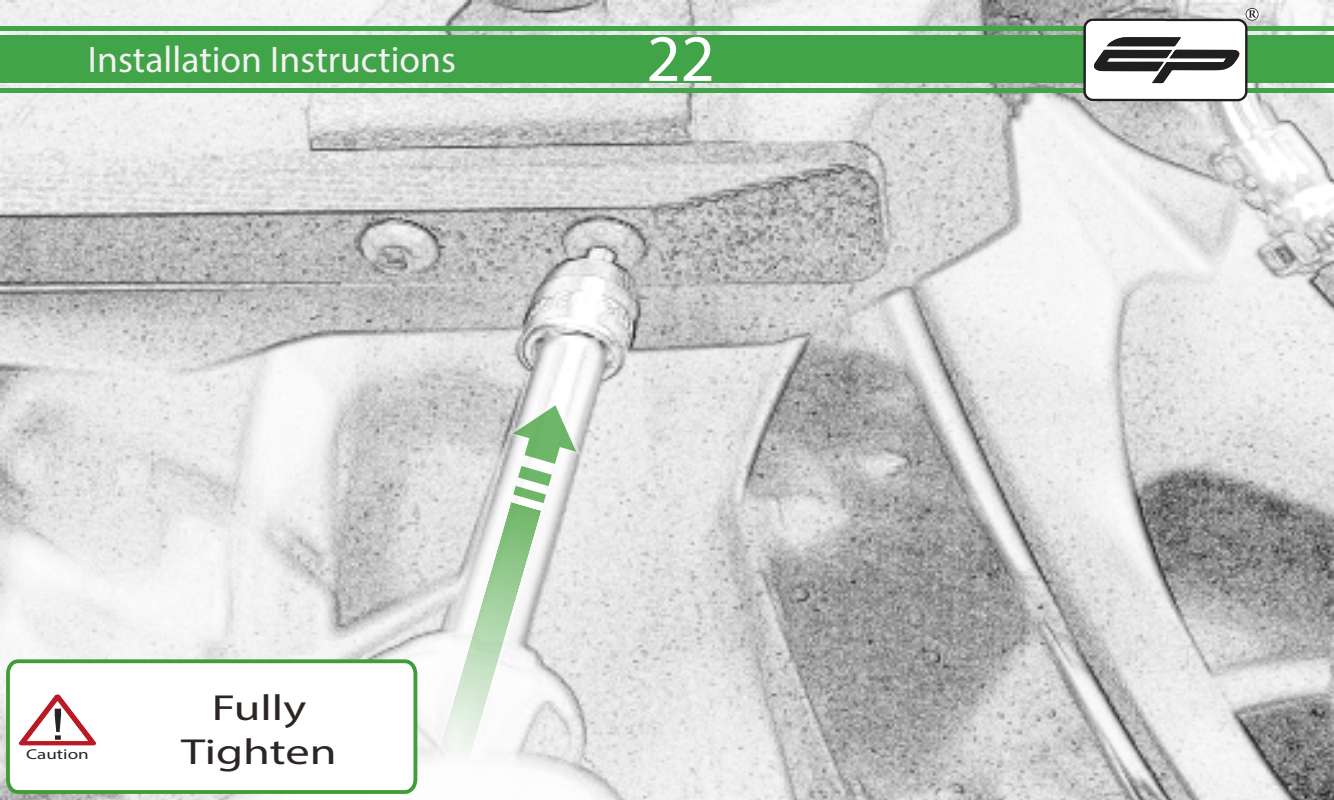


Caution

Fully
Tighten

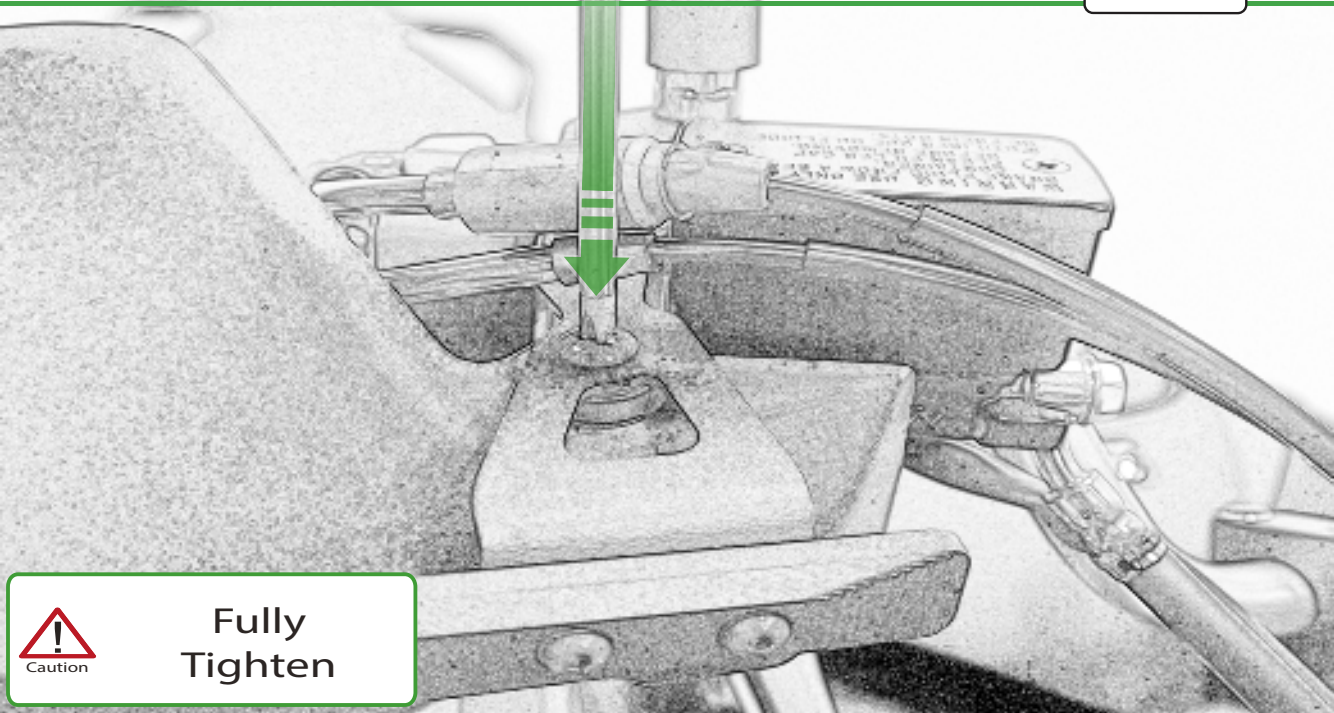


Caution

Fully
Tighten

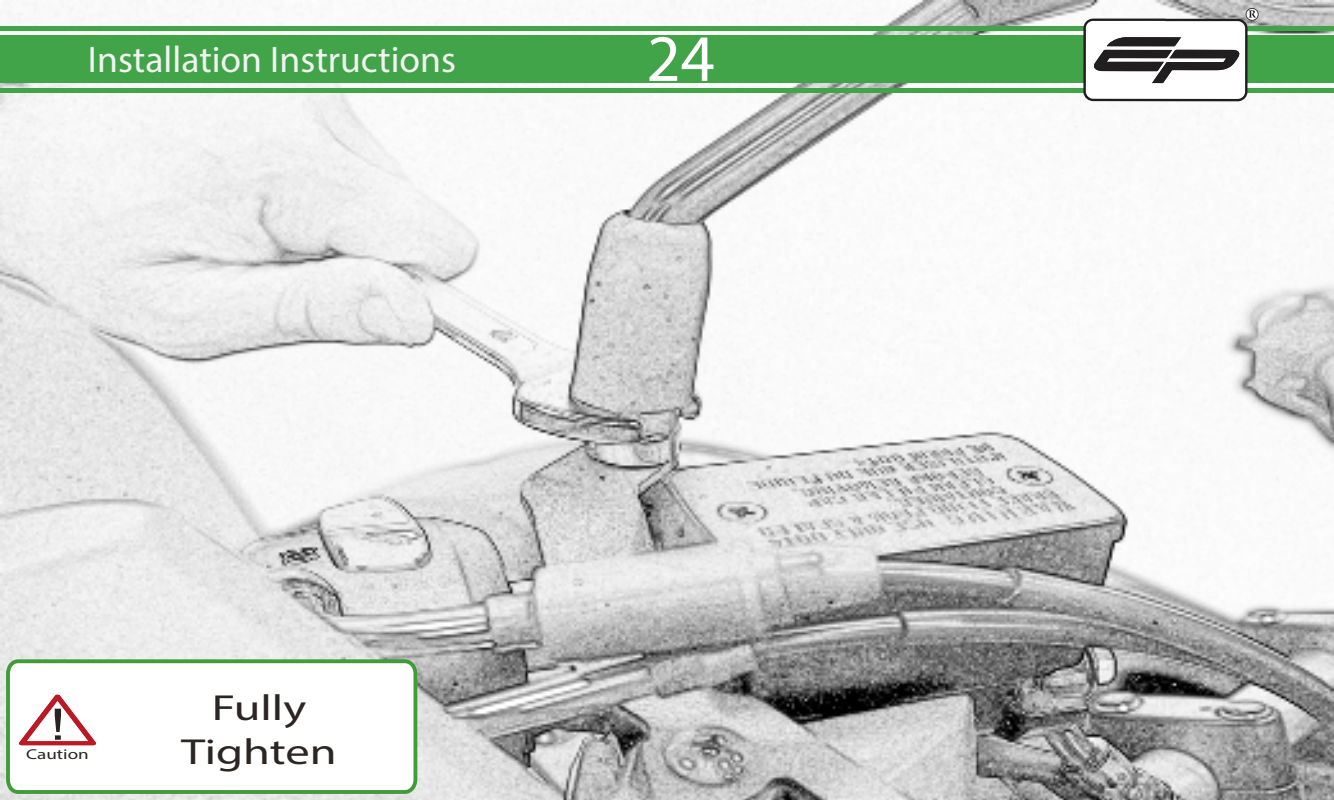


Caution


Fully
Tighten

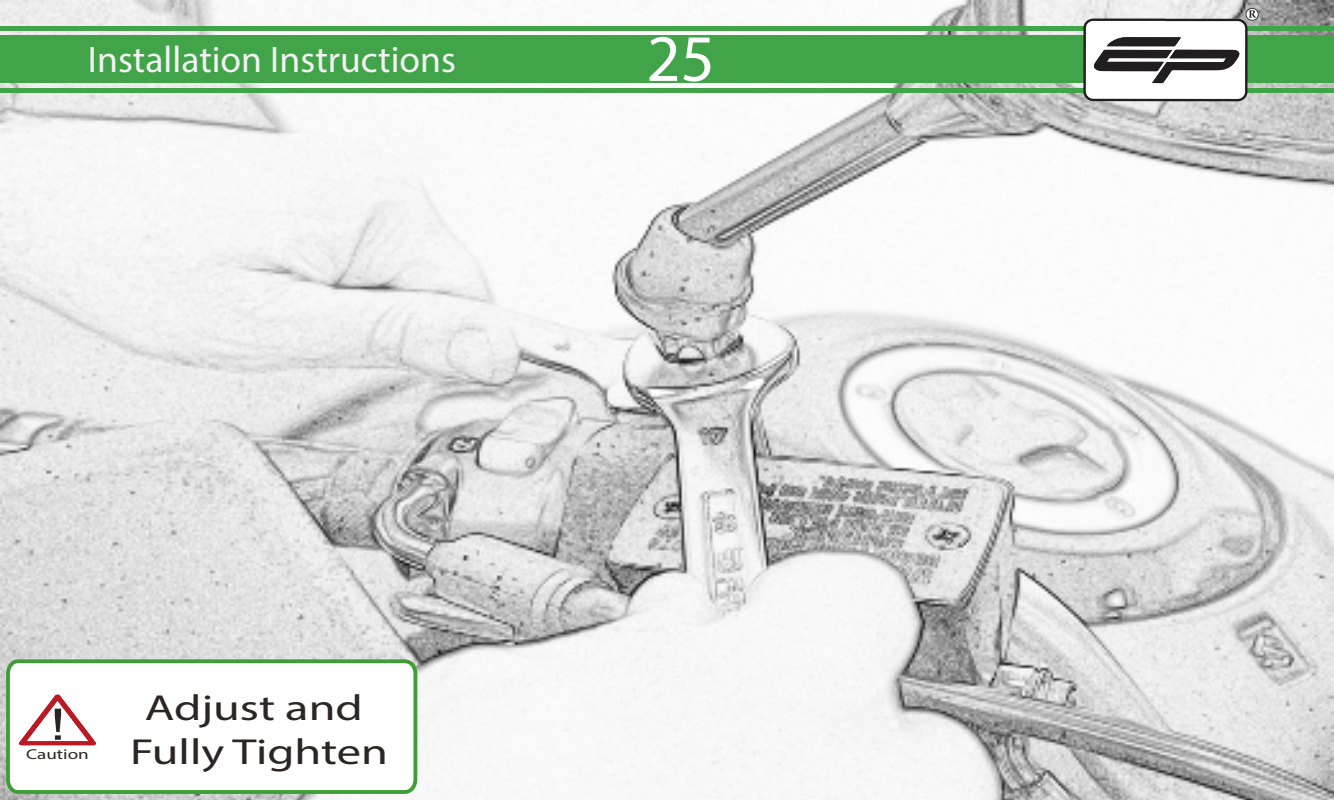

Caution


Adjust and
Fully Tighten

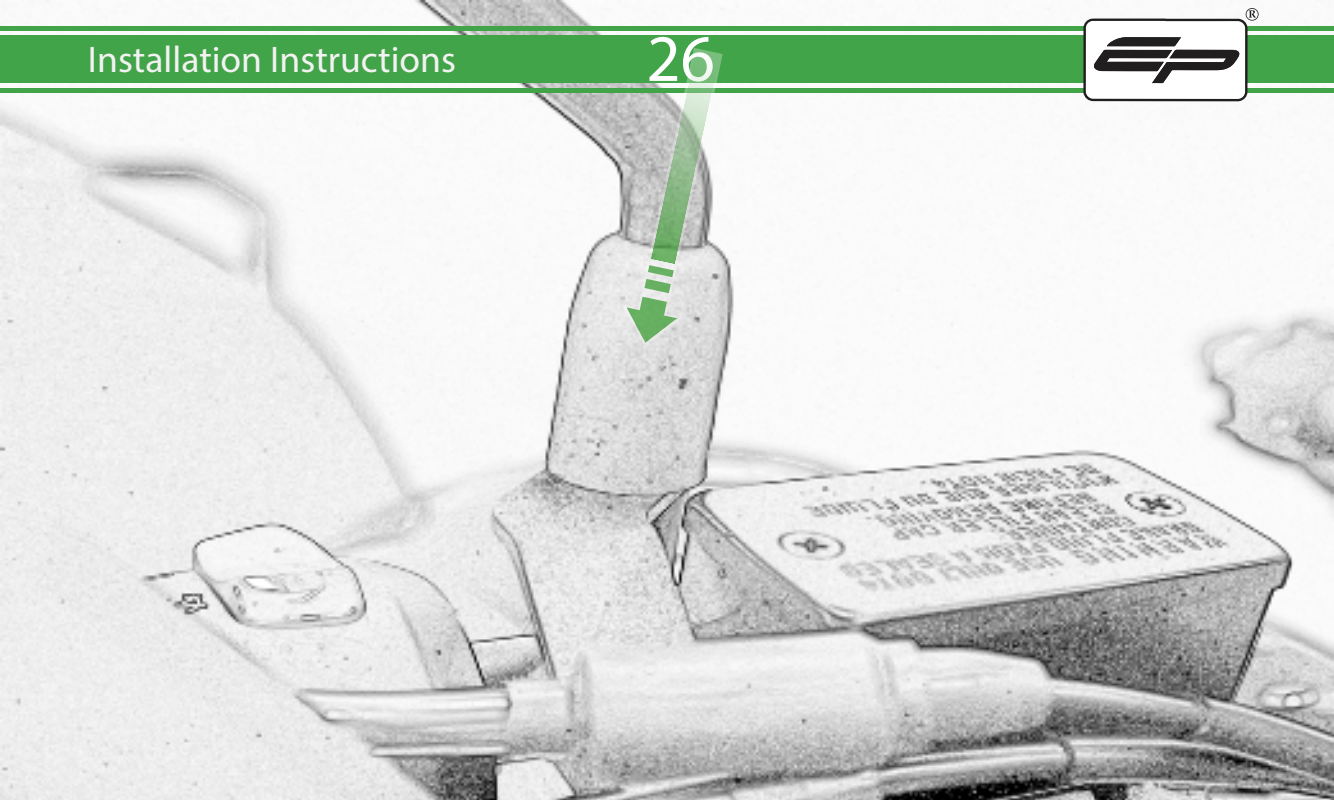


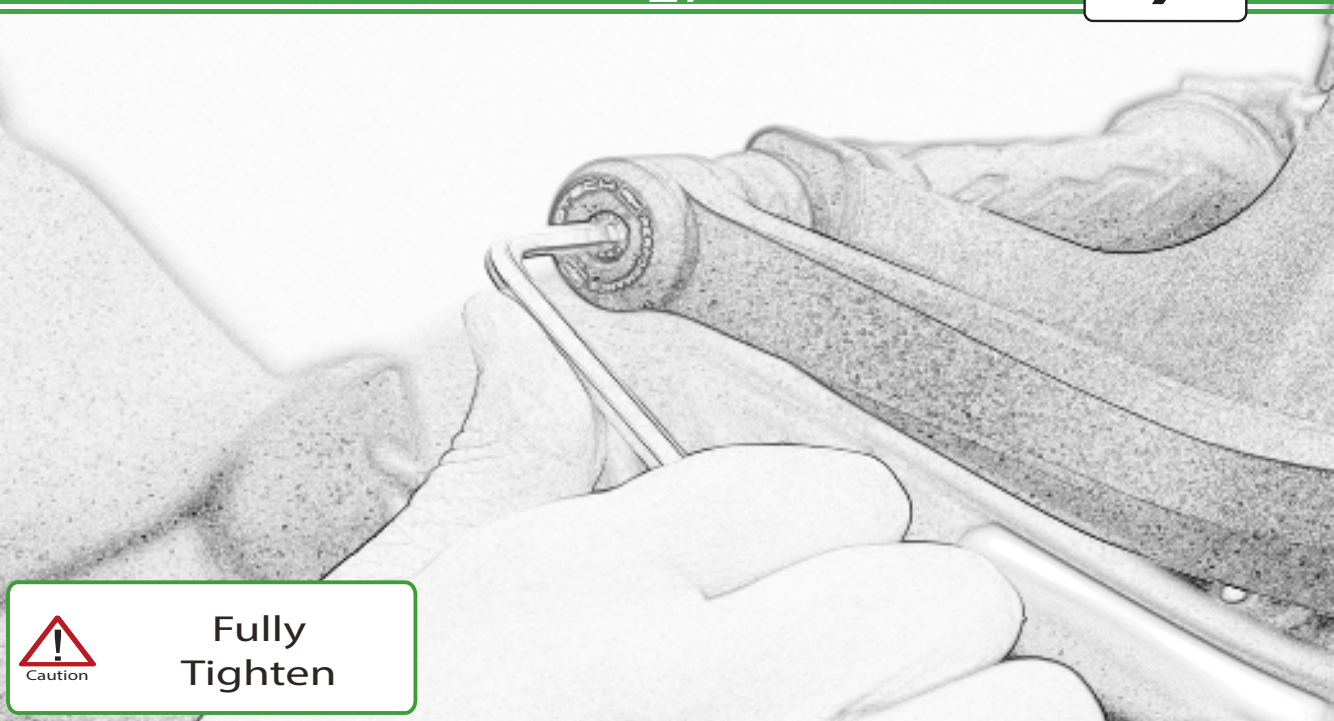


Fully
Tighten




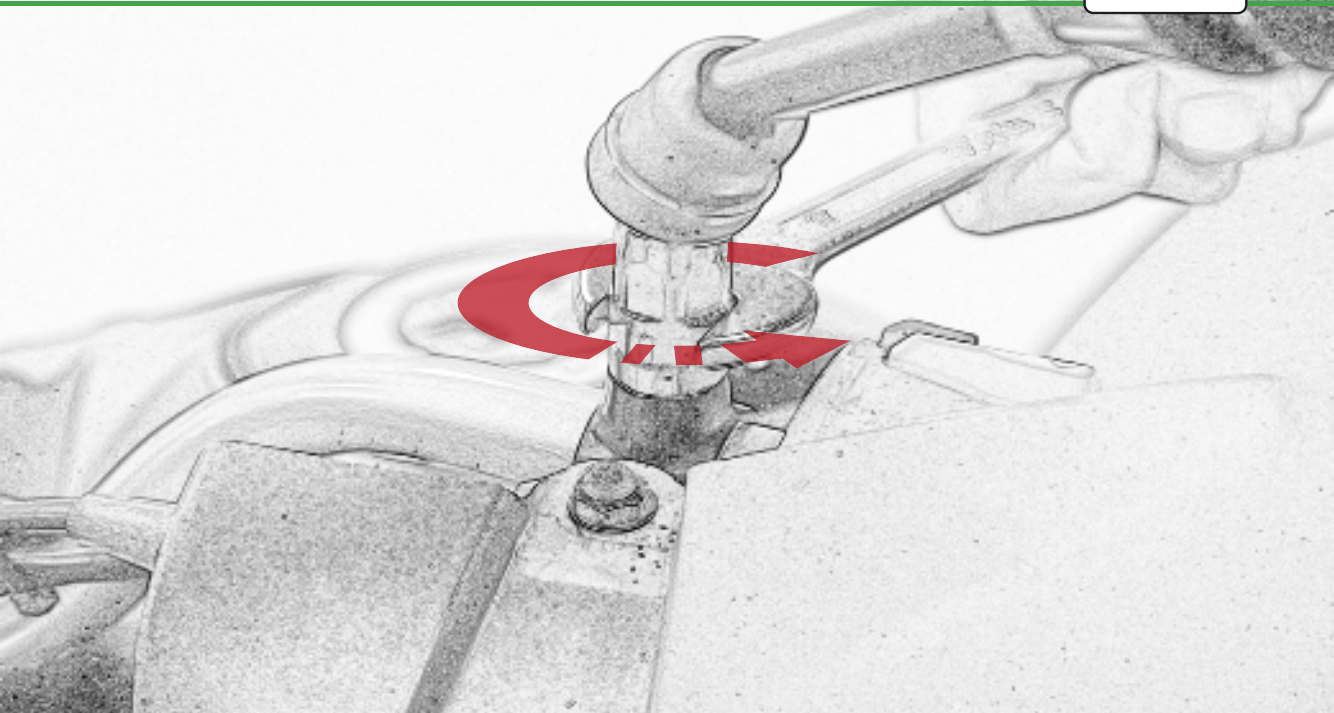


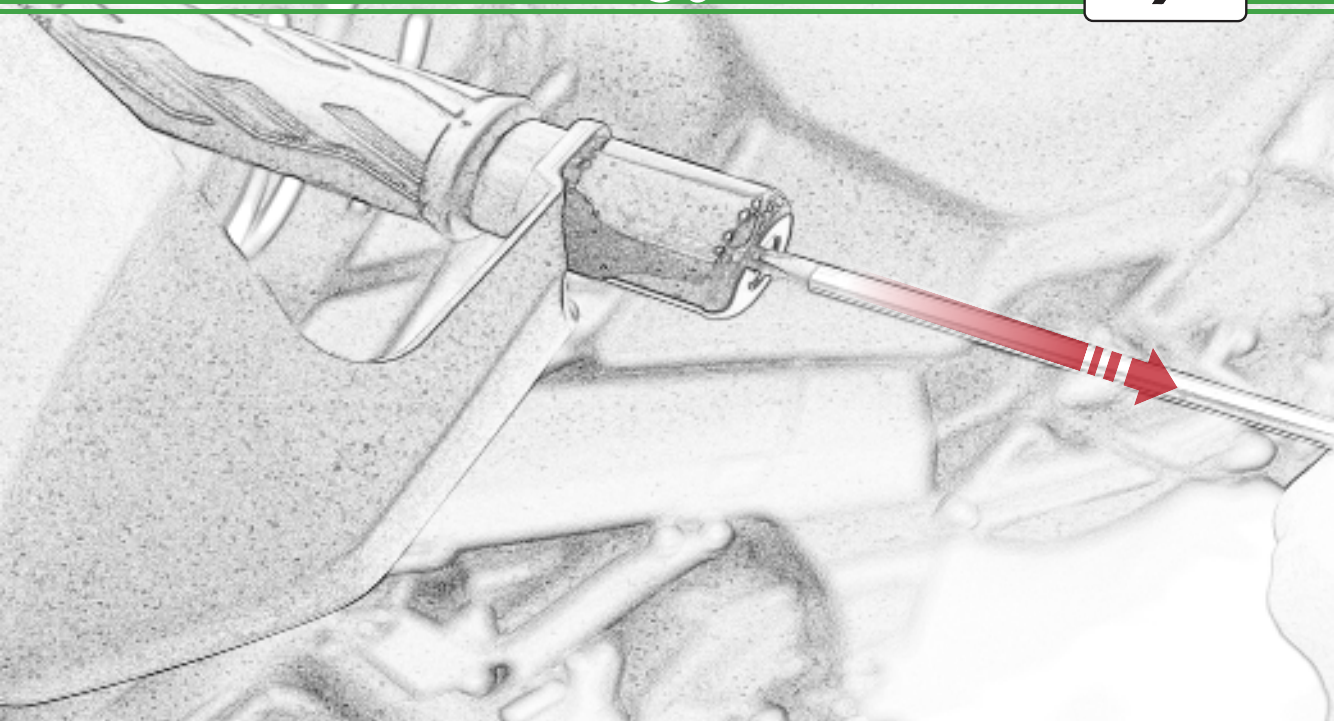


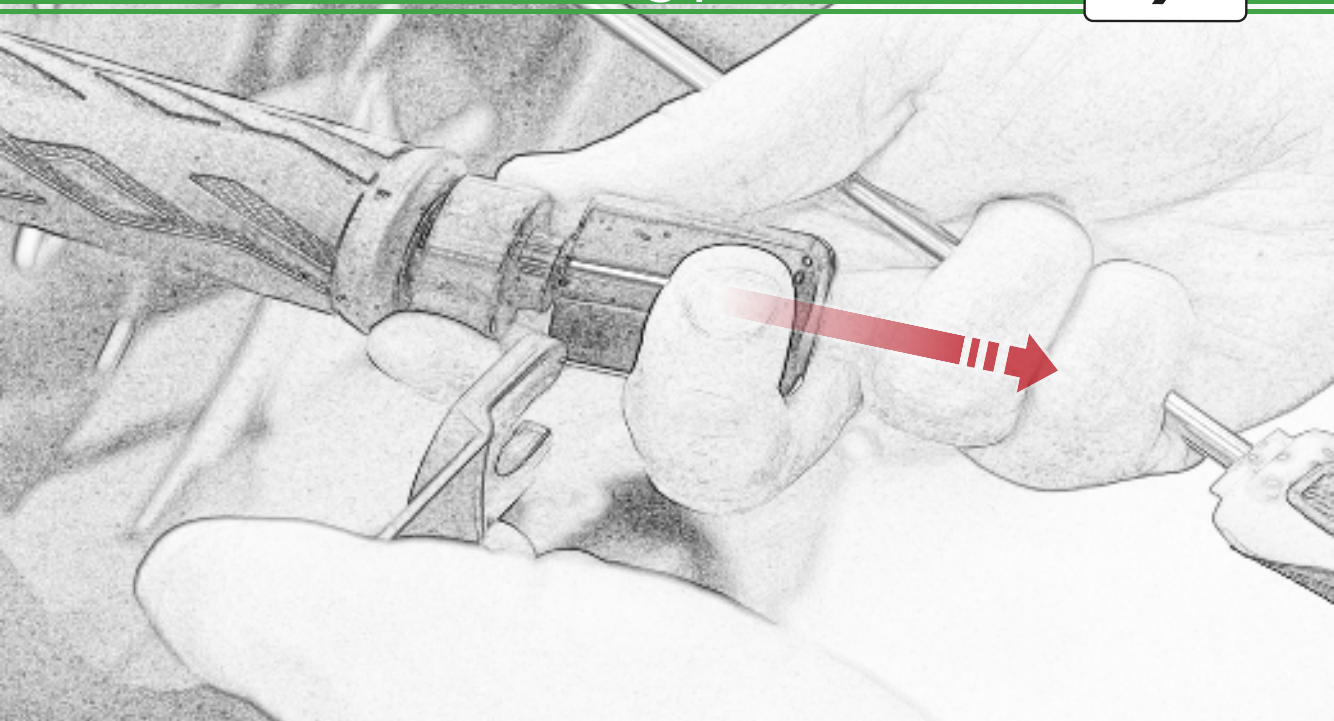




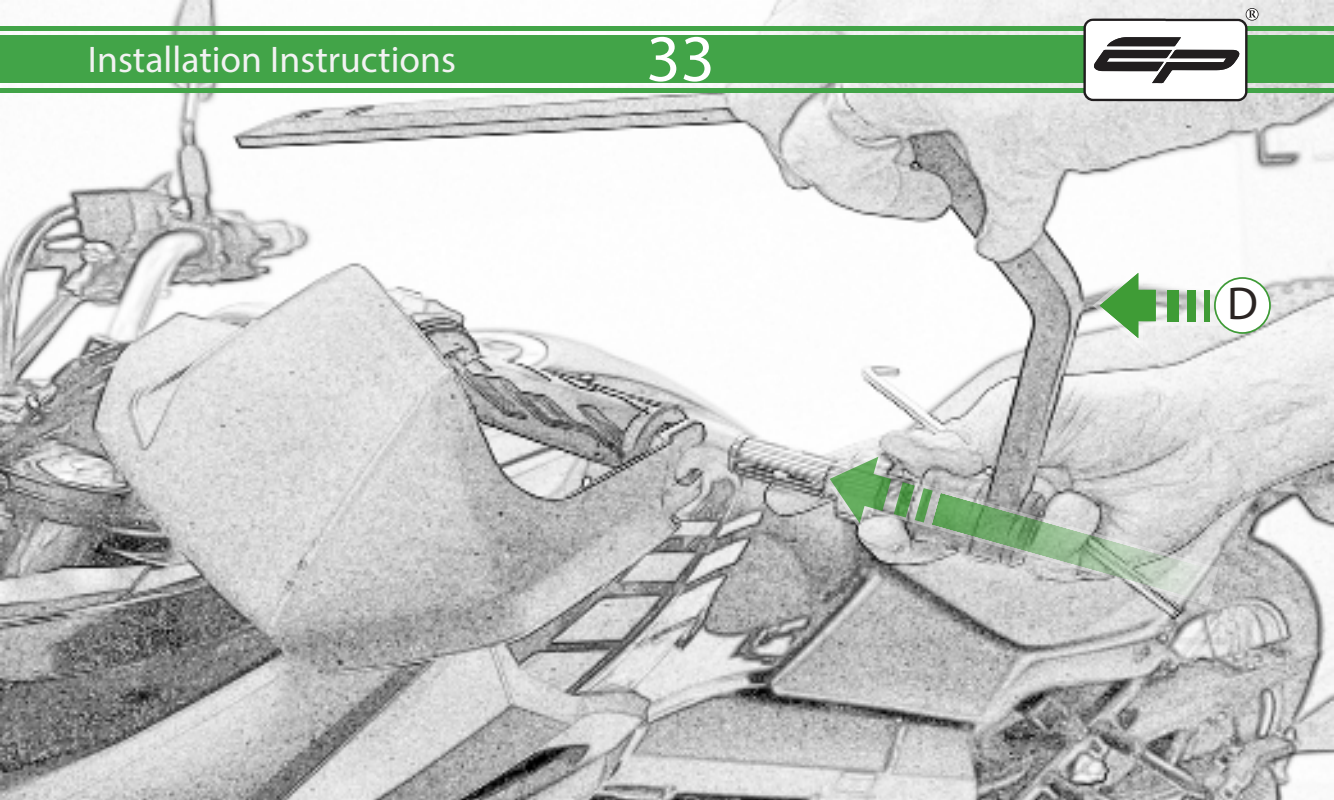


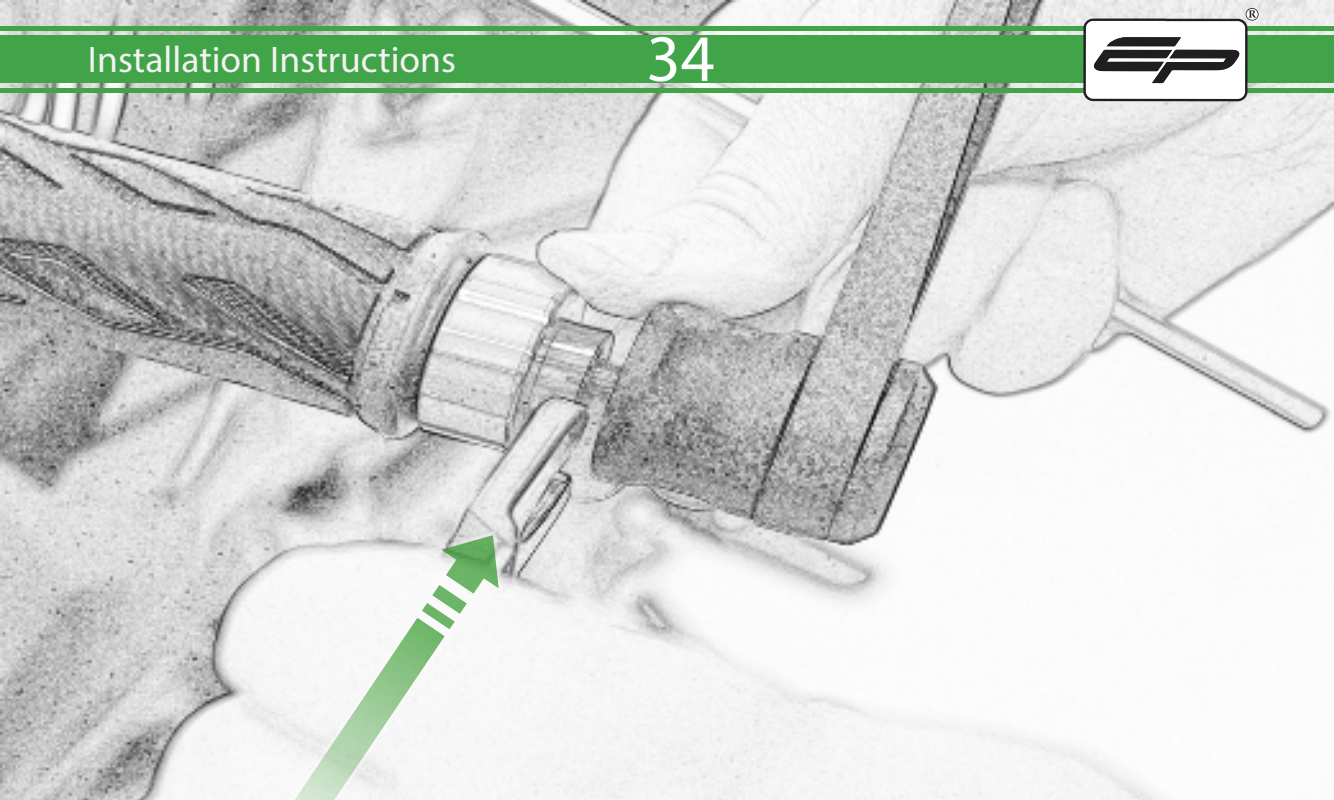

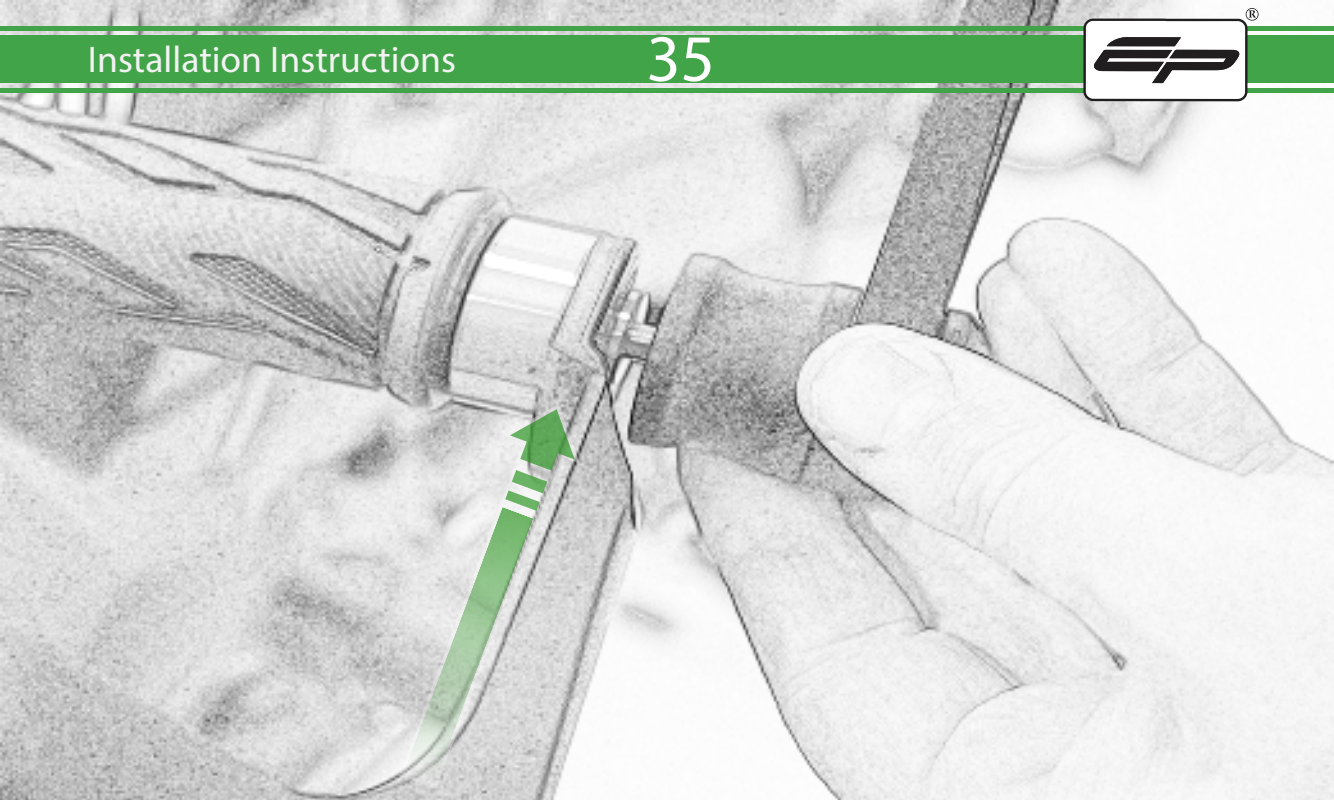


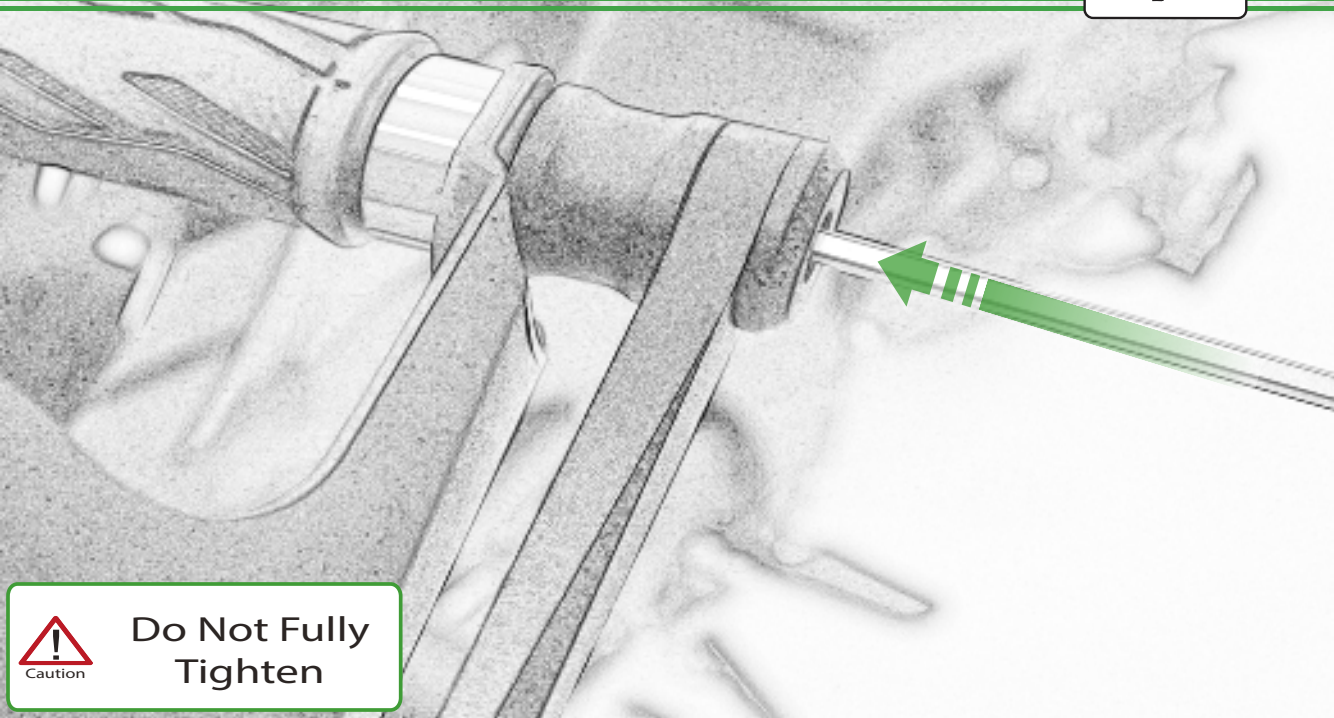


**Do Not Fully
Tighten**

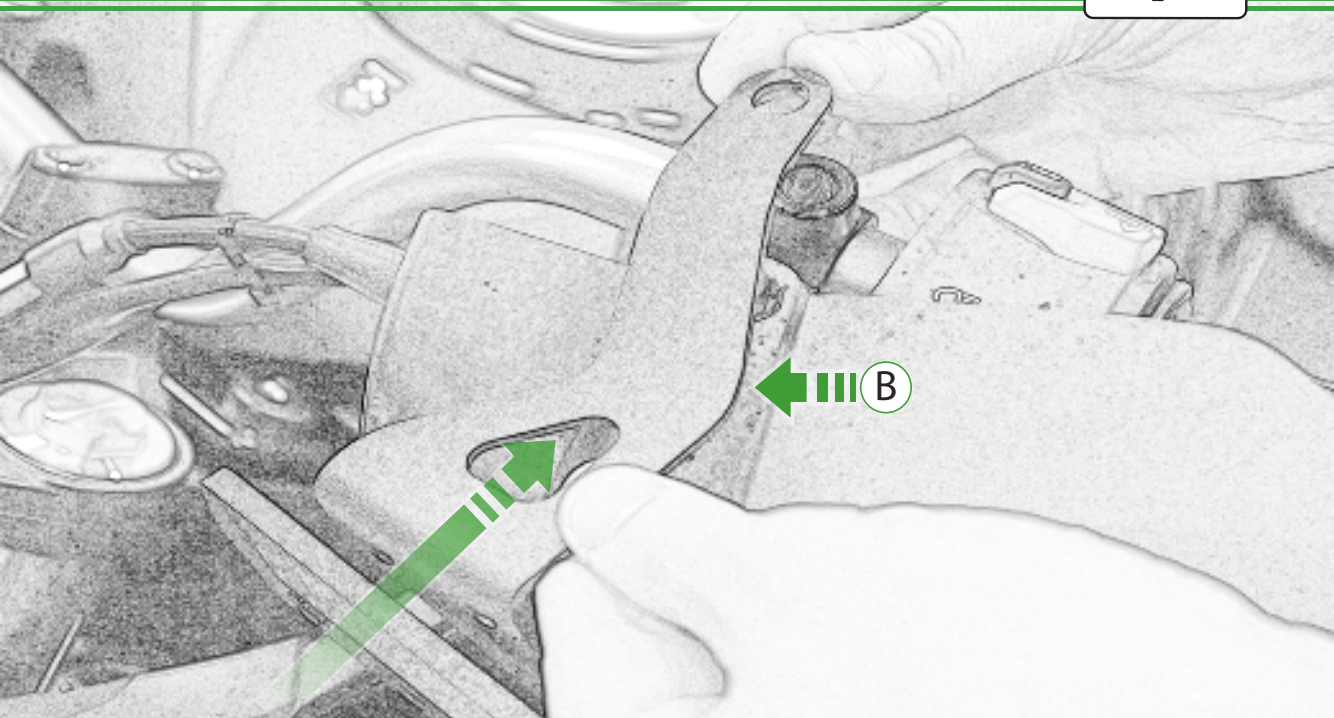



← B

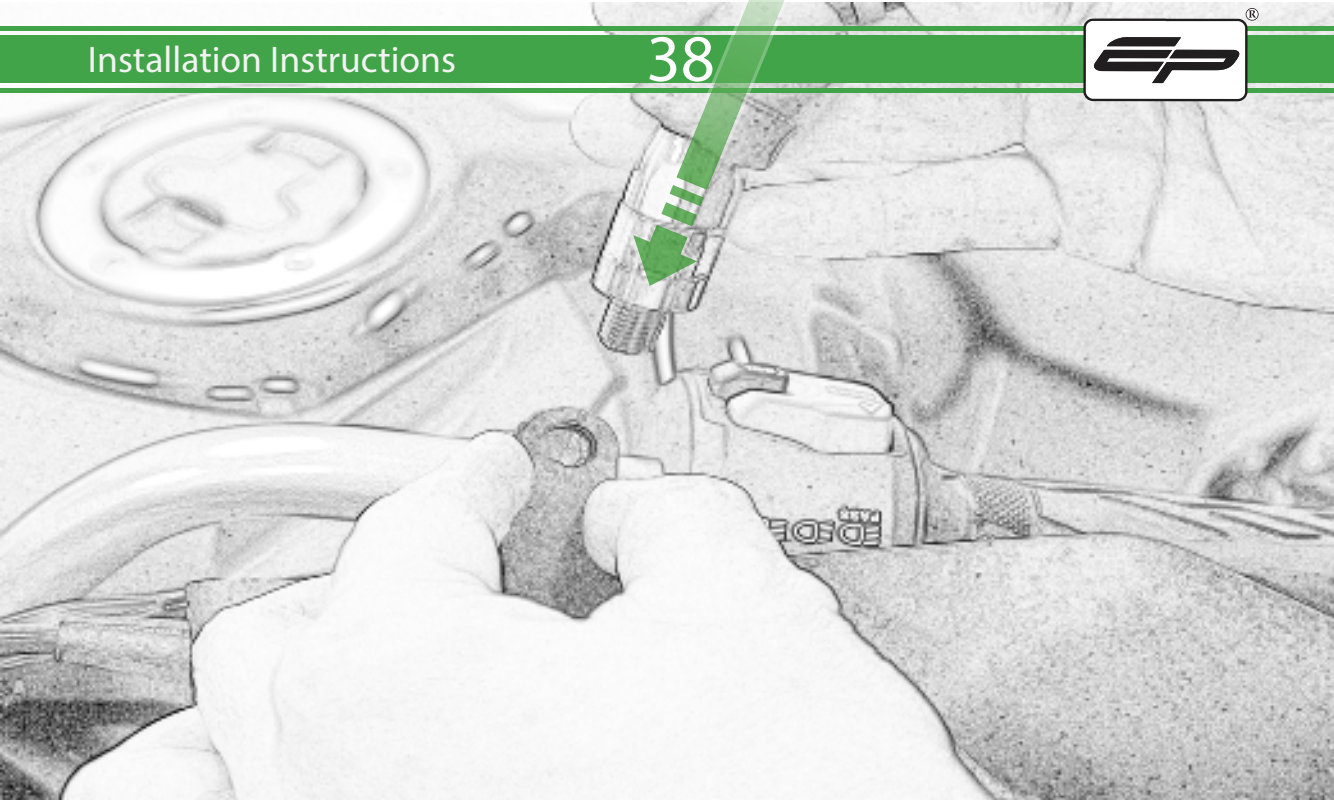

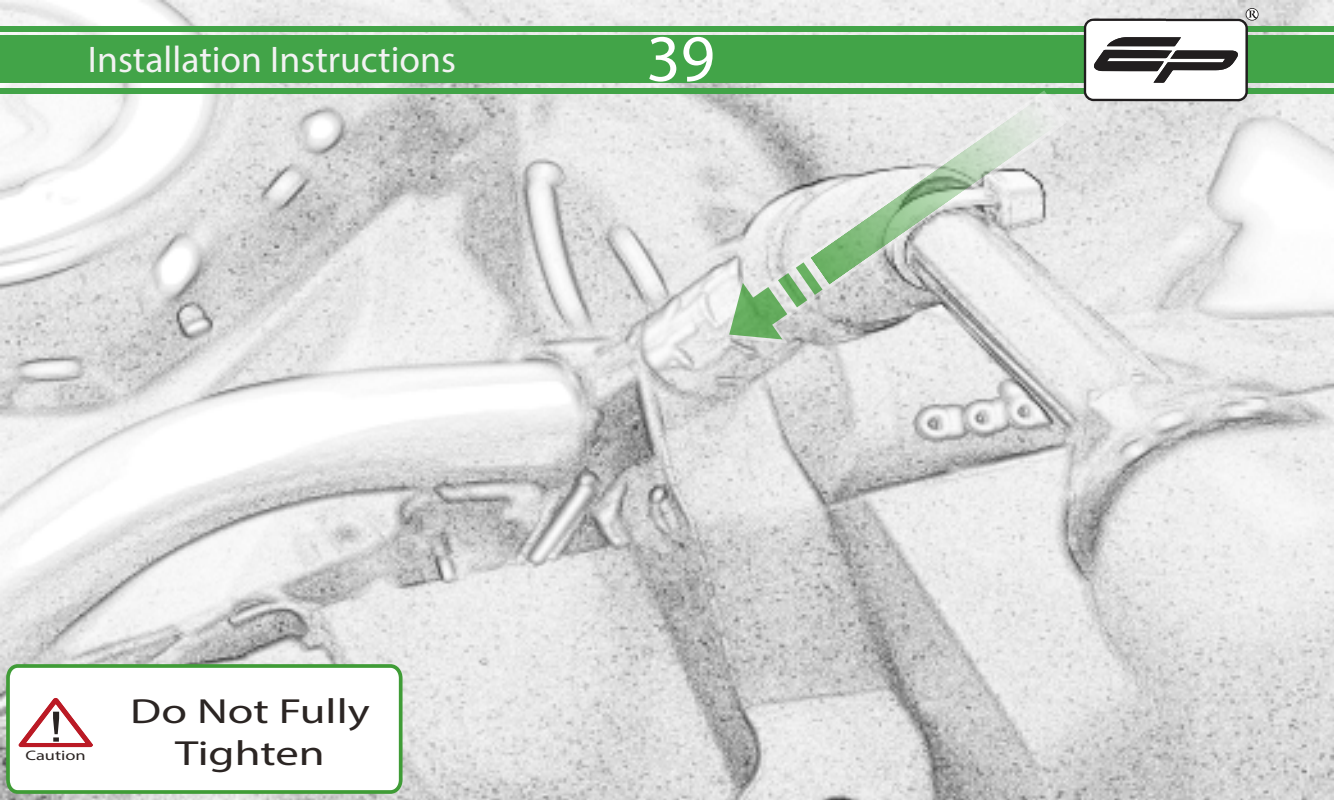


**Do Not Fully
Tighten**

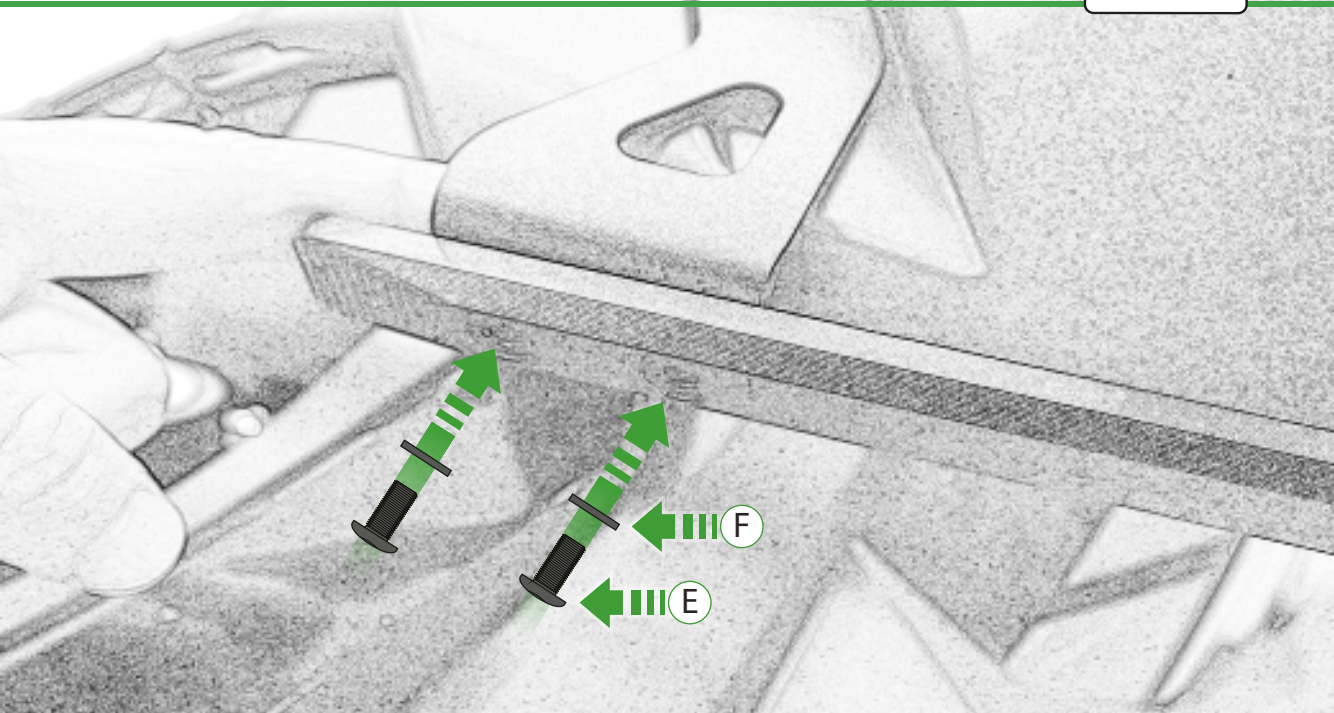

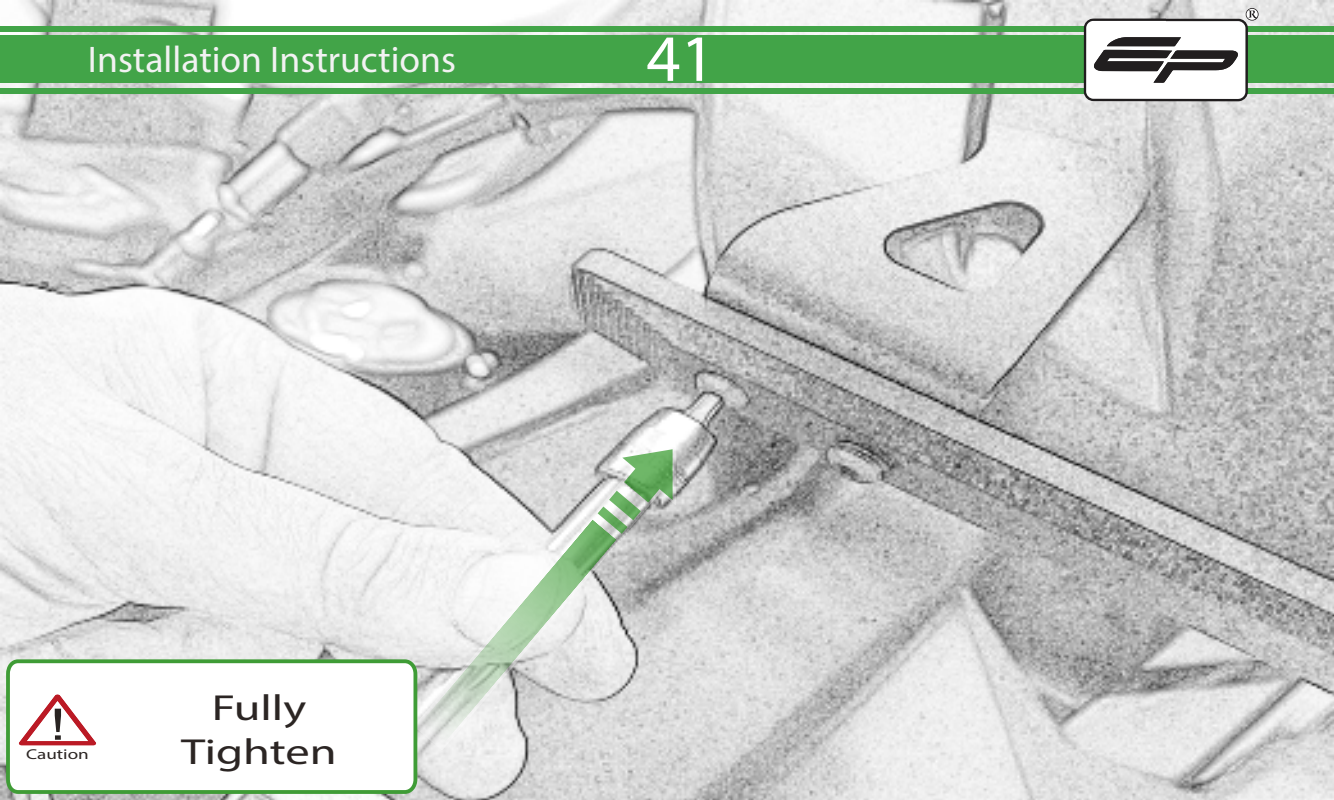


Caution

Fully
Tighten

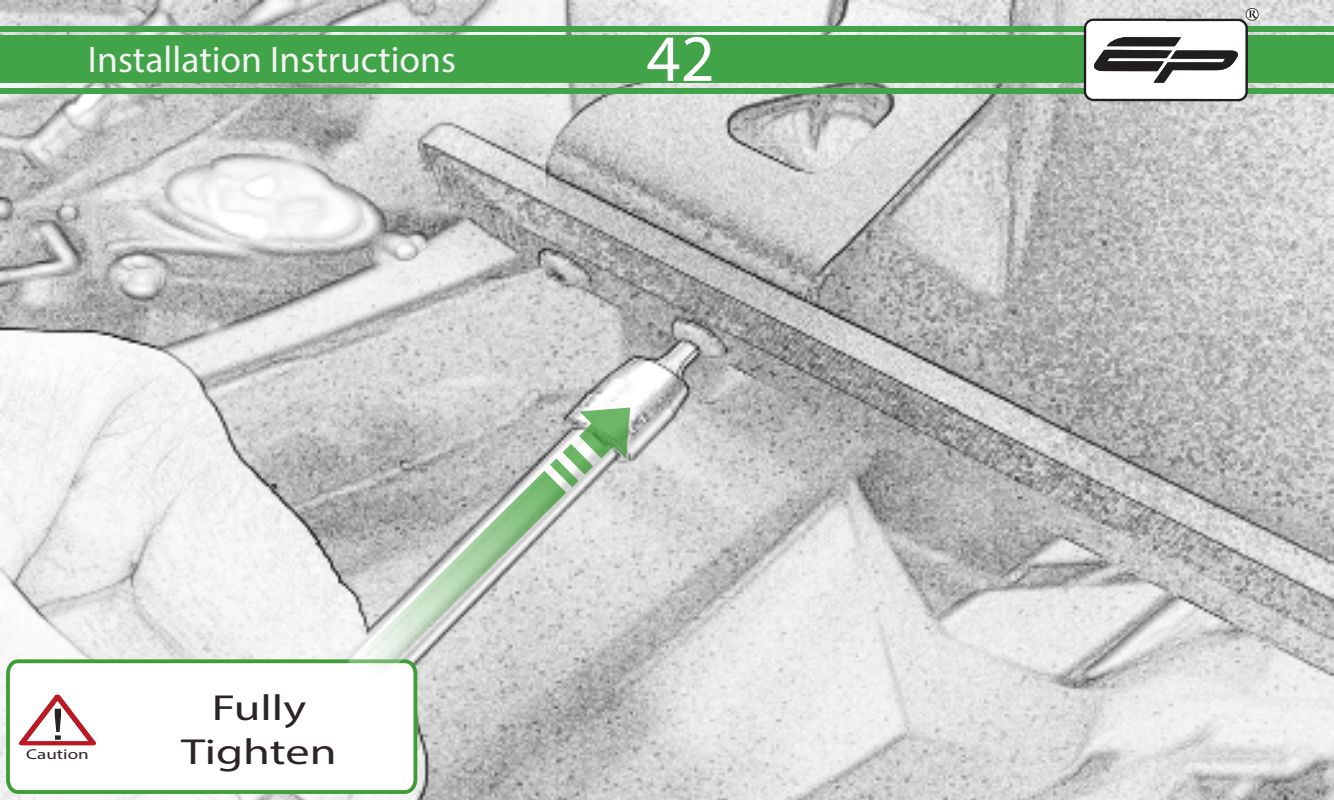


Caution

Fully
Tighten

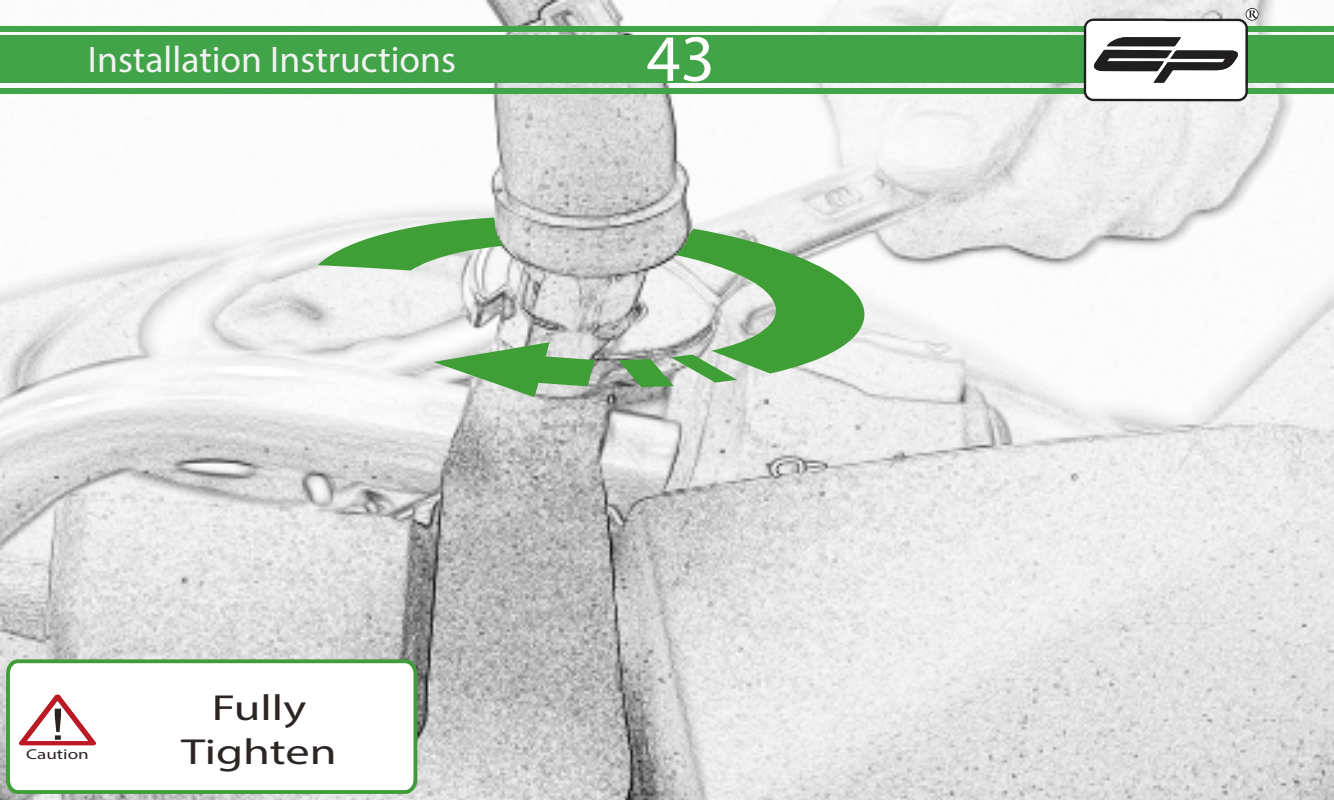


Caution

Fully
Tighten

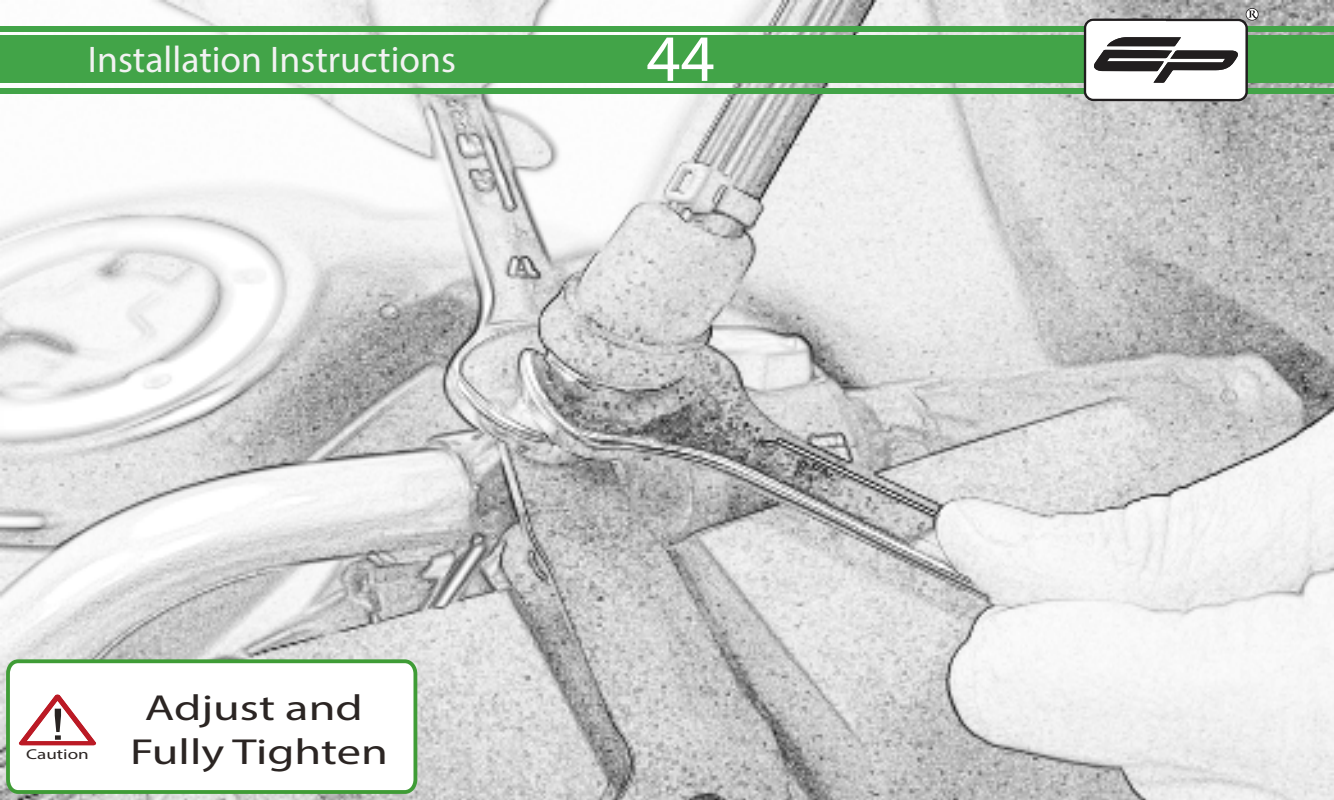

Caution

Adjust and Fully Tighten

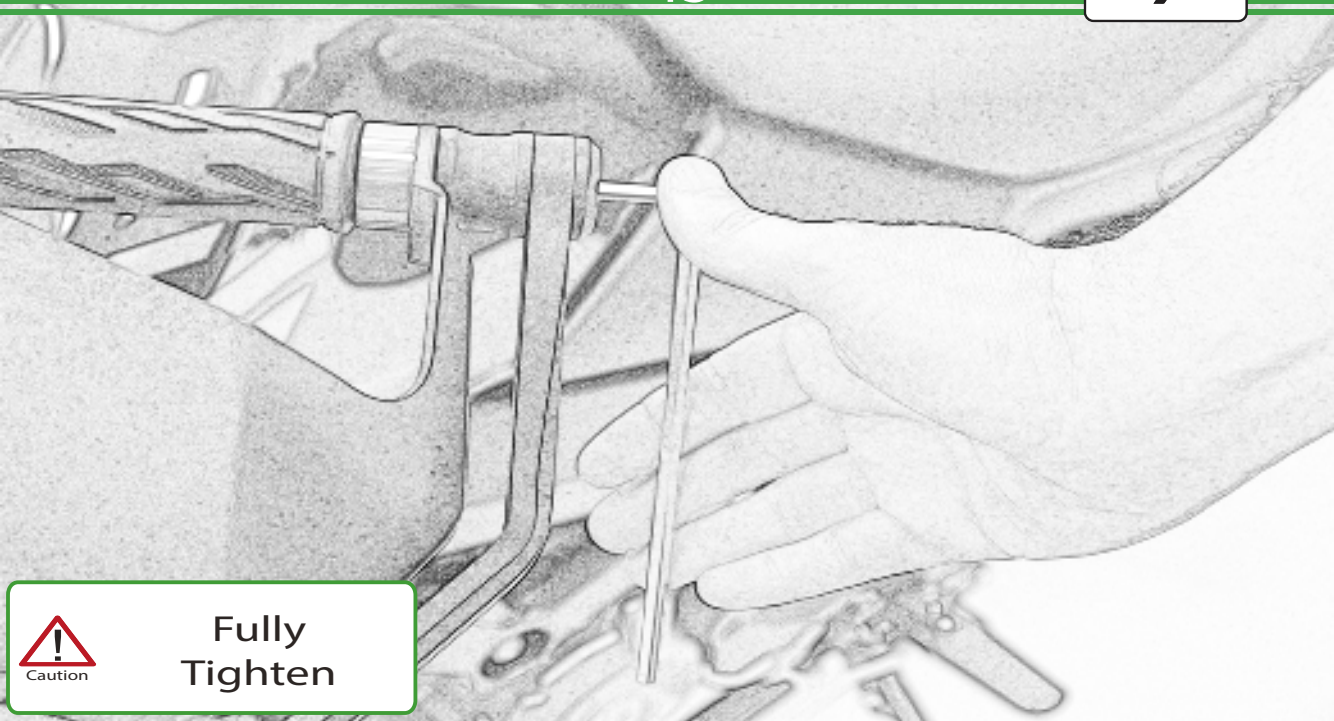

Caution

Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com