



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com


Aprilia RS660 Crash Protection

Installation Instructions




Kit Contents PRN015288


- (A) 1 x Bobbin Bracket R/H
- (B) 1 x Bobbin Bracket L/H
- (C) 1 x Bracket Brace R/H
- (D) 1 x Bracket Brace L/H
- (E) 1 x Bobbin Shim
- (F) 1 x M10 x 30 Caphead
- (G) 1 x M10 x 50 Caphead
- (H) 1 x M10 x 65 Caphead
- (I) 1 x M10 x 80 Caphead
- (J) 2 x M12 x 90 x 1.25mm Caphead
- (K) 2 x M12 Washers
- (L) 2 x Bobbin Spacers
- (M) 2 x Poly Washers
- (N) 2 x Main Tail Tidy
- (O) 2 x Bobbin Heads
- (P) 4 x M5 x 15 Countersunk Screws

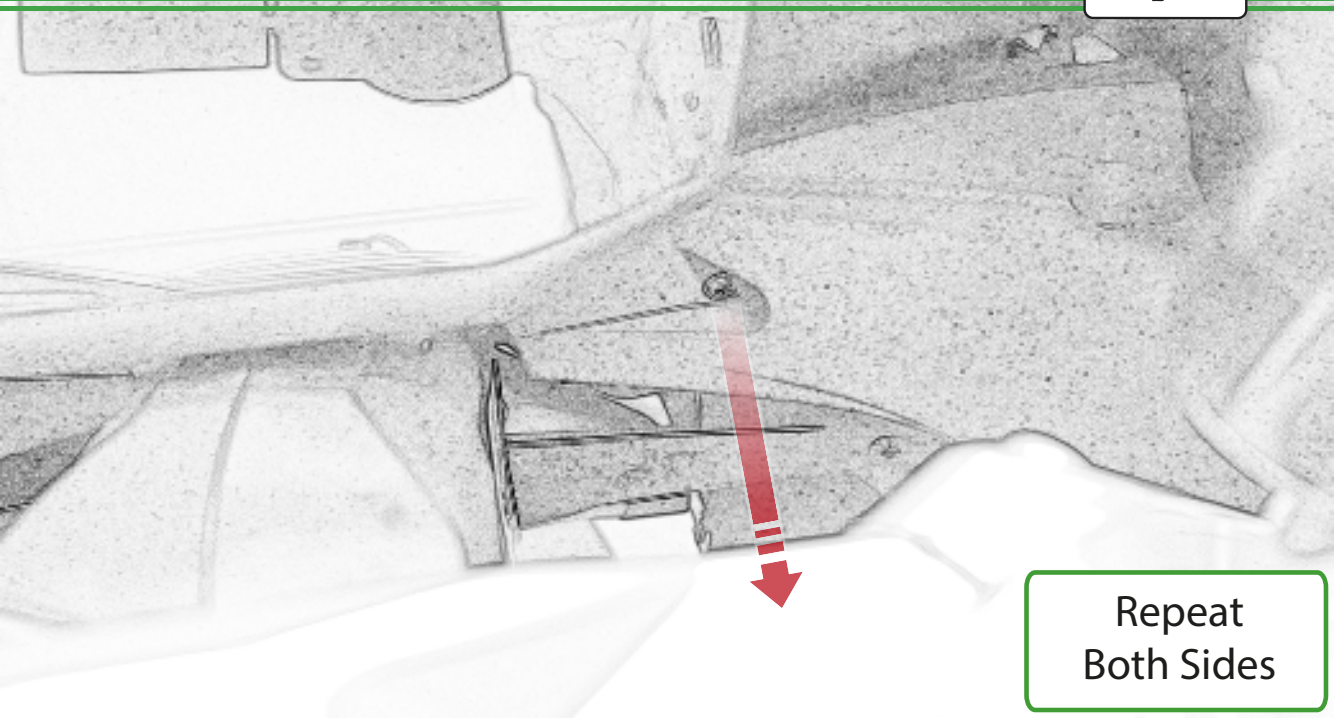


Repeat
Both Sides

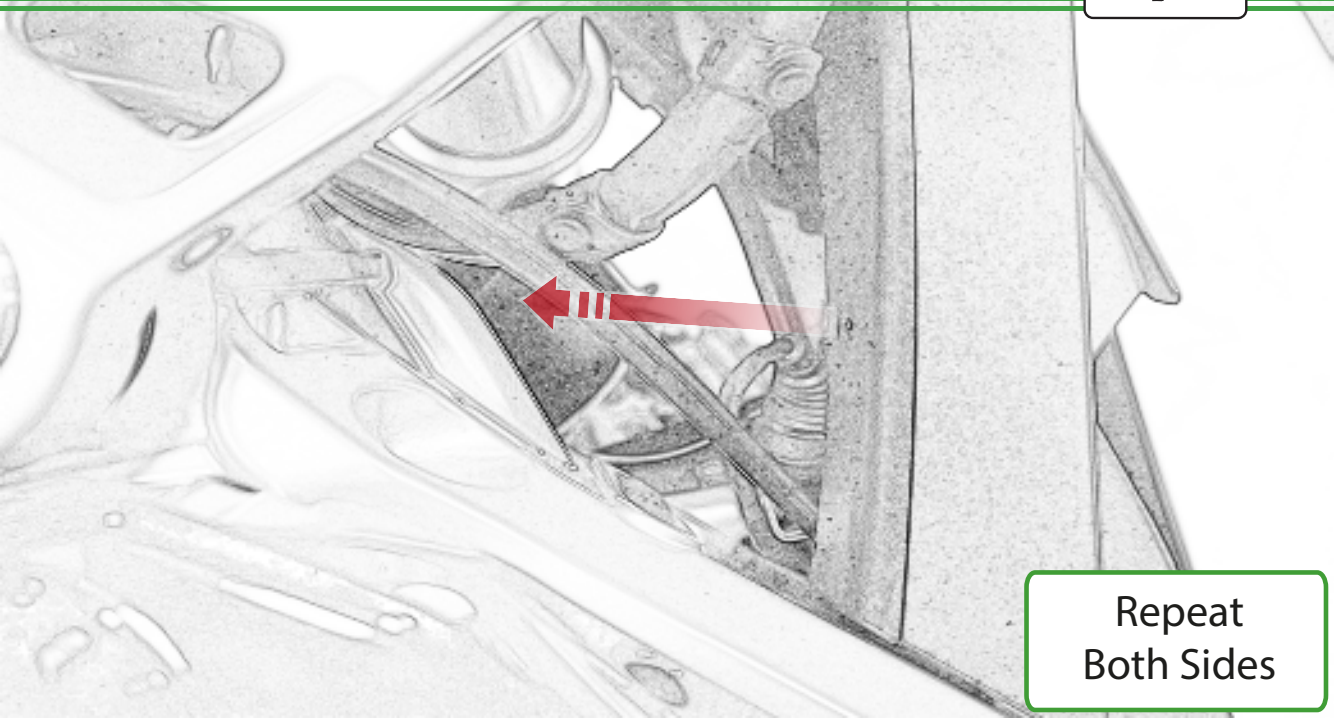


Repeat
Both Sides

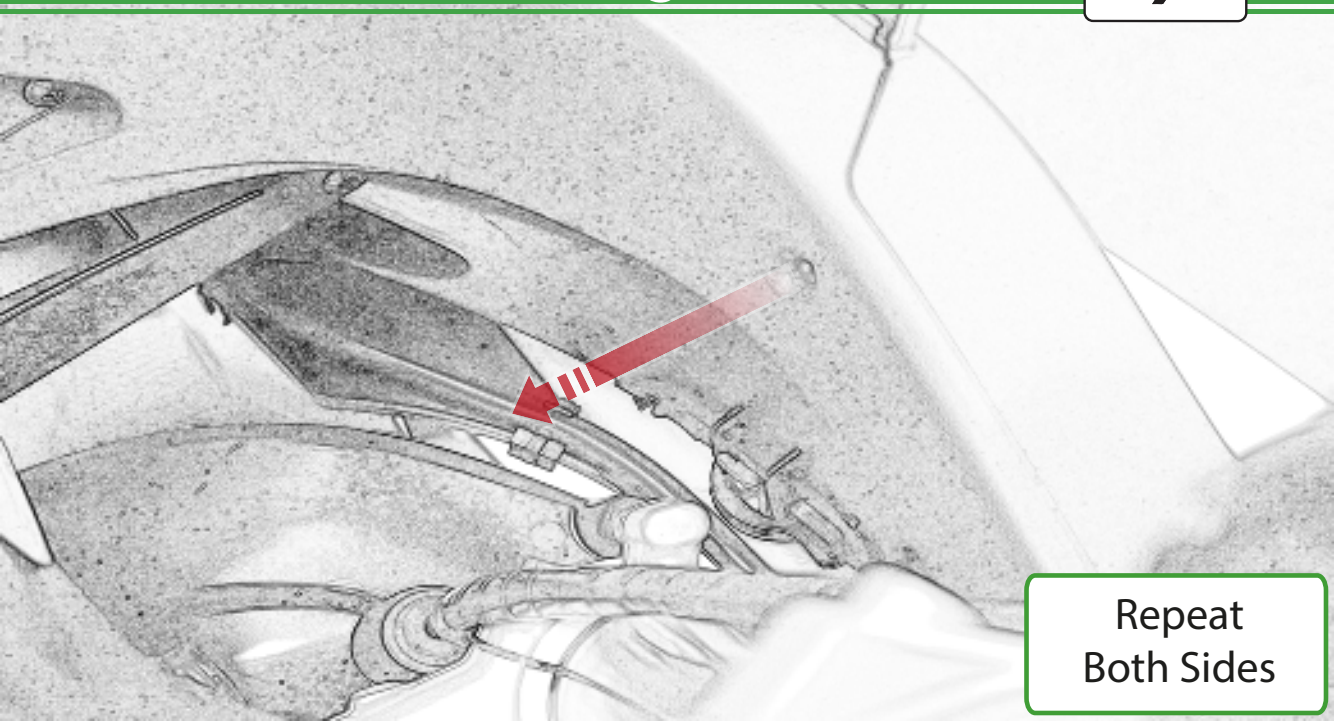


Repeat
Both Sides

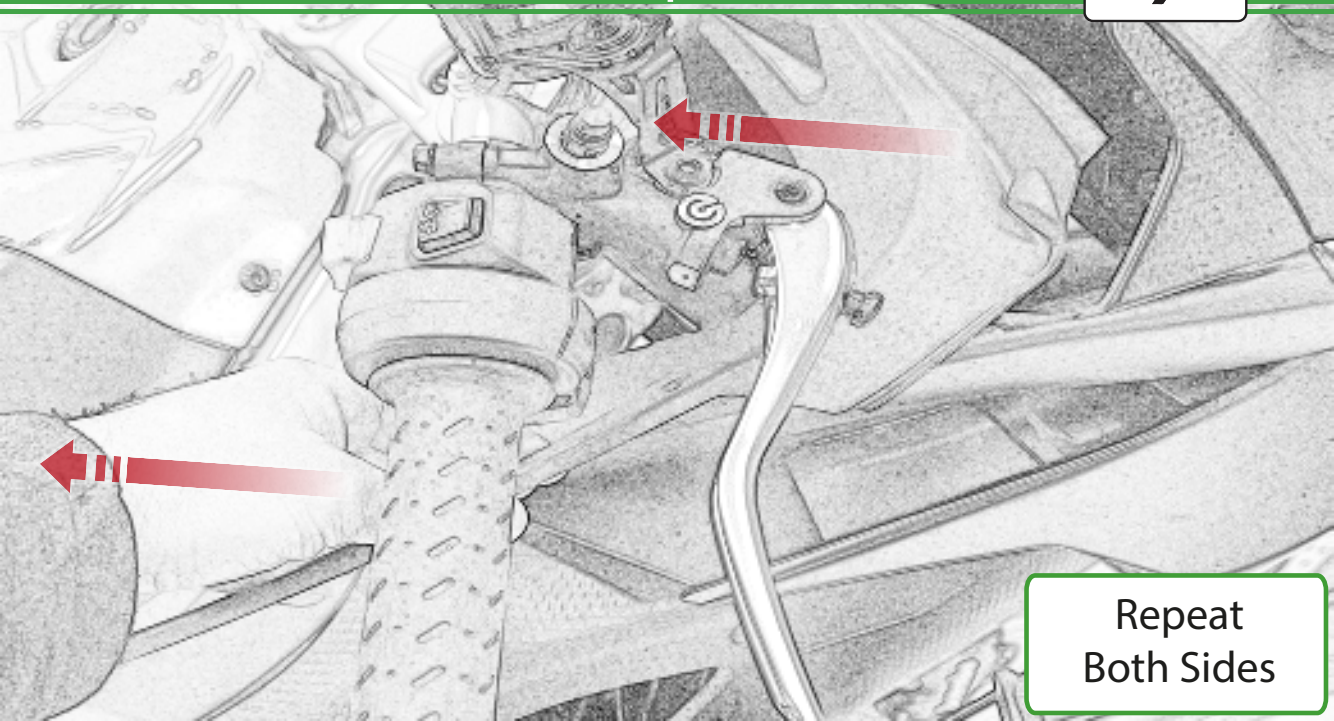


Repeat
Both Sides

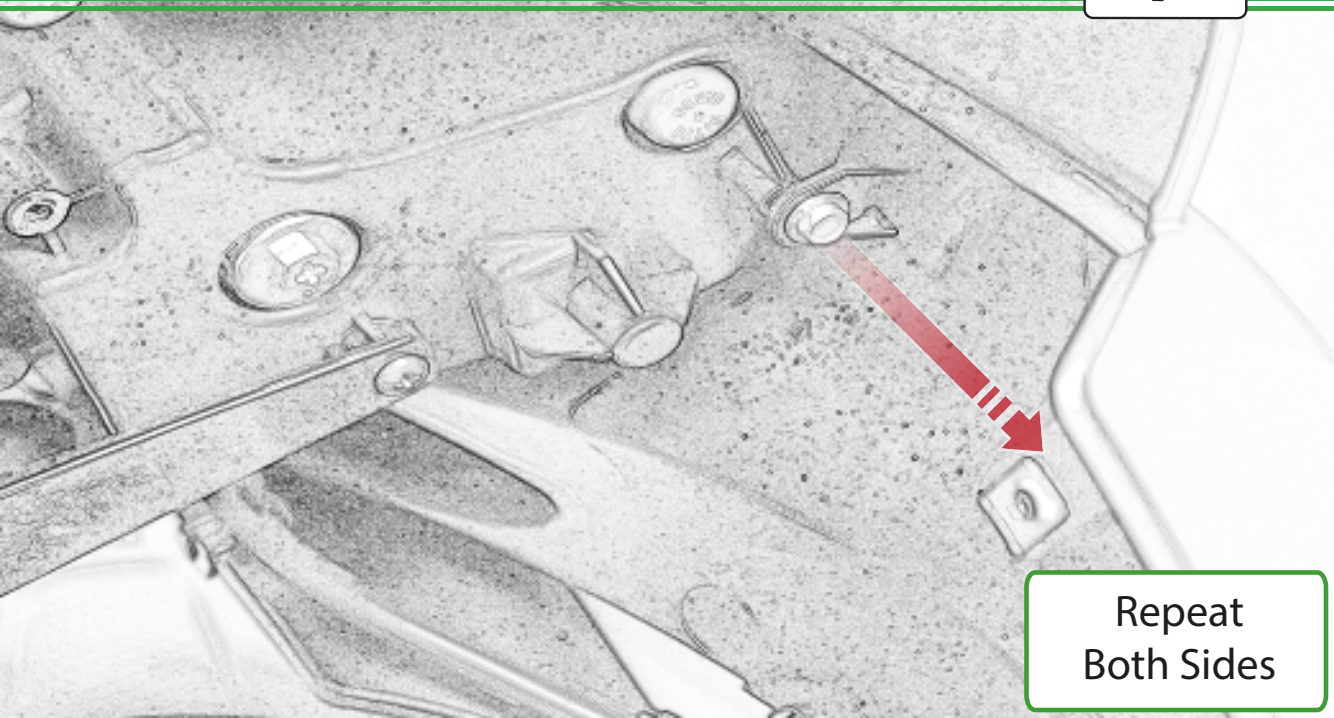


Repeat
Both Sides

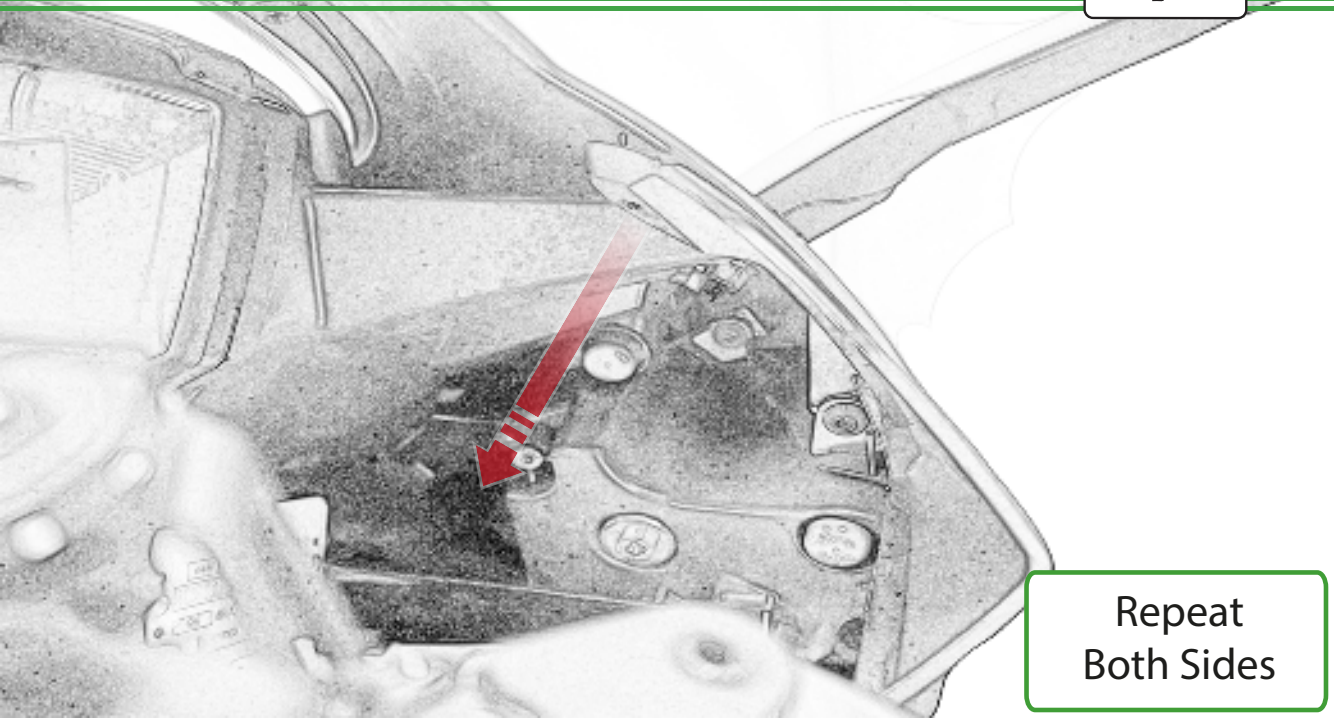


Repeat
Both Sides

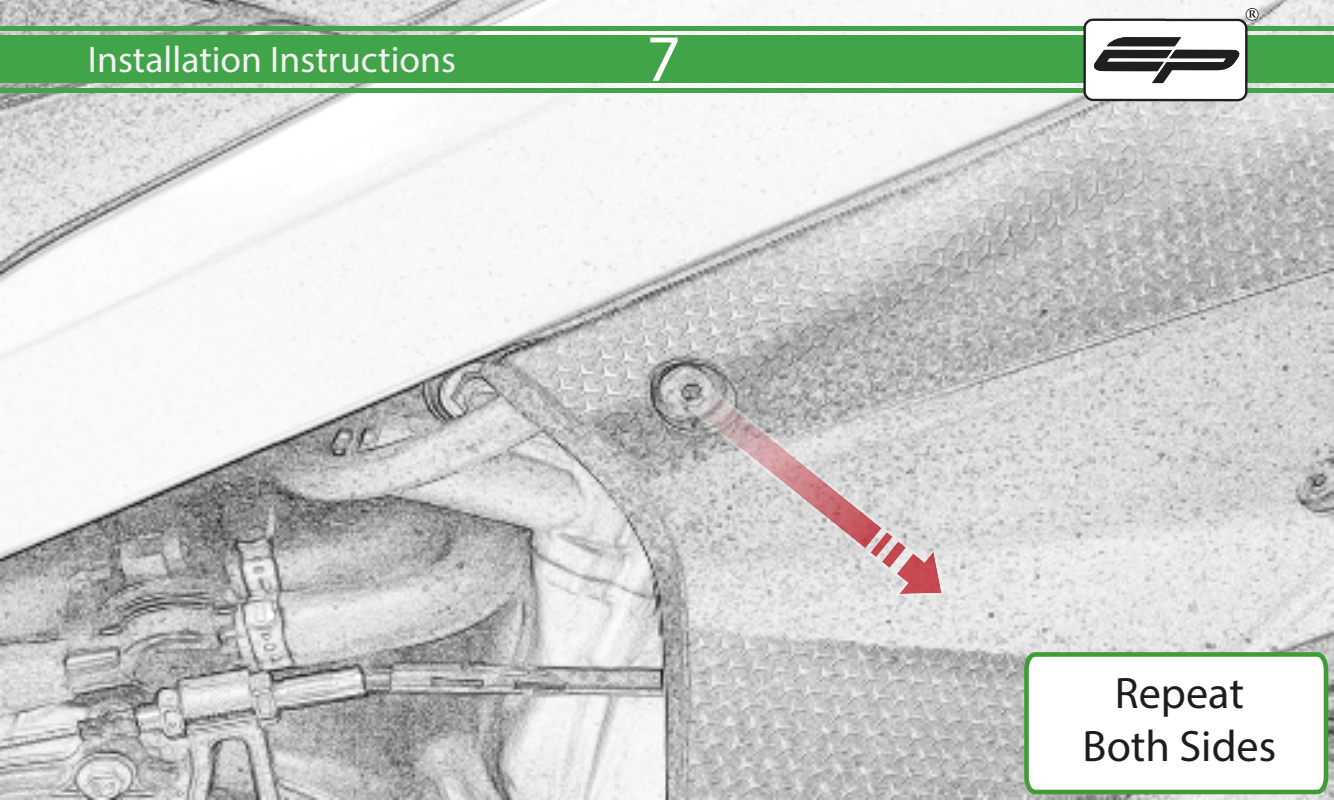


Repeat
Both Sides

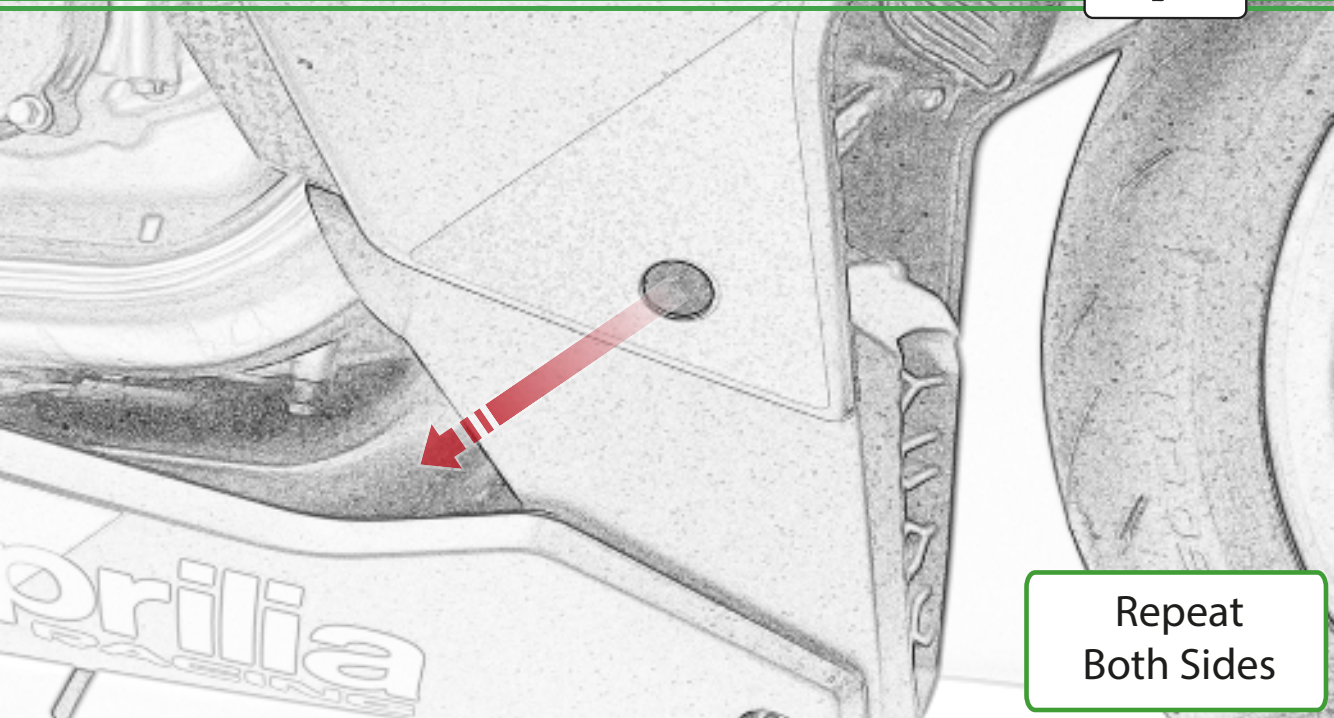


Repeat
Both Sides

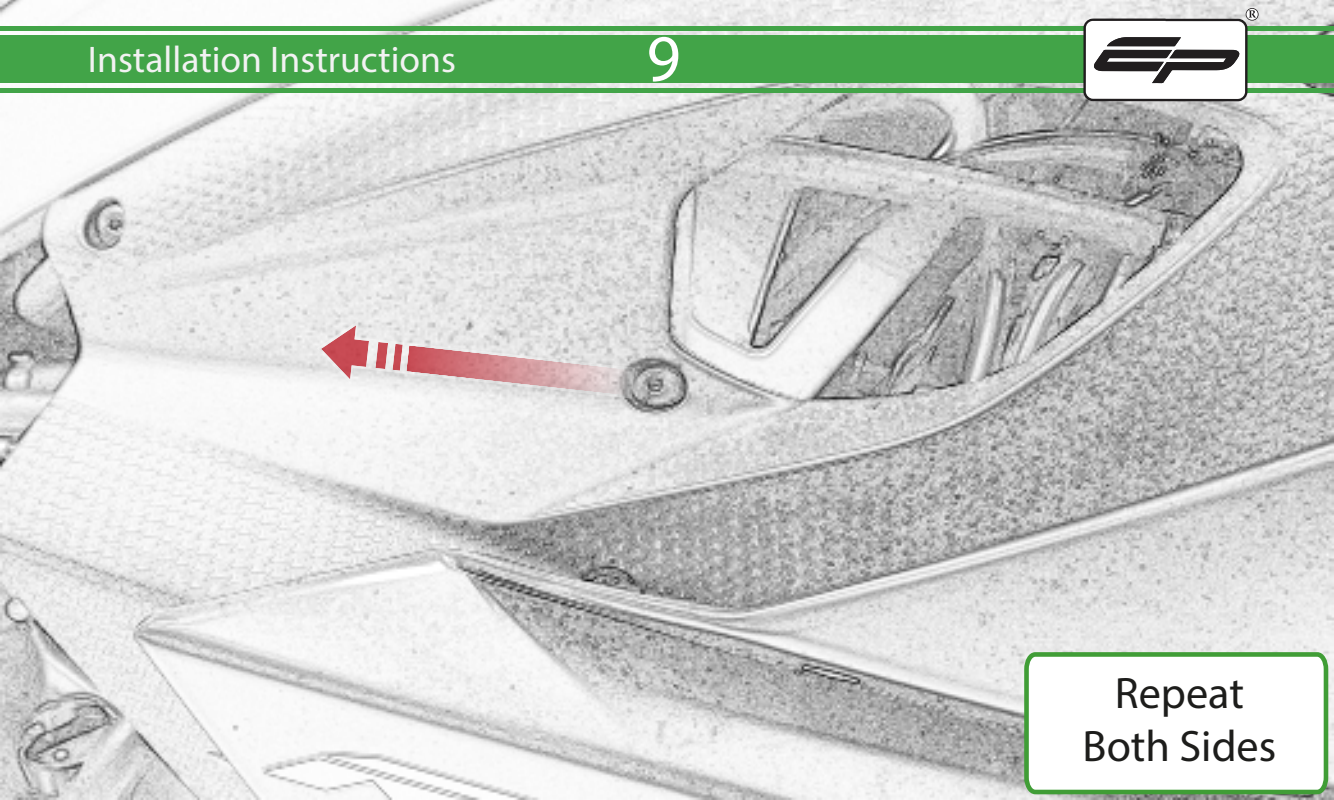


Repeat
Both Sides

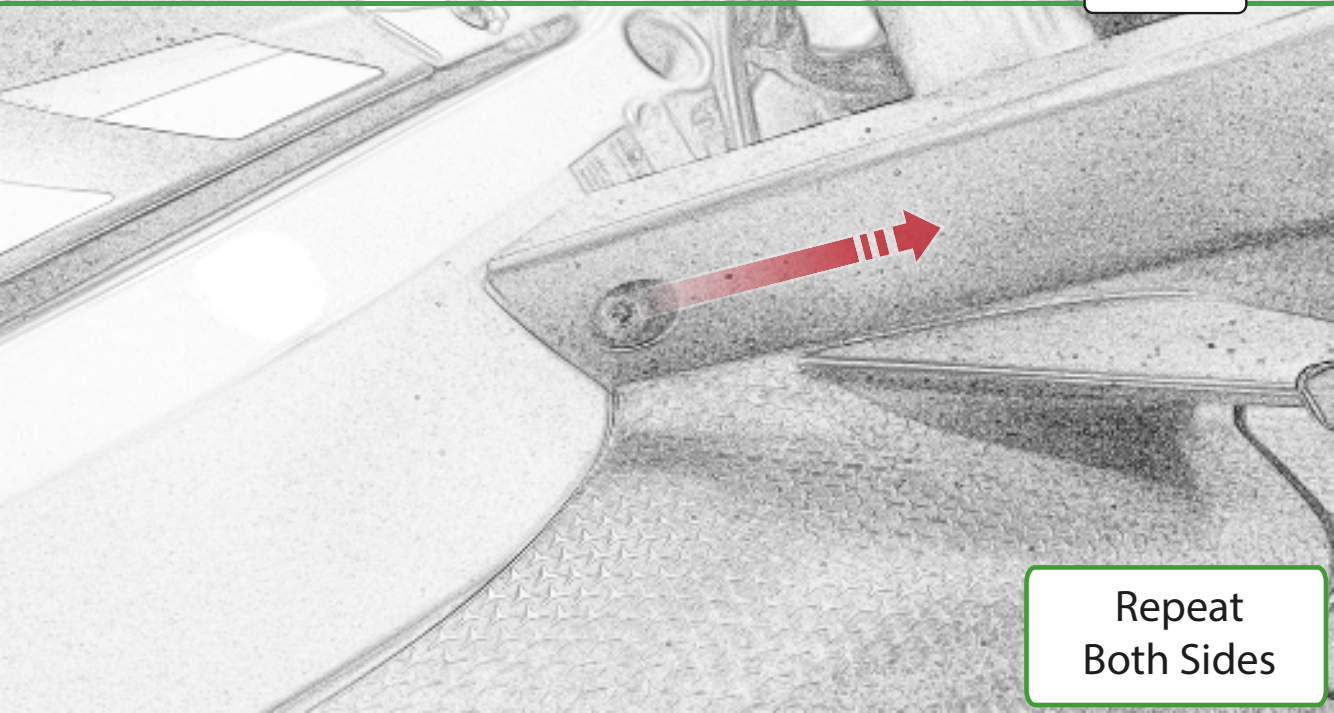


Repeat
Both Sides

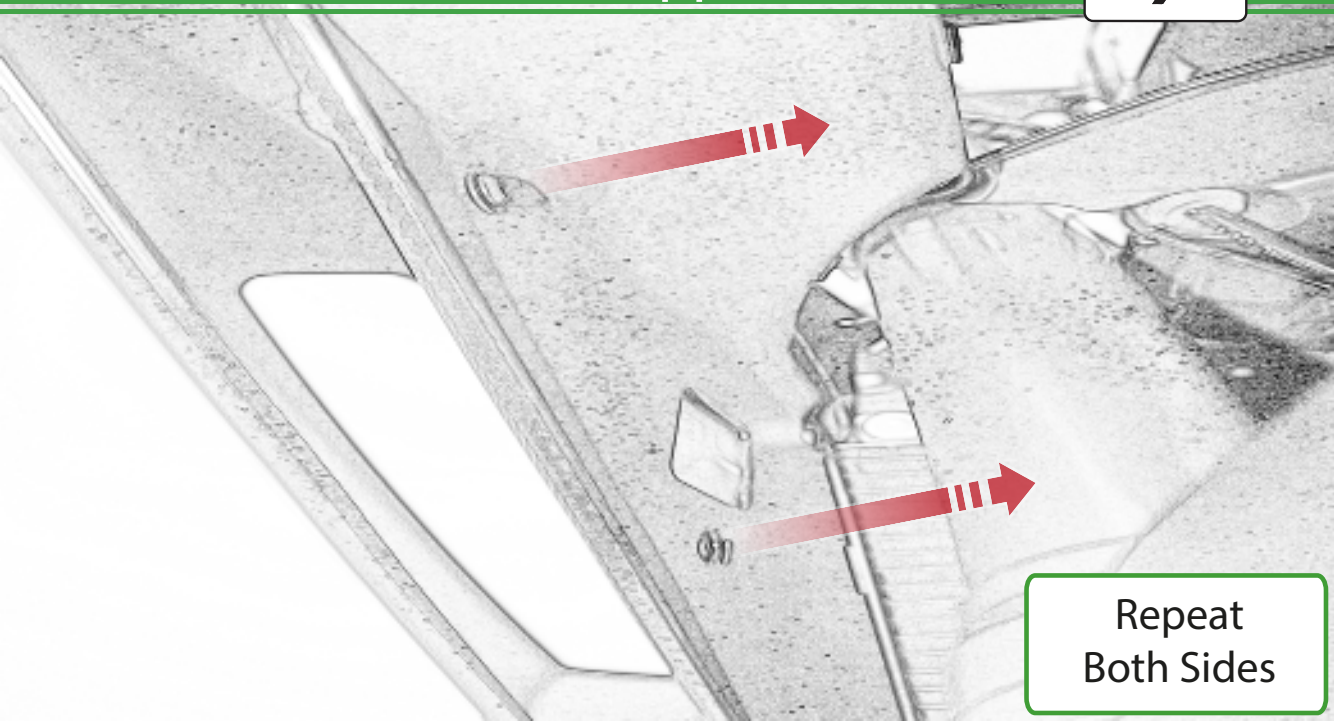


Repeat
Both Sides

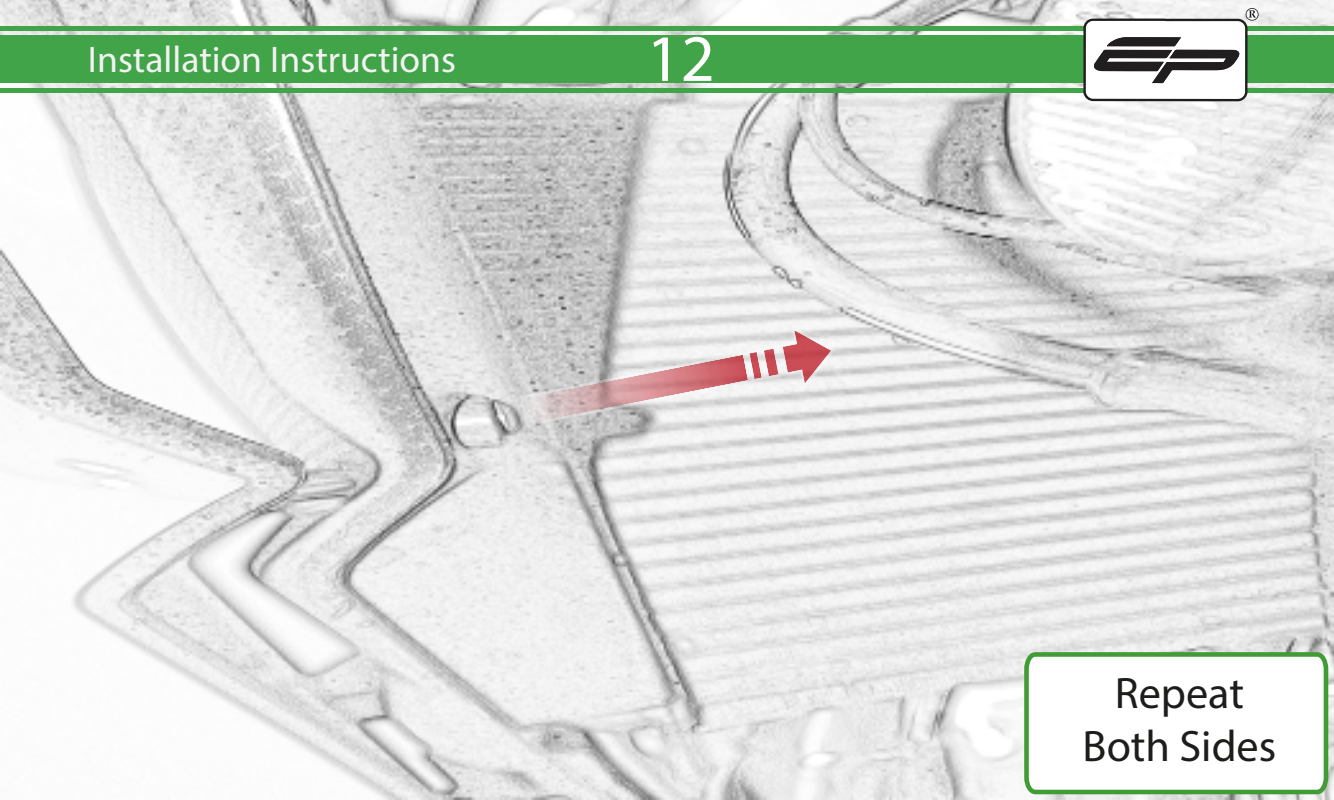



Repeat
Both Sides

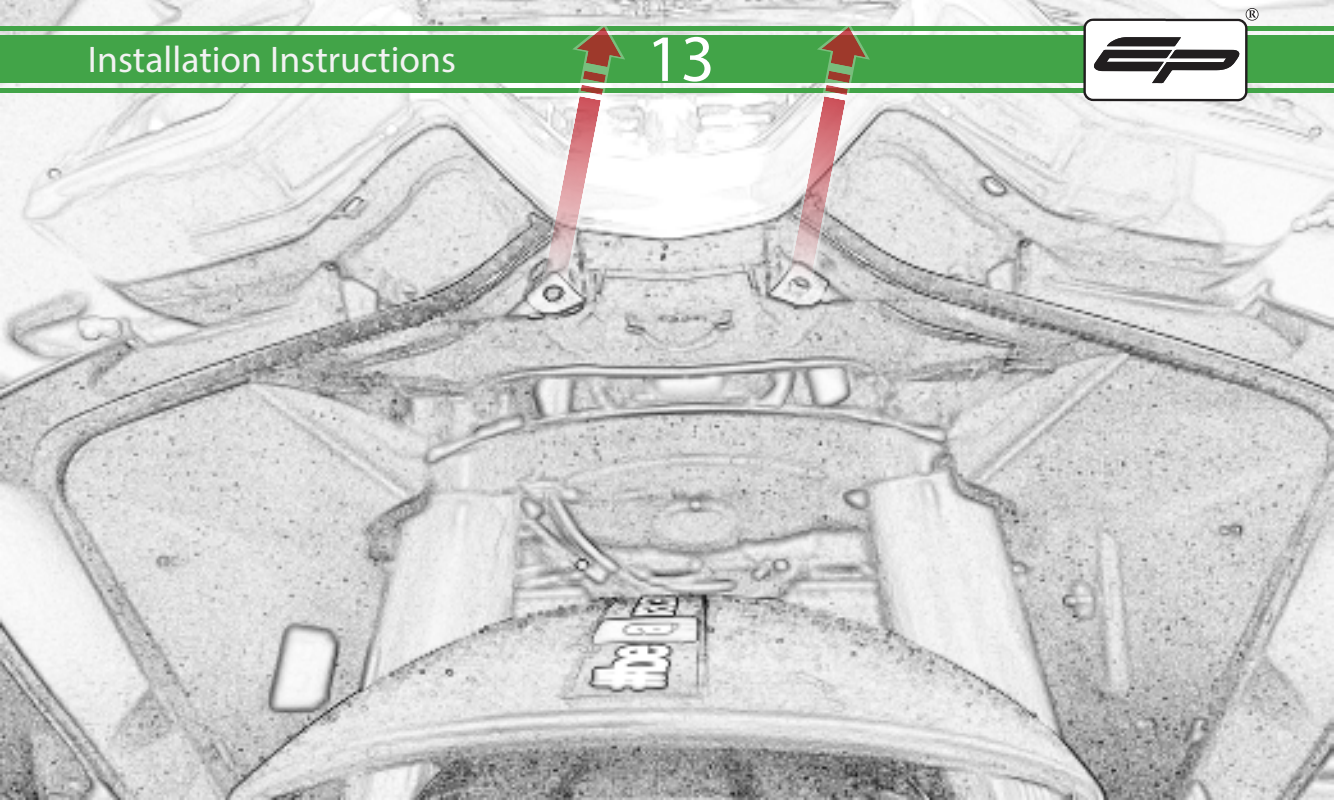


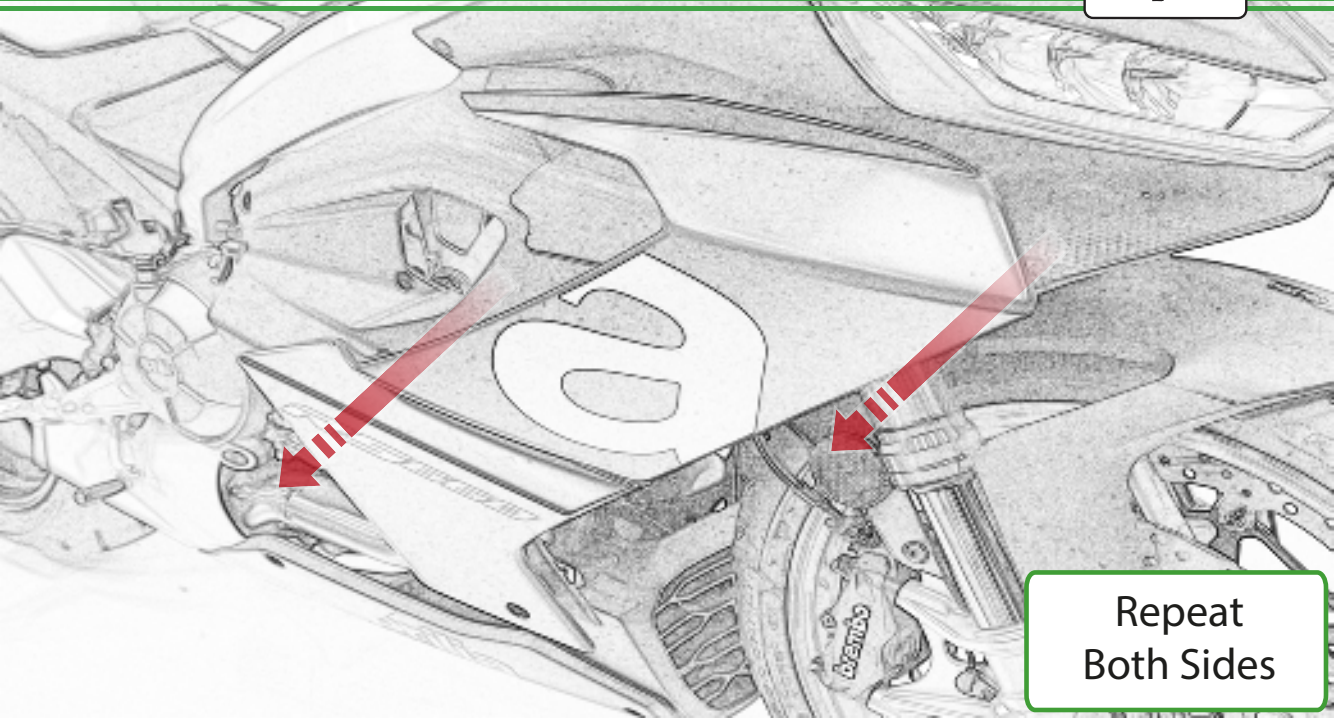



Repeat
Both Sides

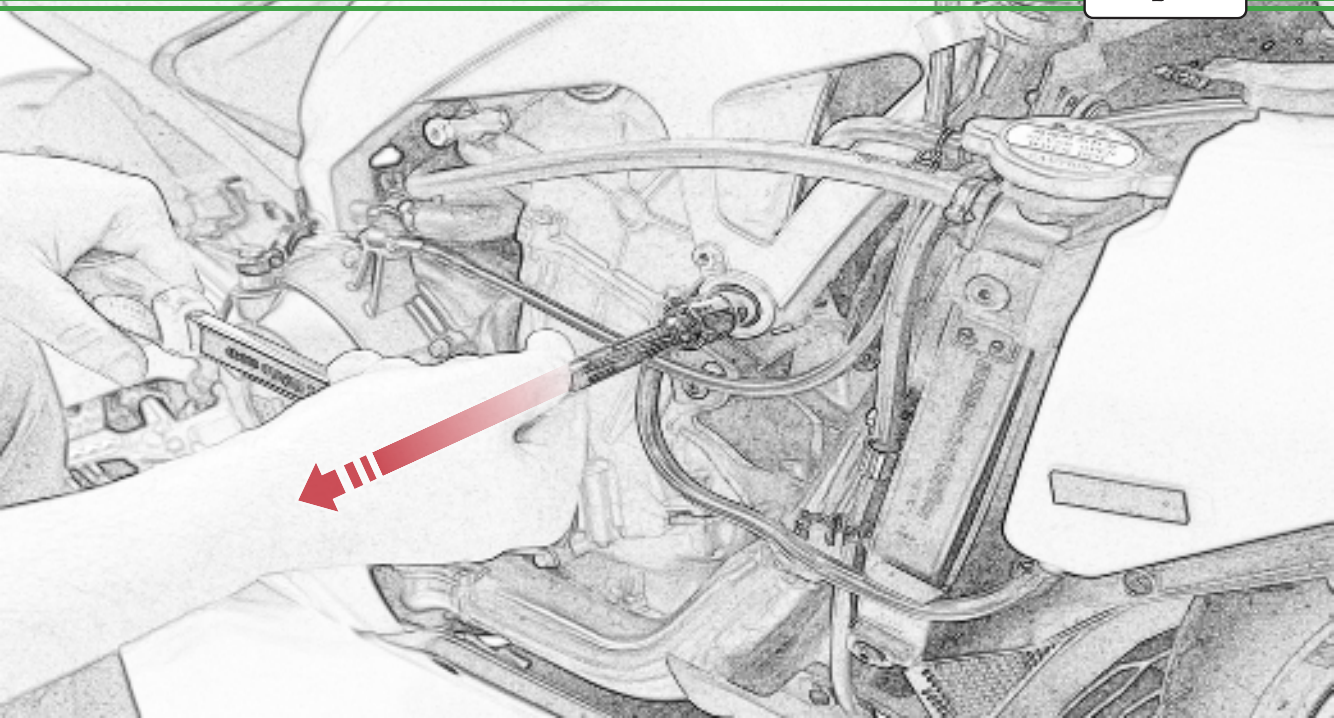

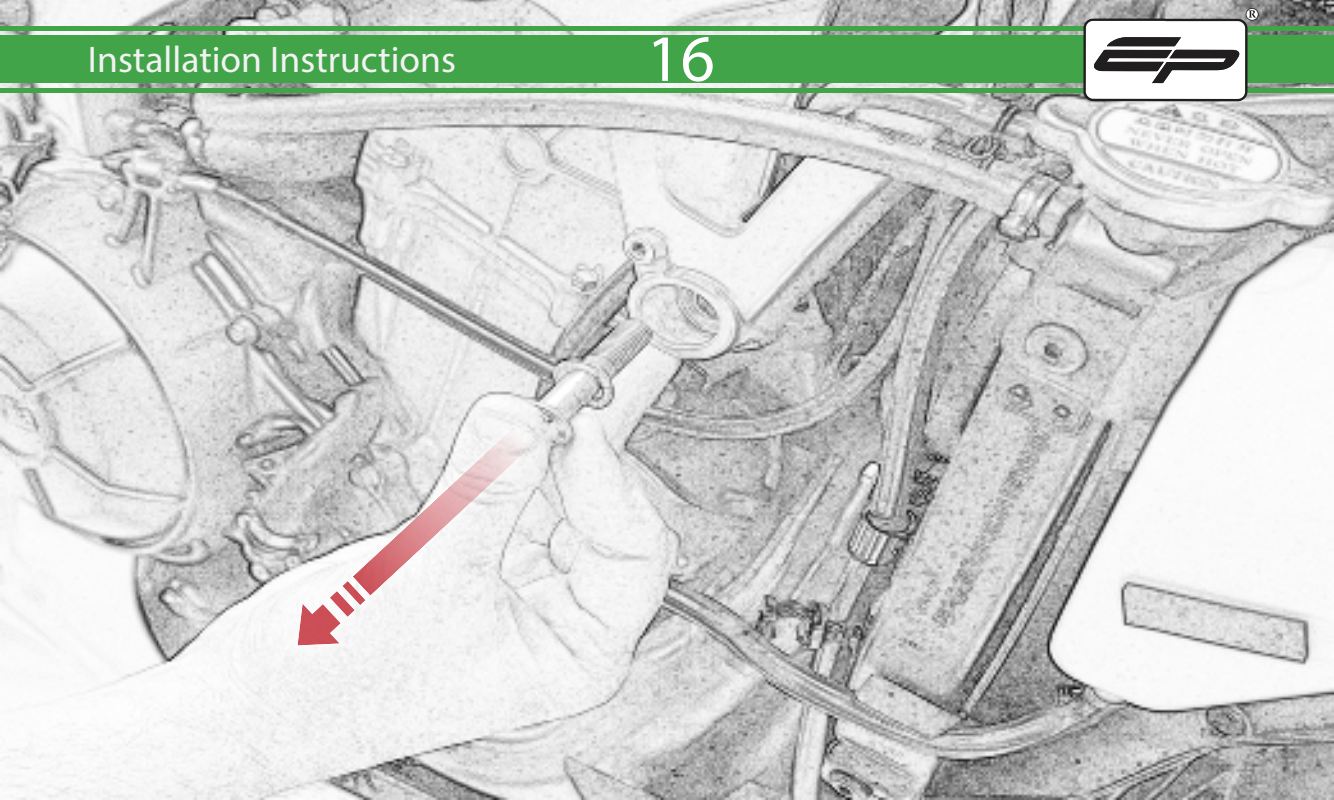


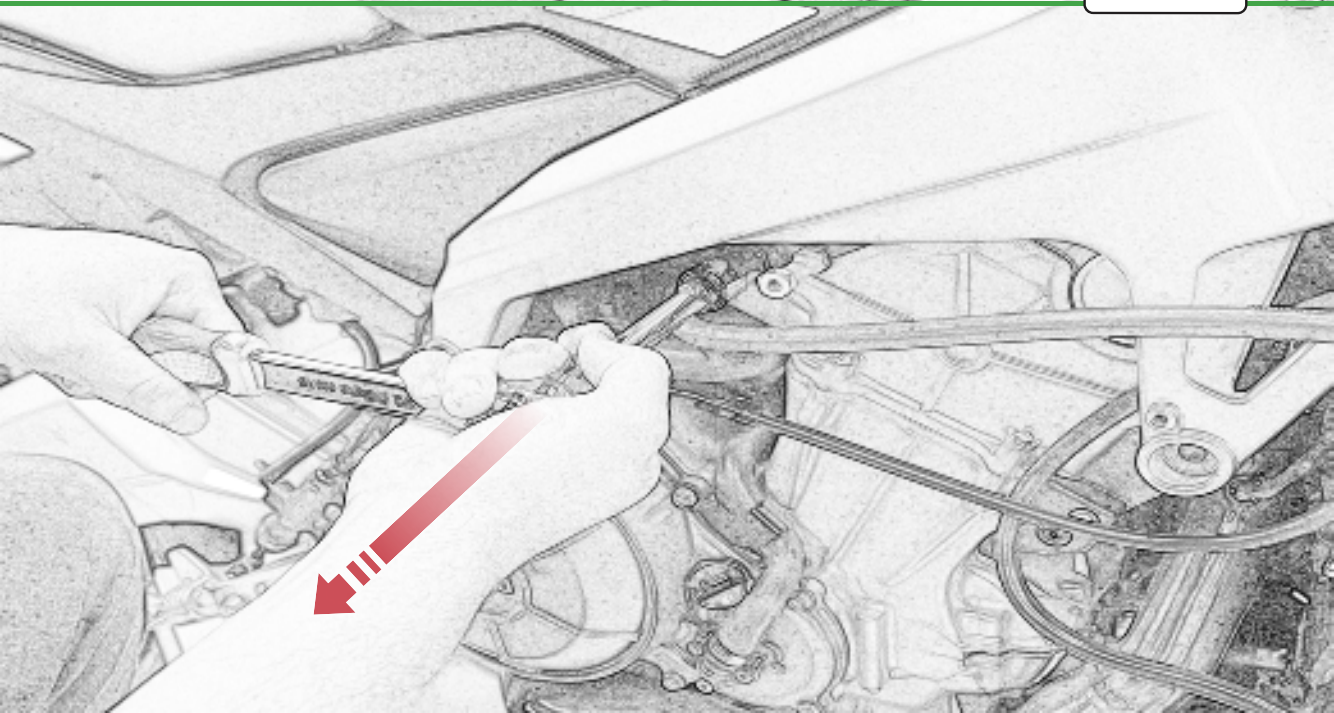


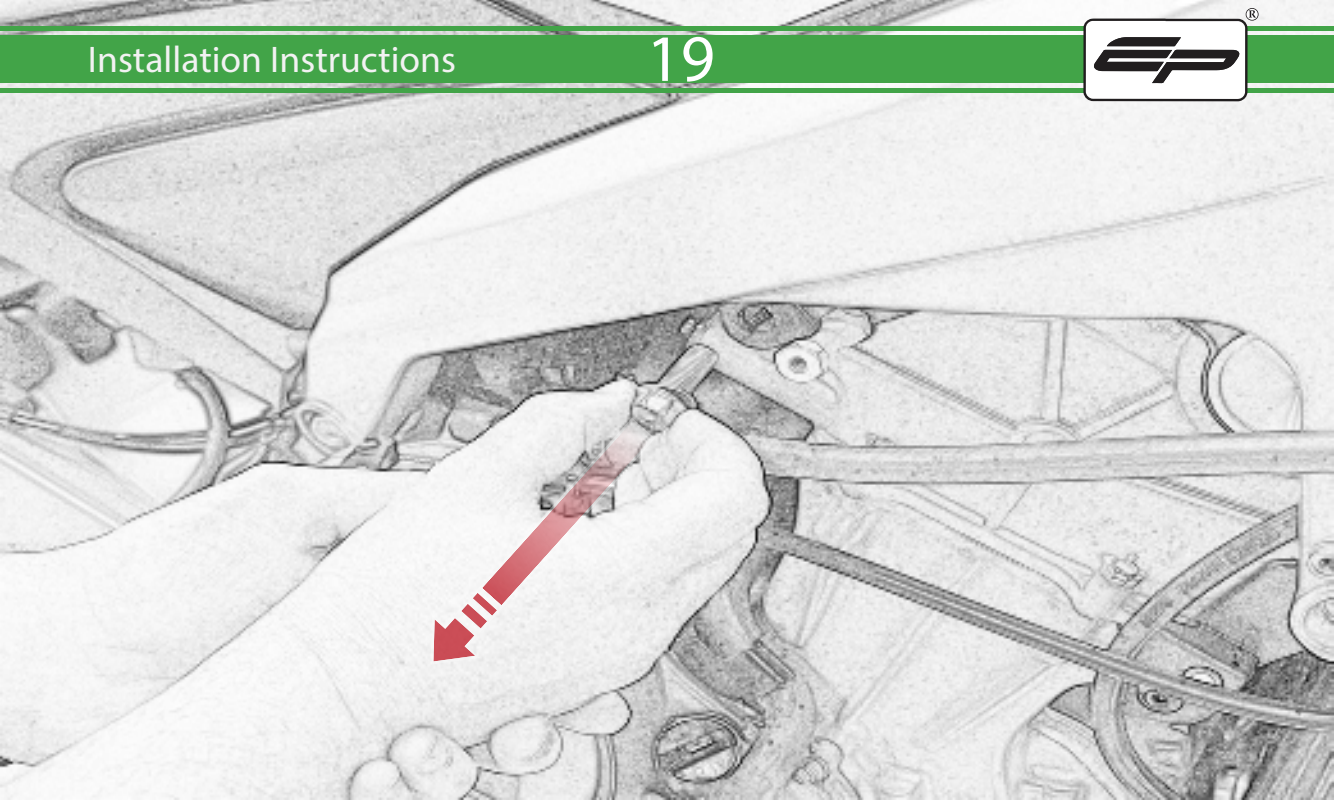


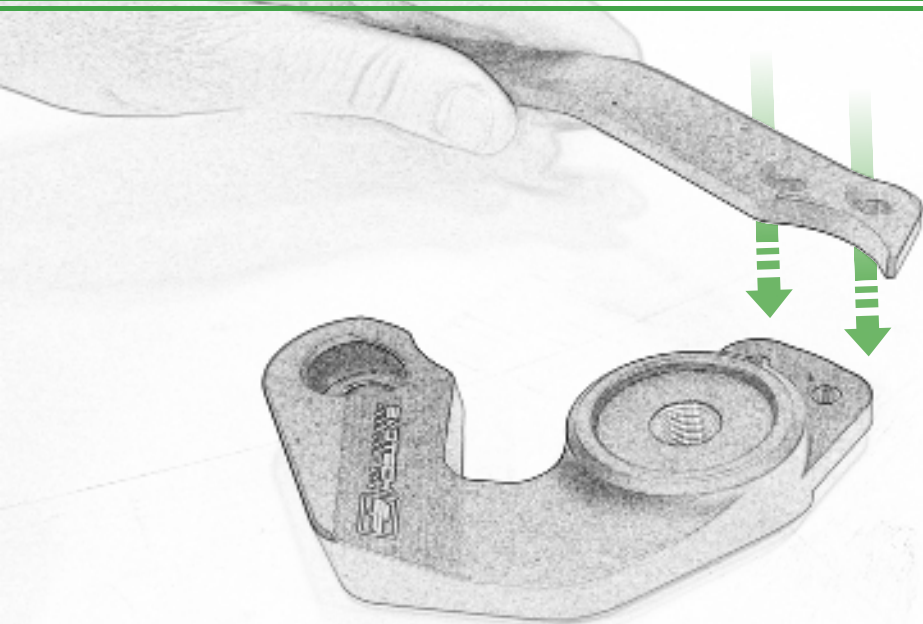




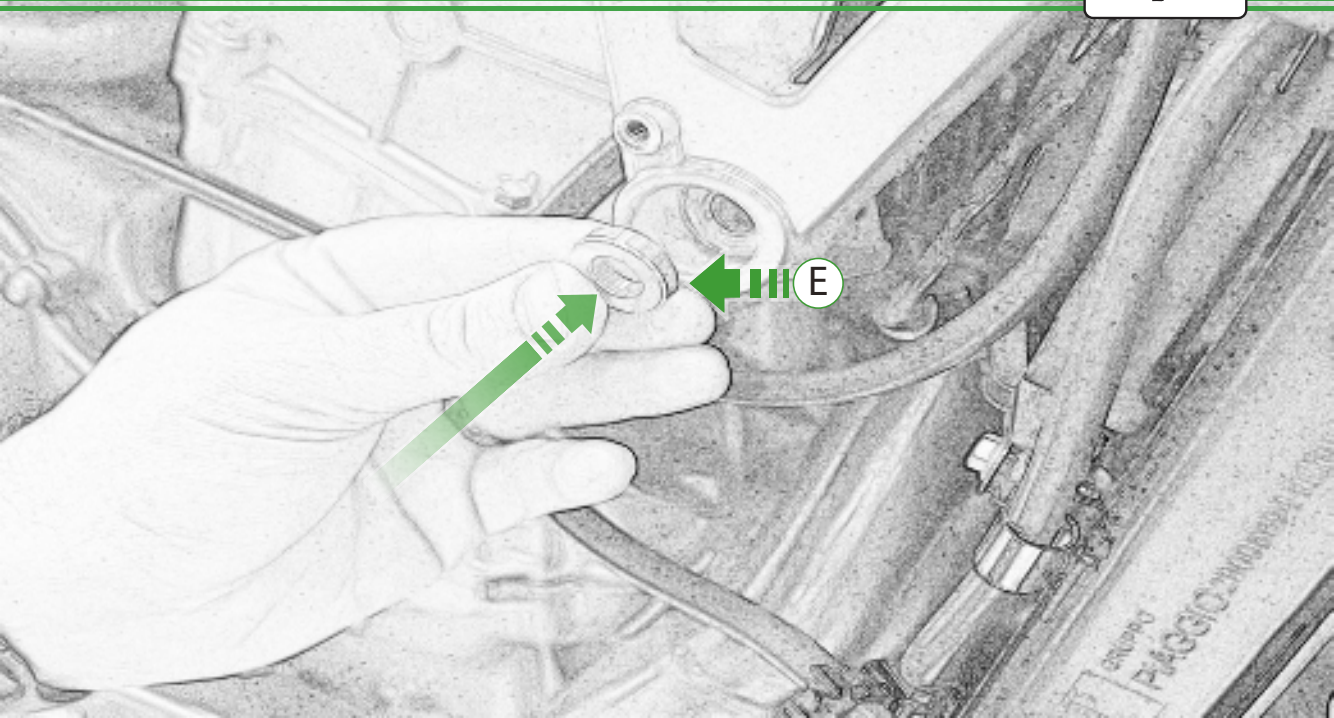


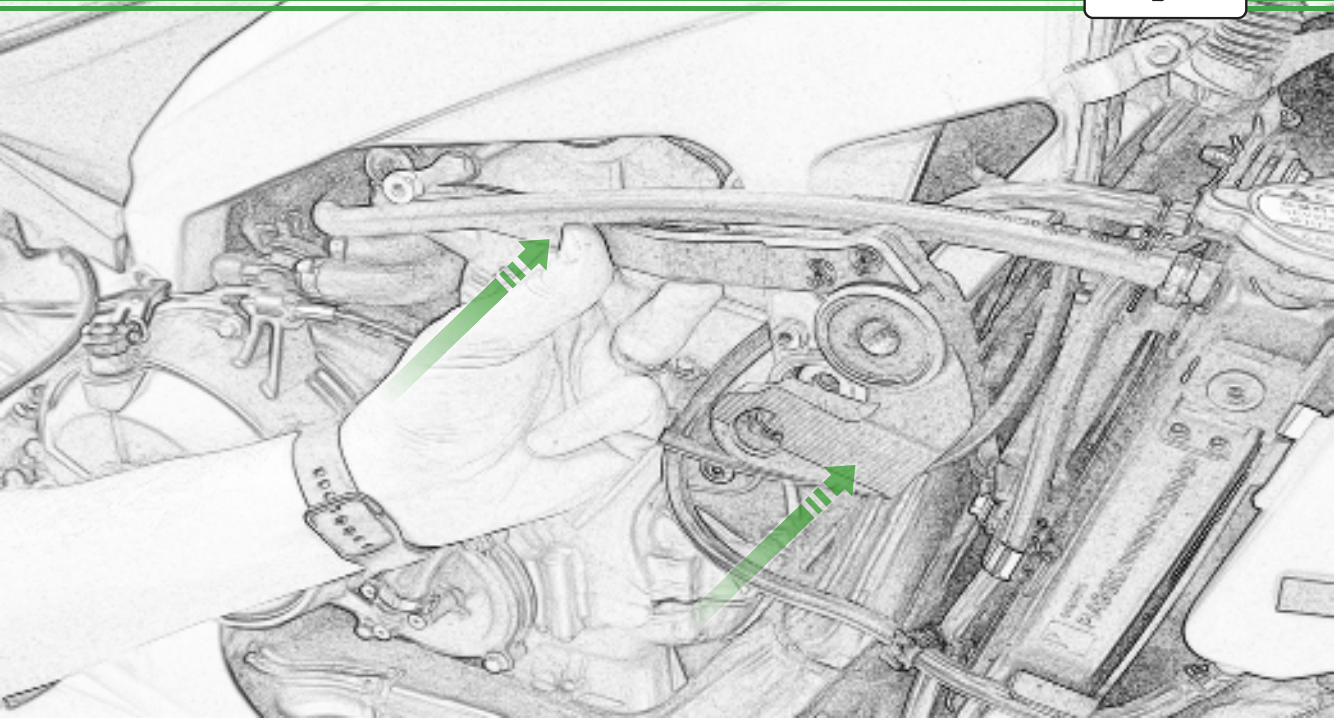

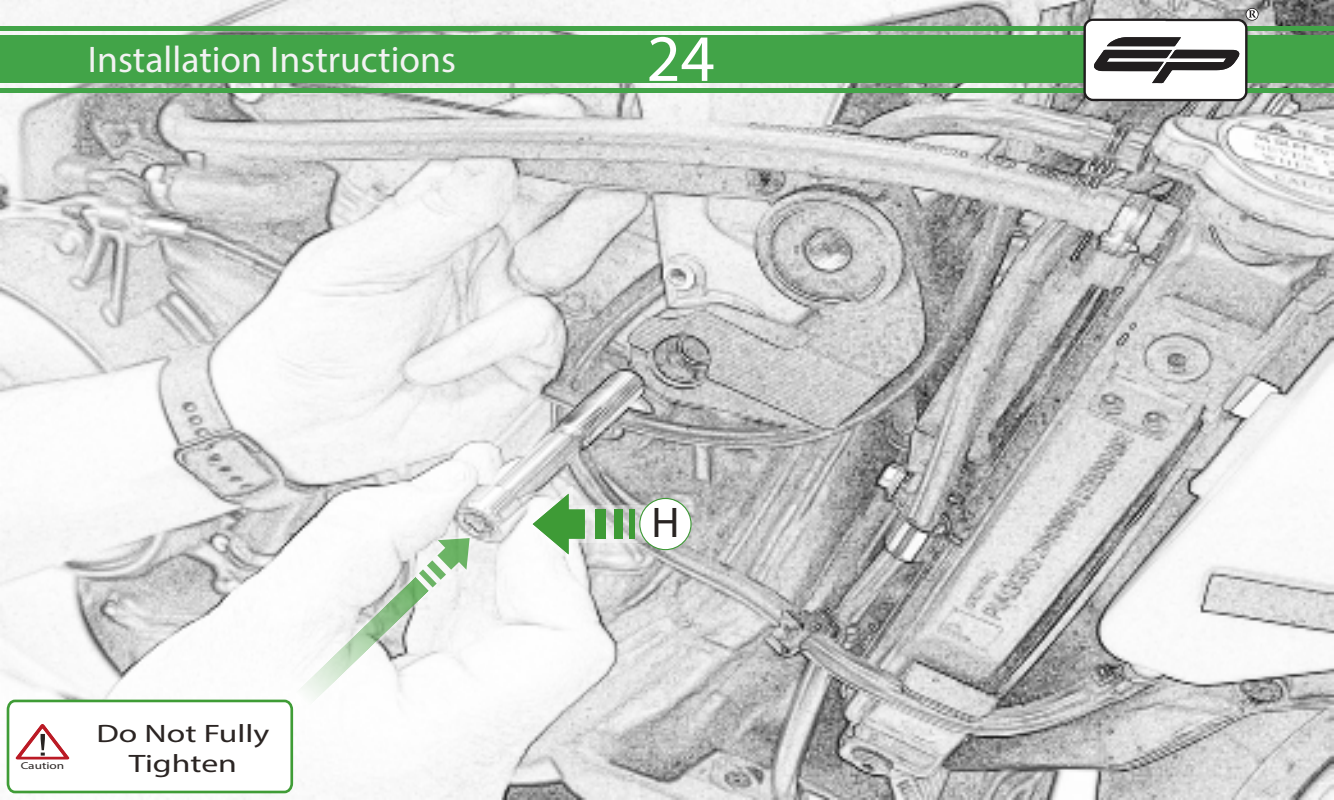


Do Not Fully
Tighten

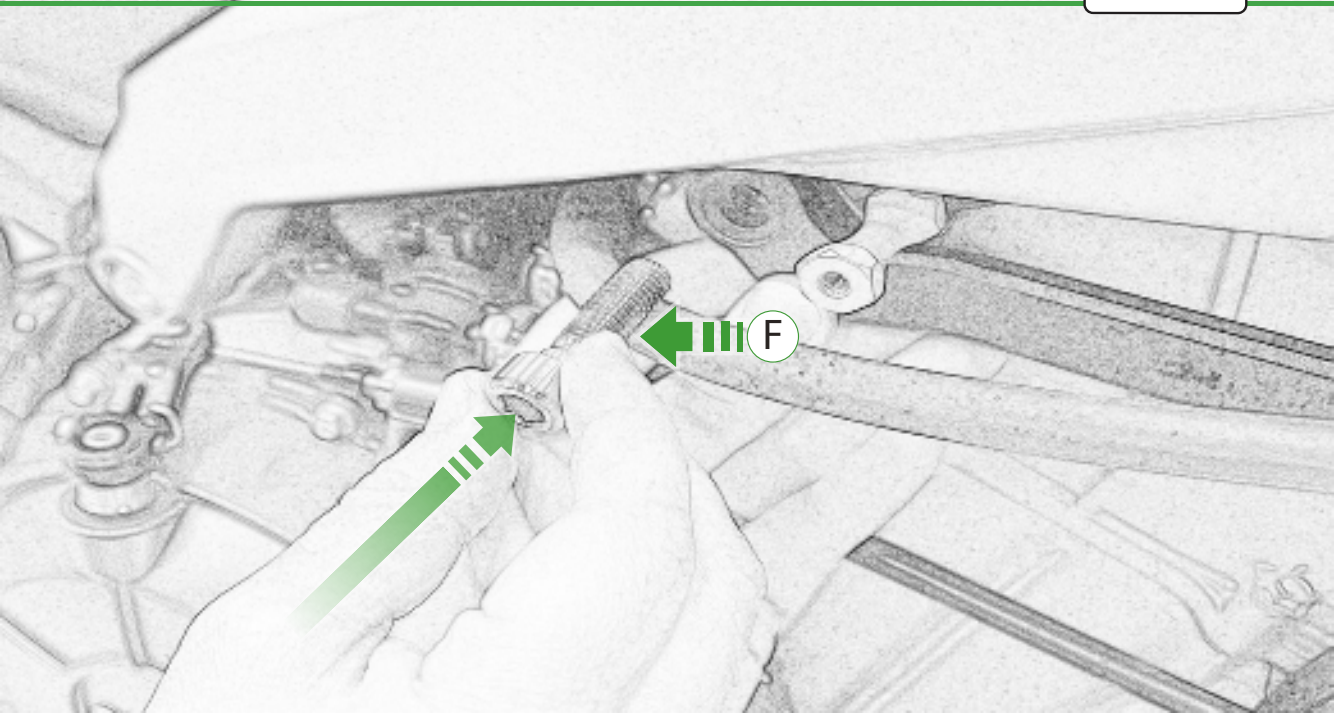


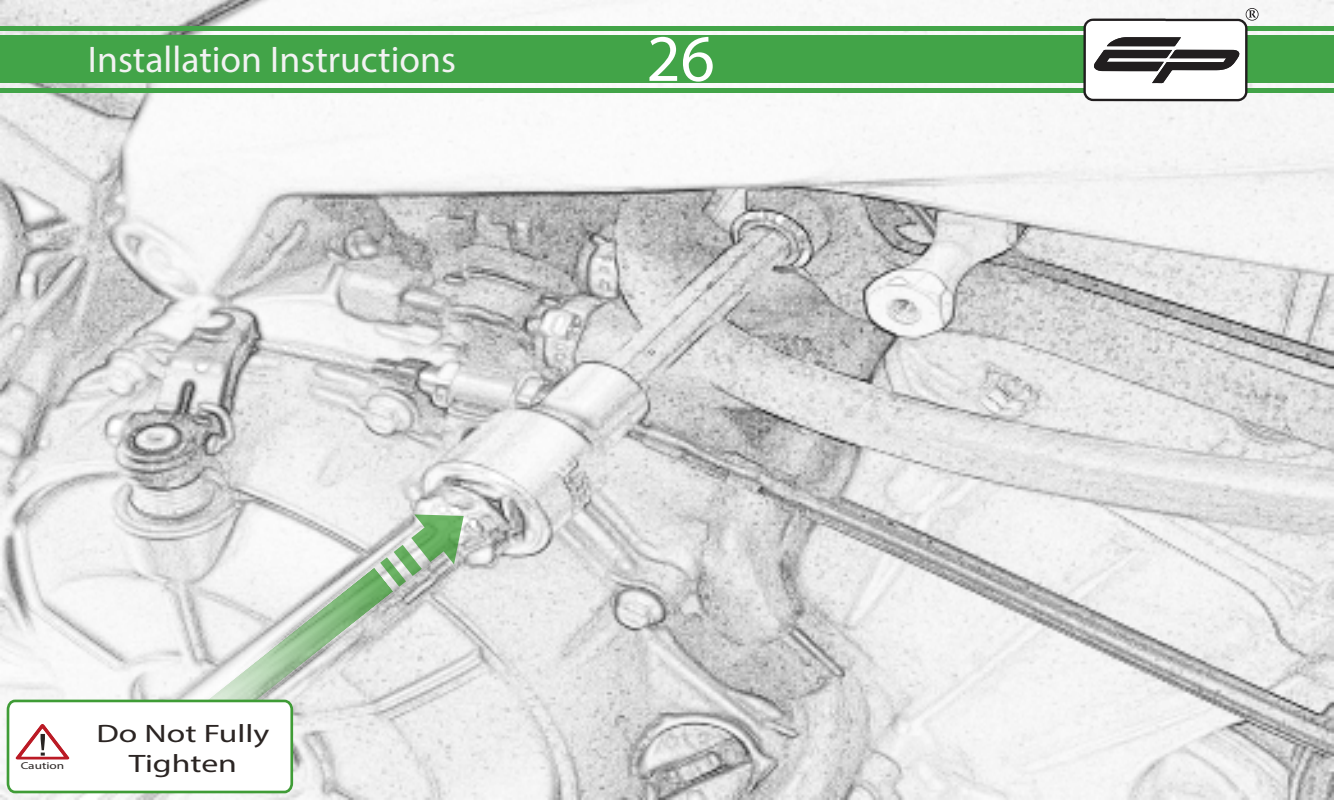


**Do Not Fully
Tighten**

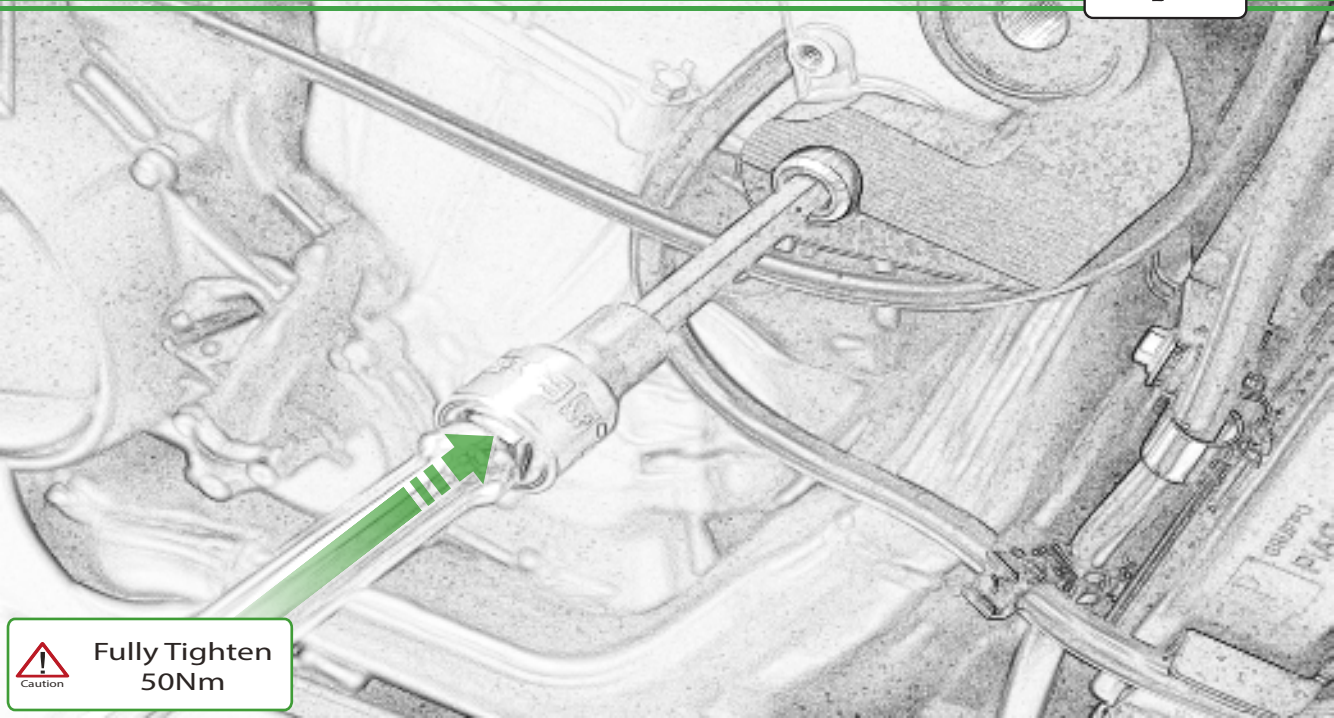



Fully Tighten
50Nm

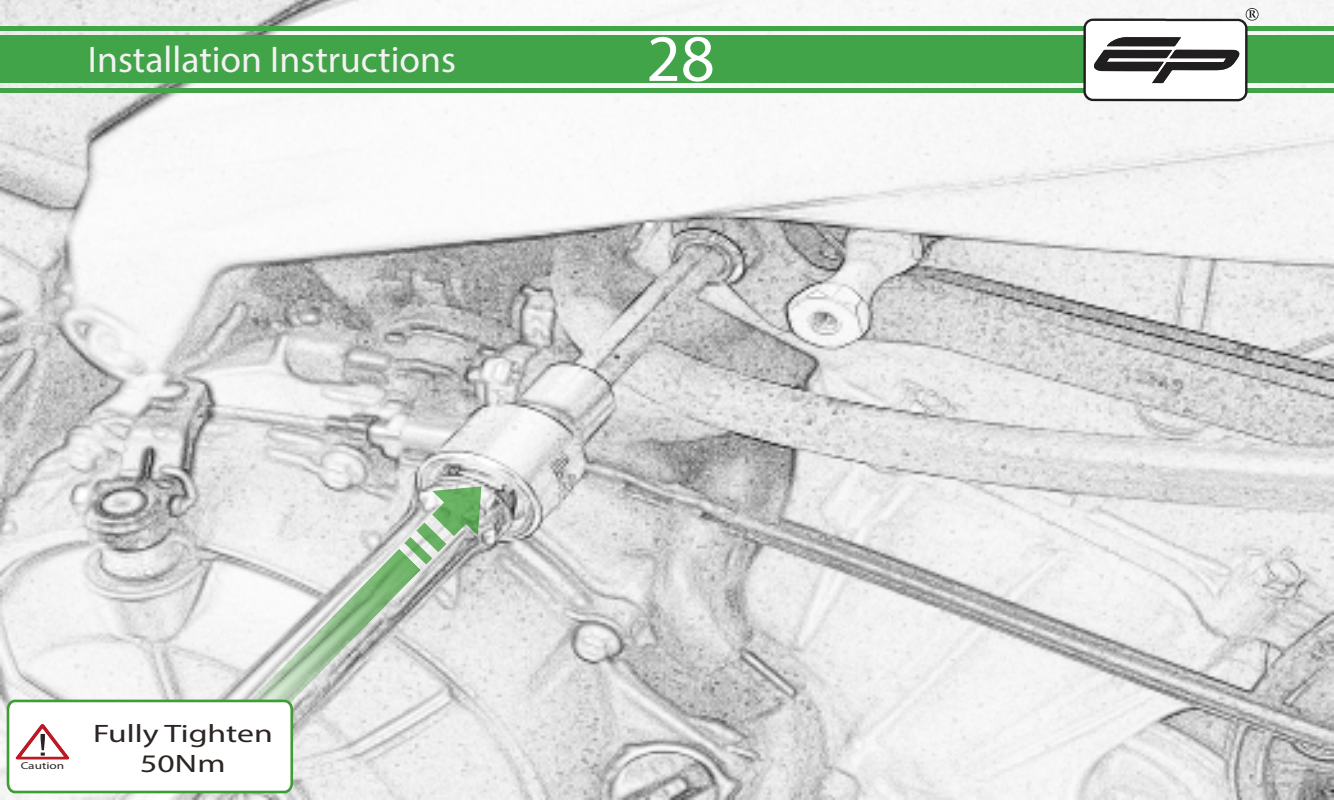


Fully Tighten
50Nm

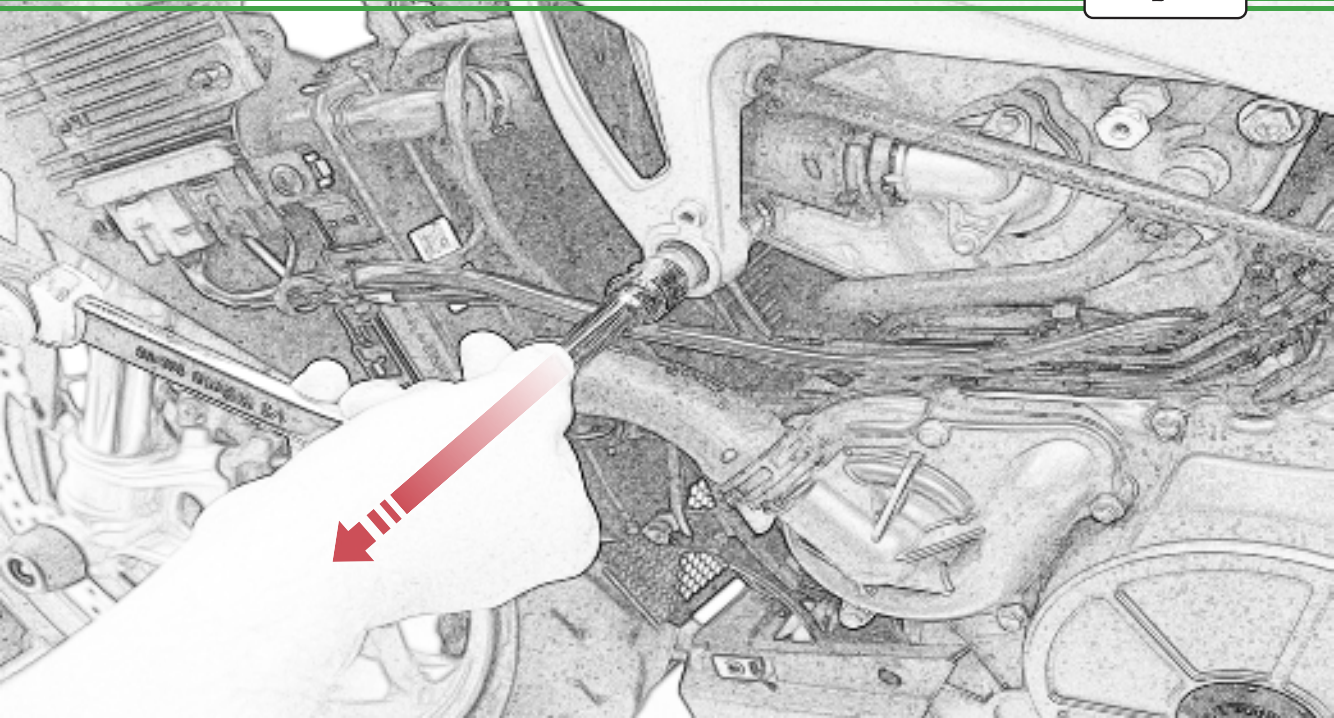

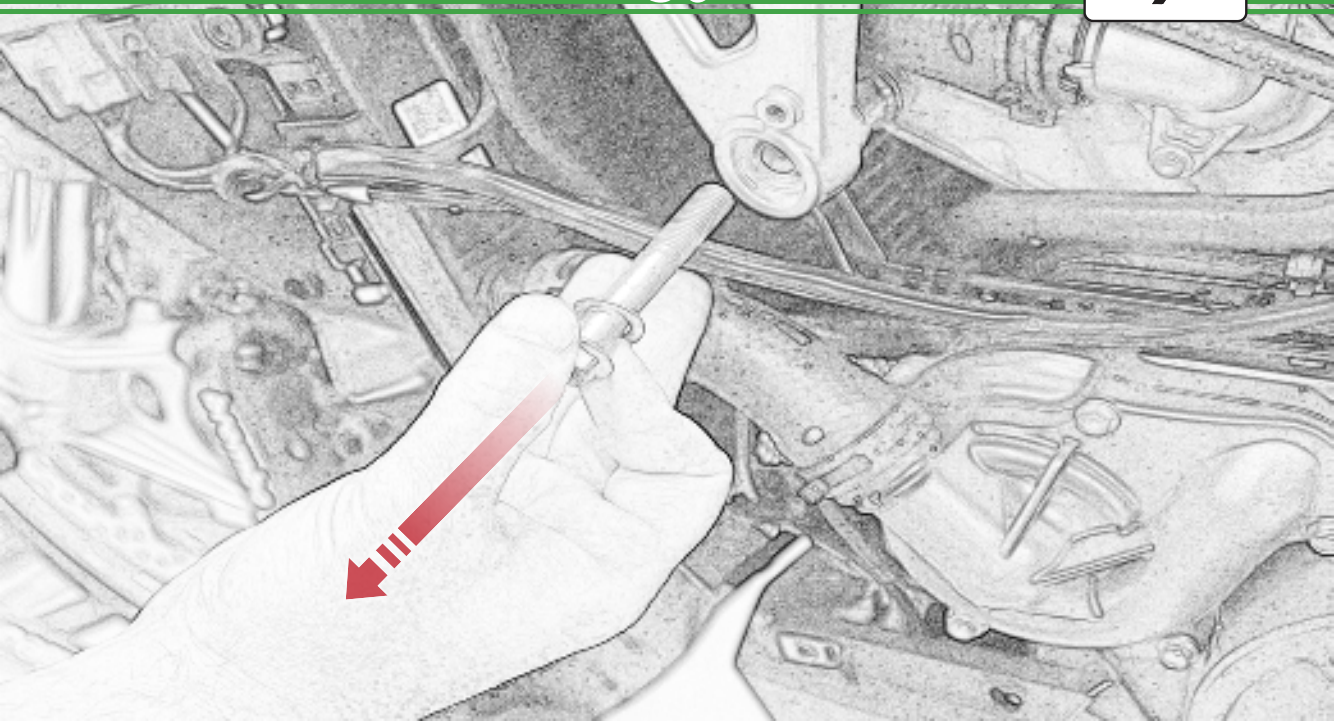


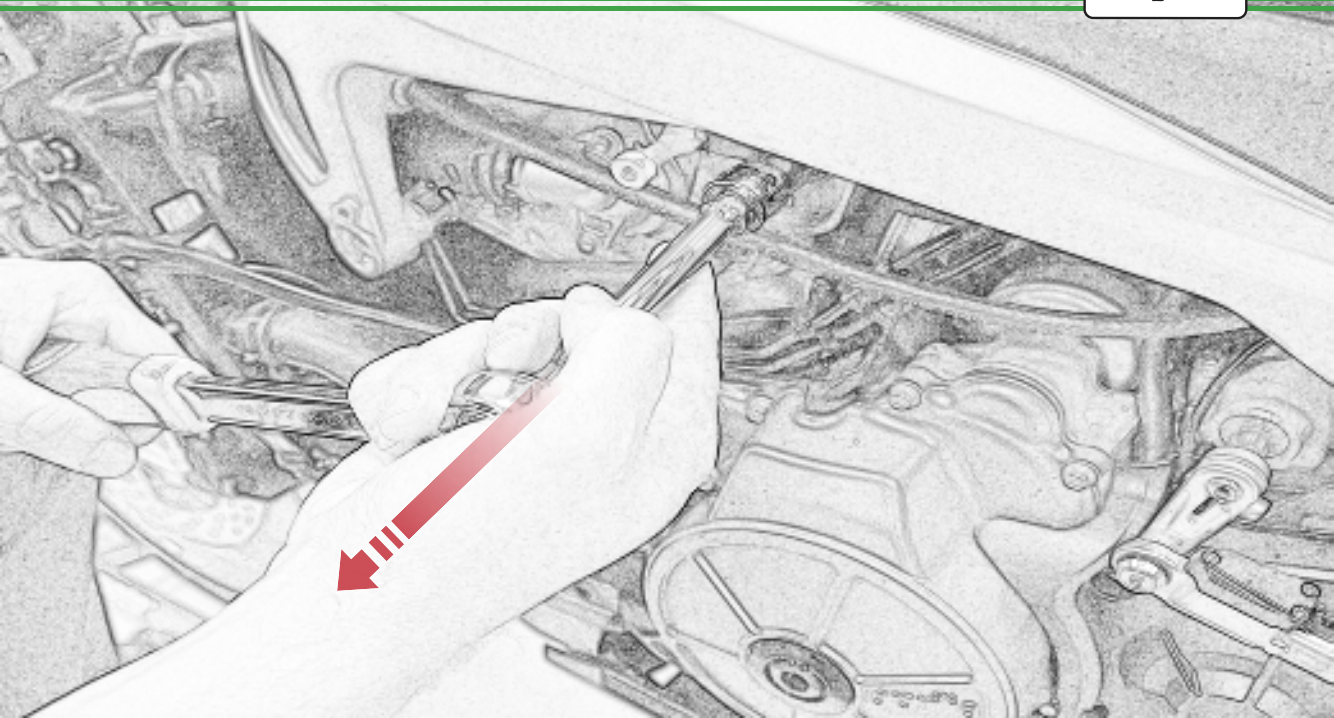





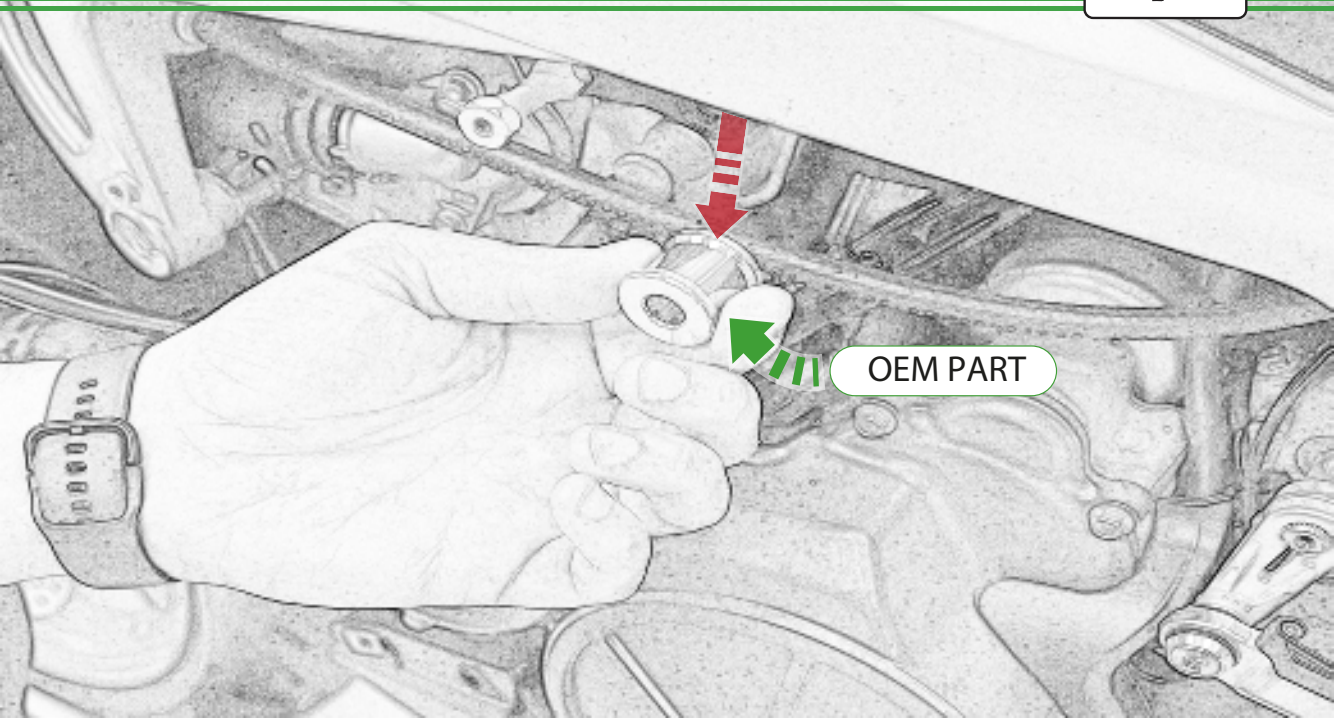


OEM PART

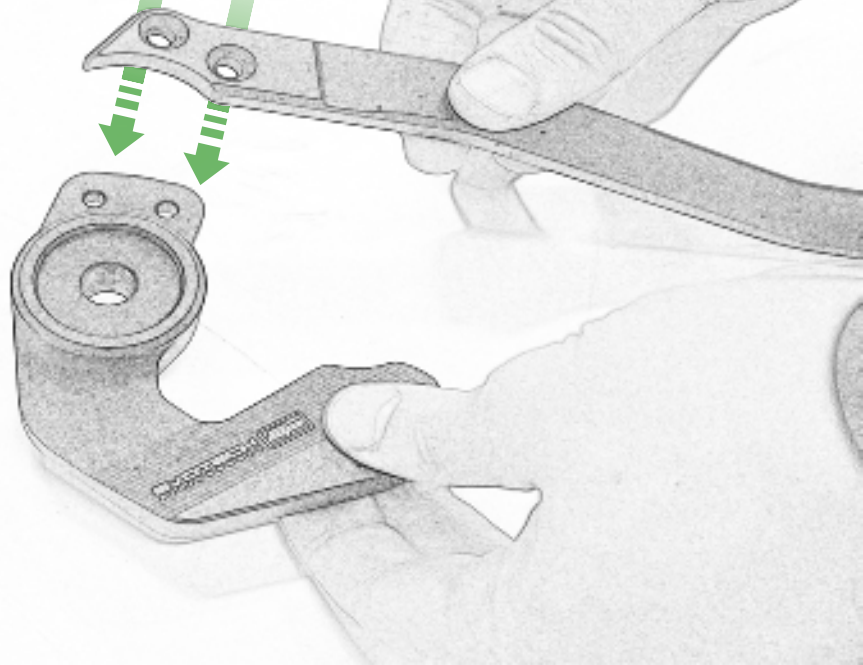

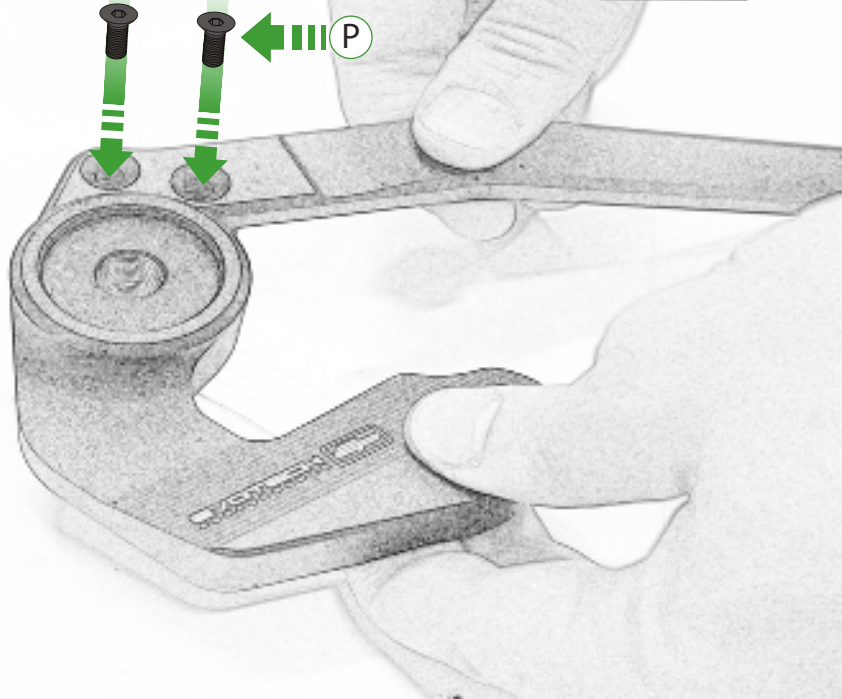


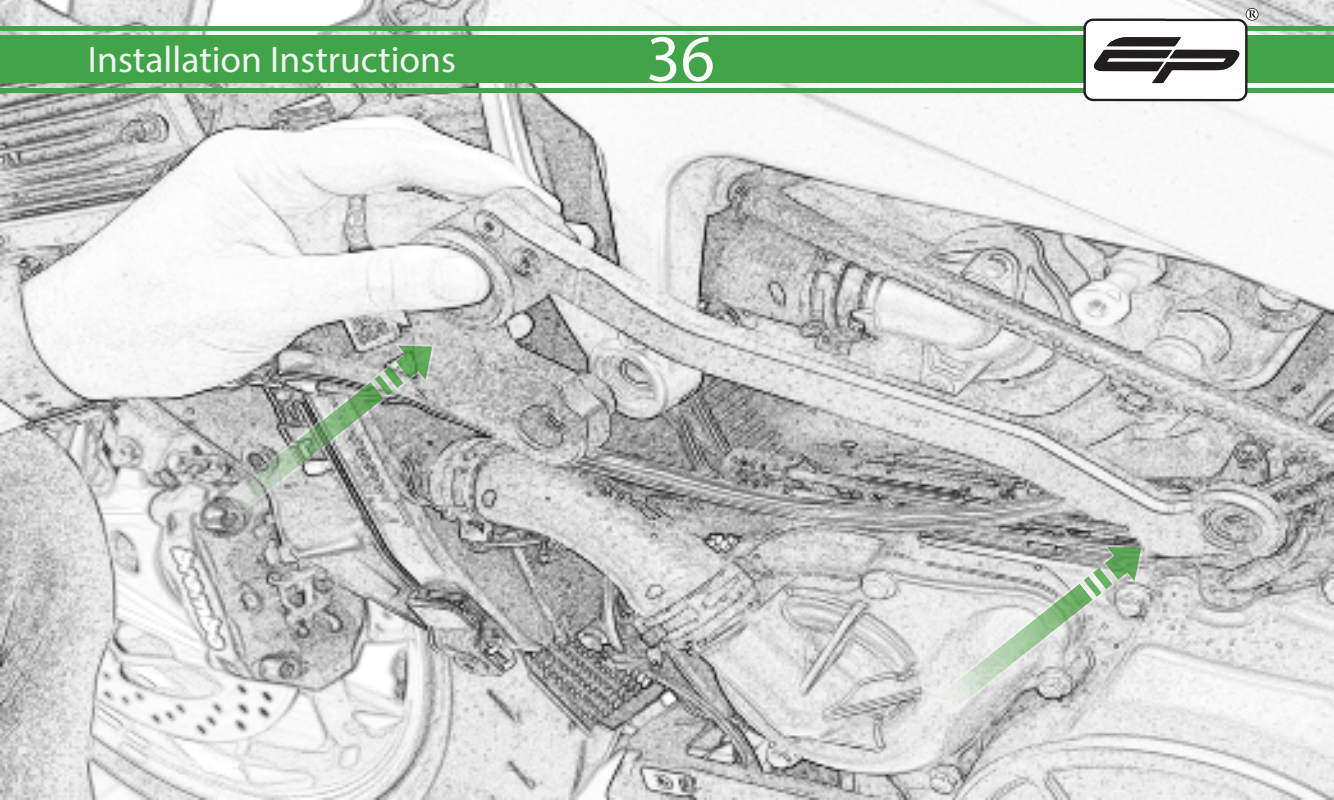





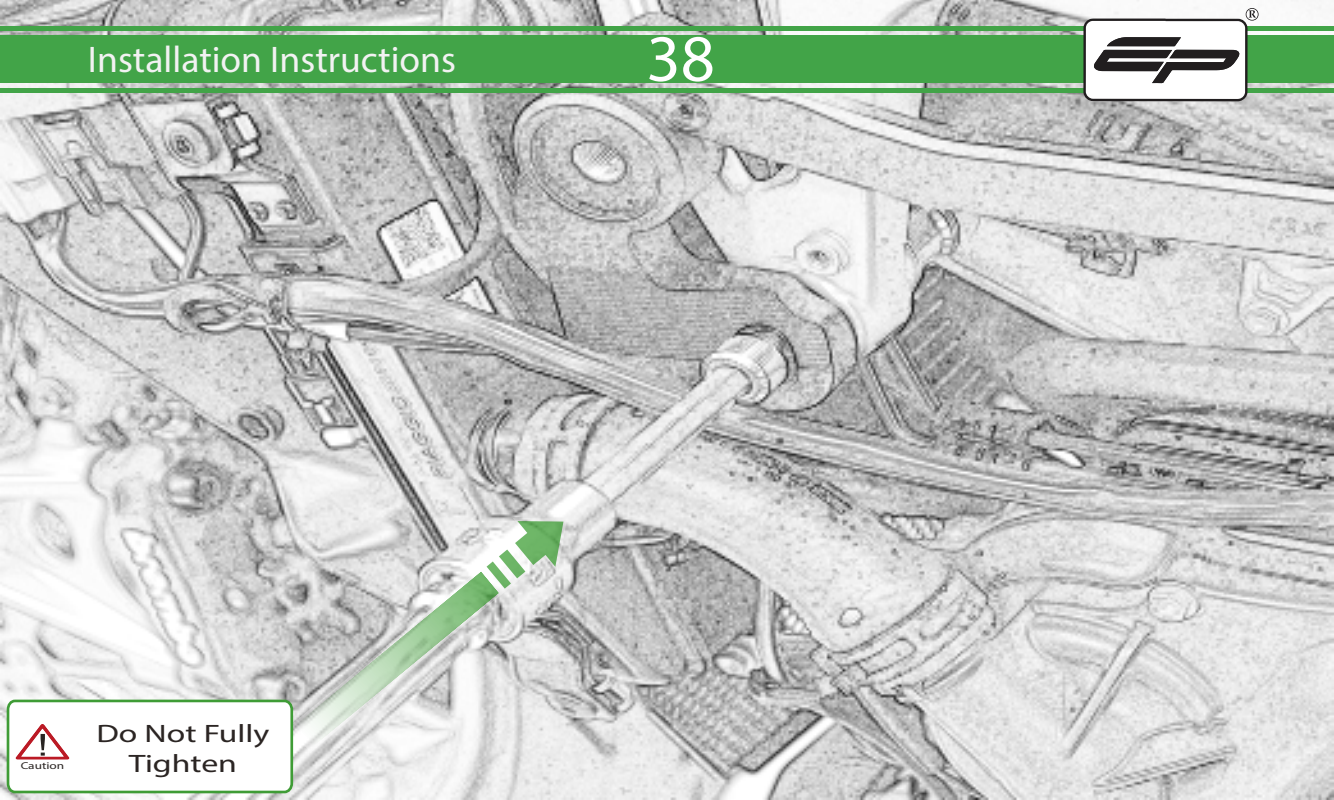


**Do Not Fully
Tighten**

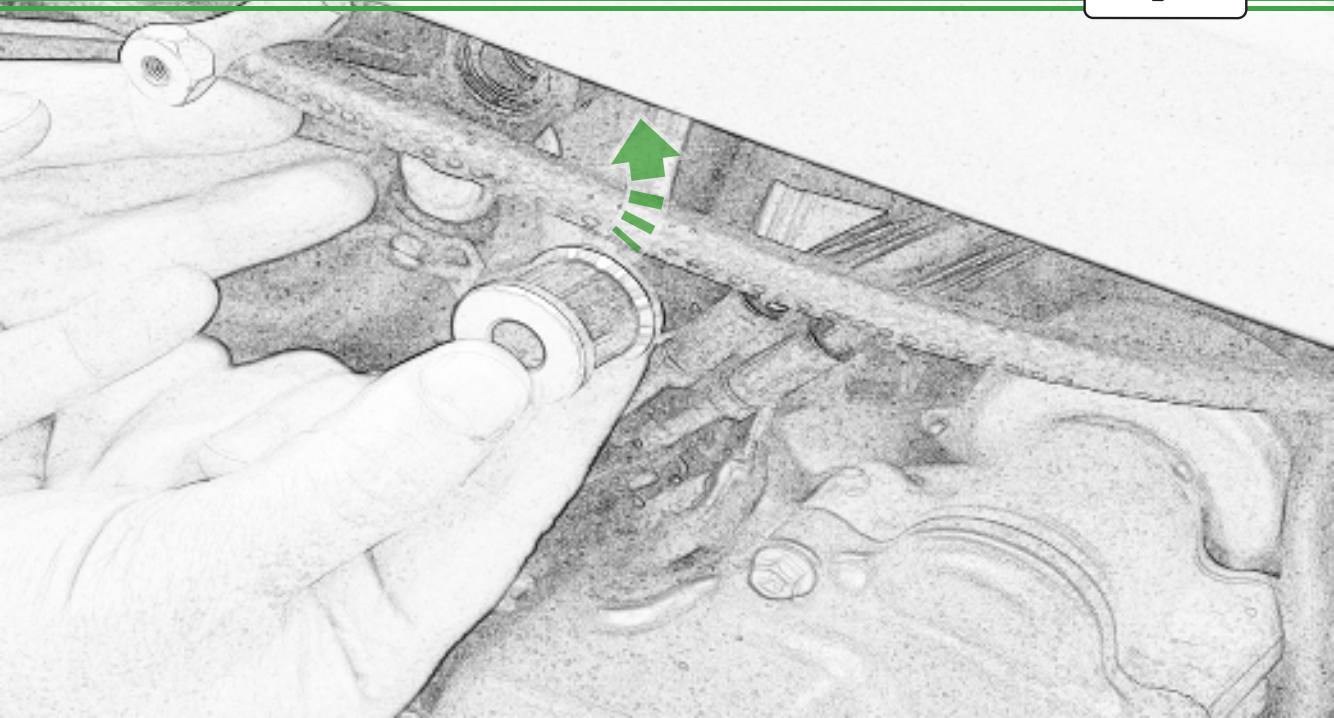

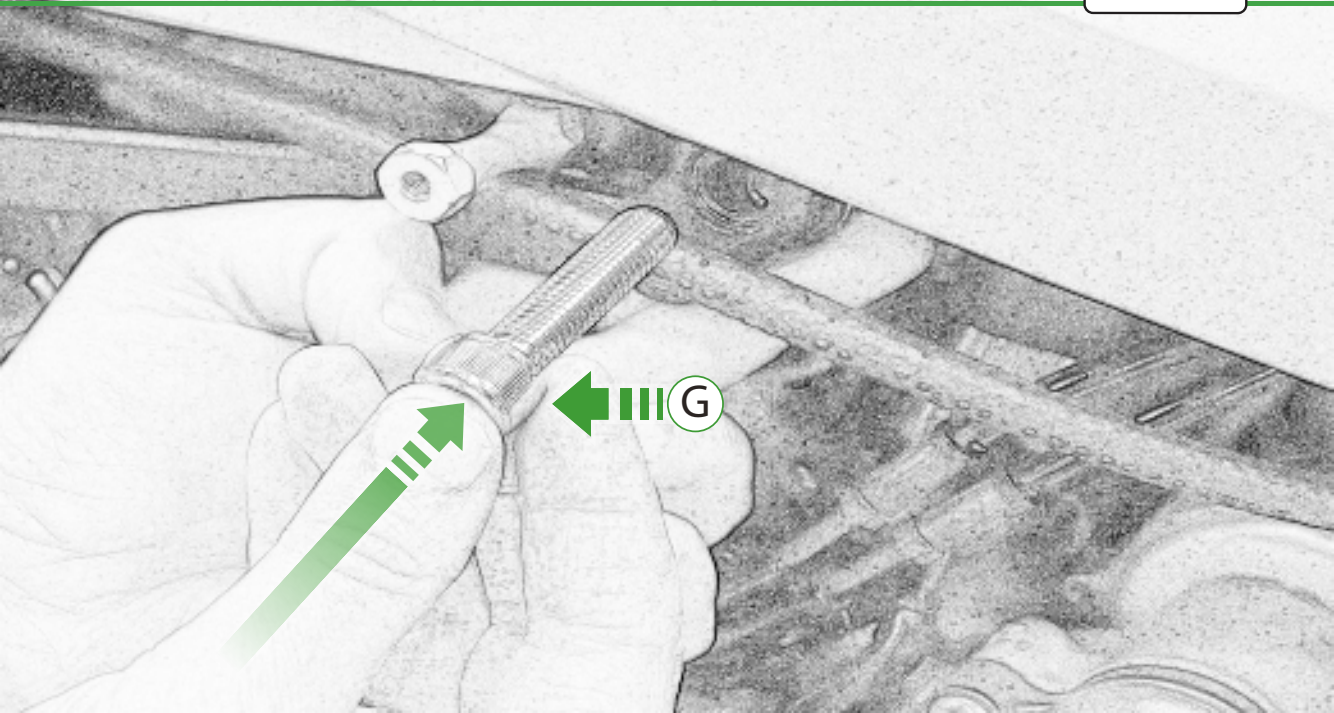


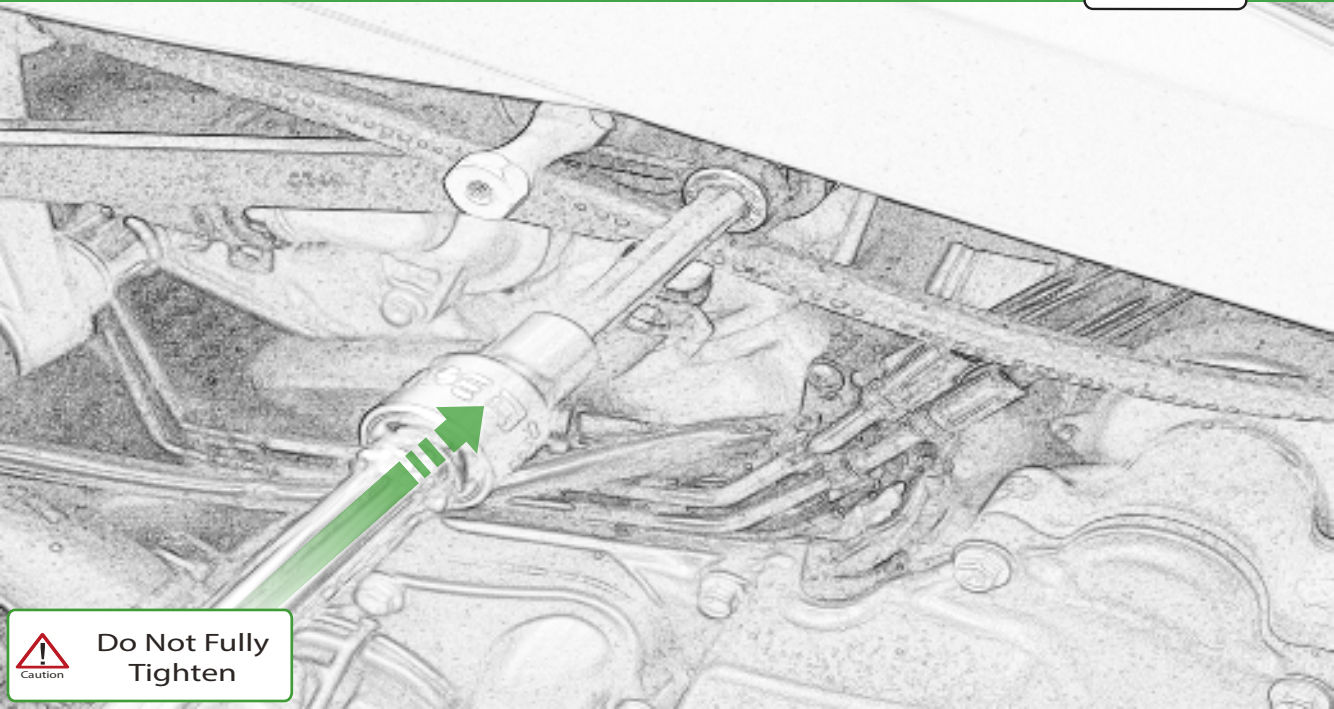


**Do Not Fully
Tighten**

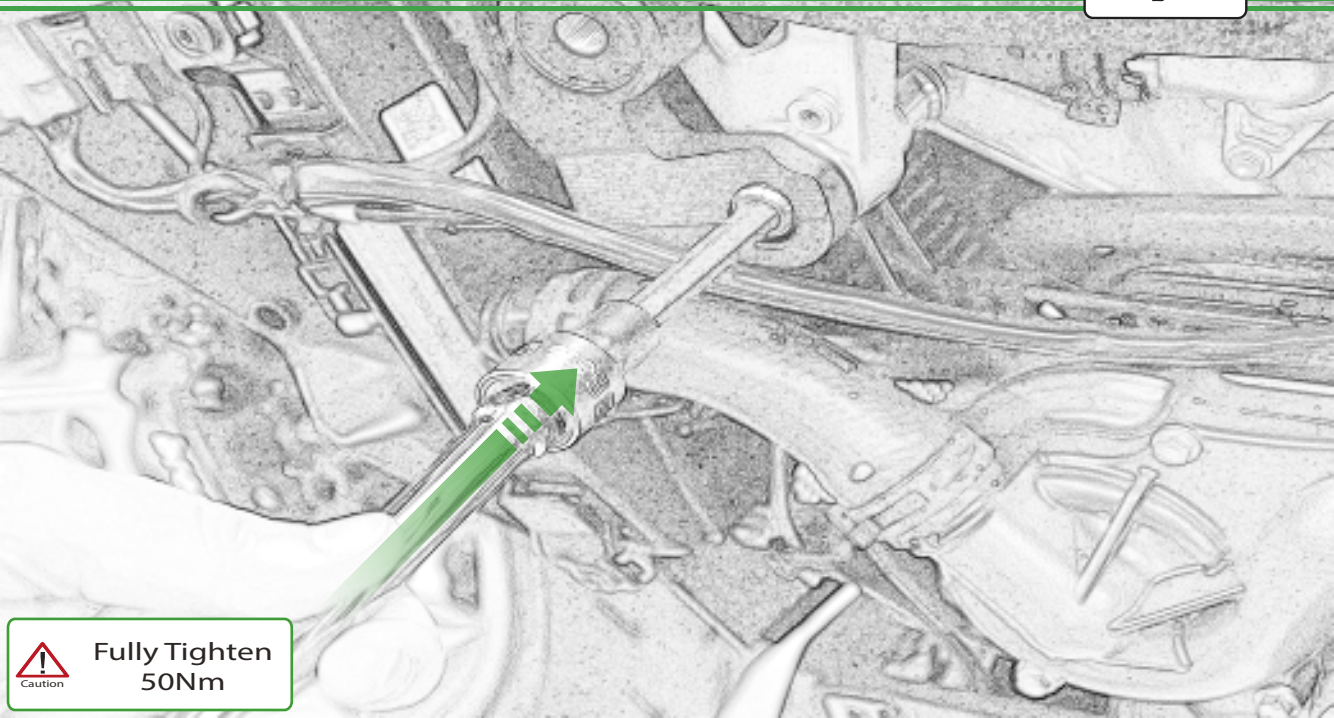



Fully Tighten
50Nm

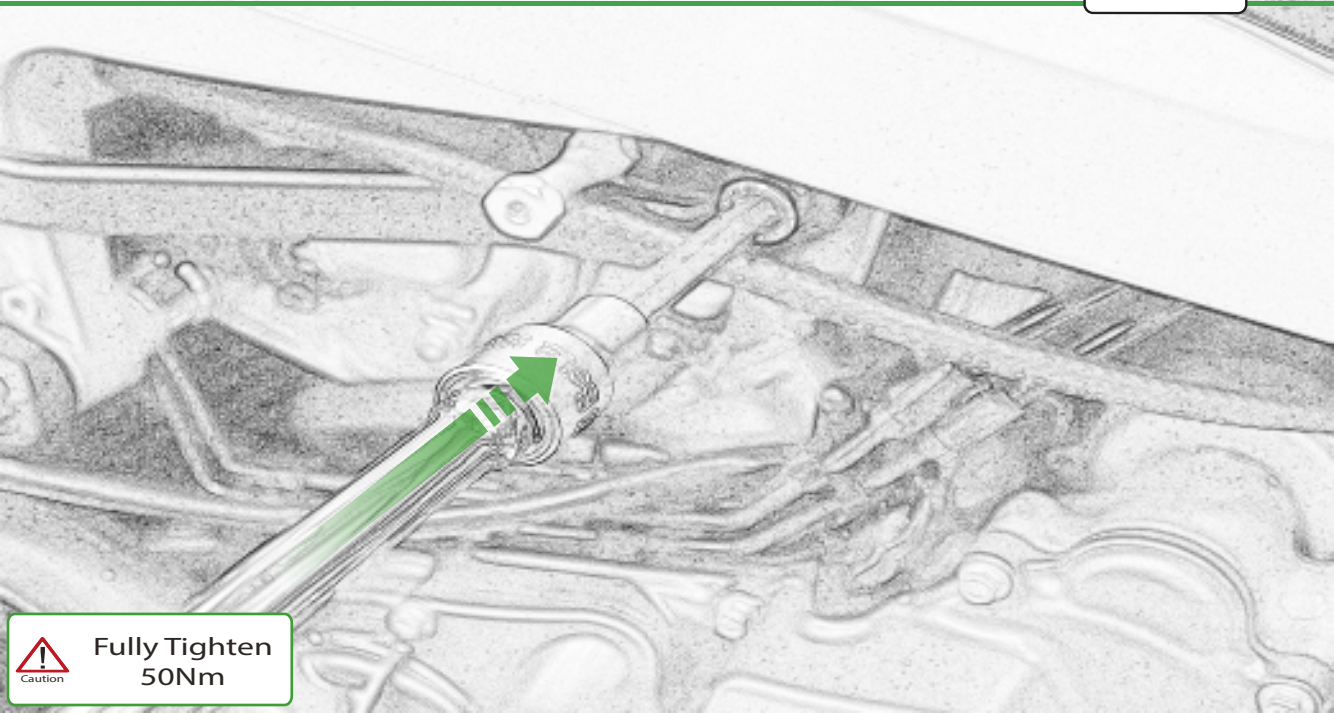



Fully Tighten
50Nm

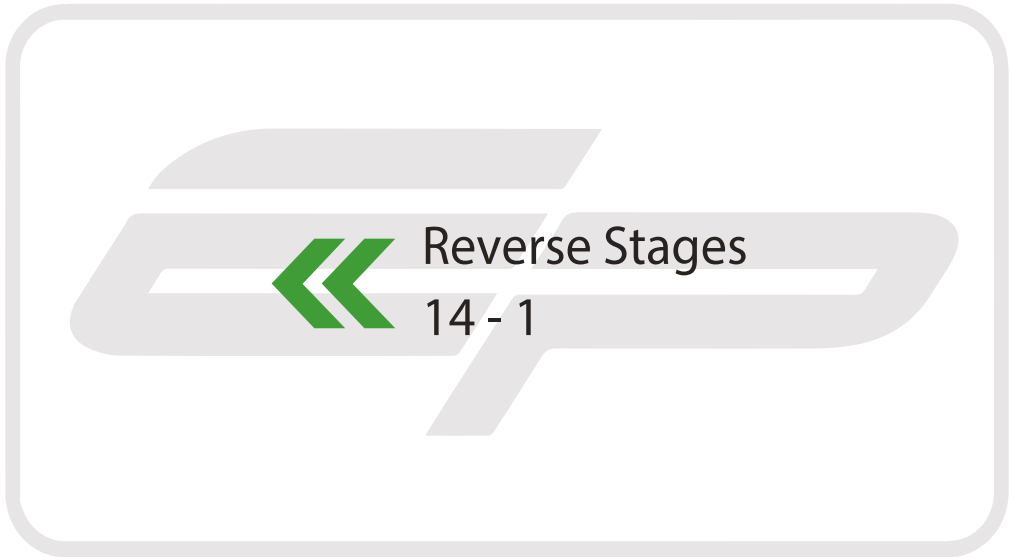


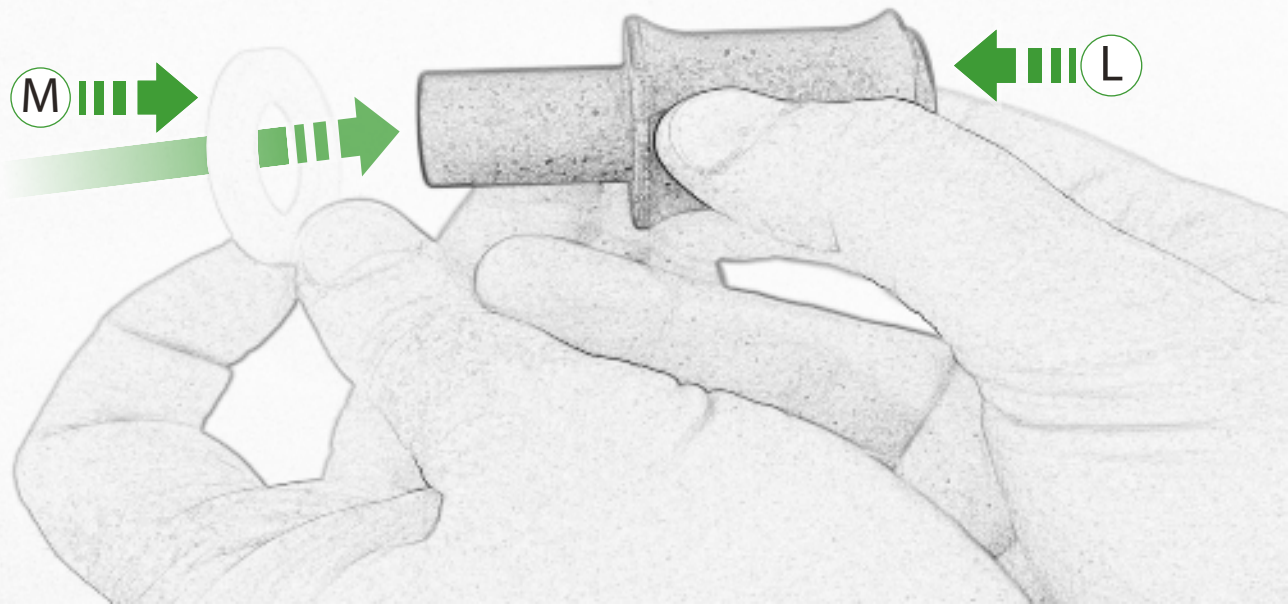

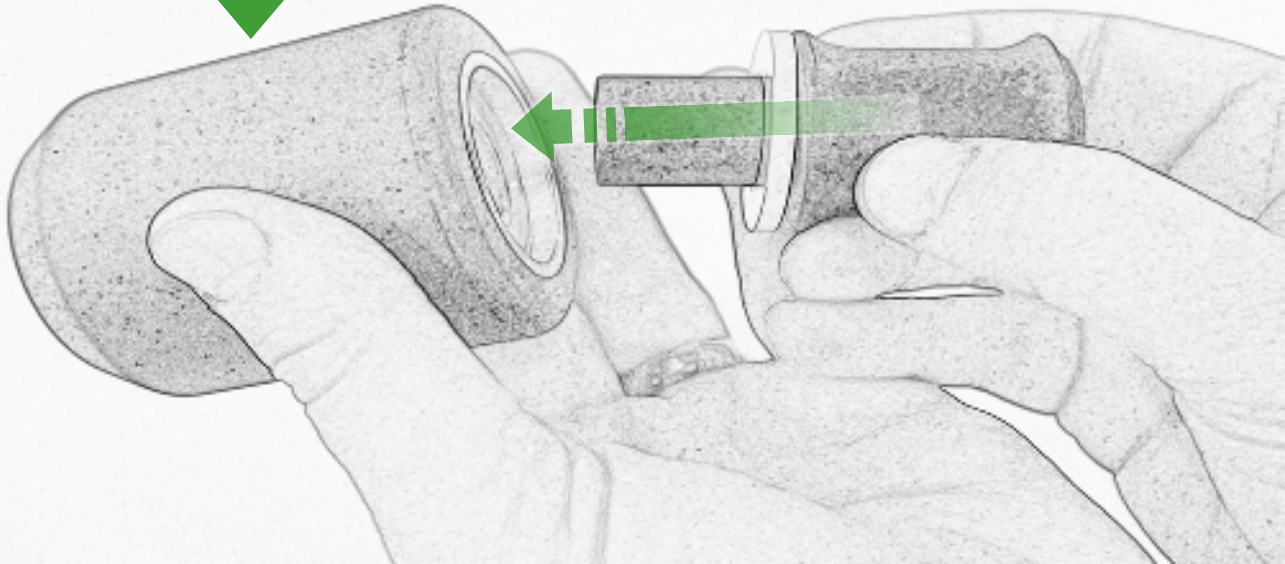

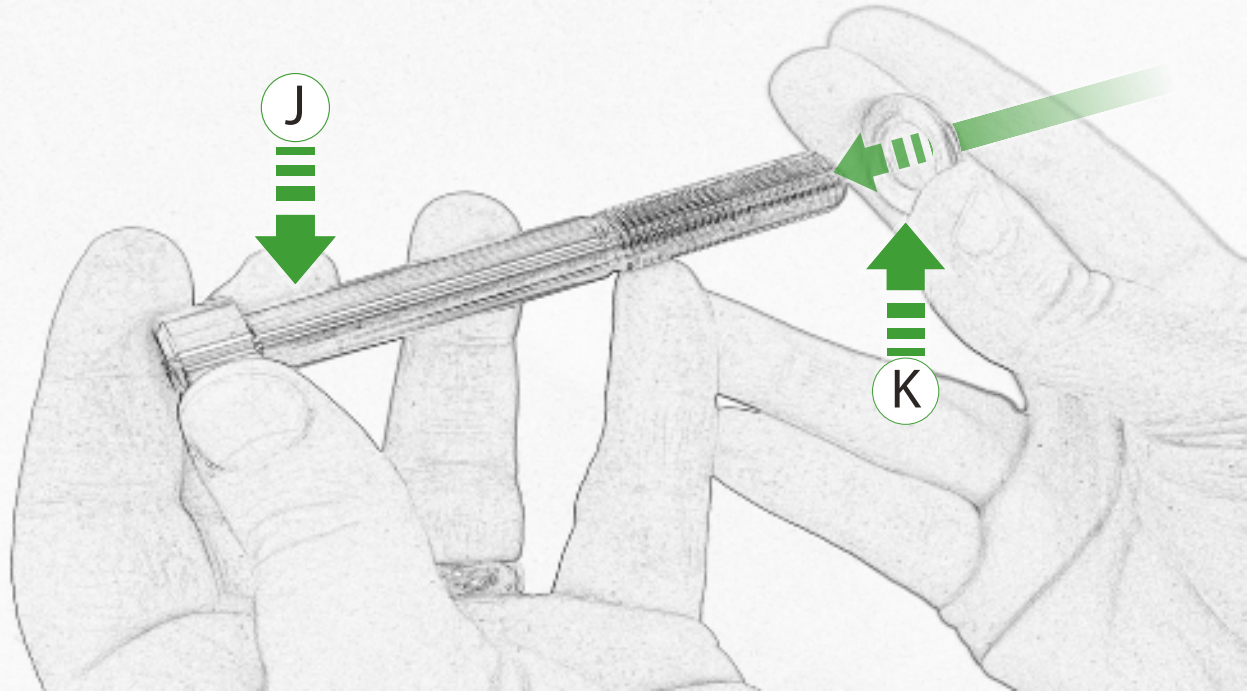

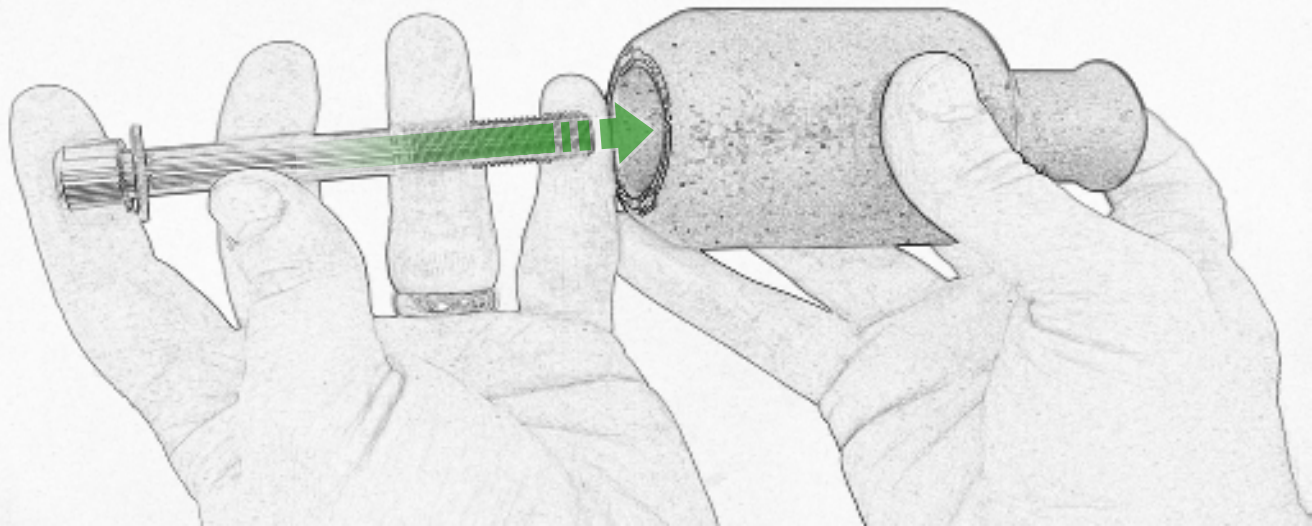

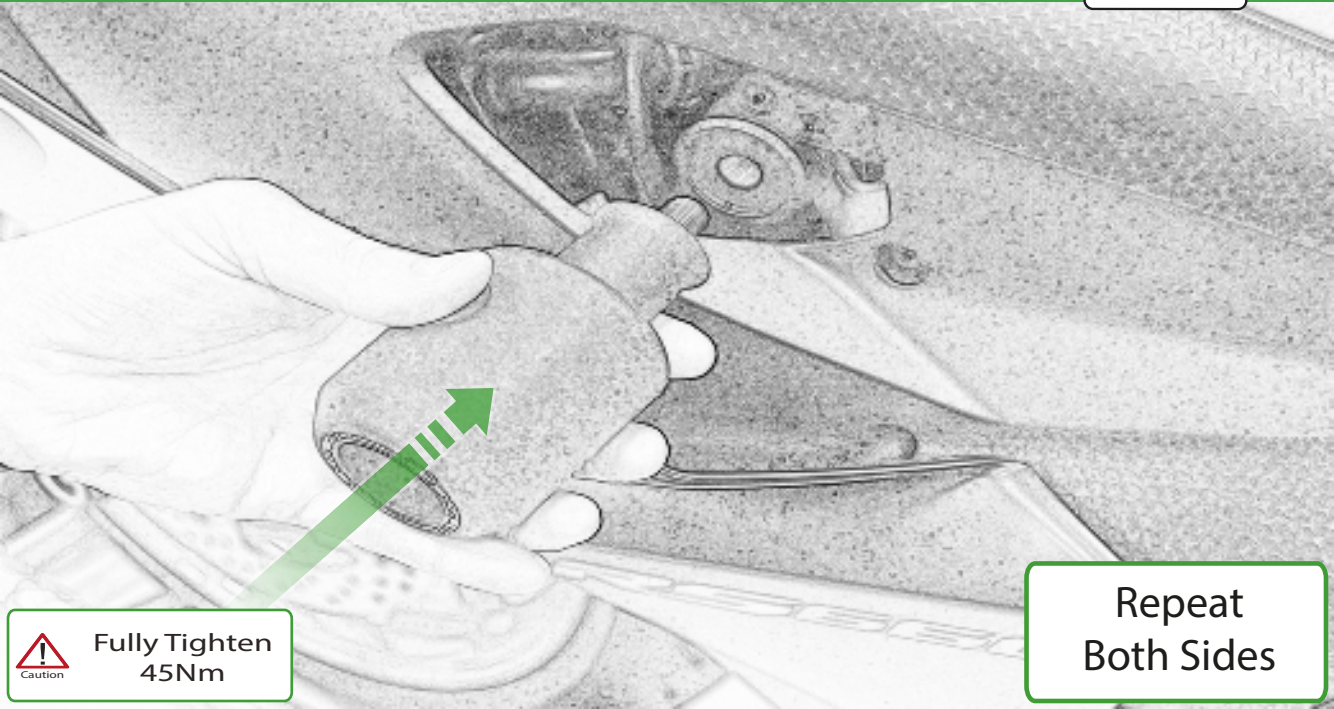

Fully Tighten
45Nm

Repeat
Both Sides



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com