Installation Instructions




Kit Contents PRN015485

- A 1 x Hub Stop (Red)
- B 1 x Hub Stop (Silver)
- © 1 x Shaft
- D 1 x Bobbin Head
- E 1 x Washer
- © 2 x M8 Nylock






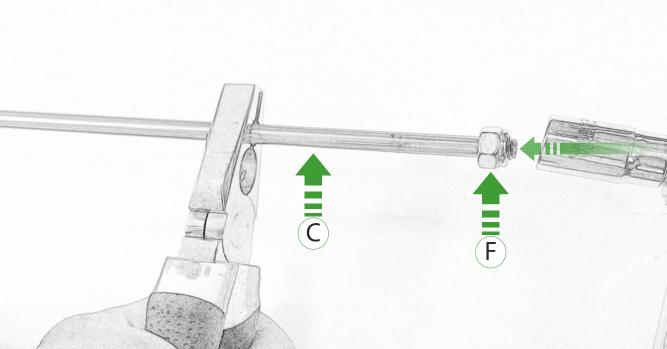







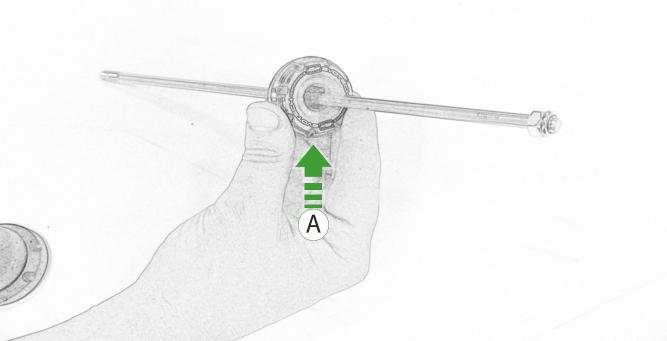








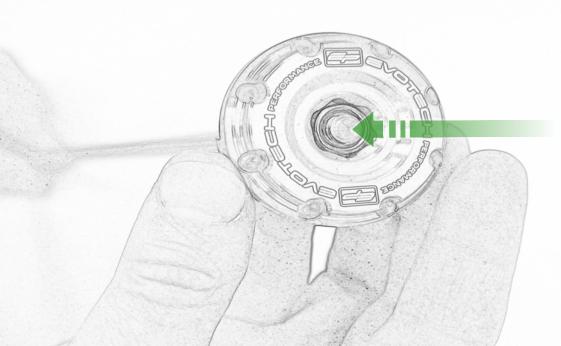


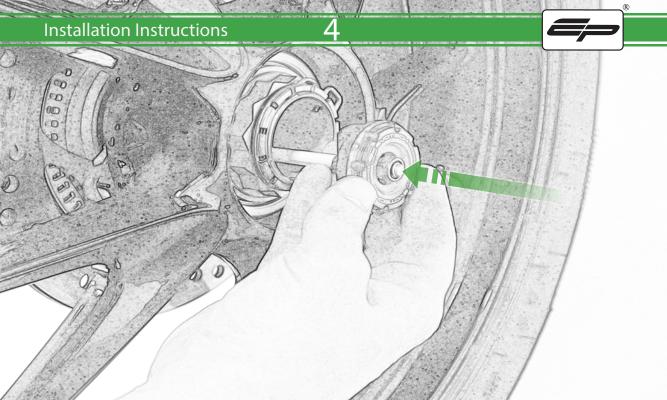


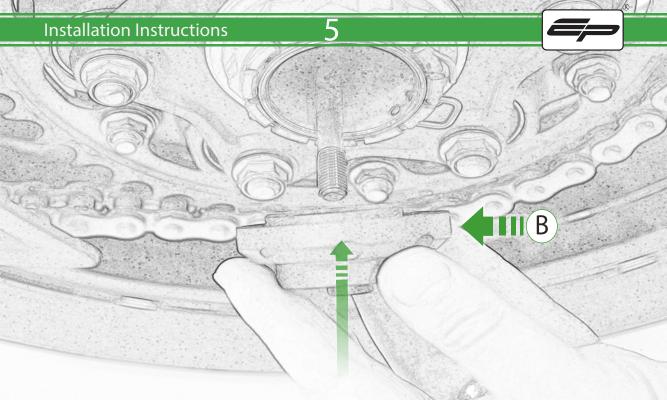


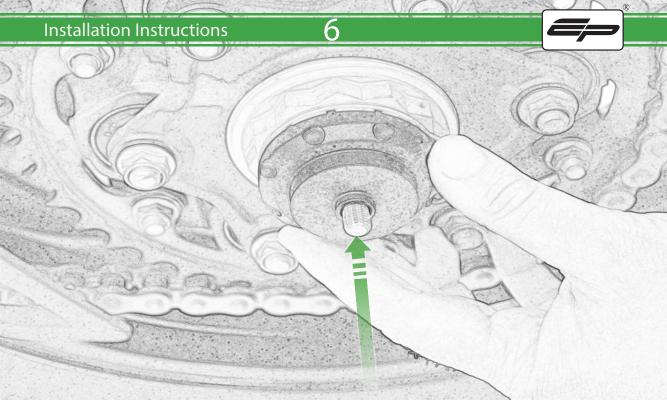

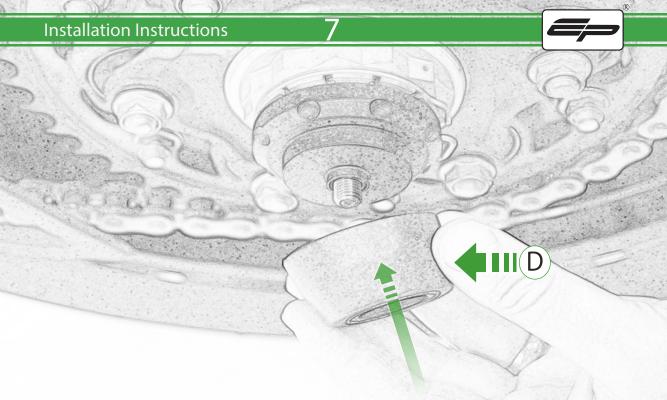

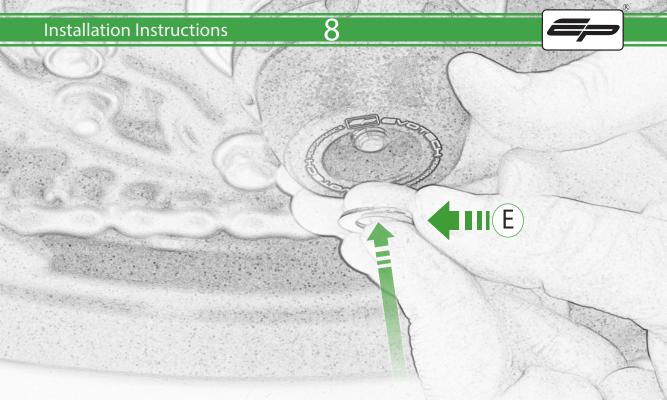

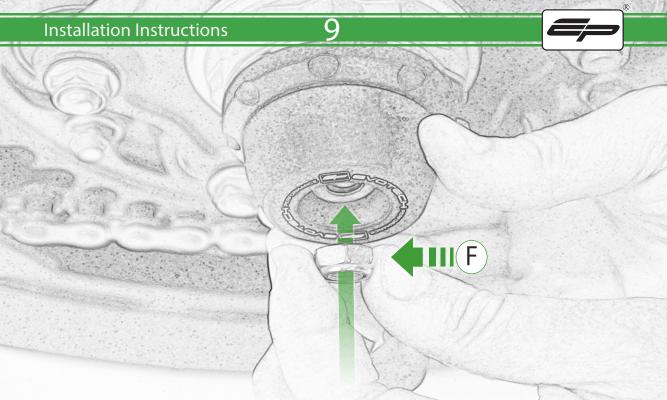

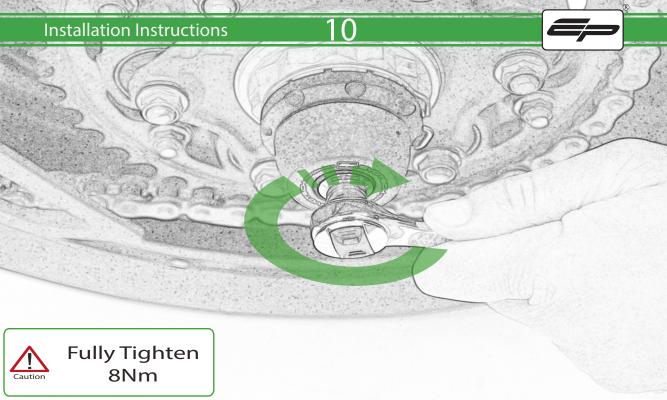





igwedge essential checks igwedge



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

