







Kit Contents PRN015492


- (A) 1 x L/H Bracket
- (B) 1 x L/H Bobbin Spacer (Long)
- (C) 1 x L/H Frame Spacer (Long)
- (D) 1 x M10 x 90 x 1.5 Caphead
- (E) 1 x M10 x 60 x 1.5 Caphead
- (F) 1 x M12 x 75 x 1.25 Caphead
- (G) 1 x R/H Bracket
- (H) 1 x R/H Bobbin Spacer (Short)
- (I) 1 x R/H Frame Spacer
- (J) 1 x M10 x 100 x 1.5 Caphead
- (K) 1 x M10 x 65 x 1.5 Caphead
- (L) 1 x M12 x 55 x 1.25 Caphead
- (M) 2 x M12 Washer
- (N) 2 x Poly Washer
- (O) 2 x Bobbin Heads

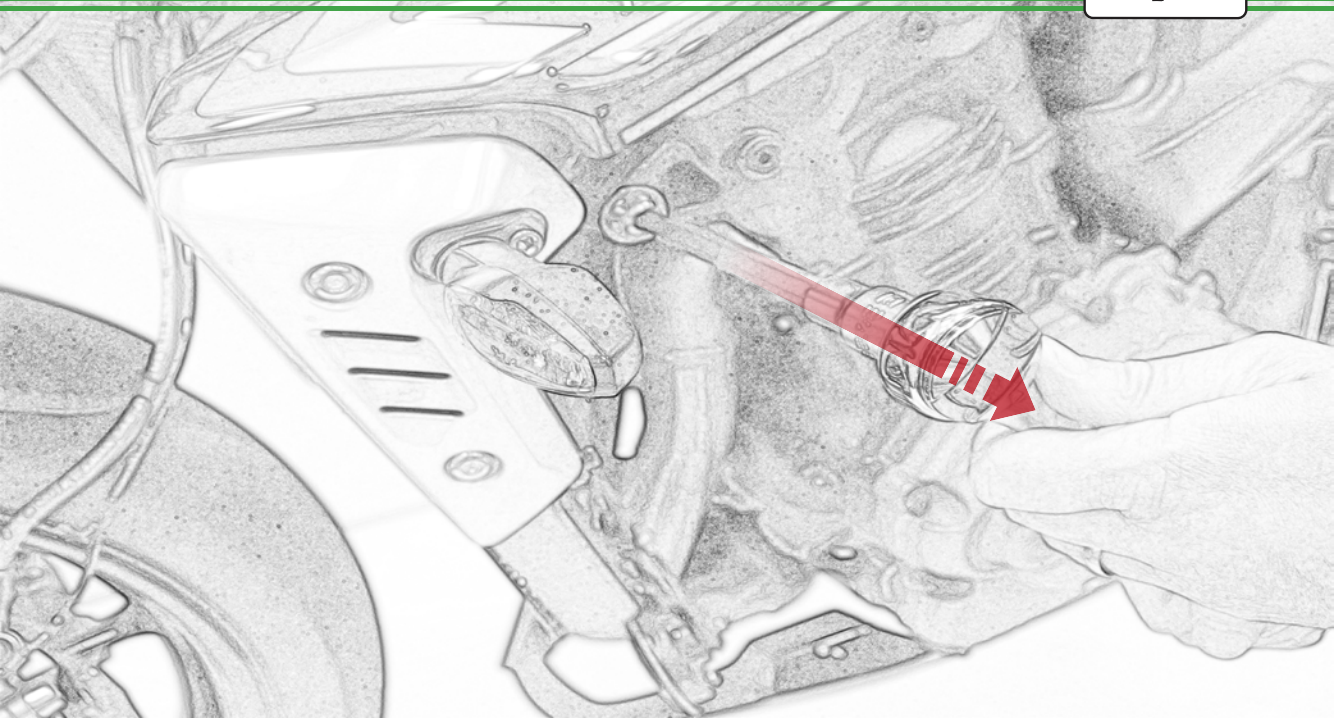

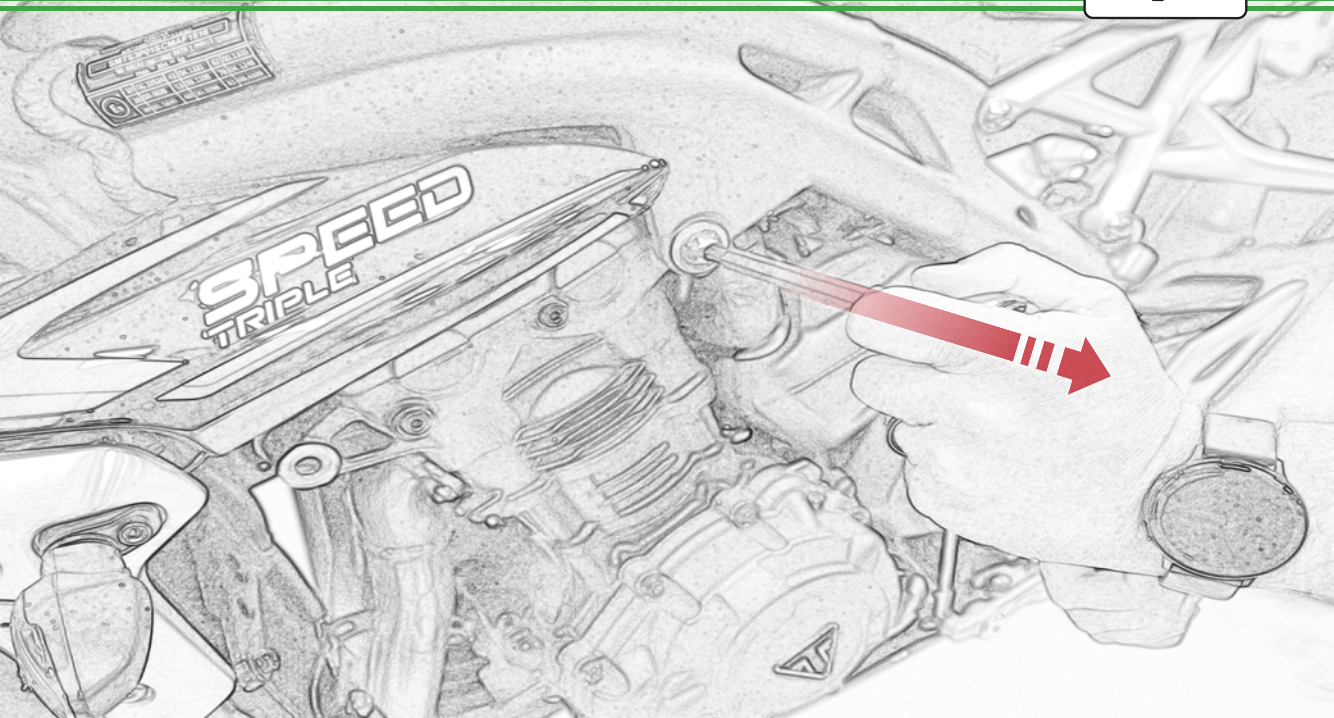

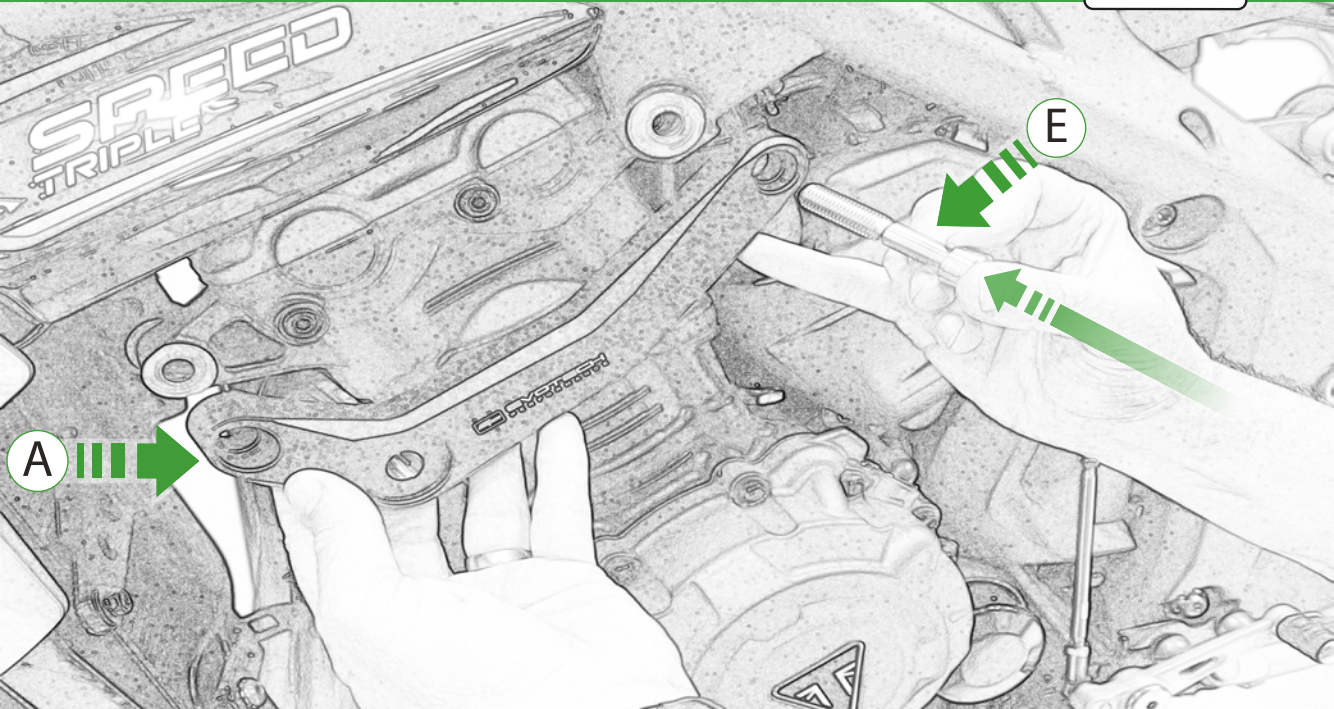


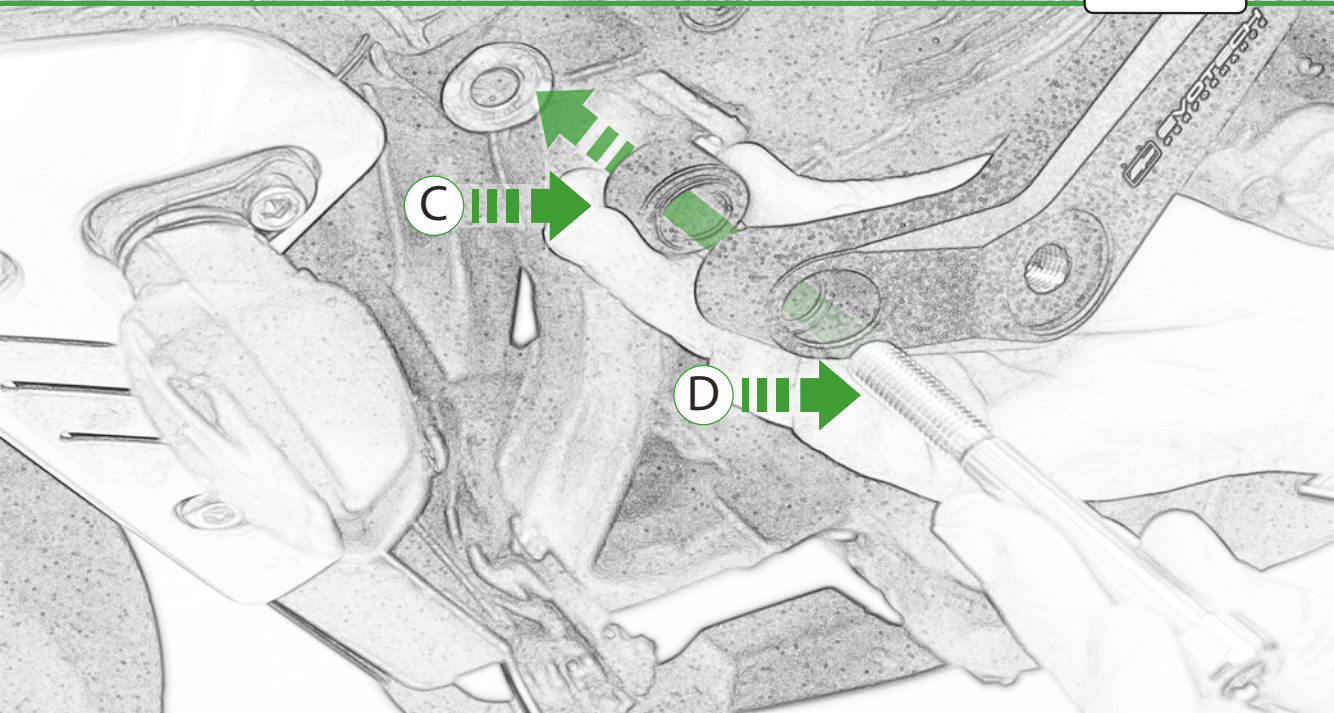

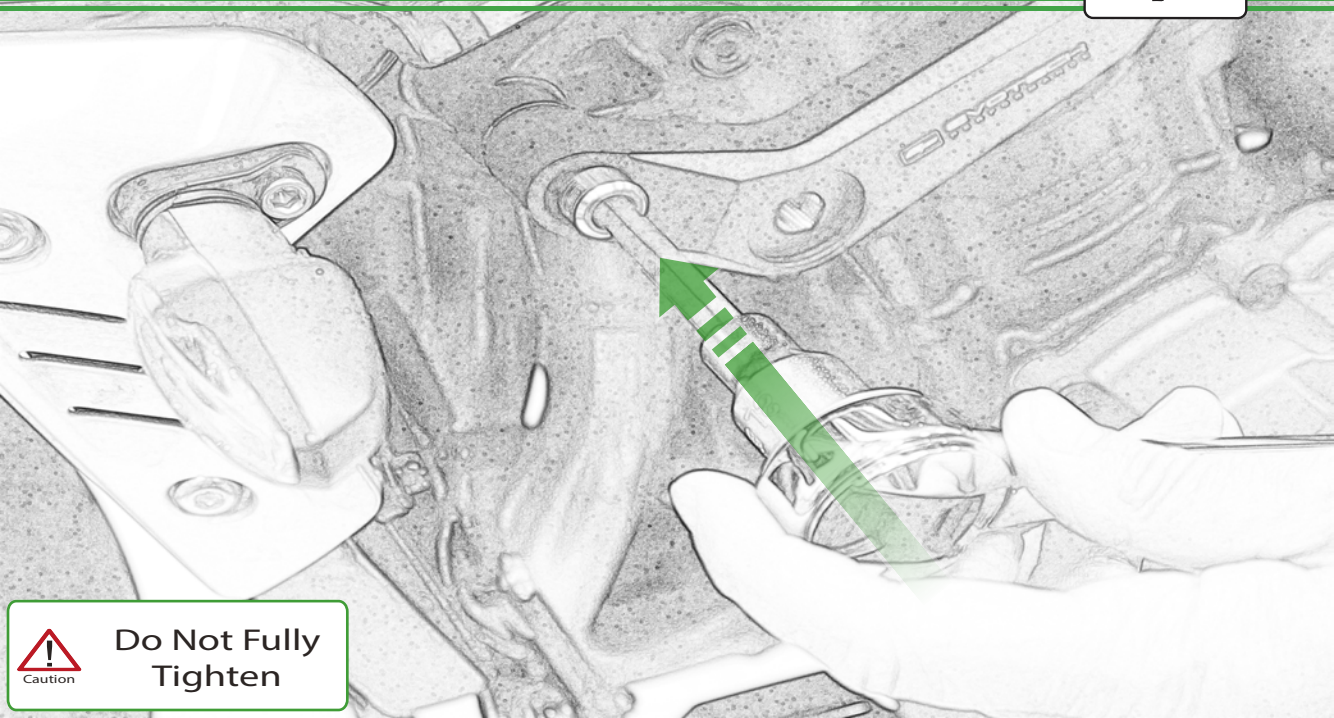


Caution

Do Not Fully
Tighten

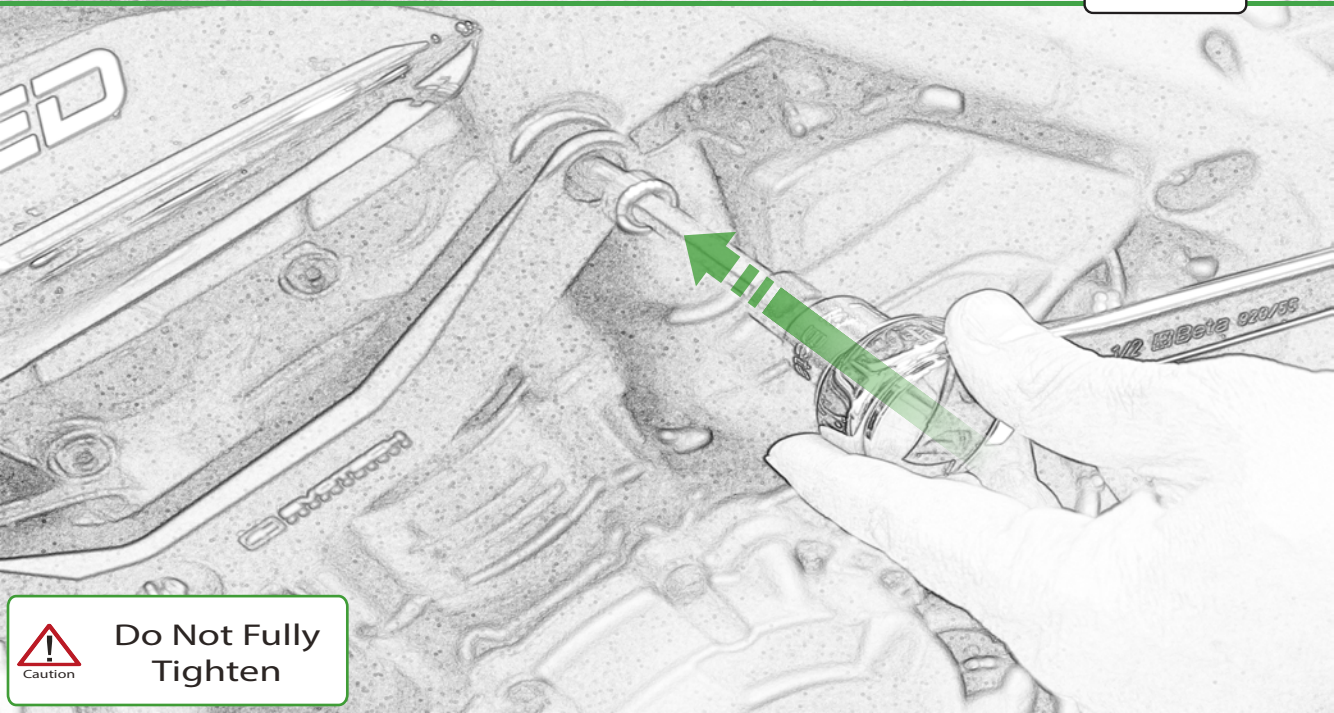


Caution

Do Not Fully
Tighten

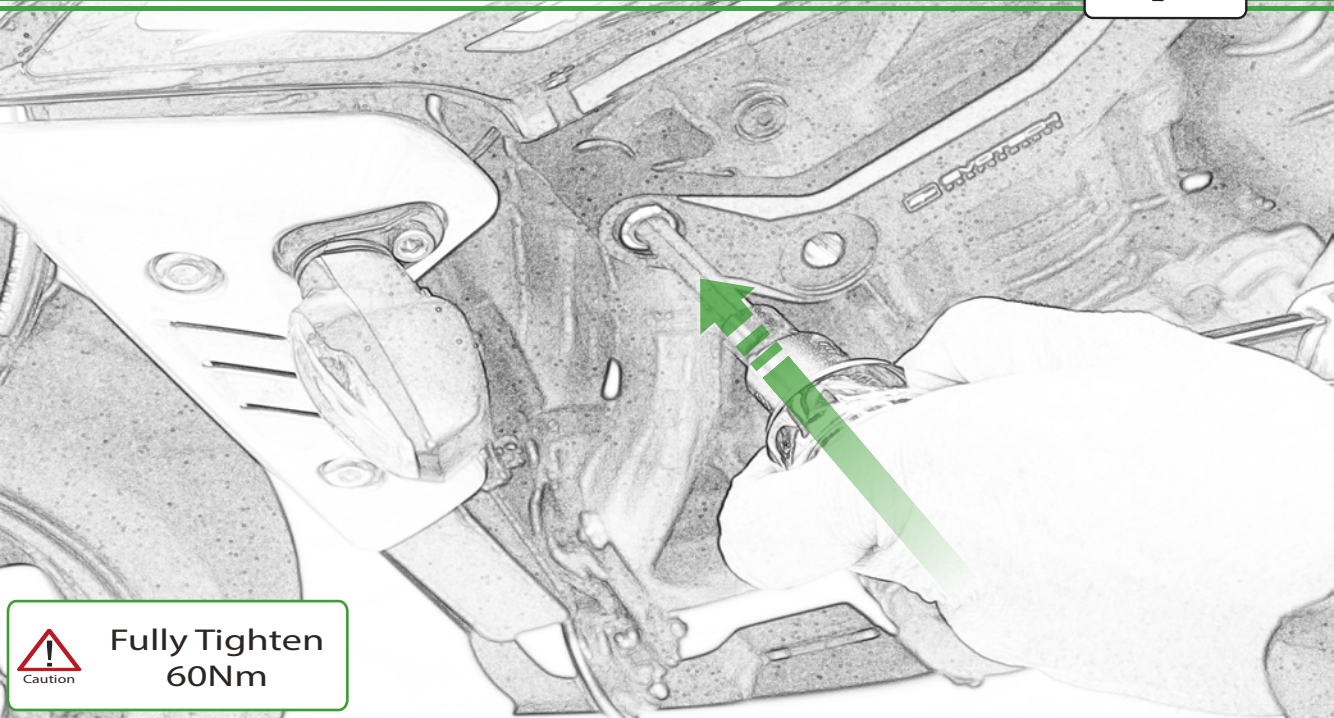


Caution

Fully Tighten
60Nm

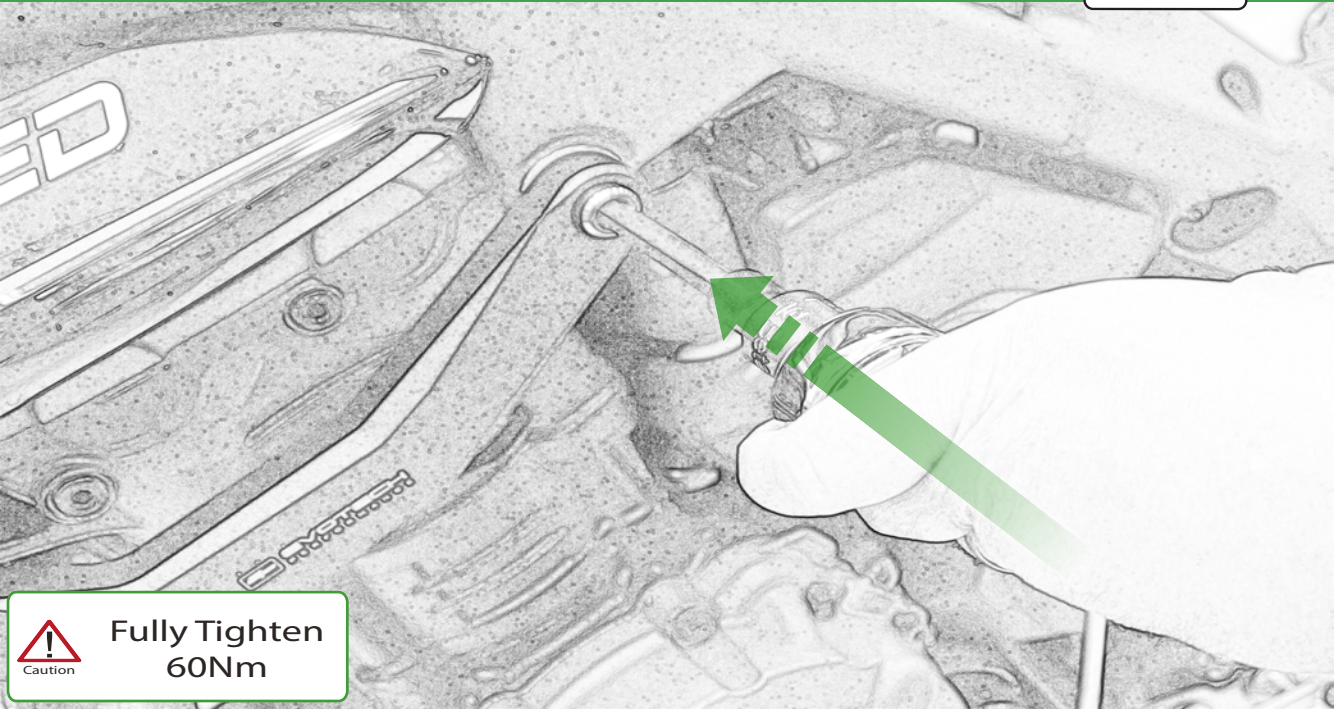


Caution

Fully Tighten
60Nm

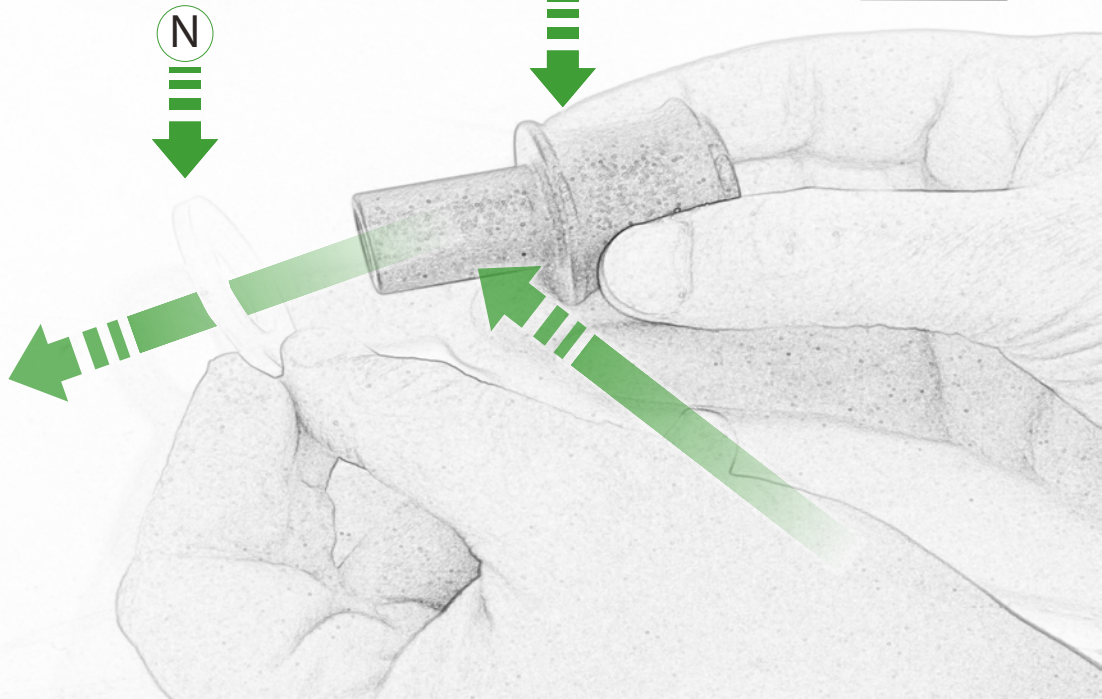




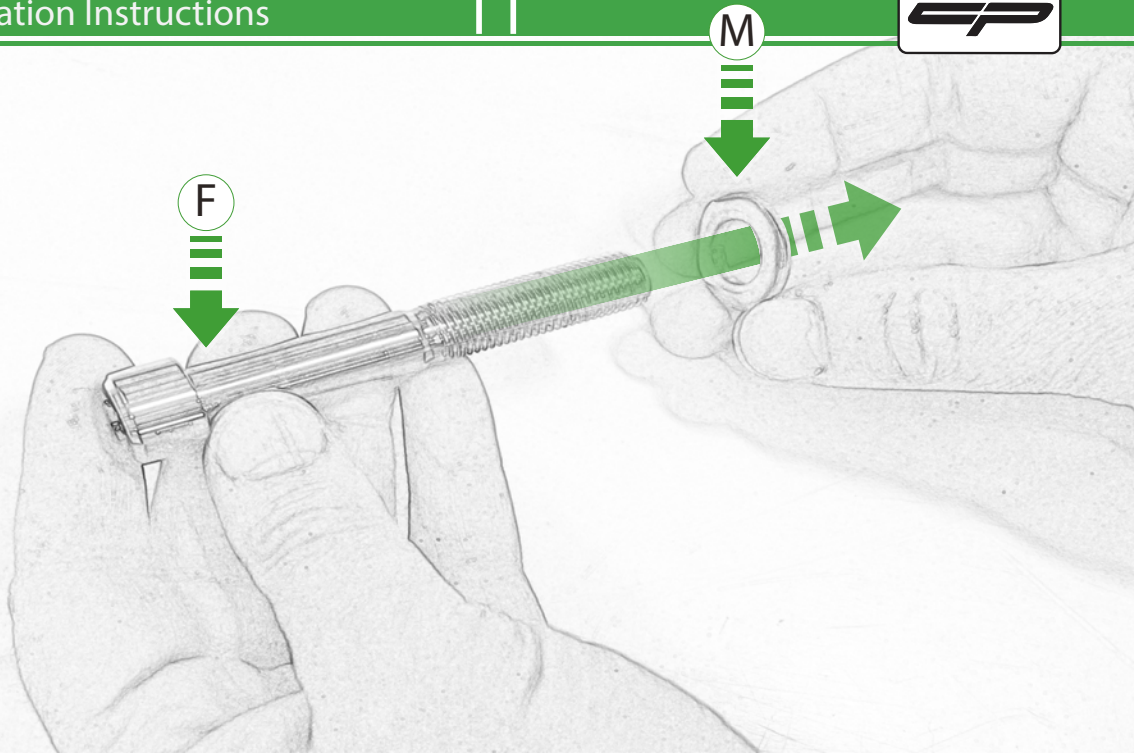







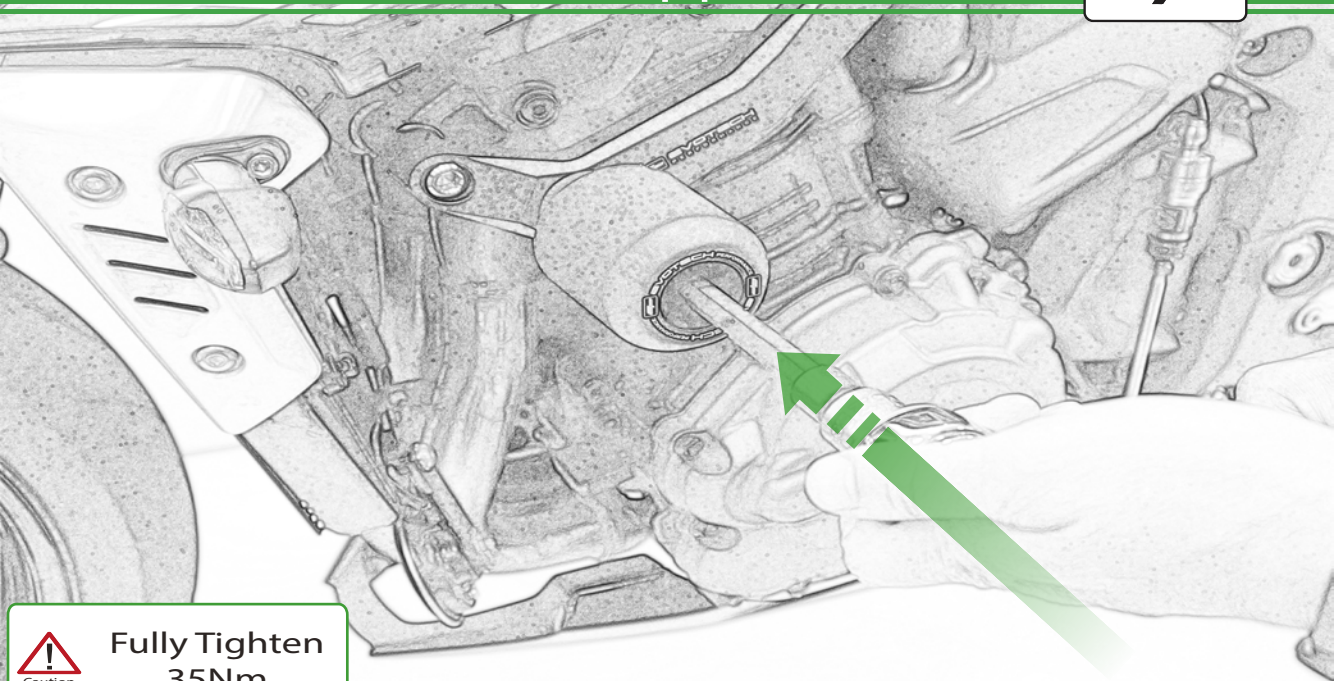


Caution

Fully Tighten
35Nm

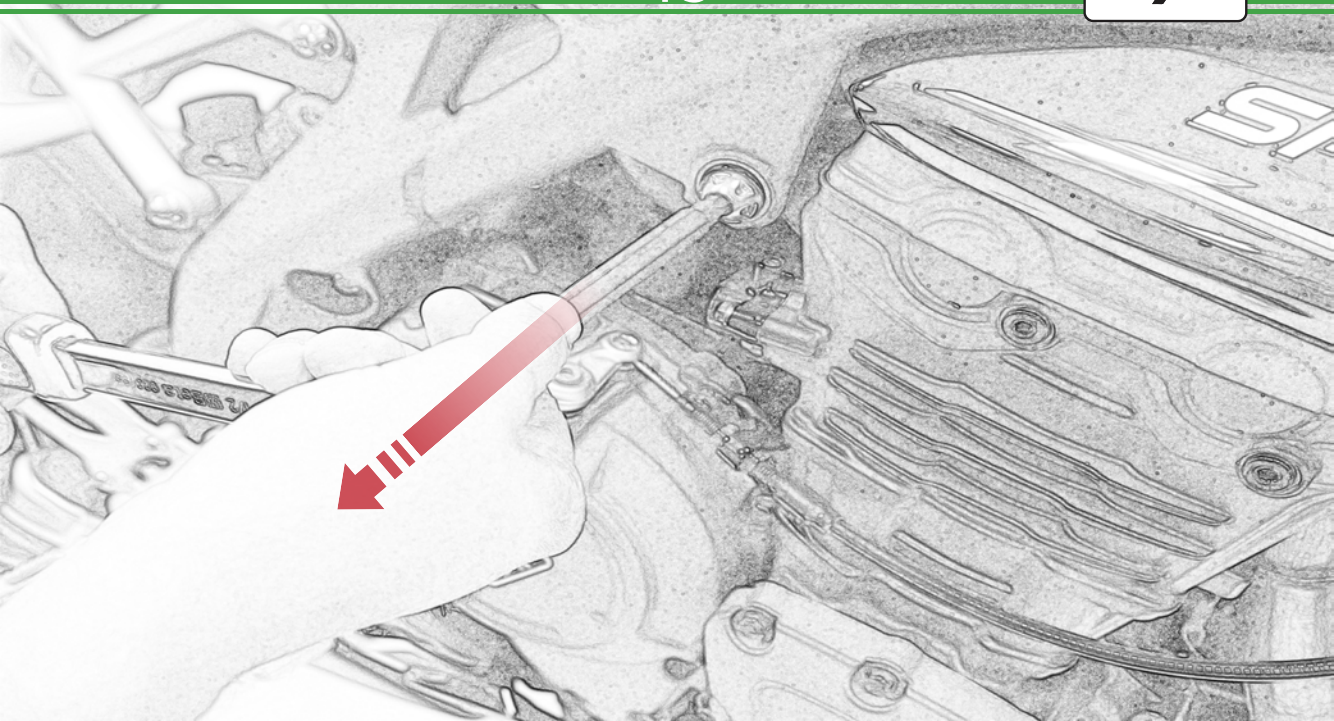

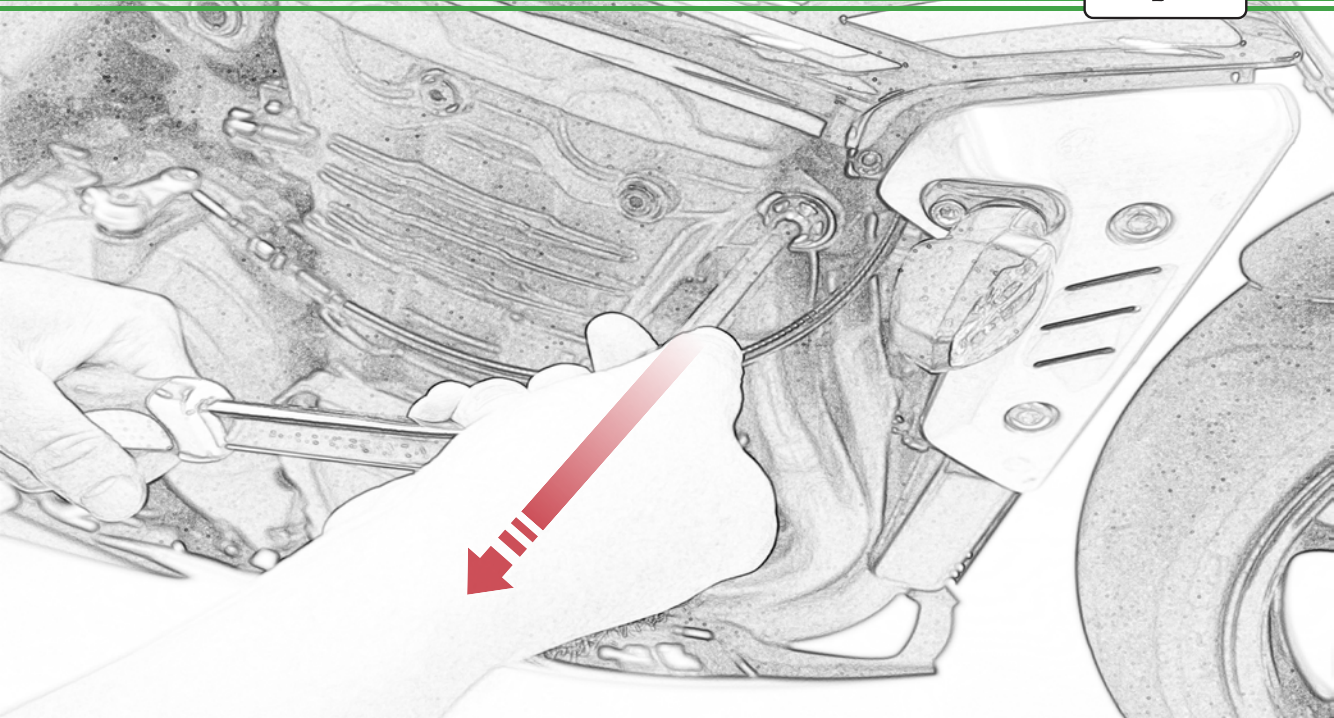

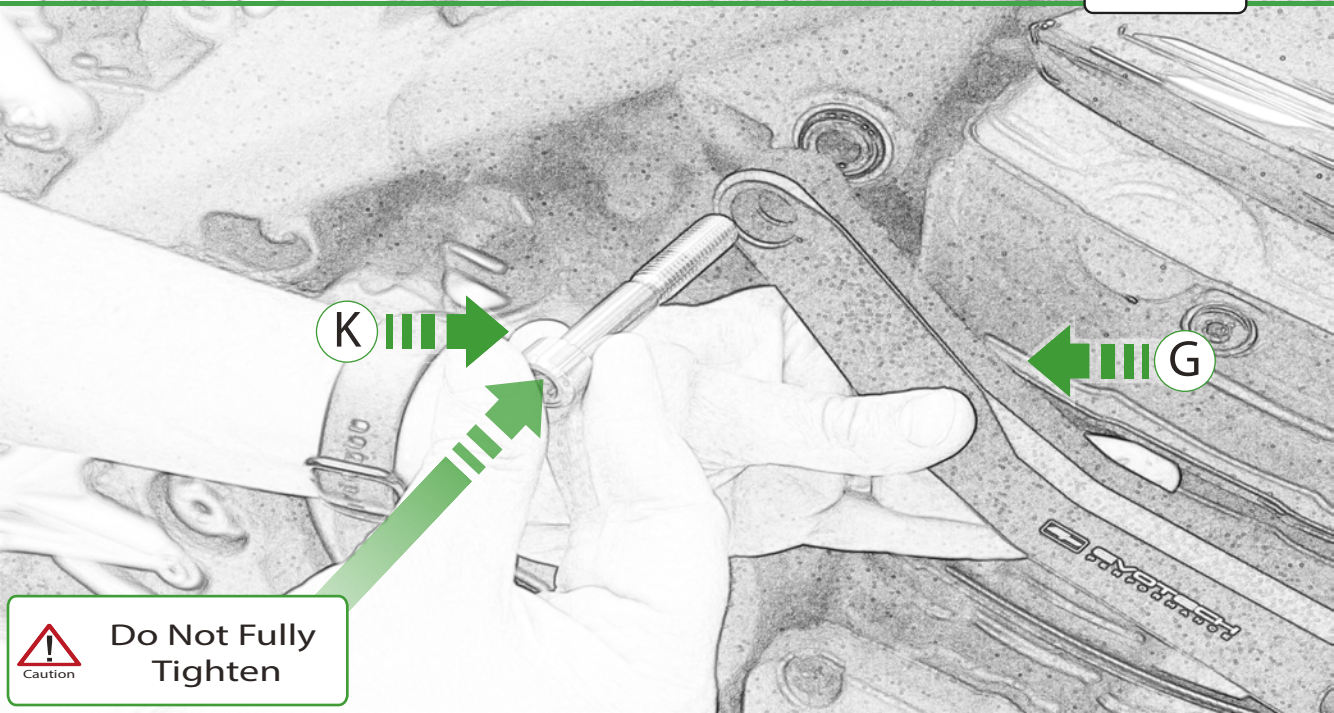


K

G



Caution

Do Not Fully Tighten

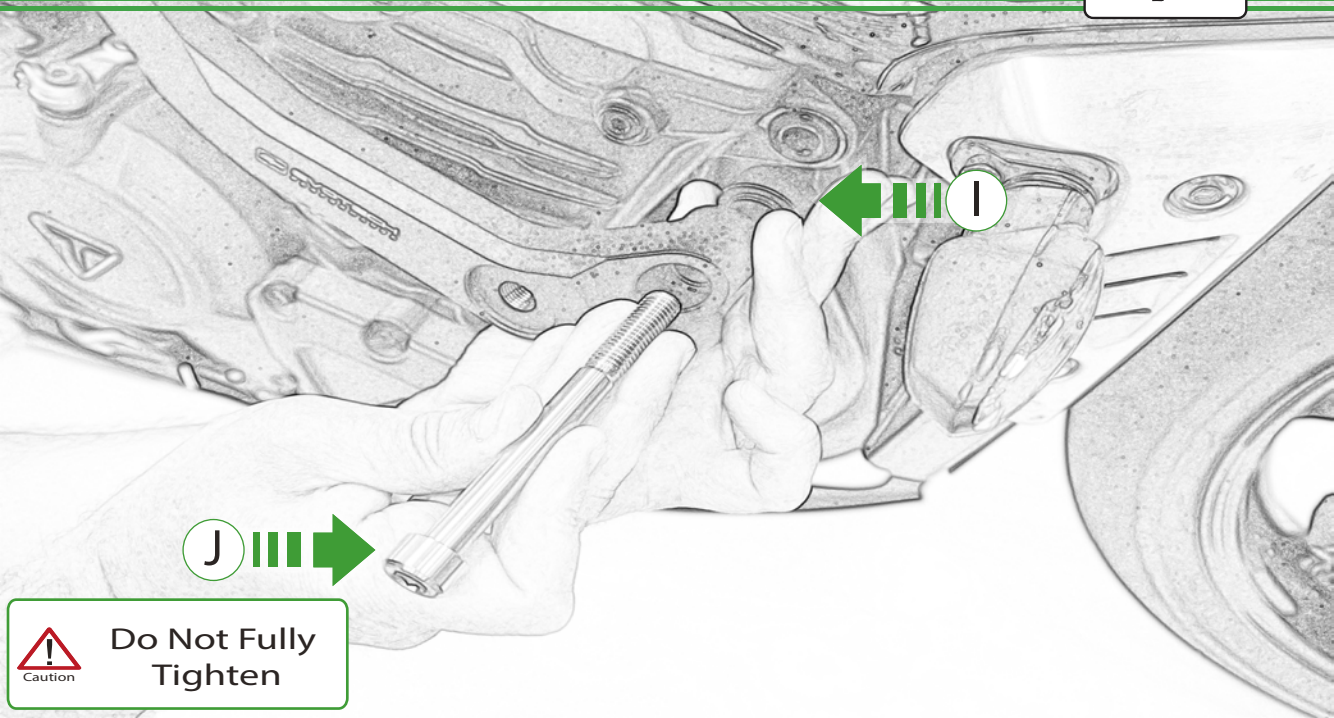


J

I




Do Not Fully Tighten

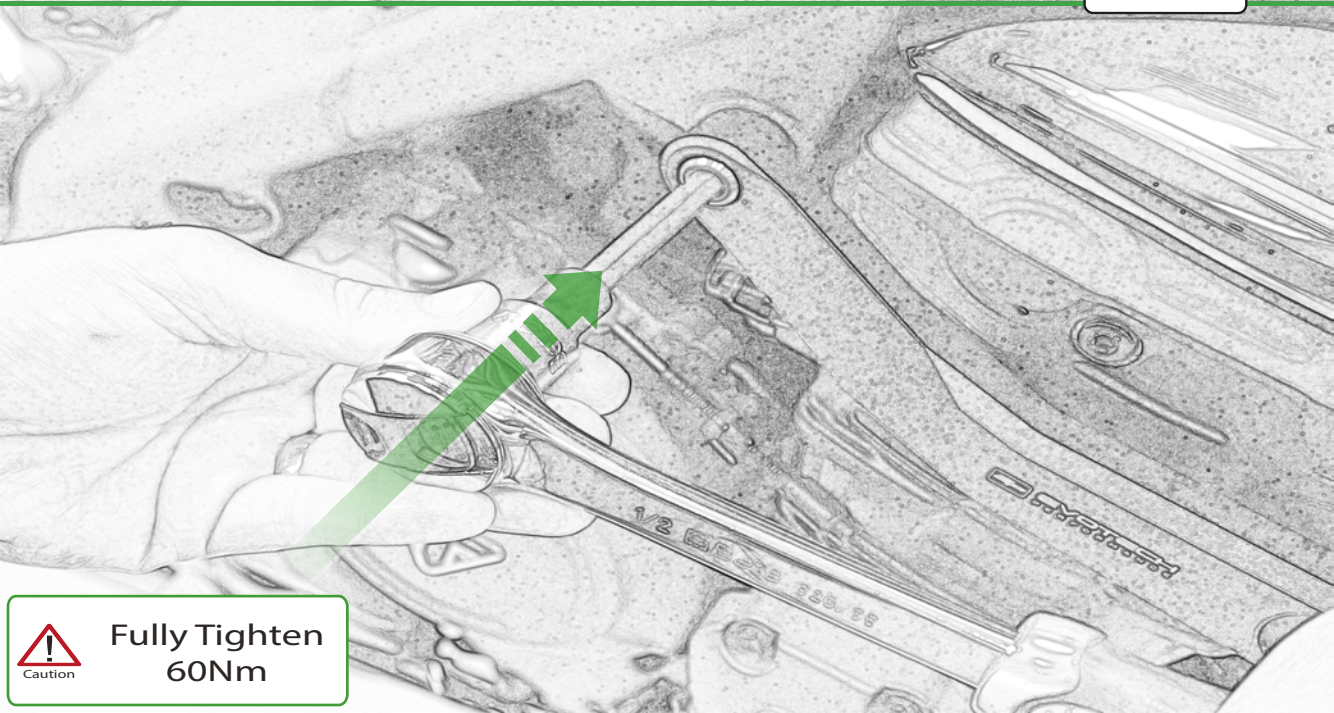


Caution


Fully Tighten
60Nm

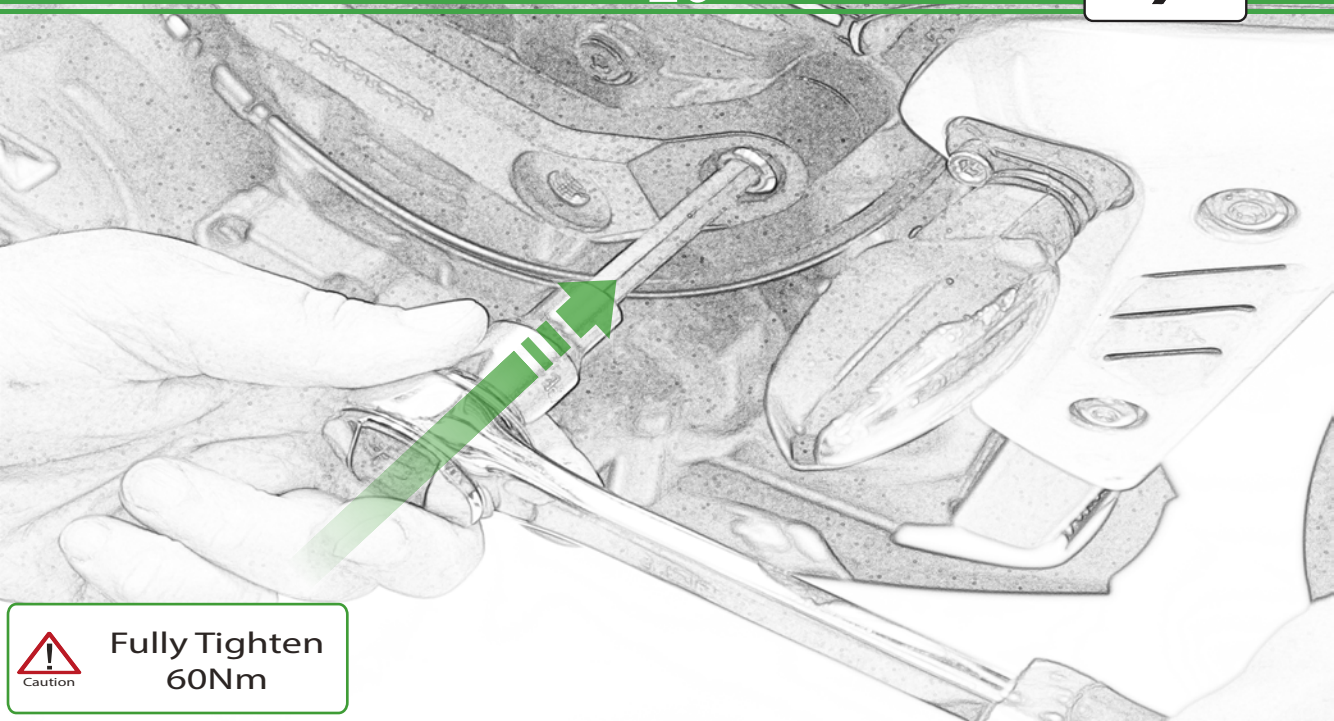



Caution


Fully Tighten
60Nm

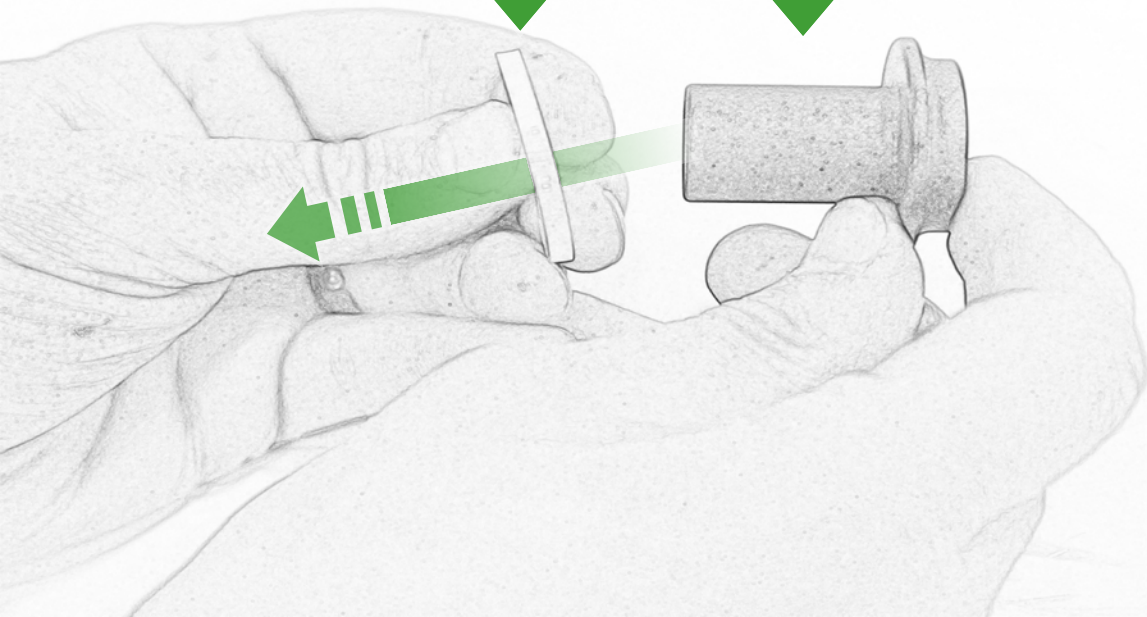


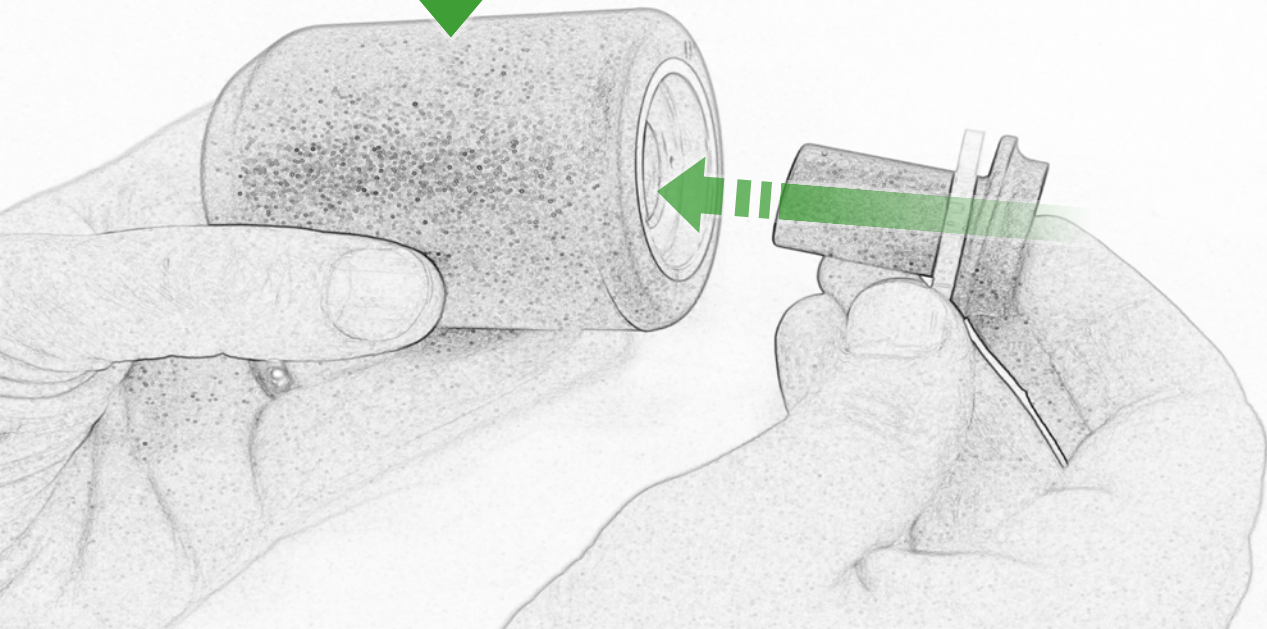

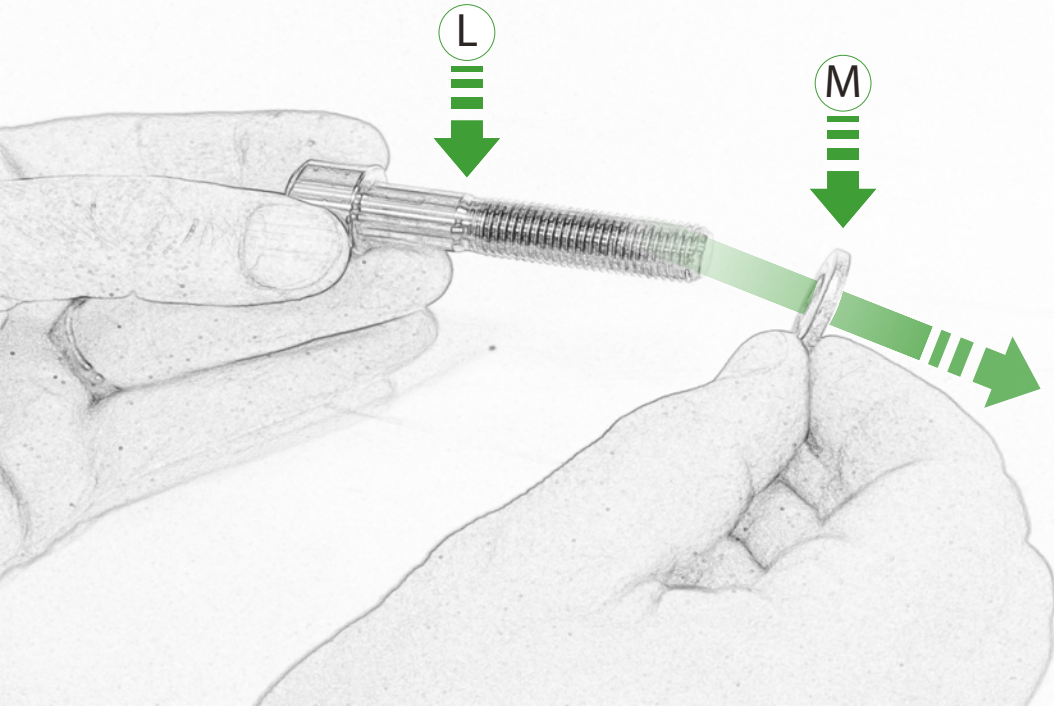

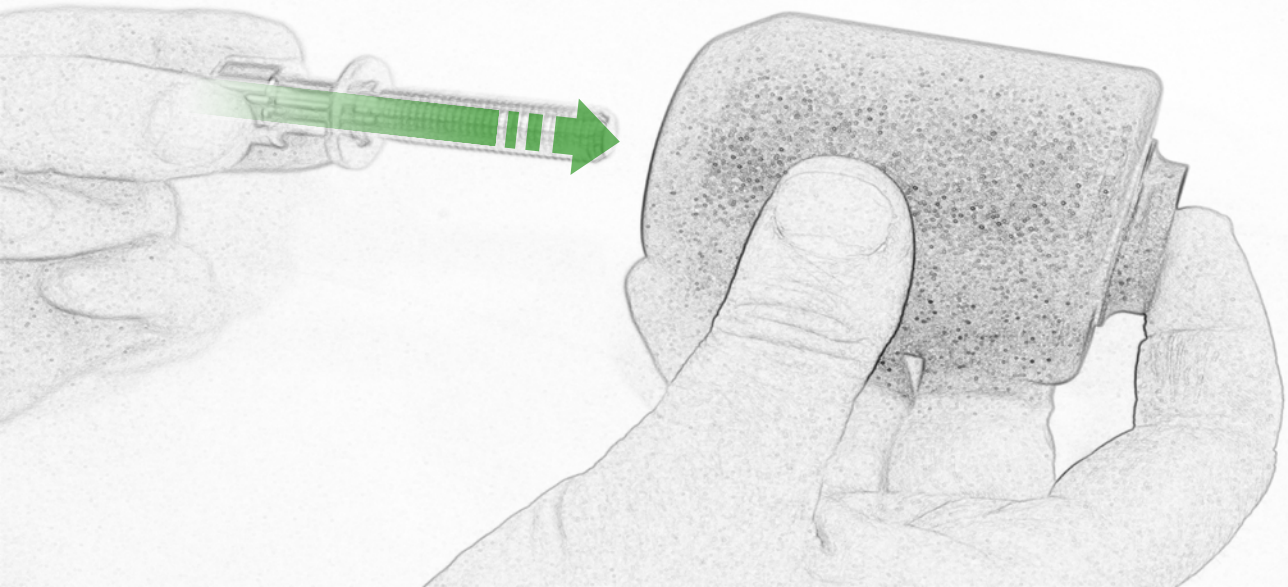

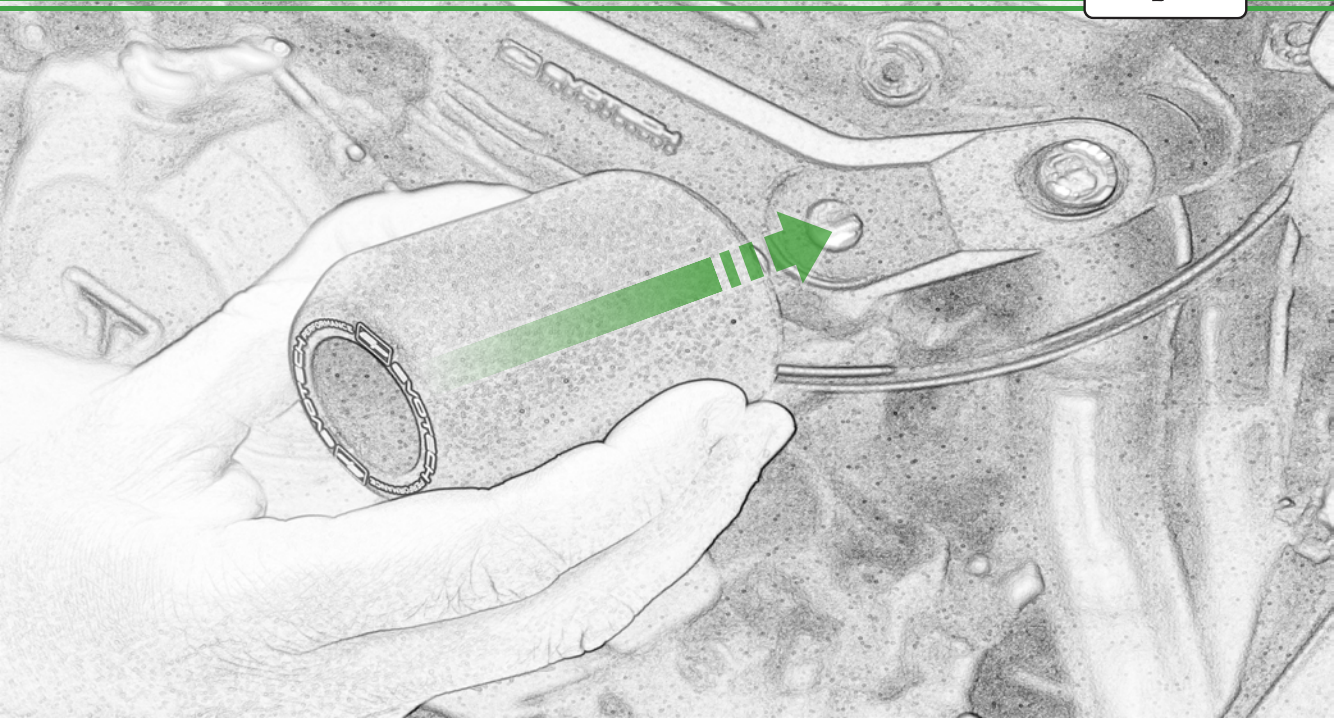

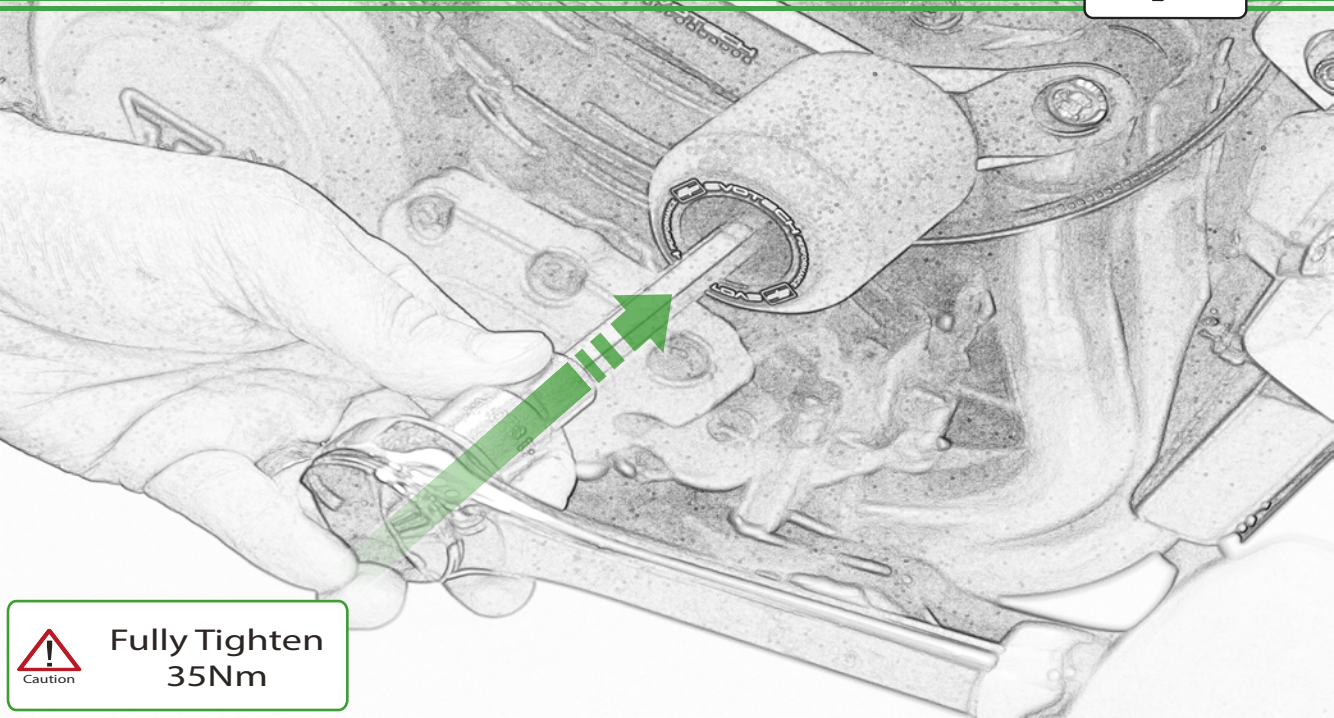

Caution

Fully Tighten
35Nm



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced