
Installation Instructions





Kit Contents PRN015510 / PRN015514


- A 1 x M8 x 25mm Button Head Silver
- B 1 x Exhaust Washer
- © 1 x M8 Flange Nut
- D 1 x Grommet
- **E** 1 x Tophat Washer
- (F) 2 x Pillion Washer
- © 2 x M8 x 30mm Button Head Silver
- (H) 2 x M8 x 20mm Button Head Silver

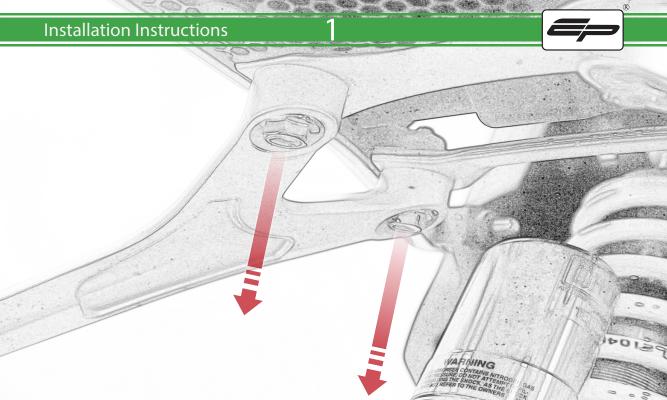





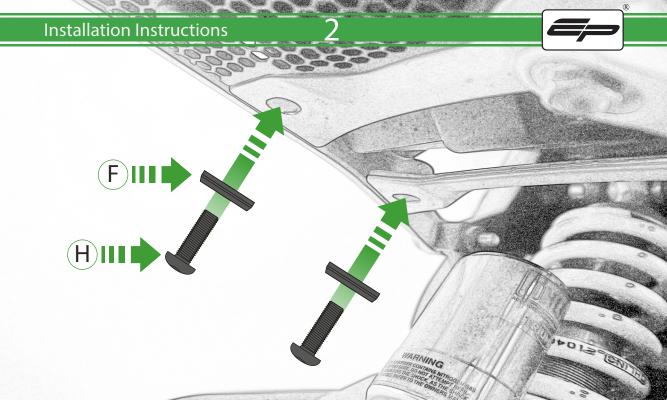


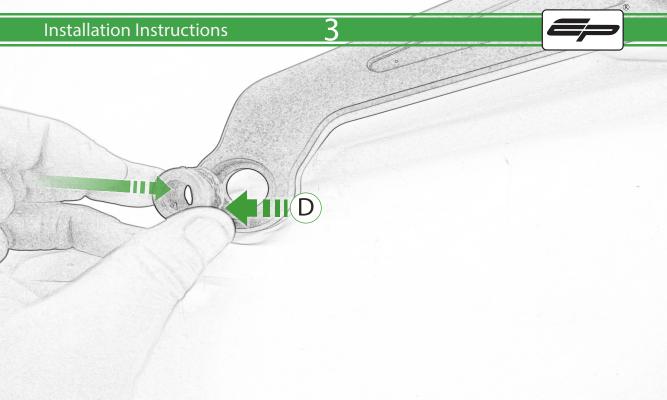


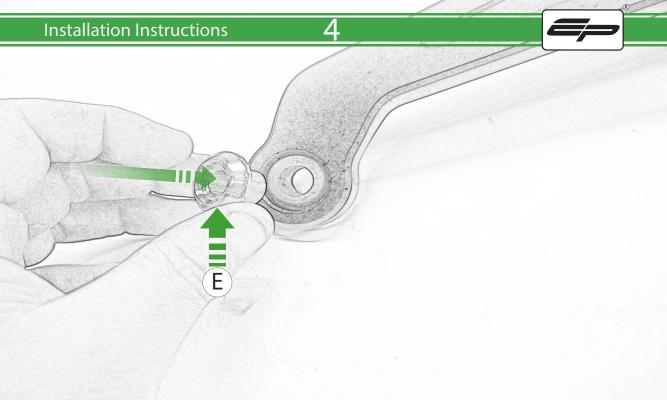


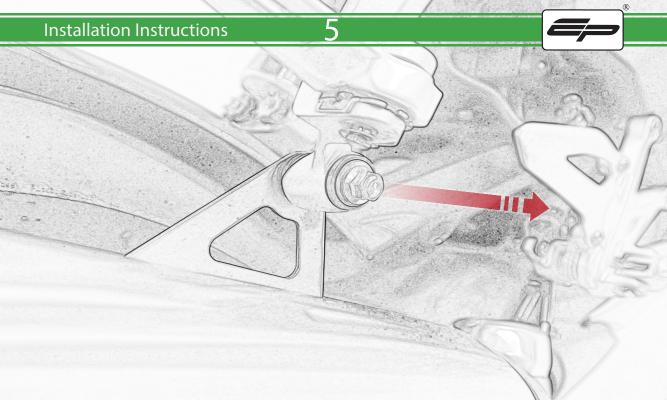


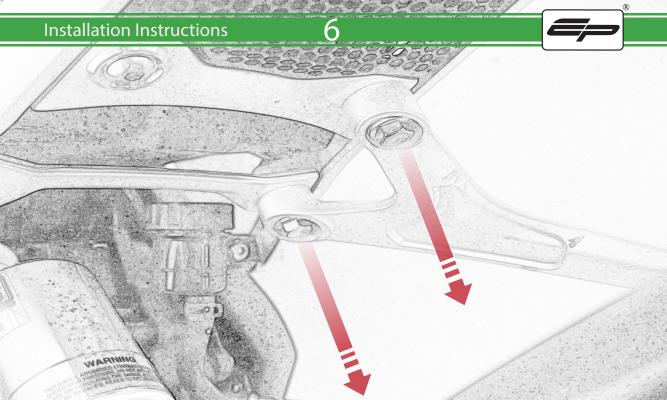

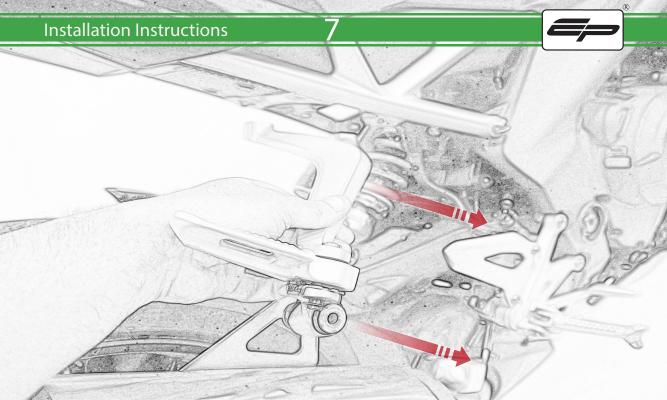

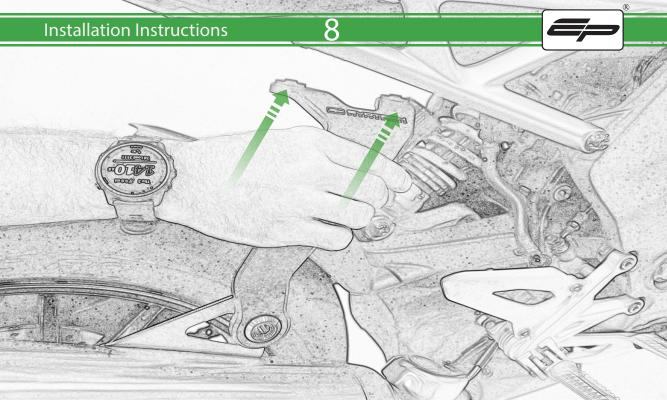

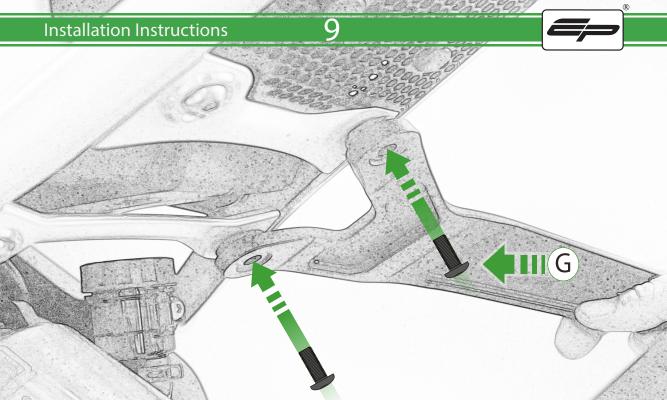

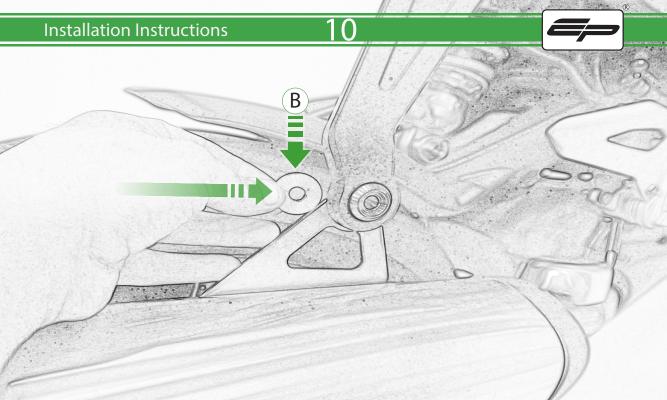







igwedge essential checks igwedge



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

