





## Kit Contents PRN015670


- Ⓐ 1 x M8 Shaft
- Ⓑ 1 x Hubstop
- Ⓒ 1 x L/H Spacer
- Ⓓ 1 x Bobbin Head
- Ⓔ 2 x M8 Washer
- Ⓕ 2 x M8 Nut

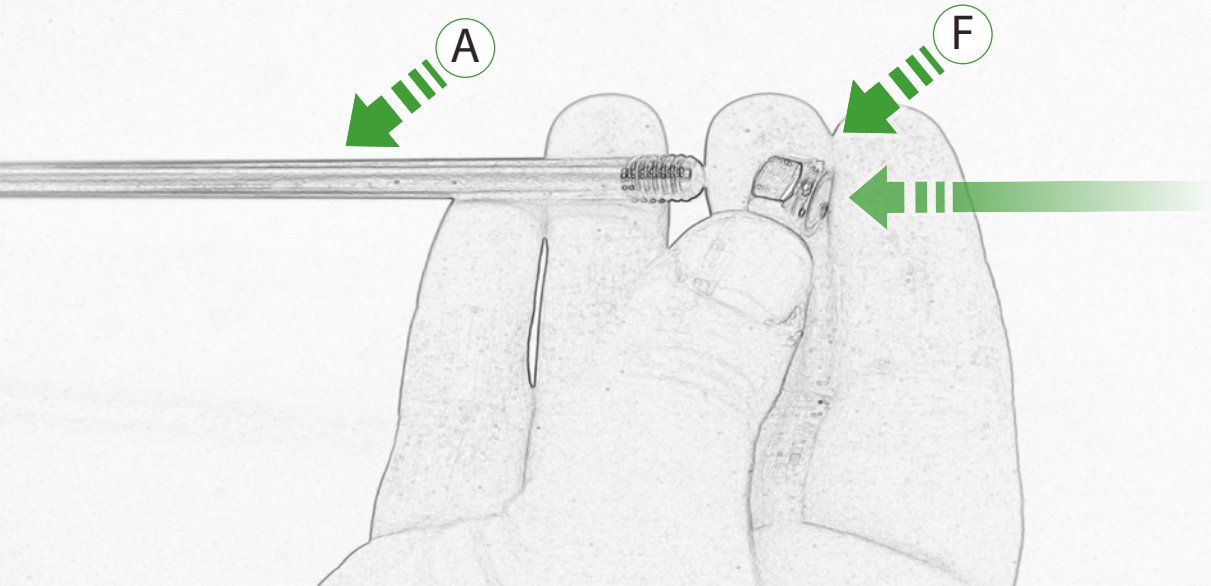


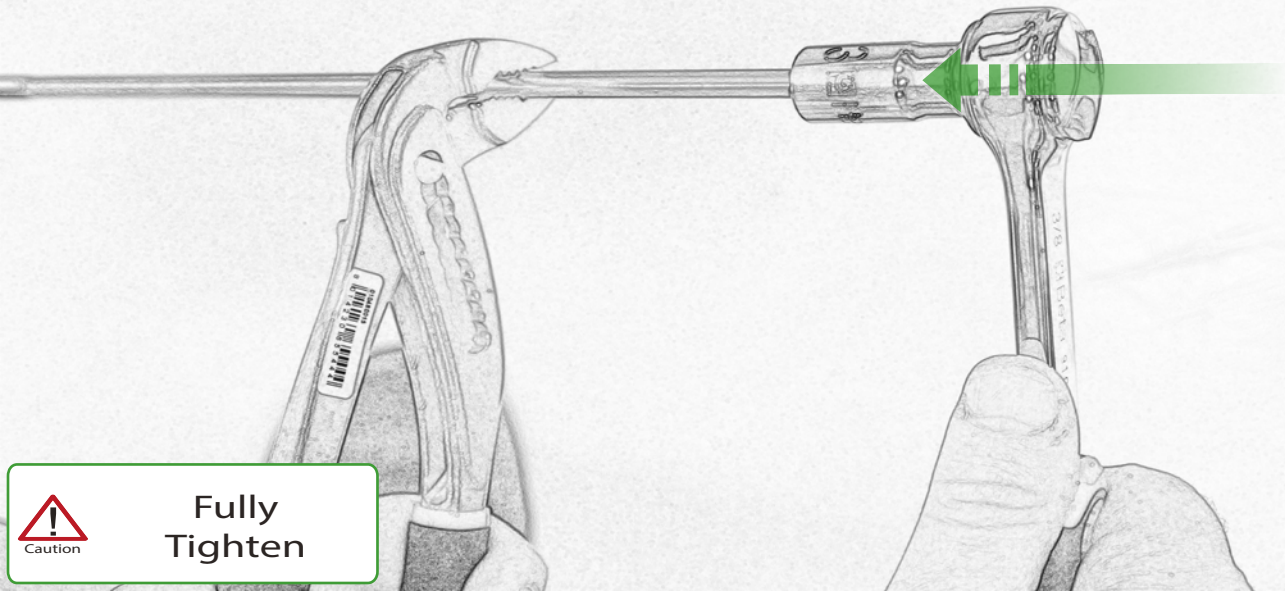


Caution

Fully  
Tighten

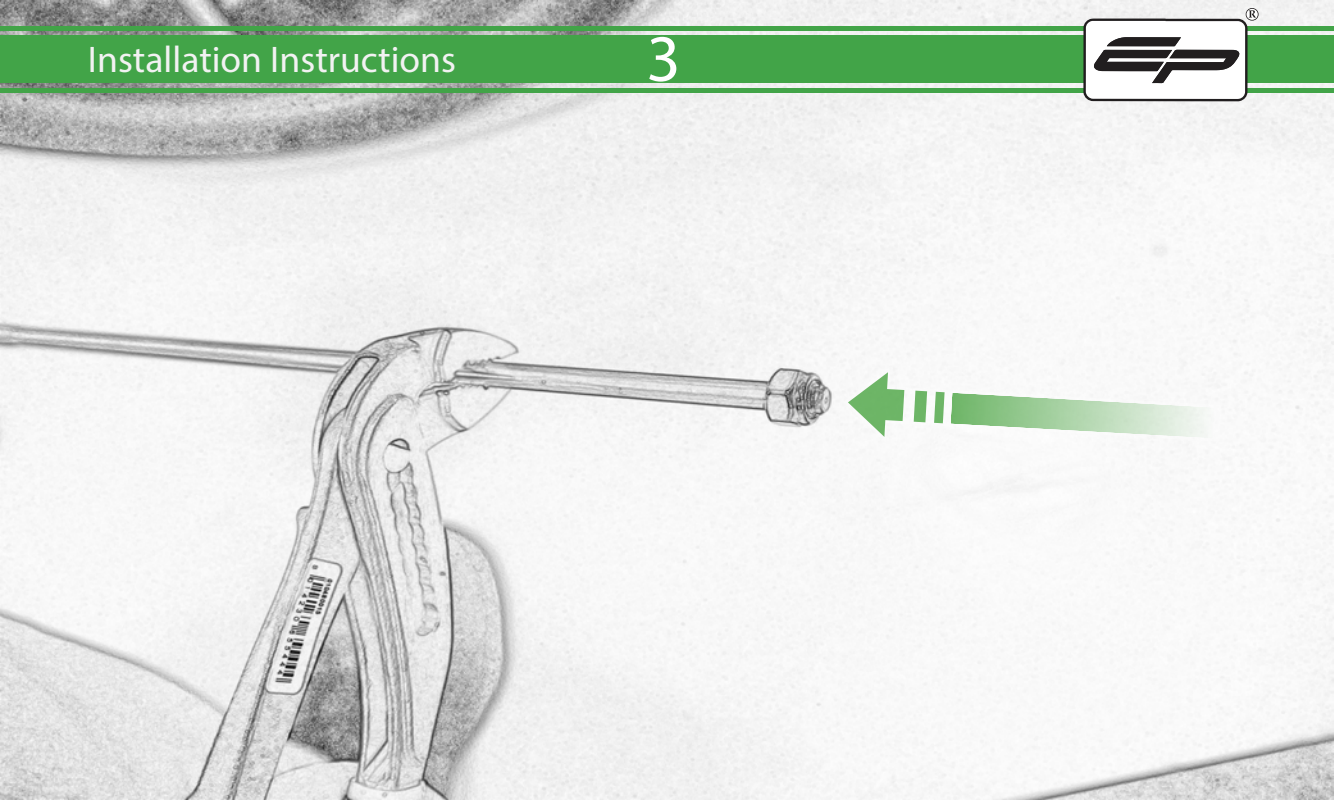


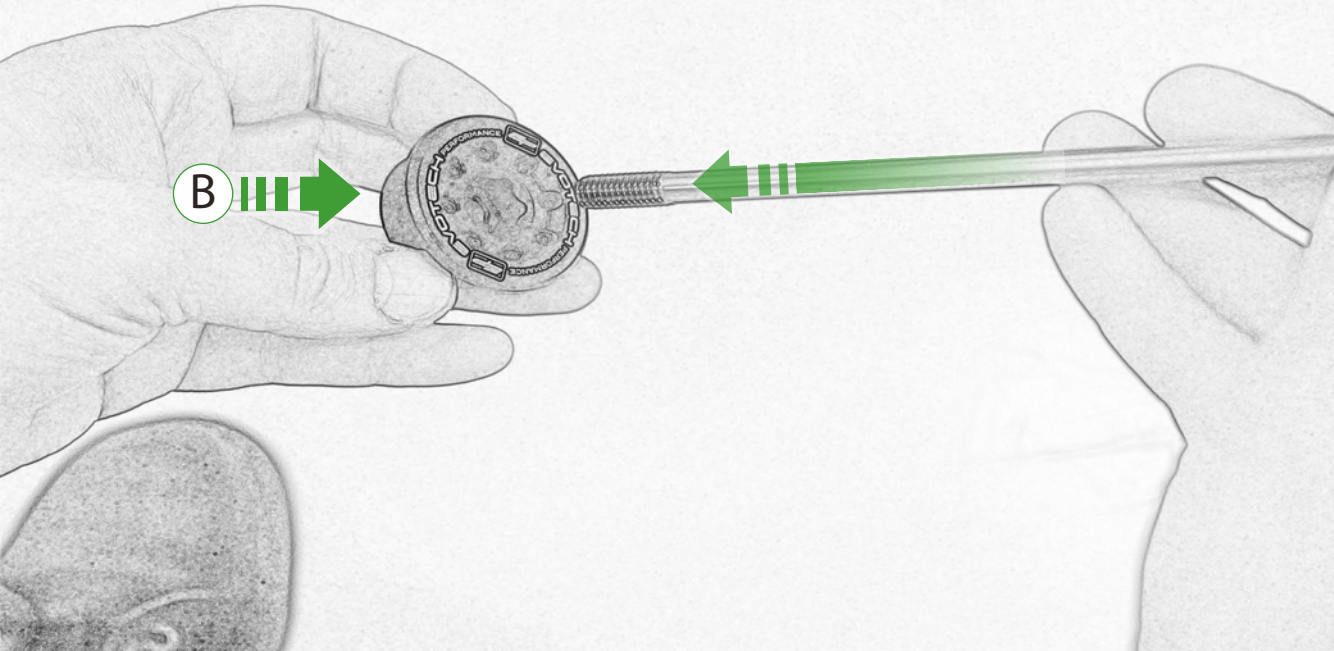

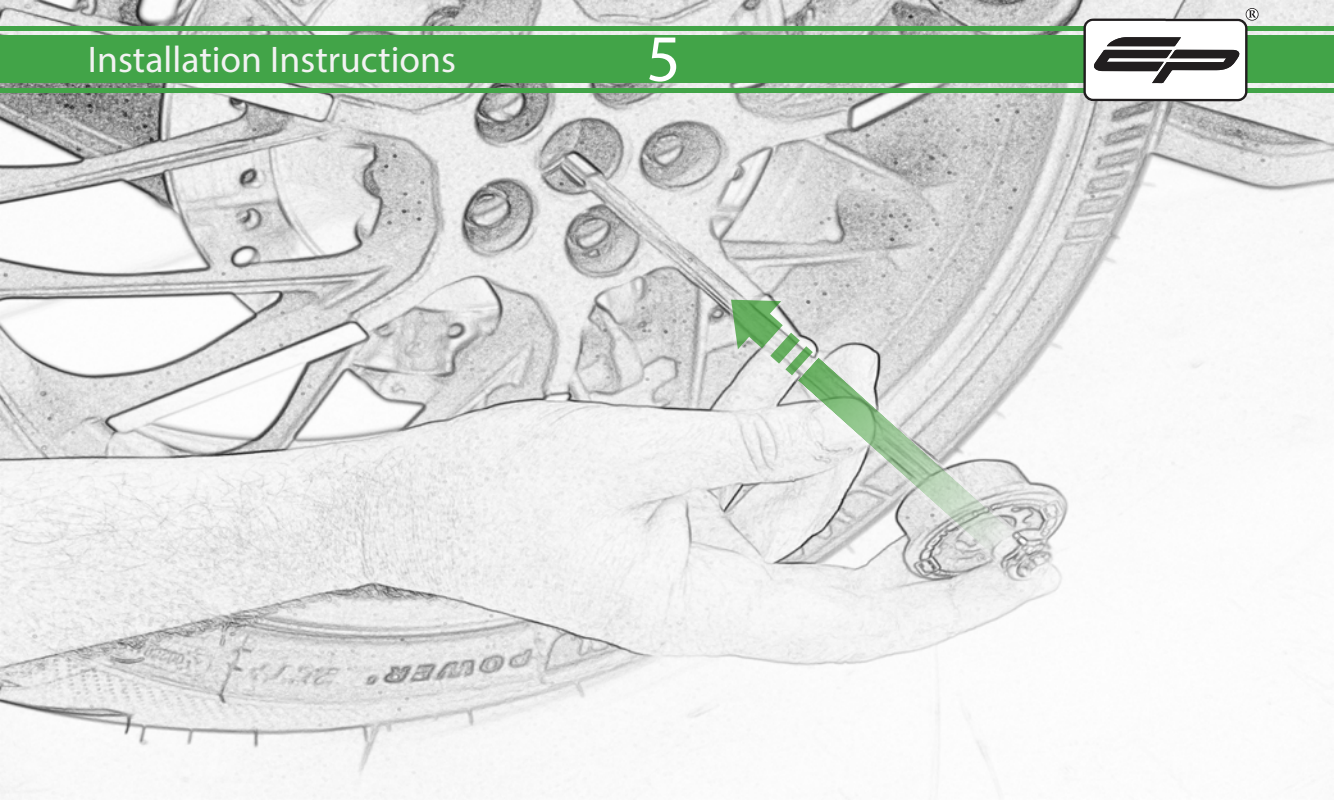









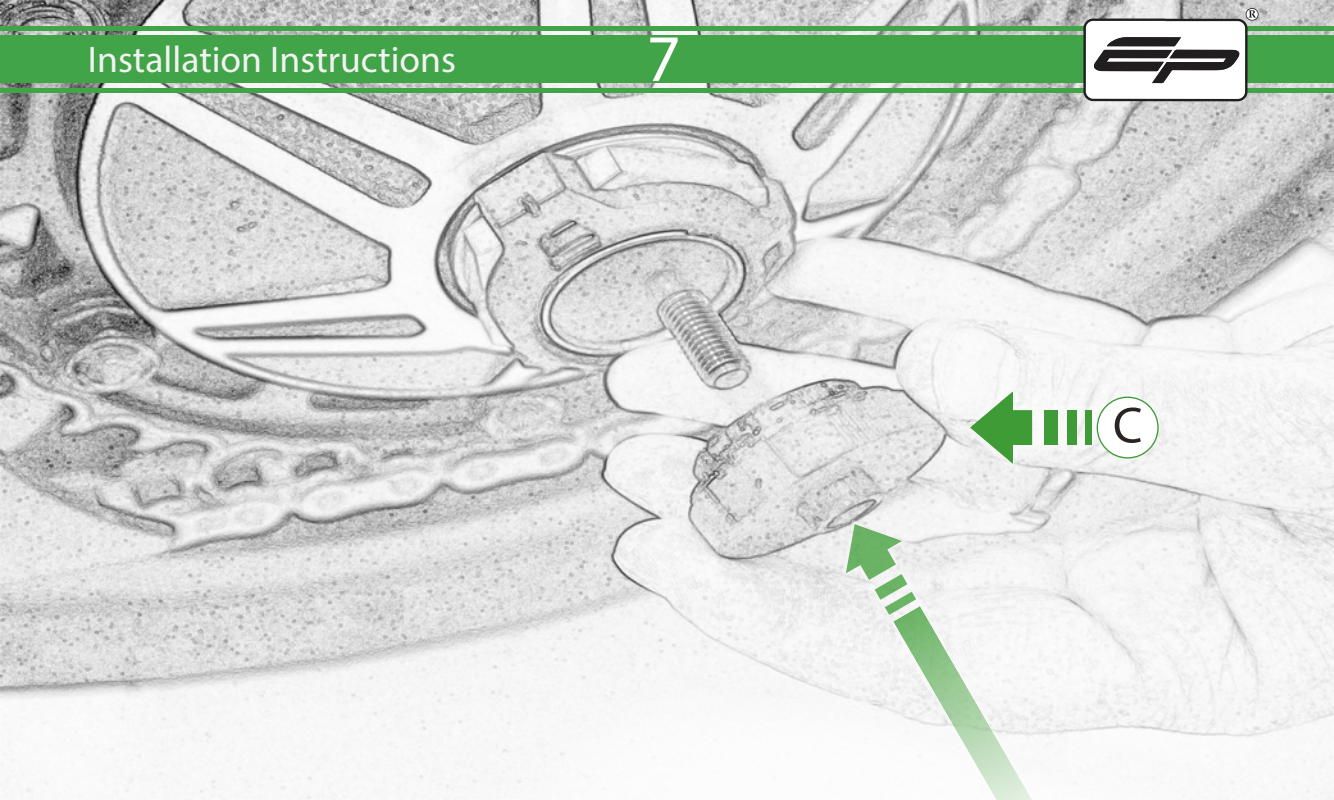




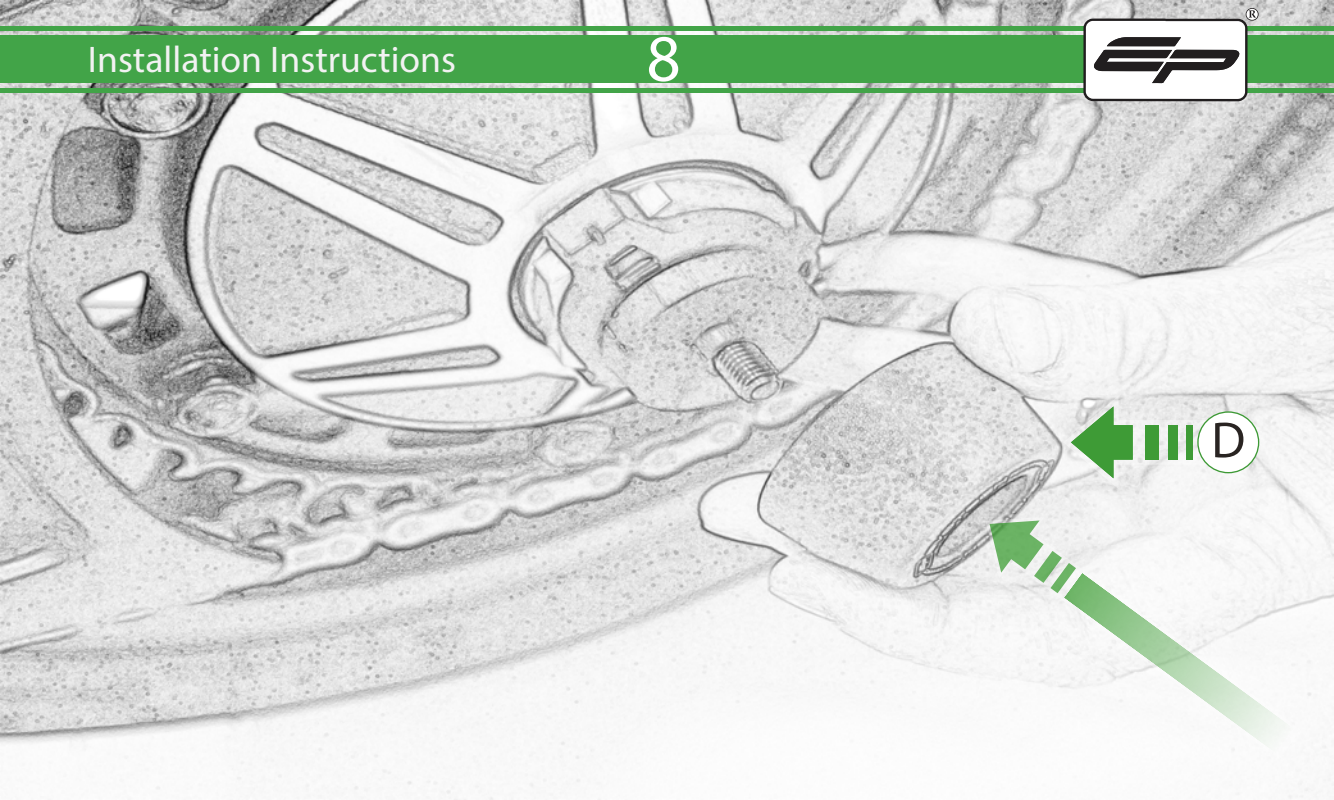

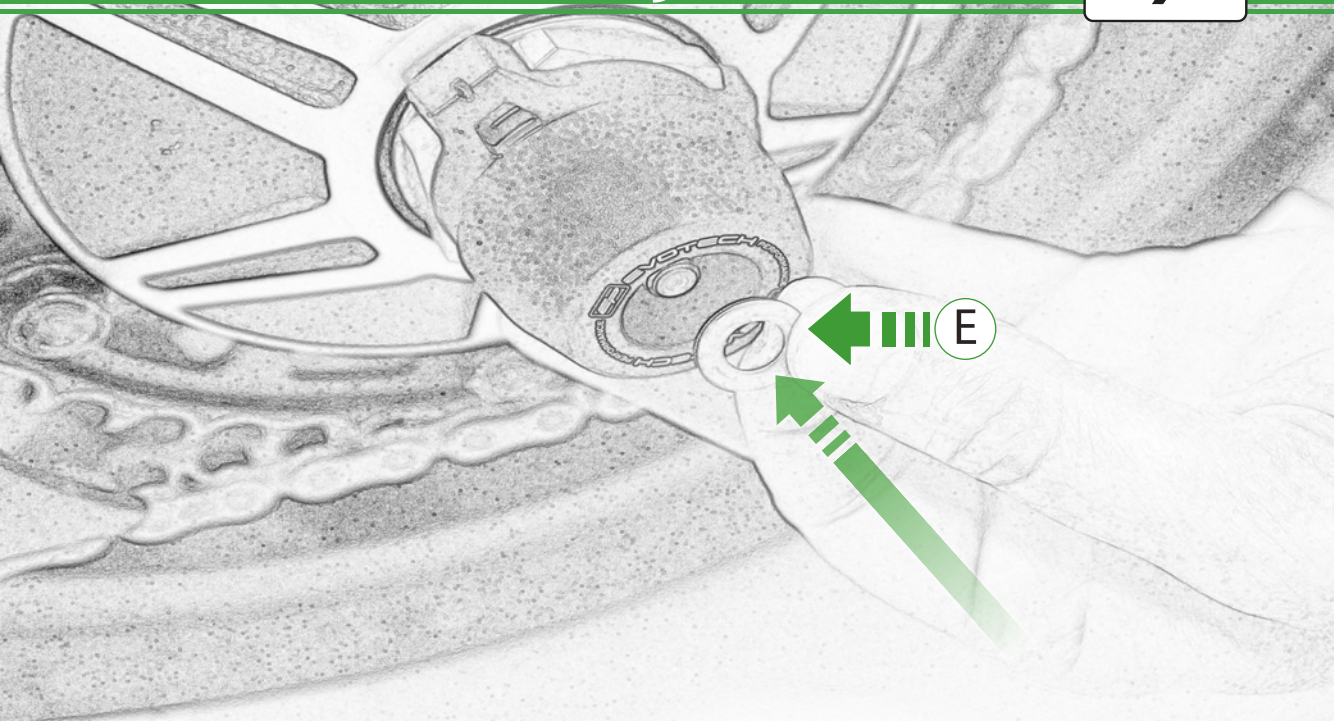

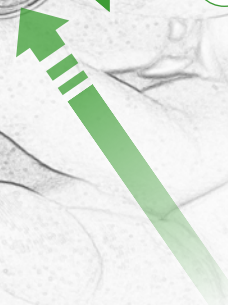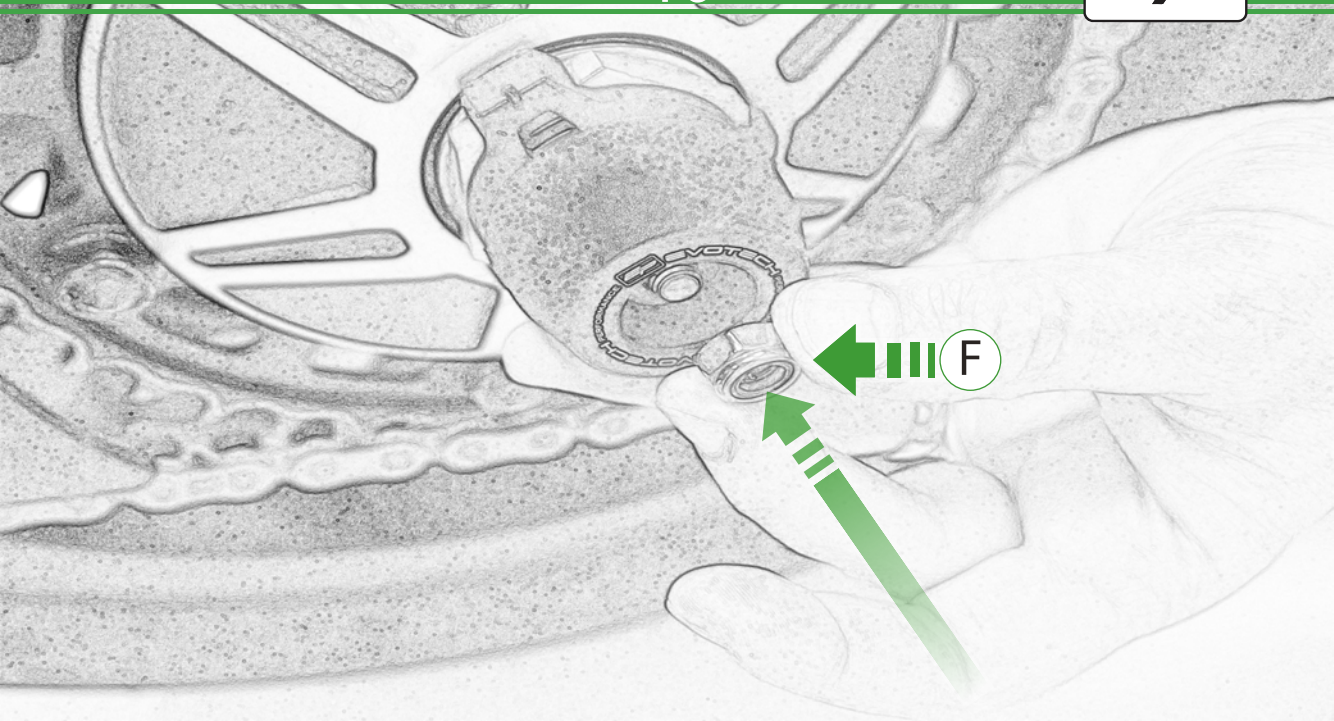

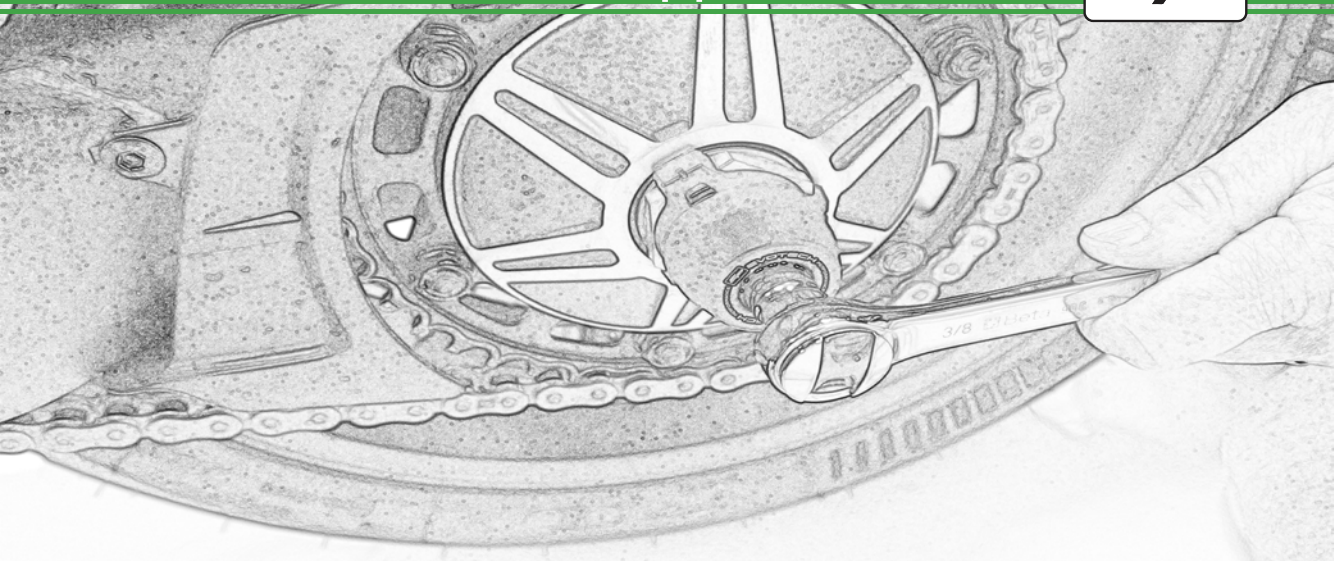

Caution

Fully Tighten  
8Nm



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced