





Kit Contents PRN015673

- Ⓐ 2 x Bar End Weight
- Ⓑ 2 x M6 X 50 Caphead

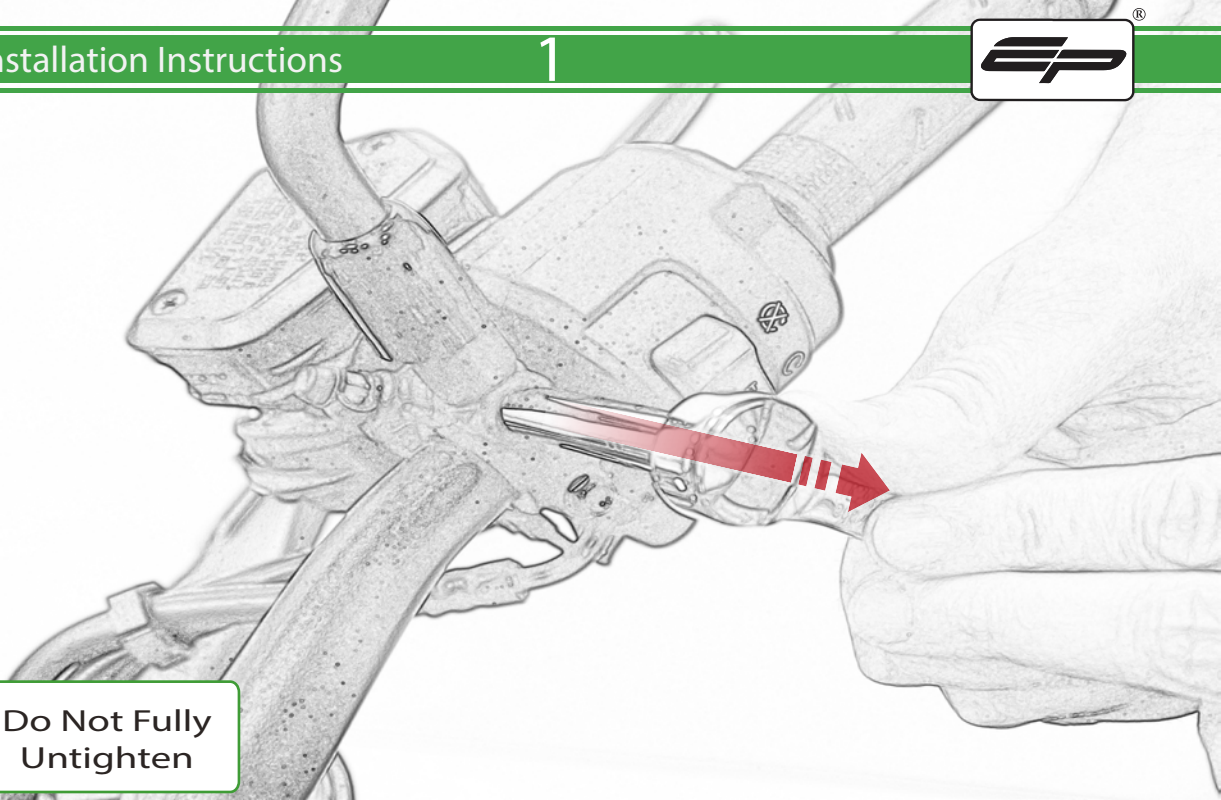


Caution


Do Not Fully
Tighten

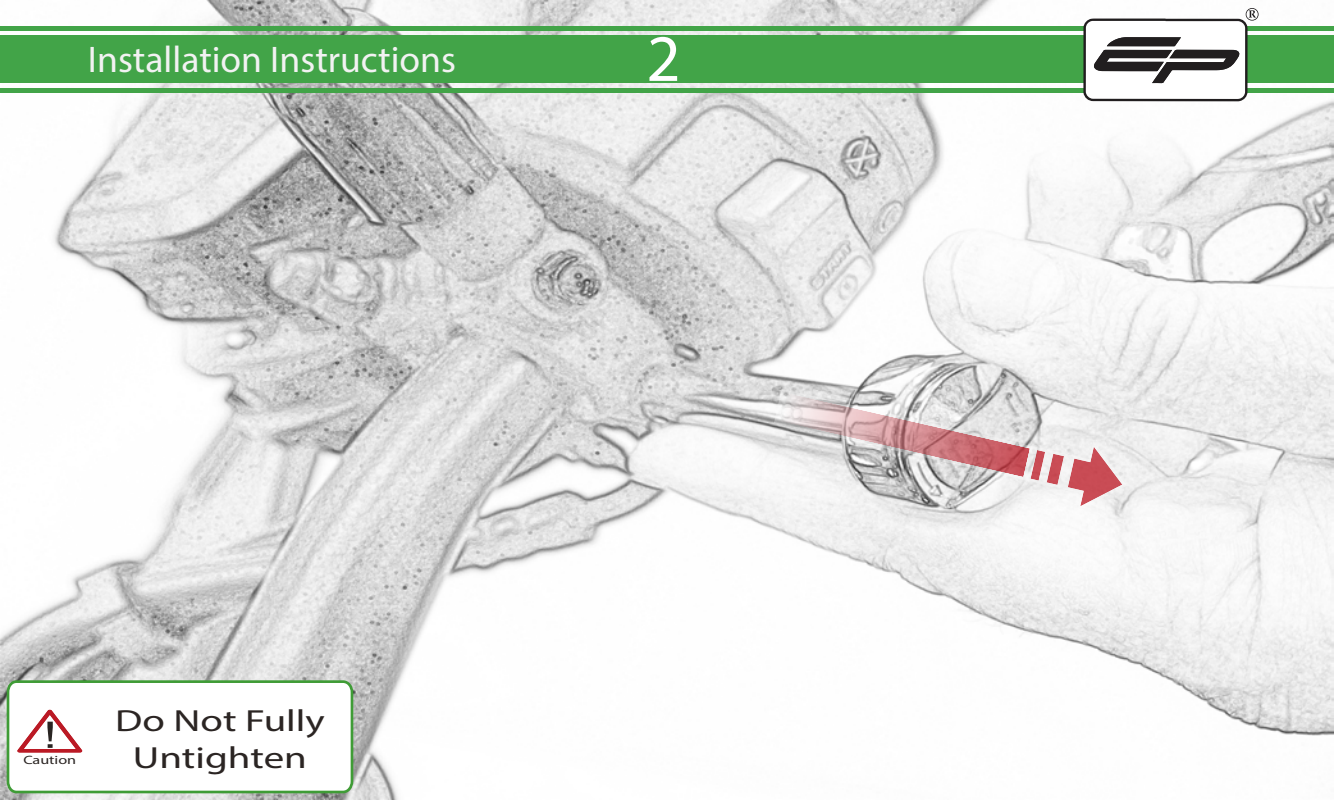



Caution


Do Not Fully
Tighten

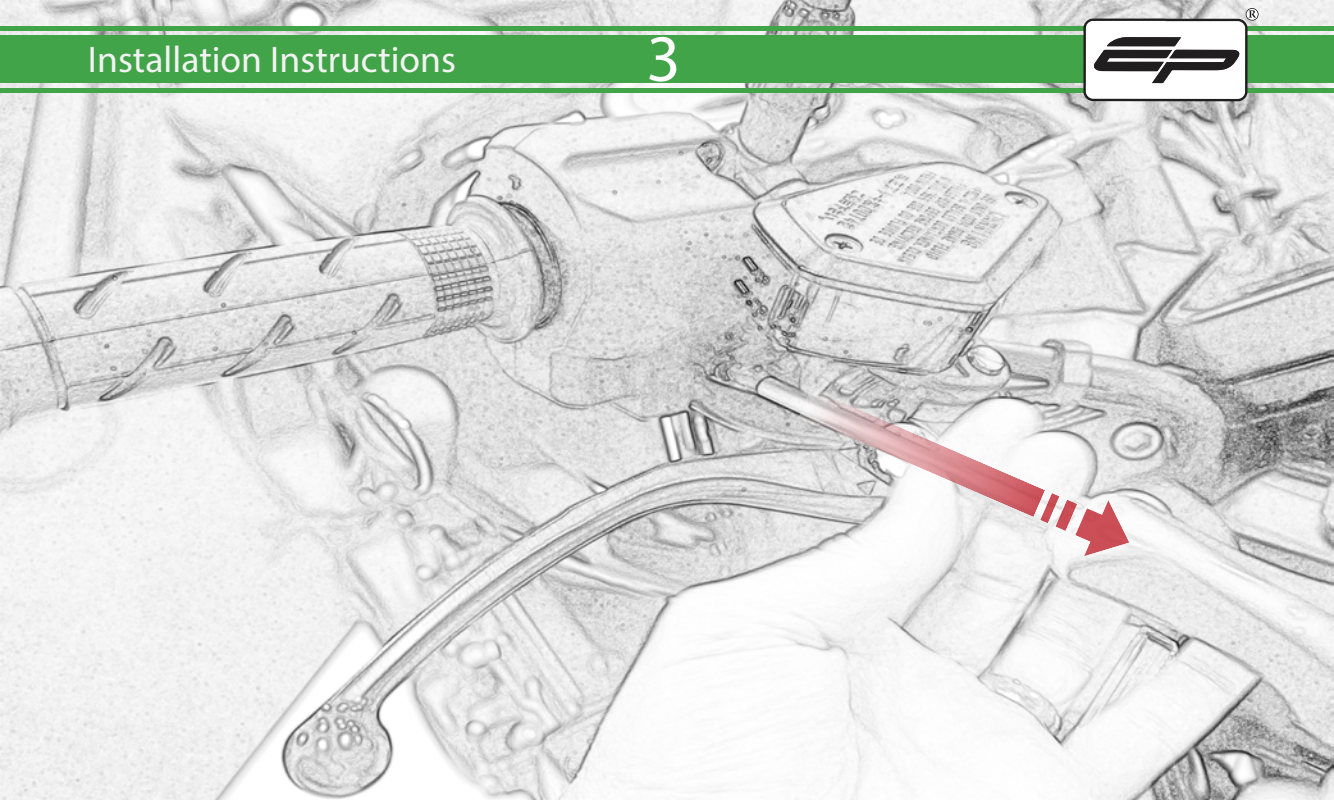


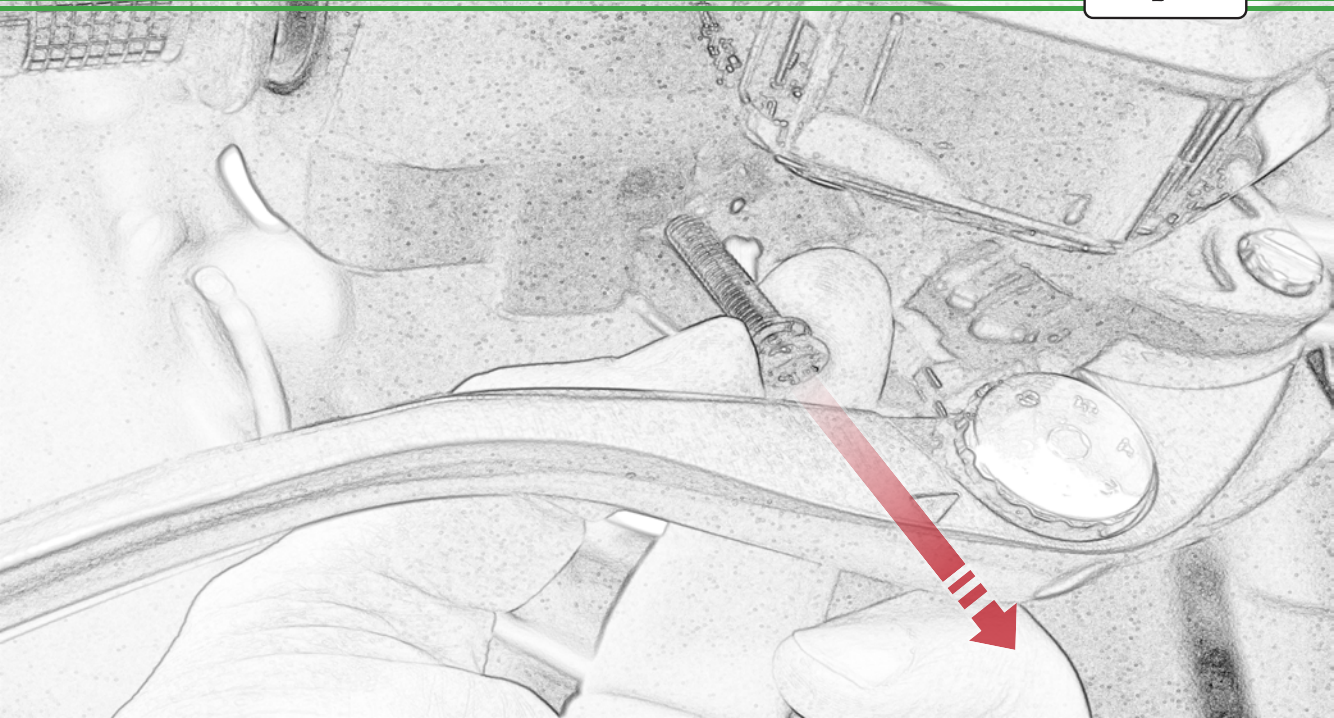


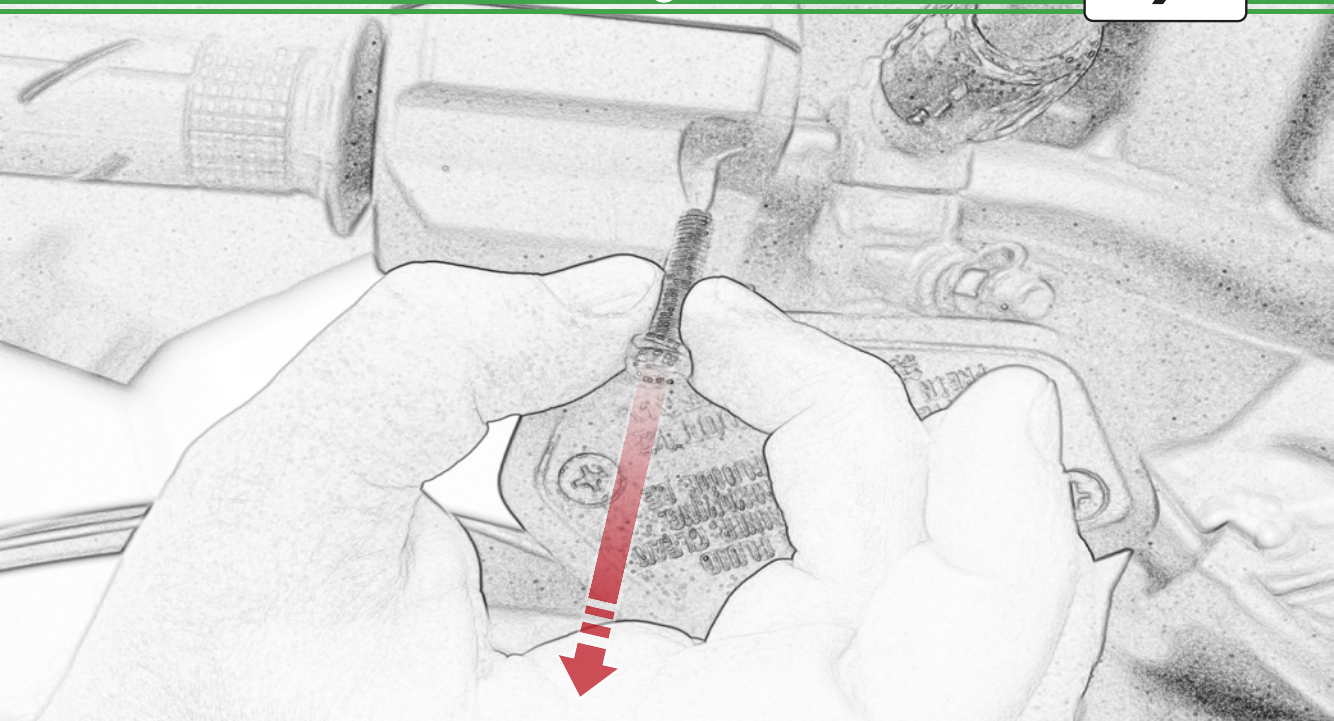


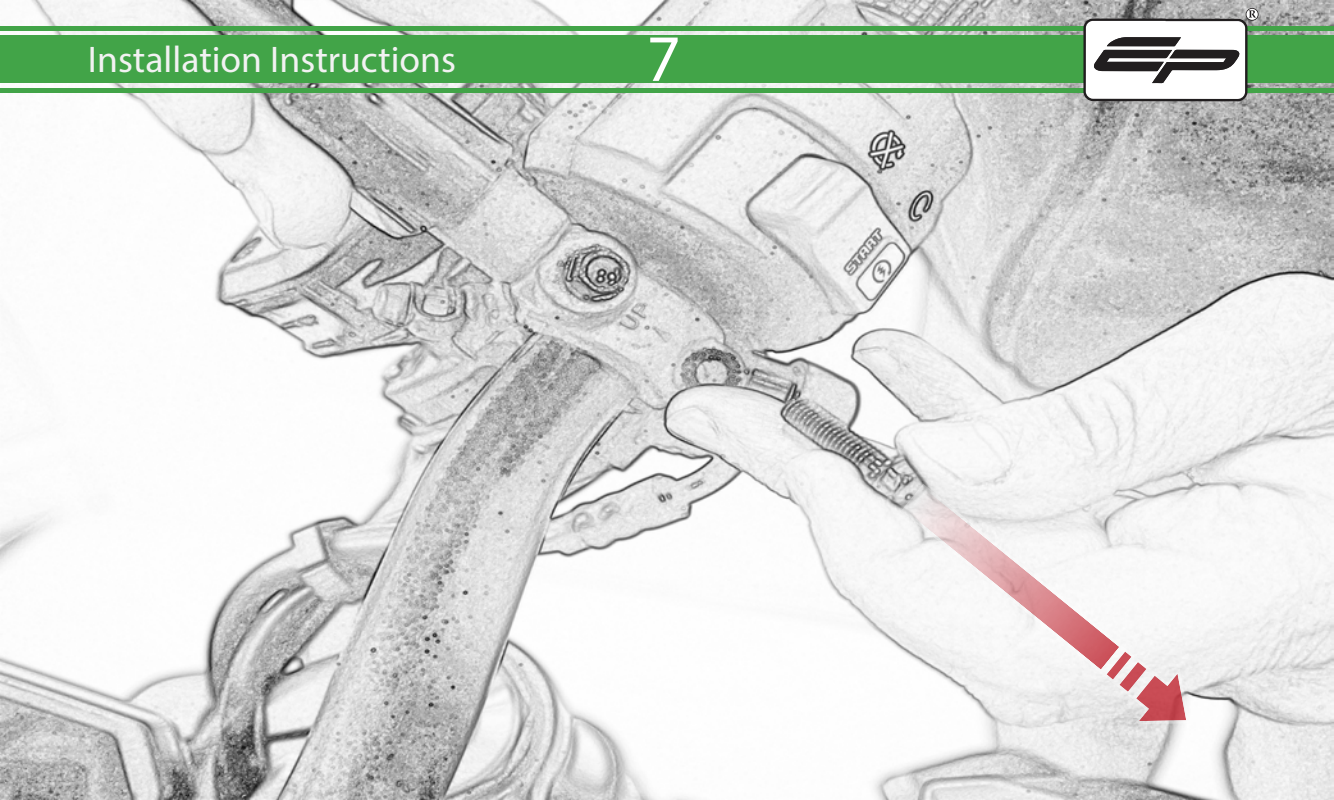

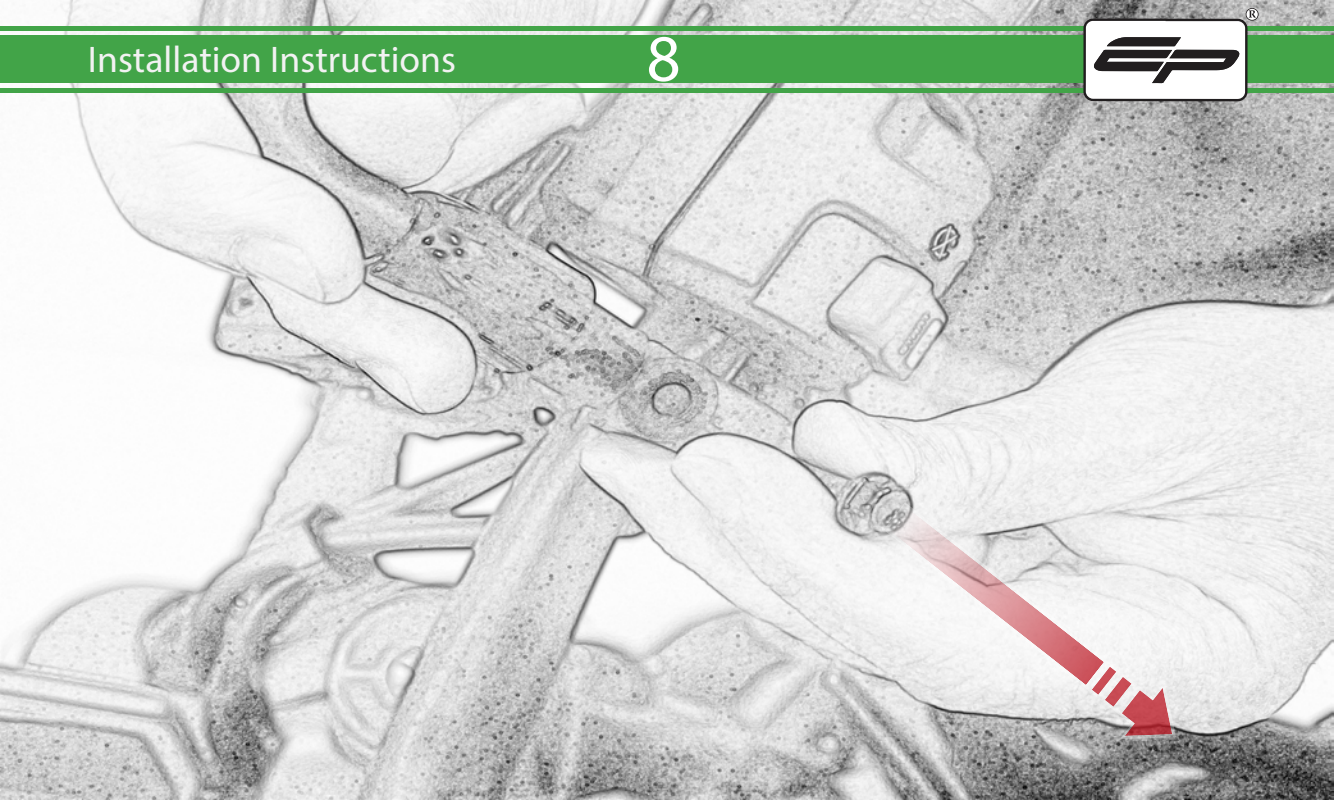

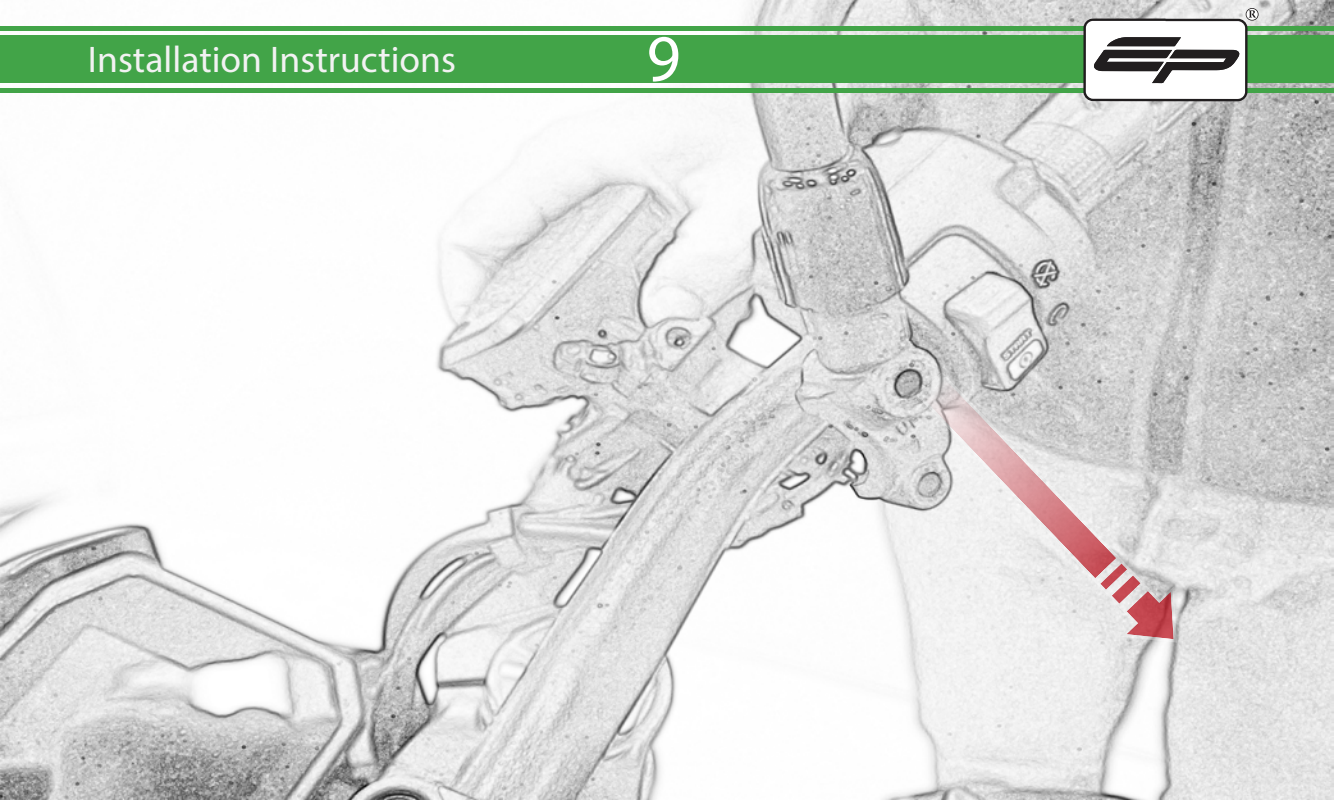


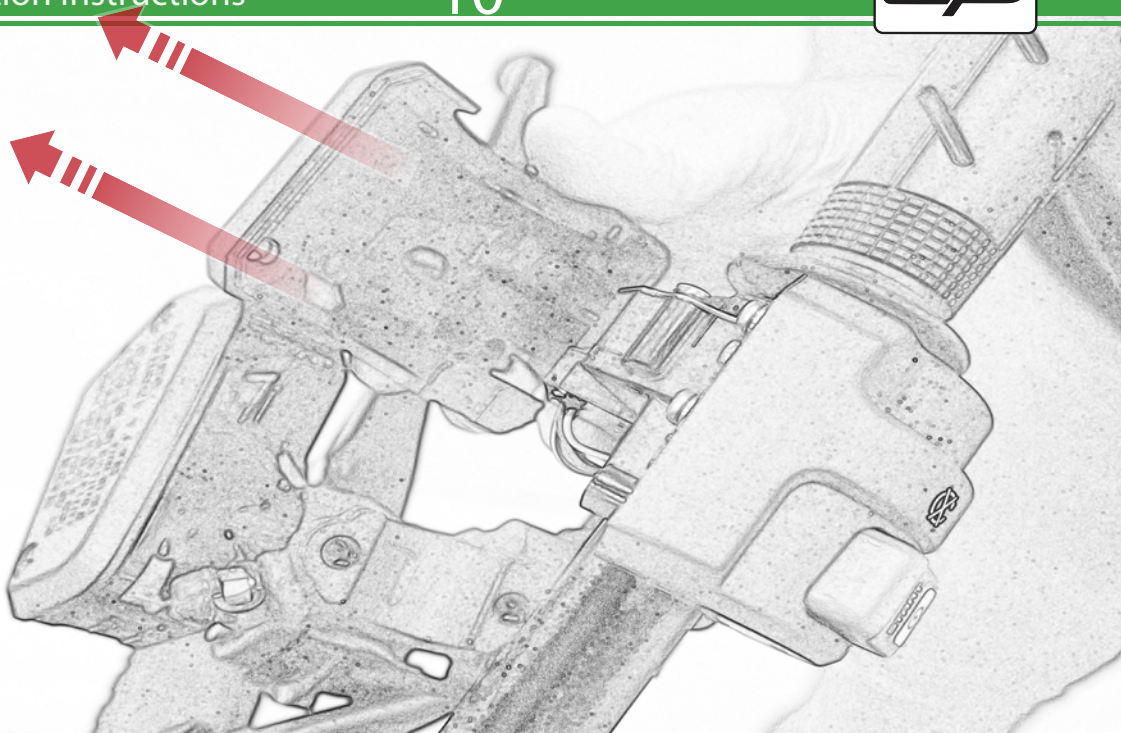


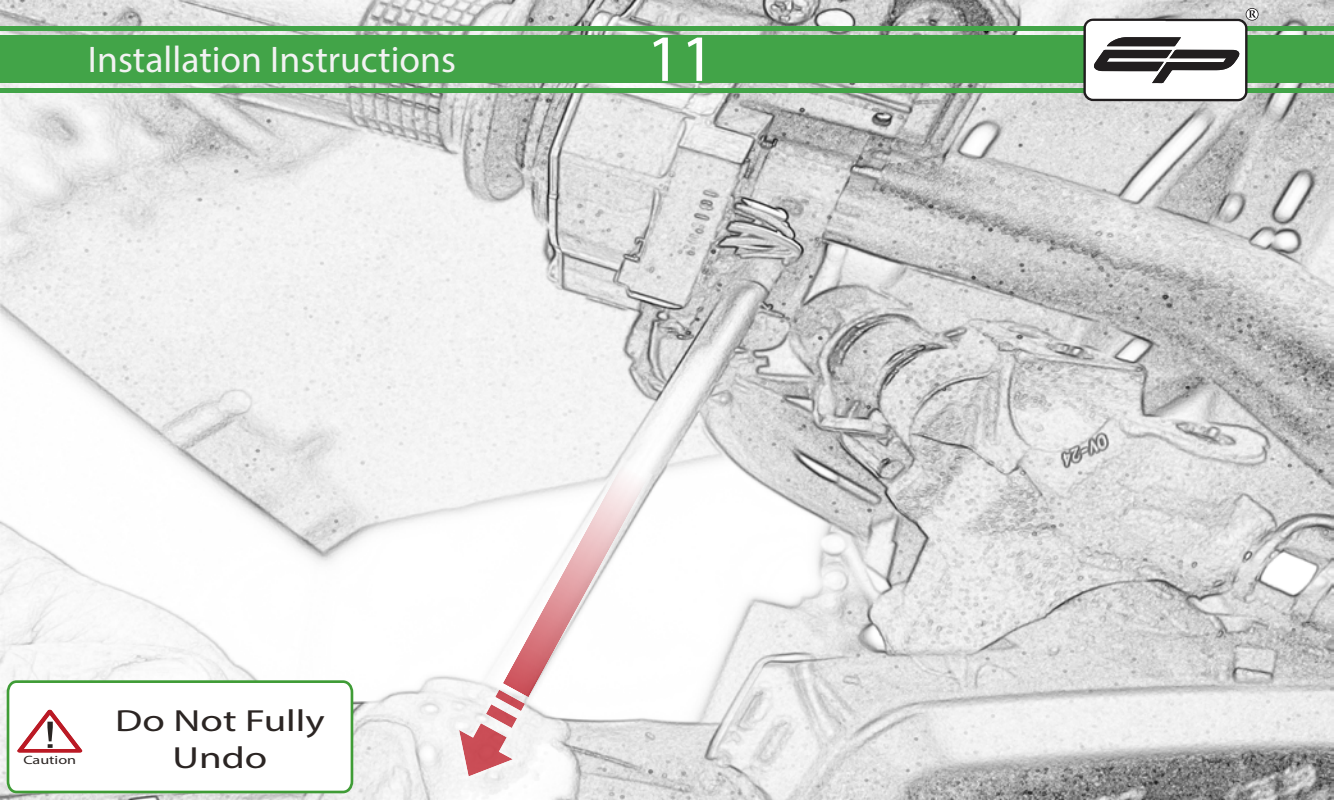



Caution

Do Not Fully
Undo

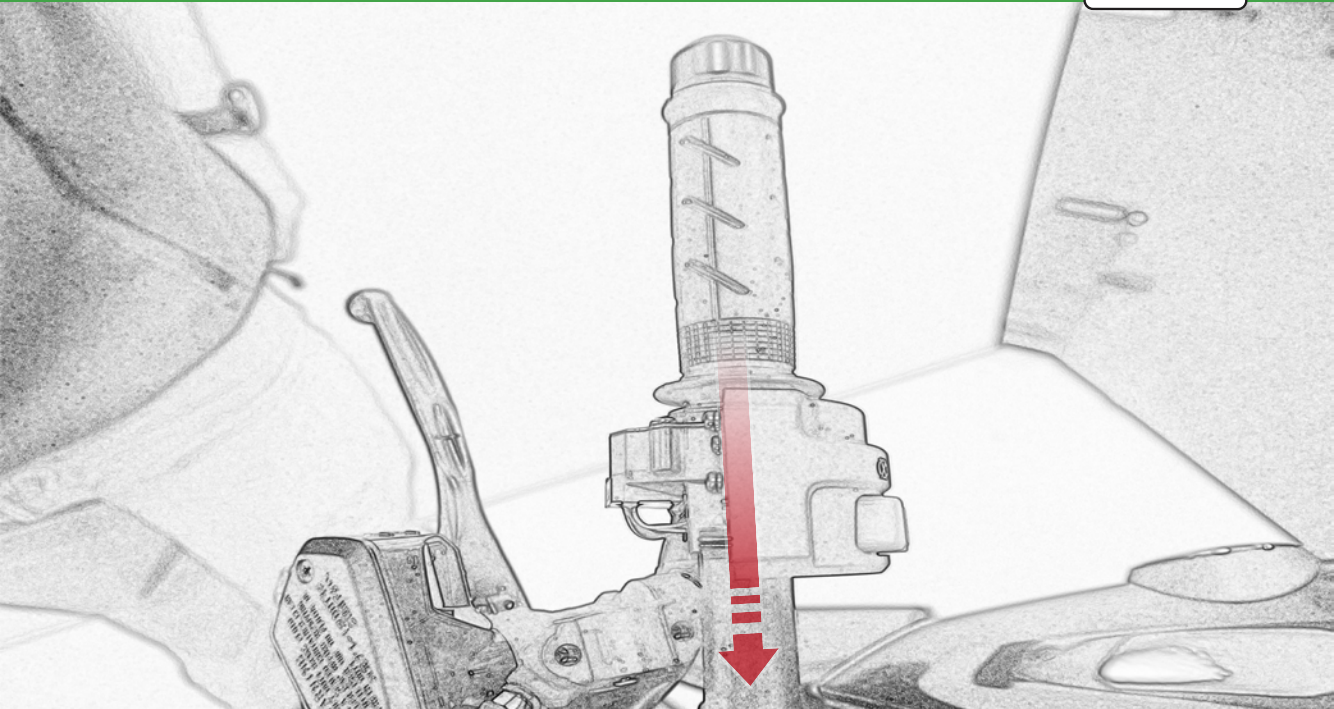

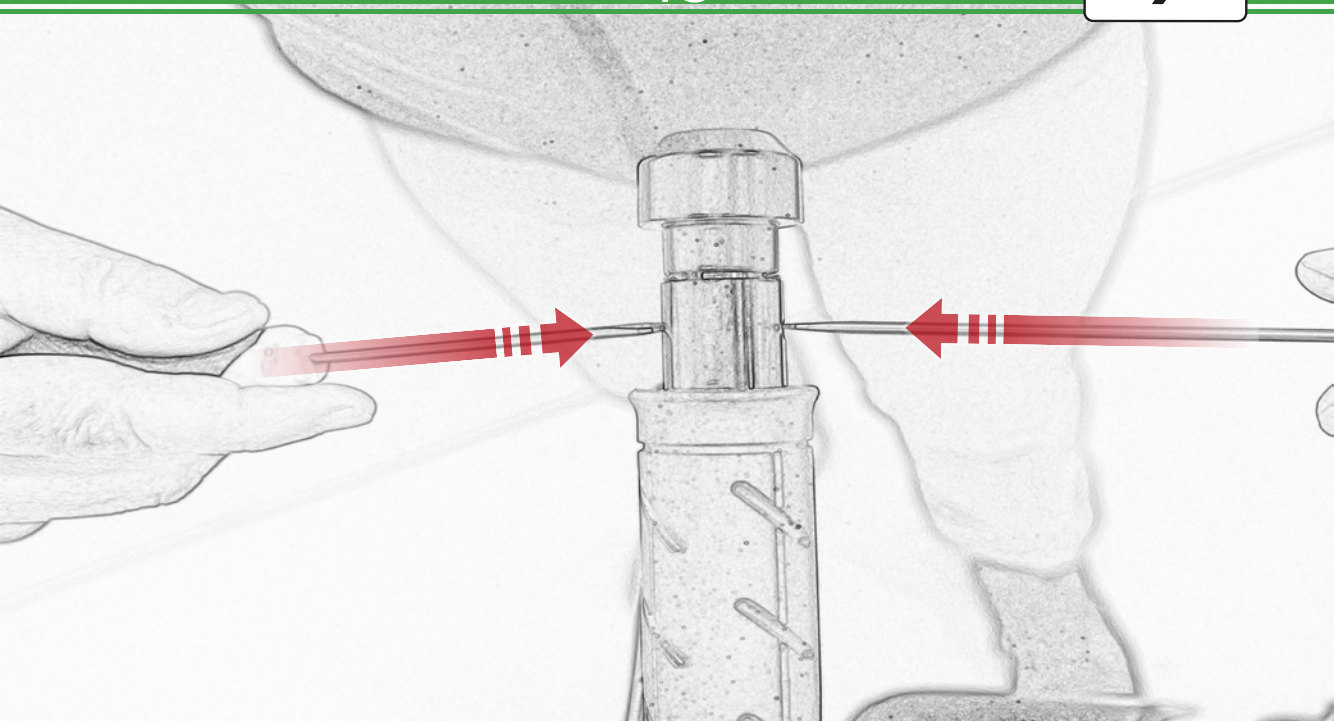

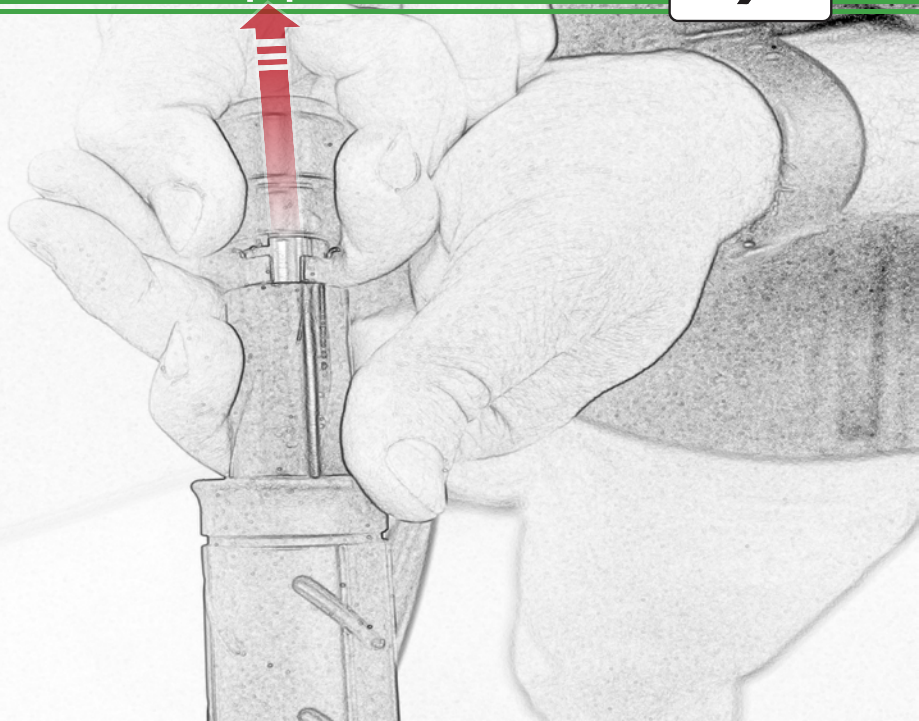


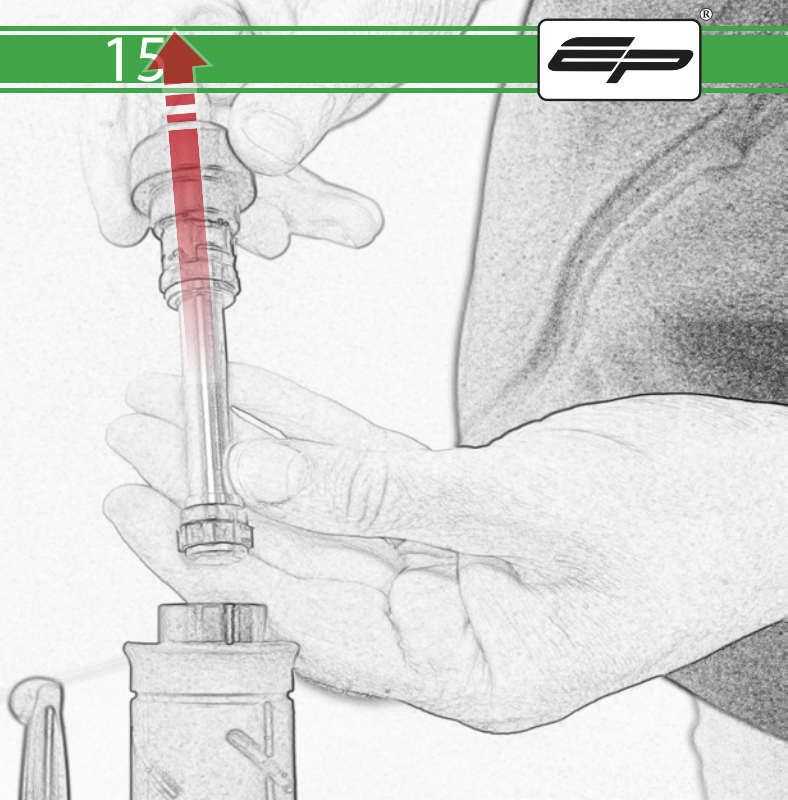





Reverse Stages


12 - 1

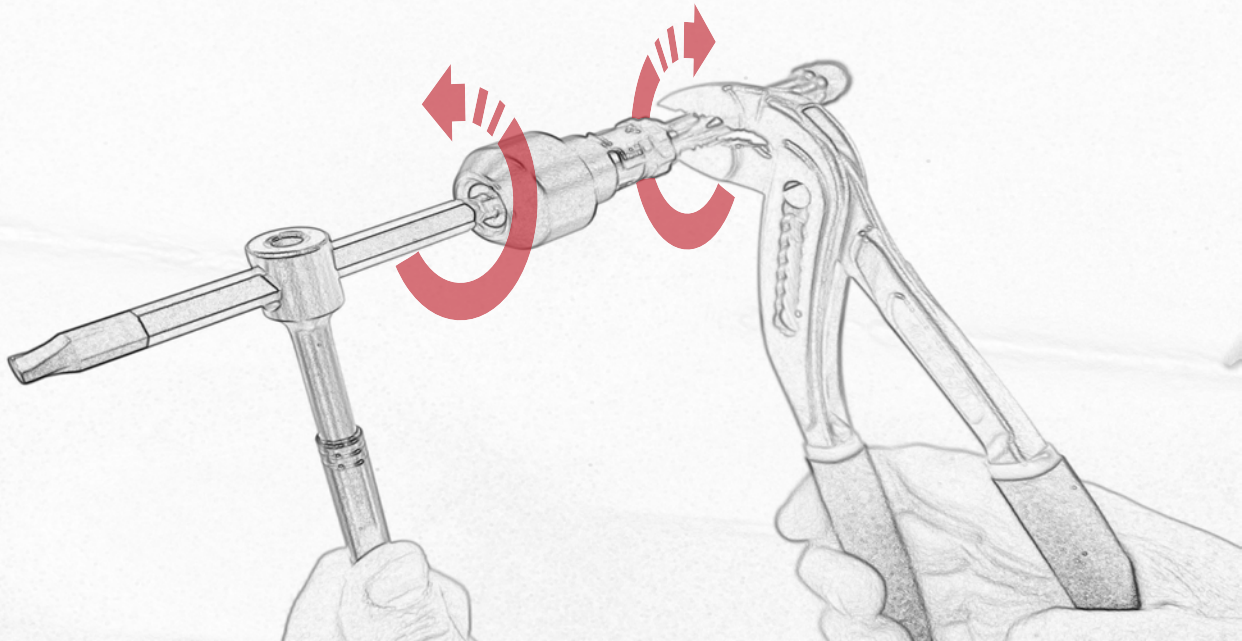


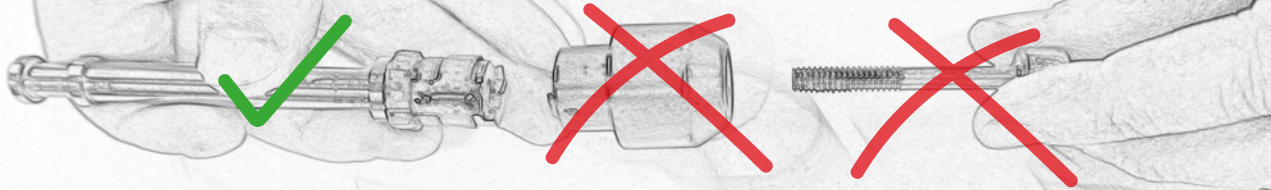





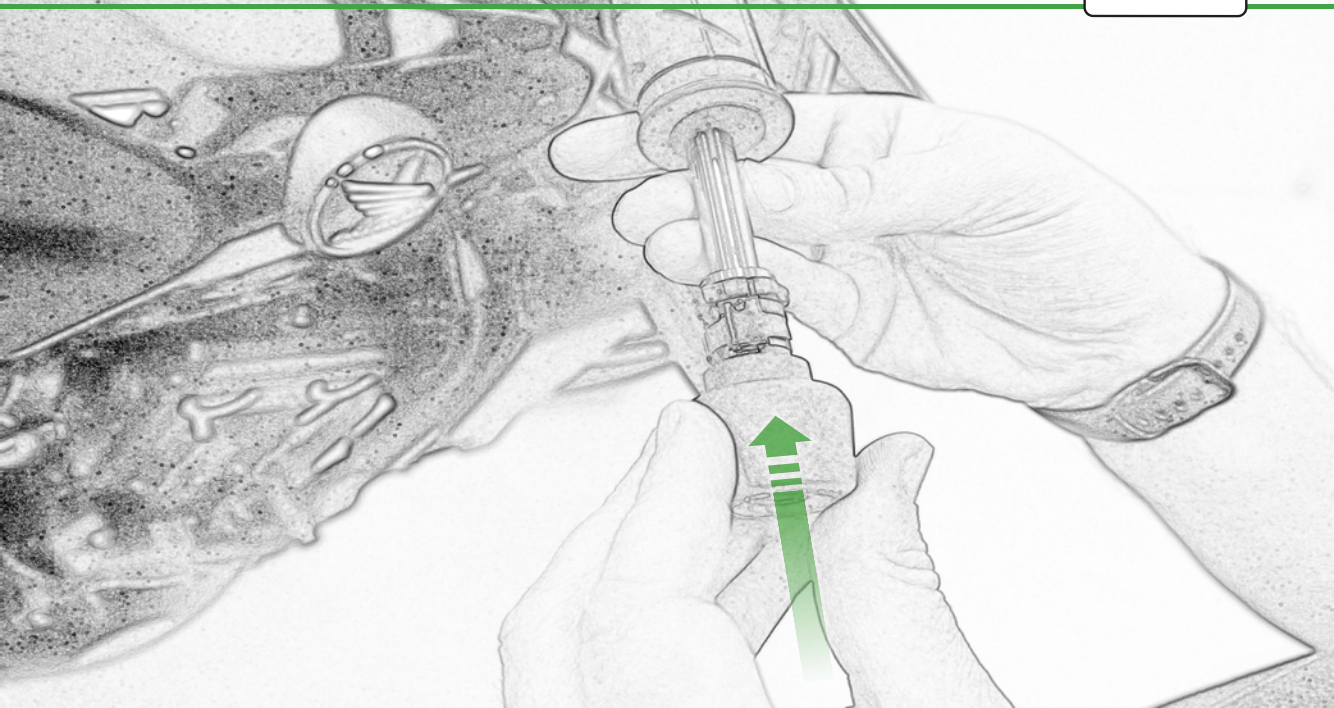


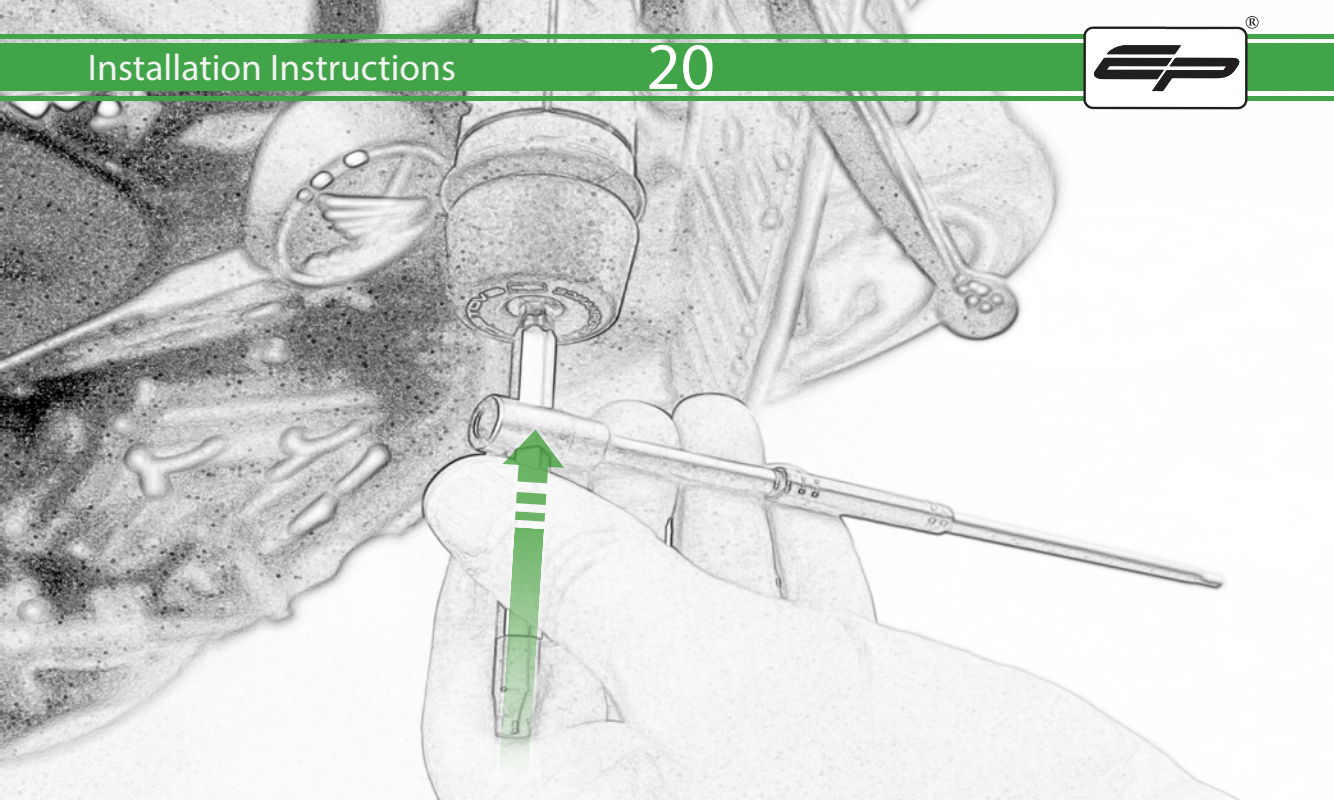


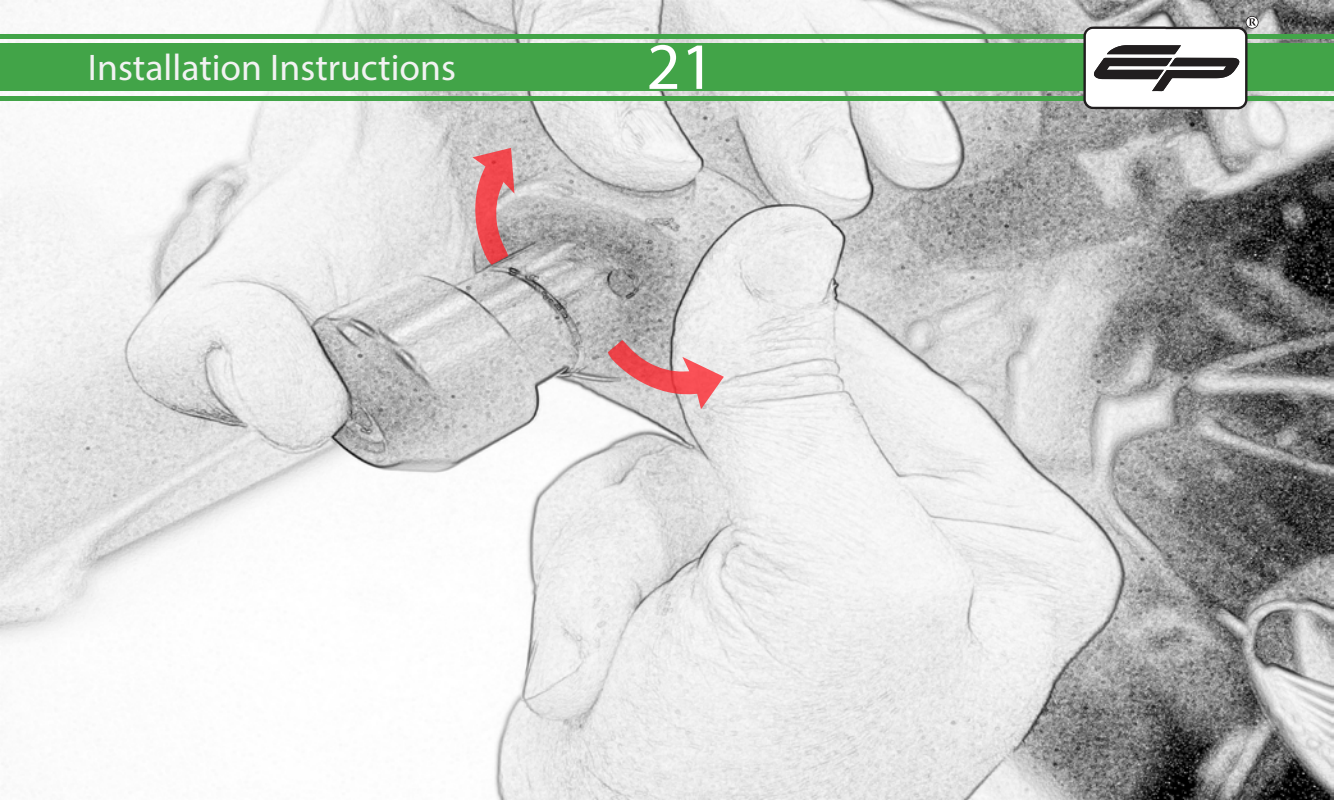


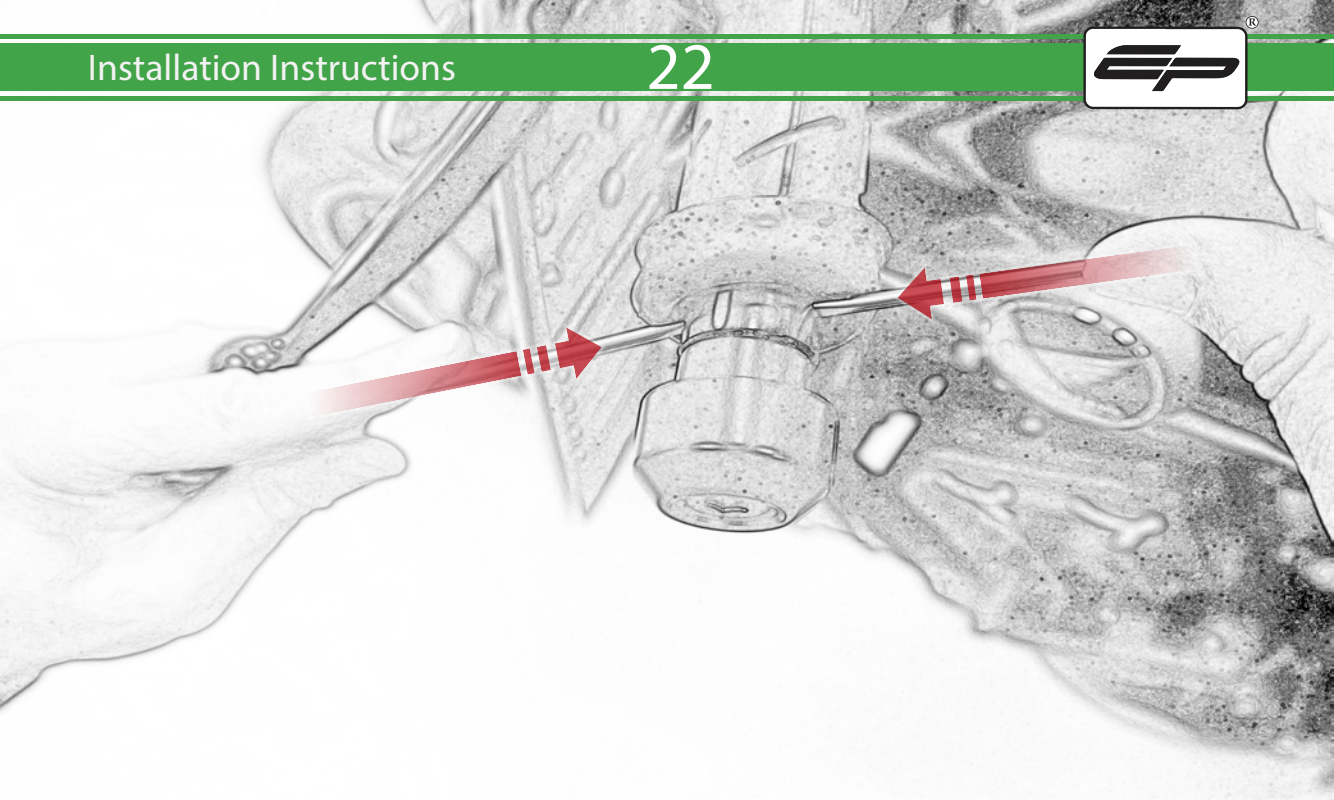

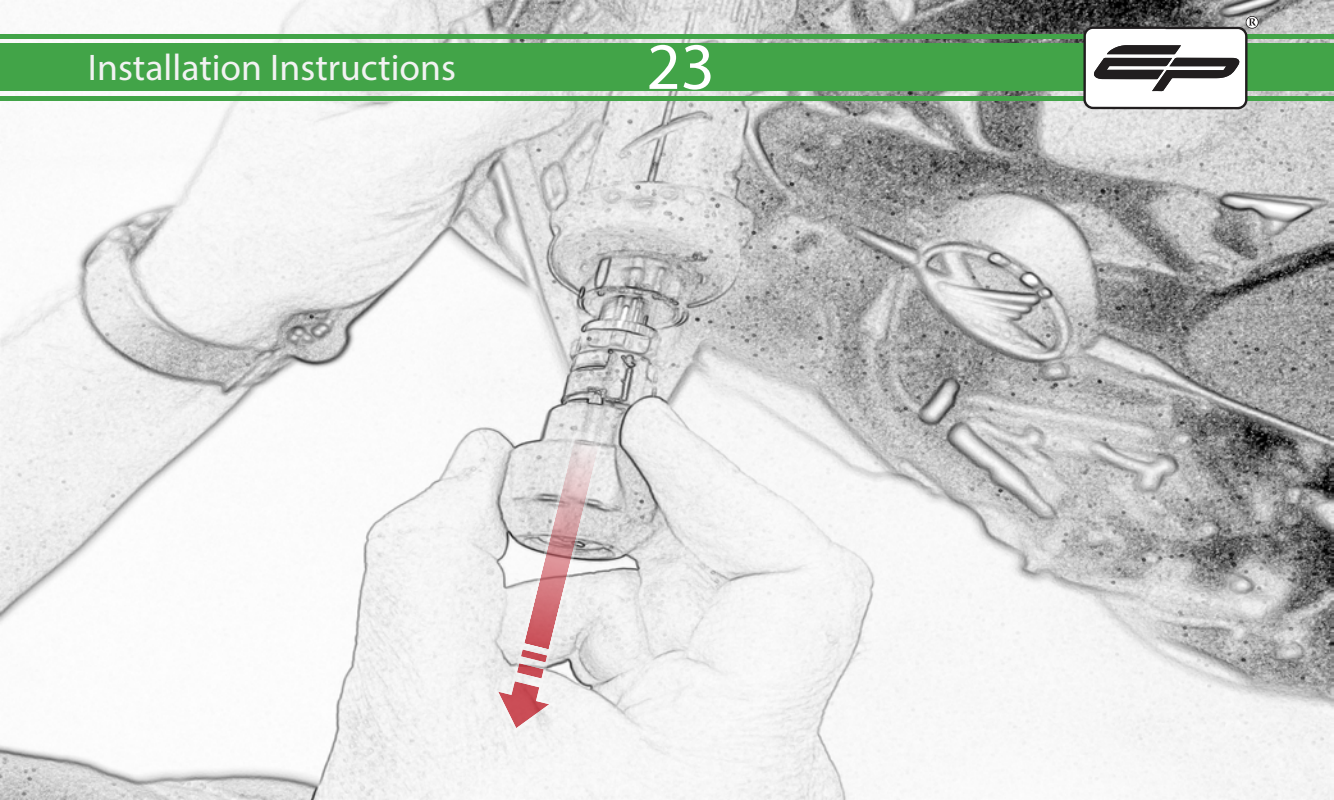


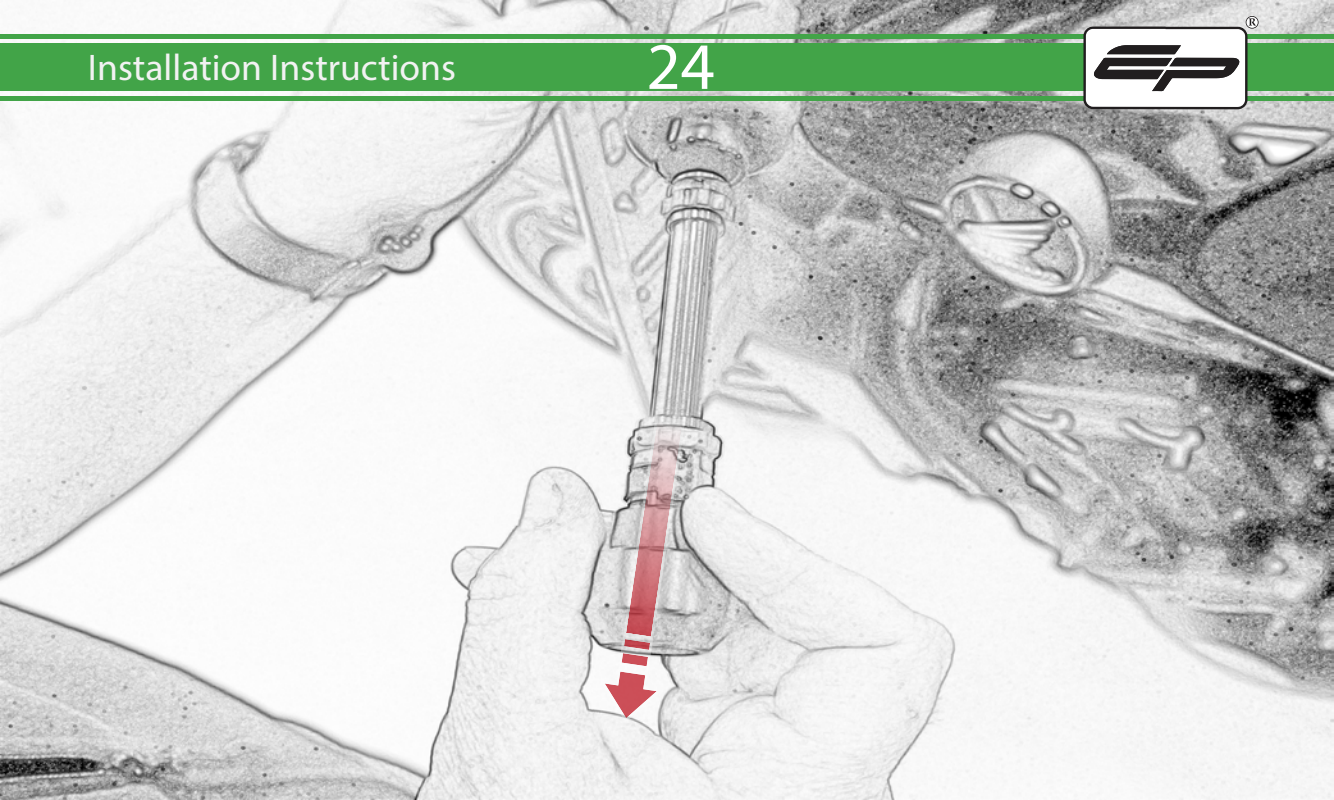


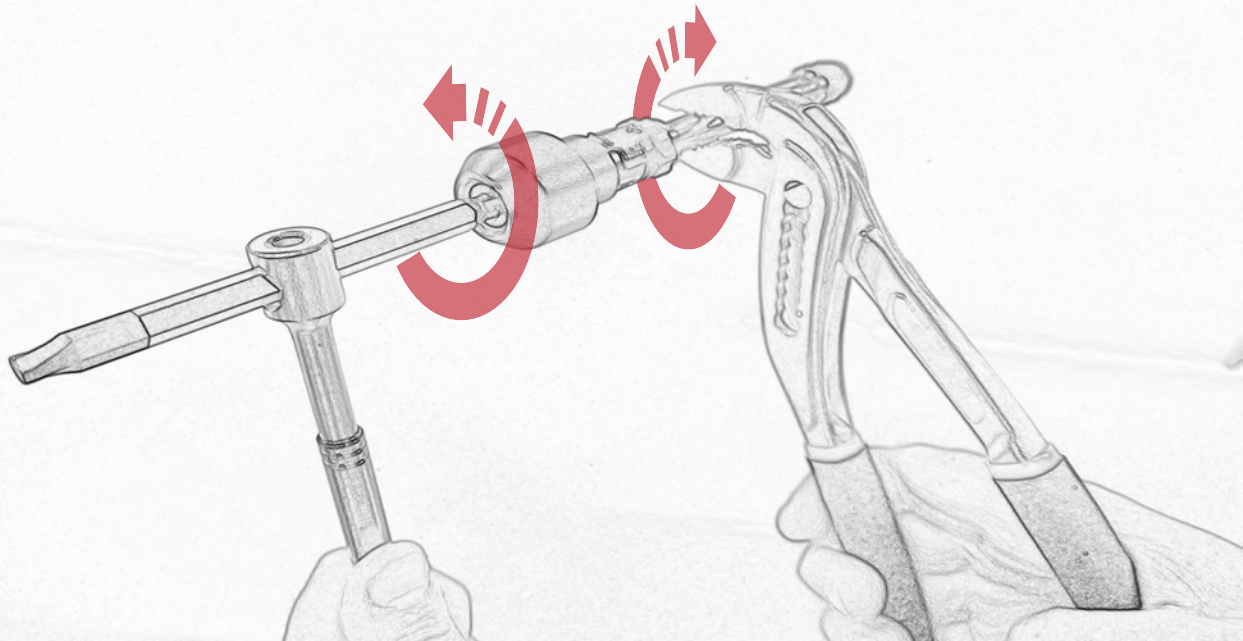


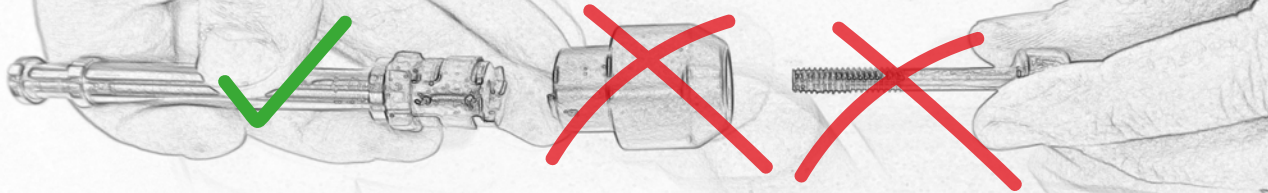



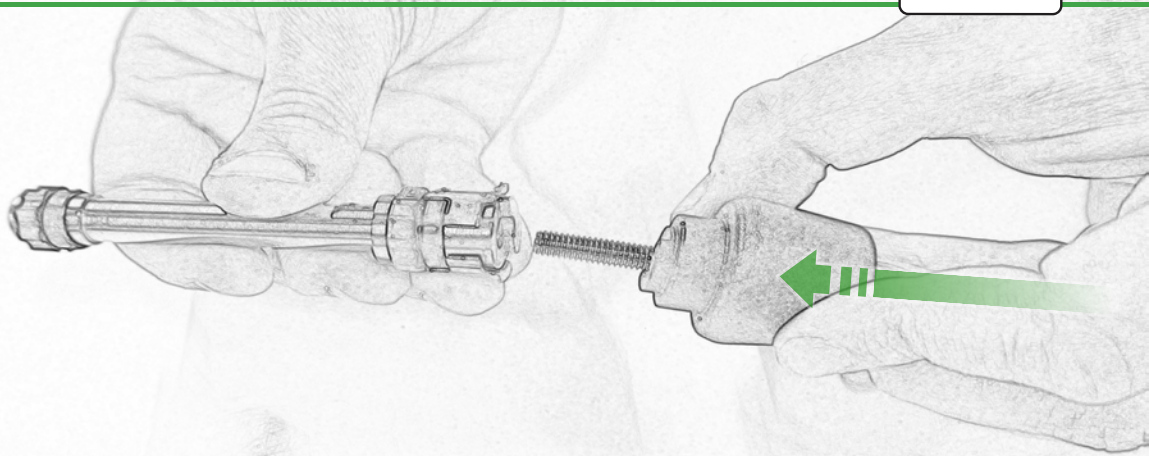

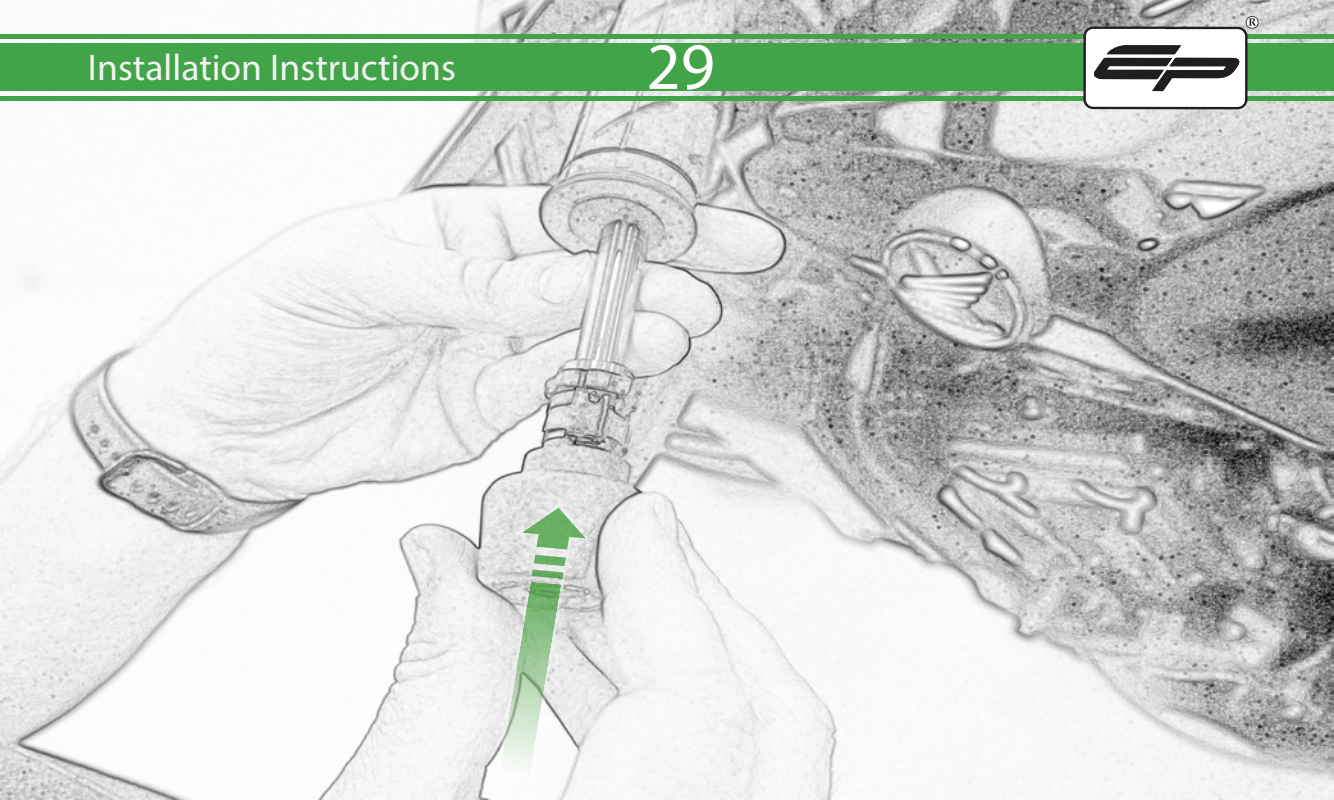

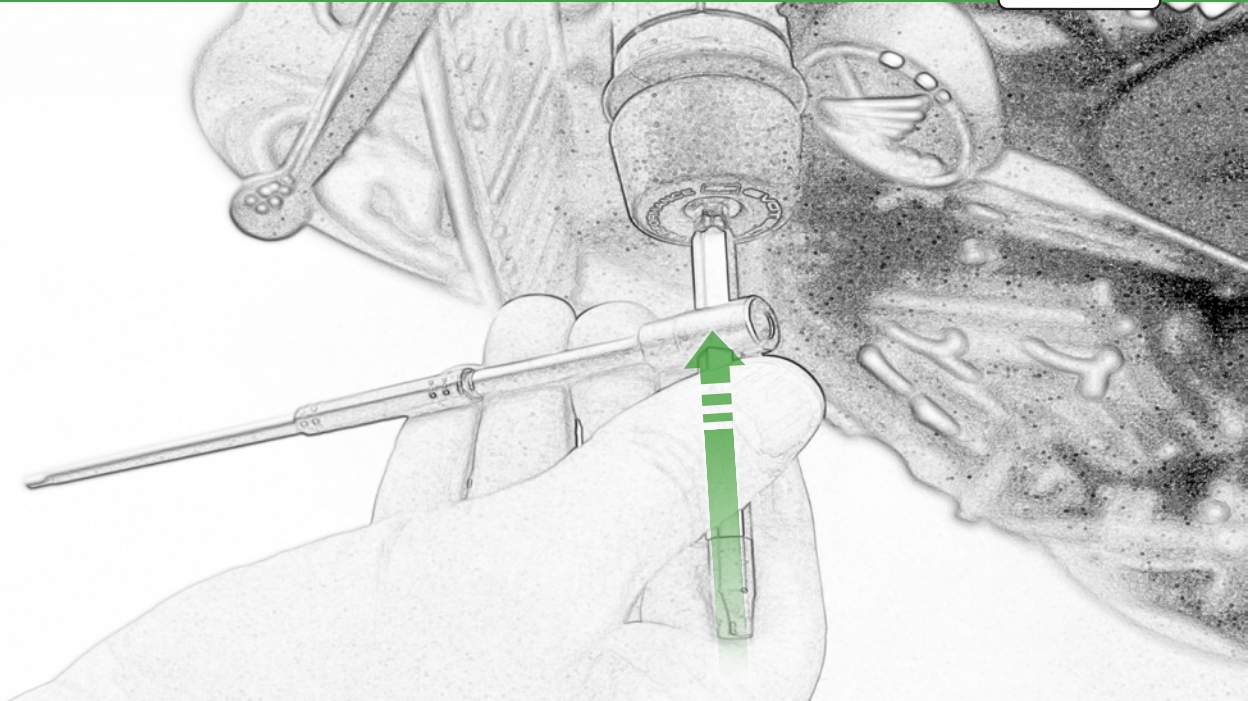



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced