







## Kit Contents PRN015726


- (A) 2 x Bobbin Spacer
- (B) 2 x M12 Washer
- (C) 2 x Poly Washer
- (D) 2 x Bobbin Head
- (E) 2 x M12 x 135 x 1.25 Caphead

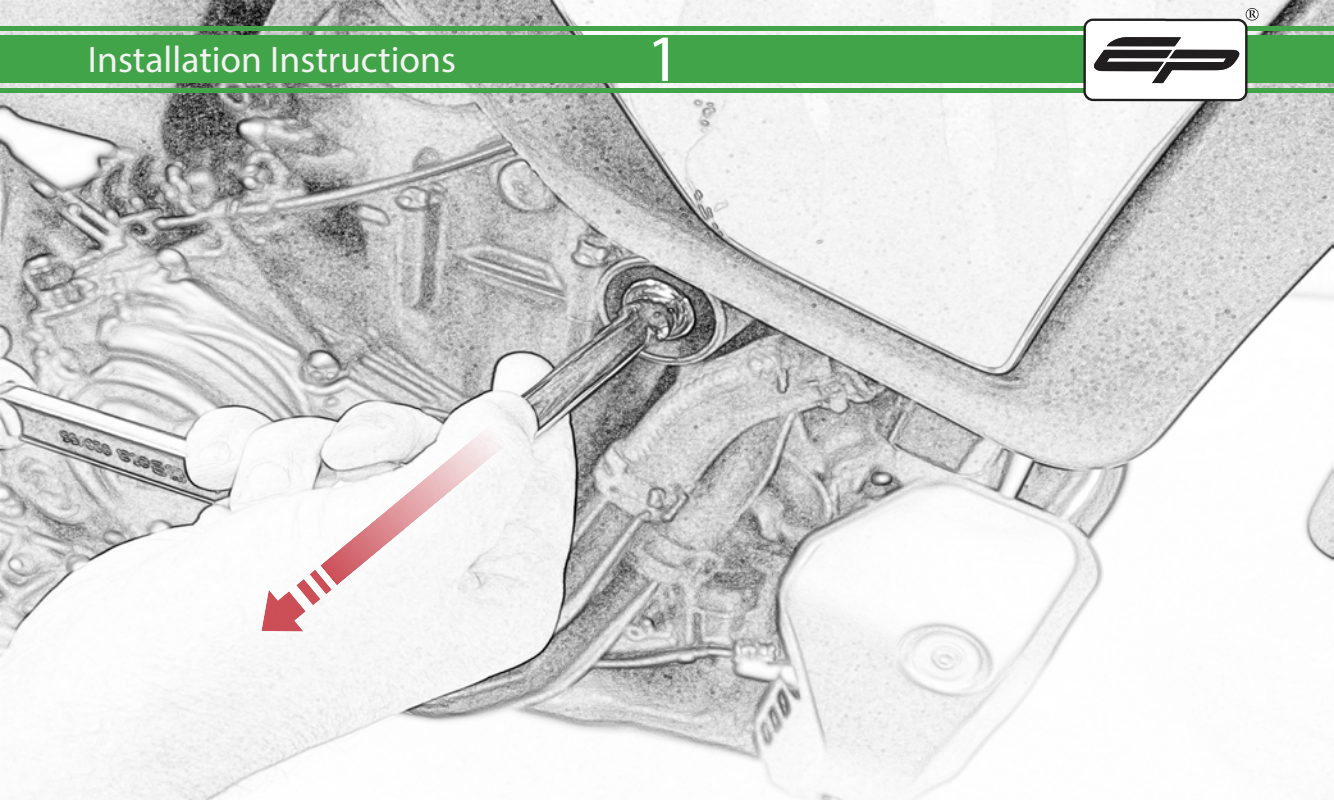

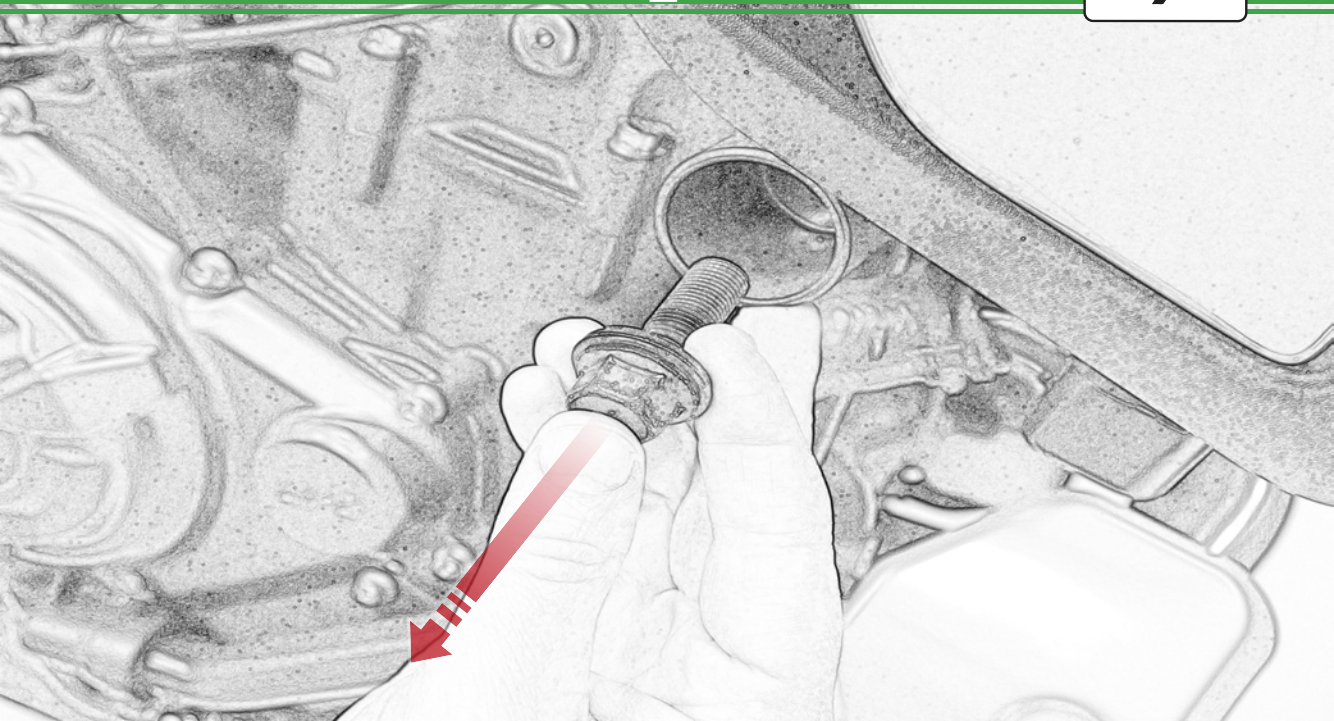


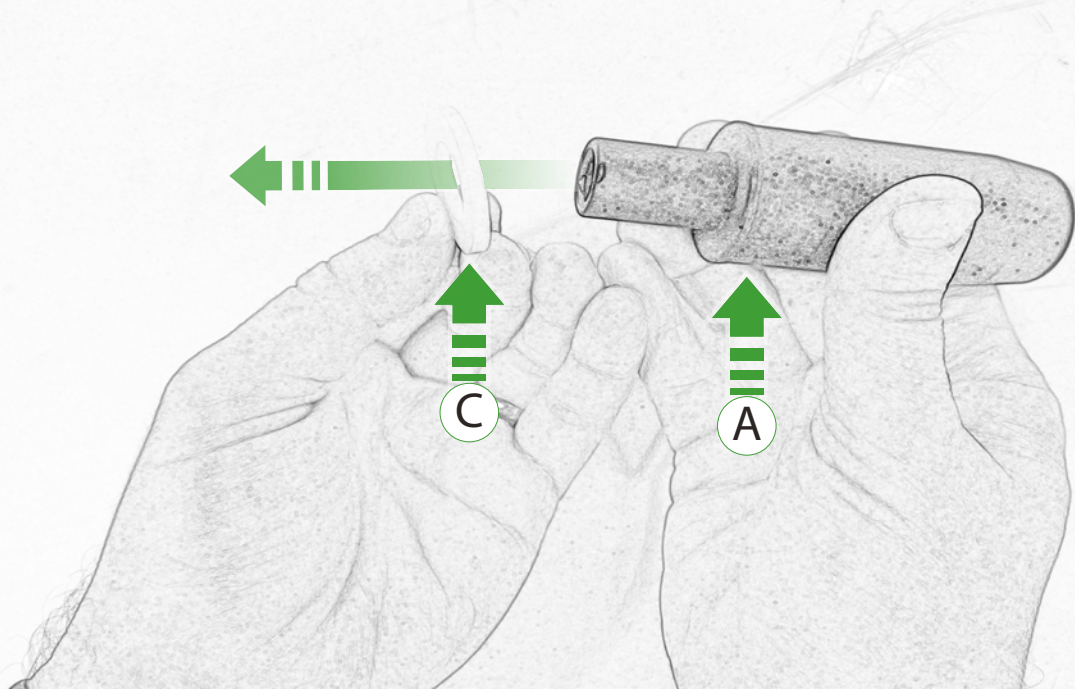


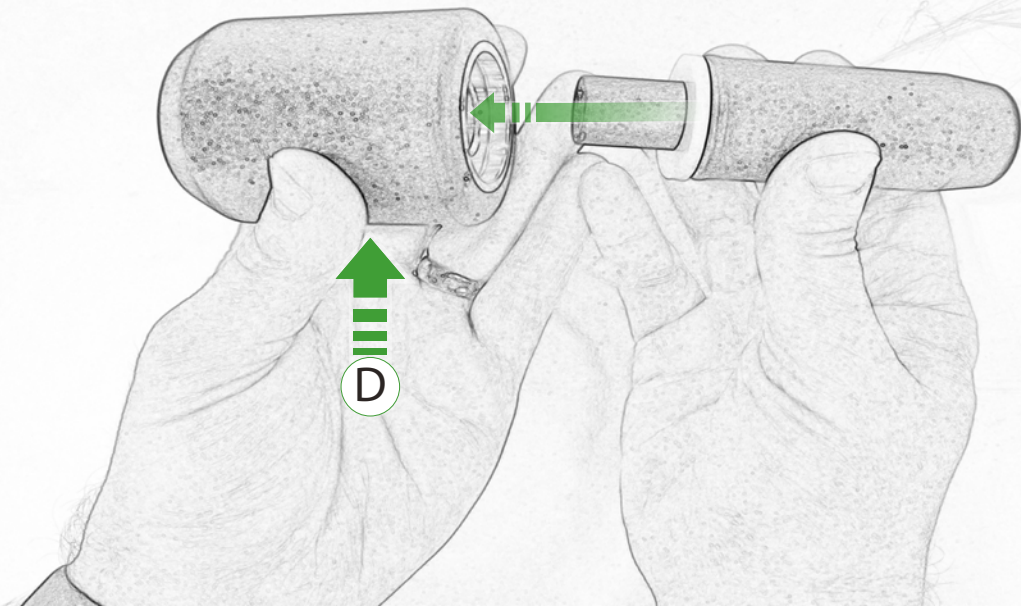

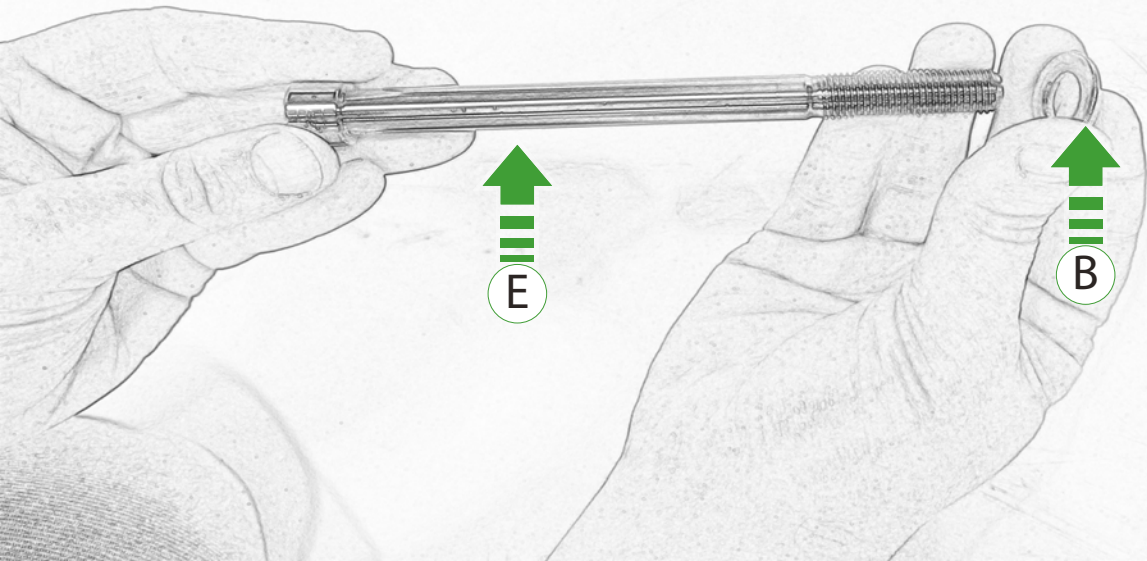




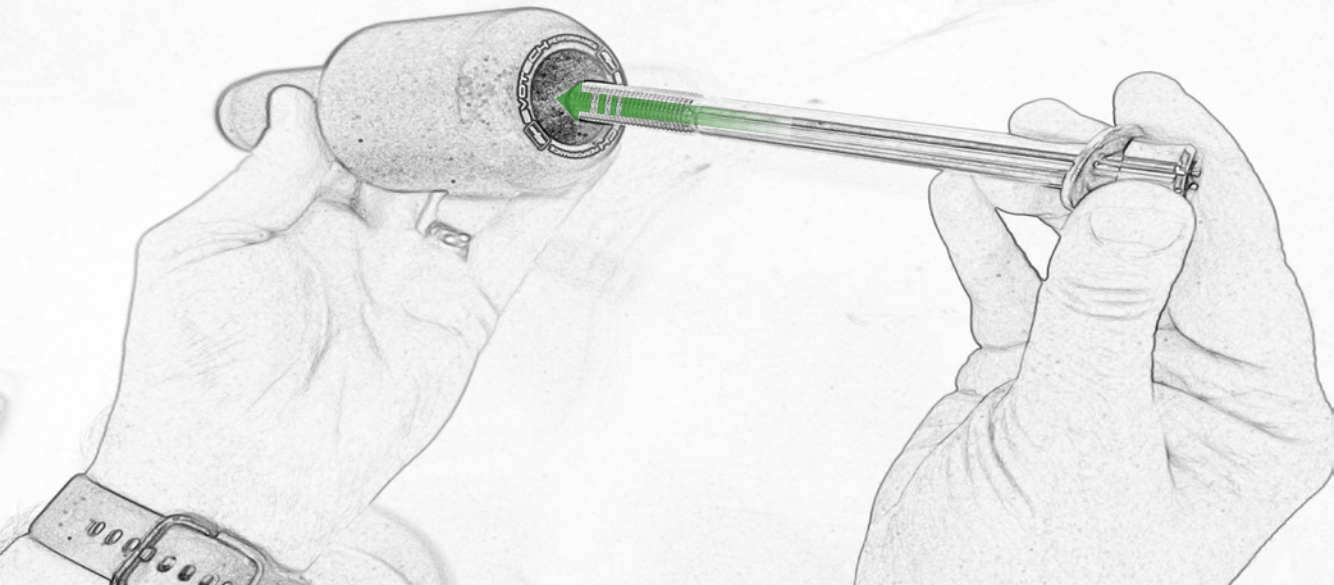

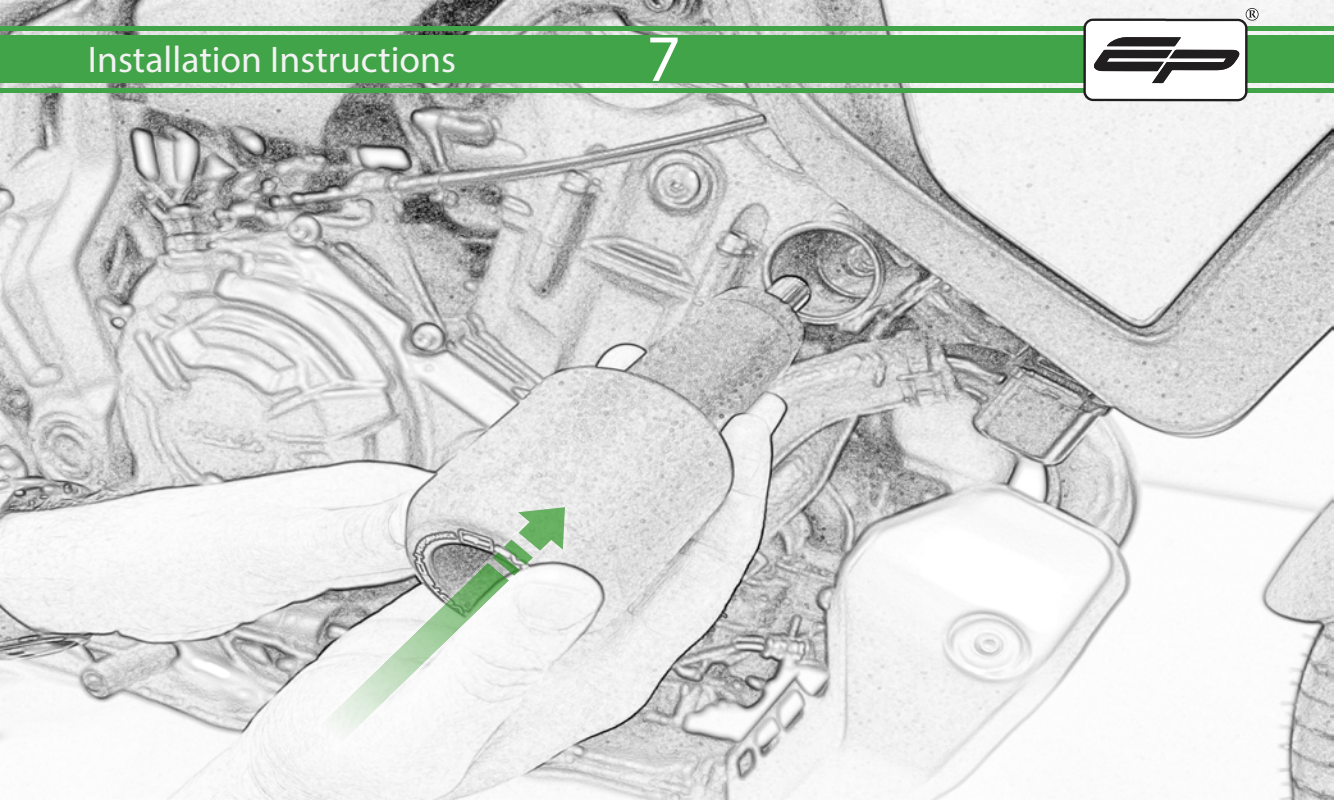




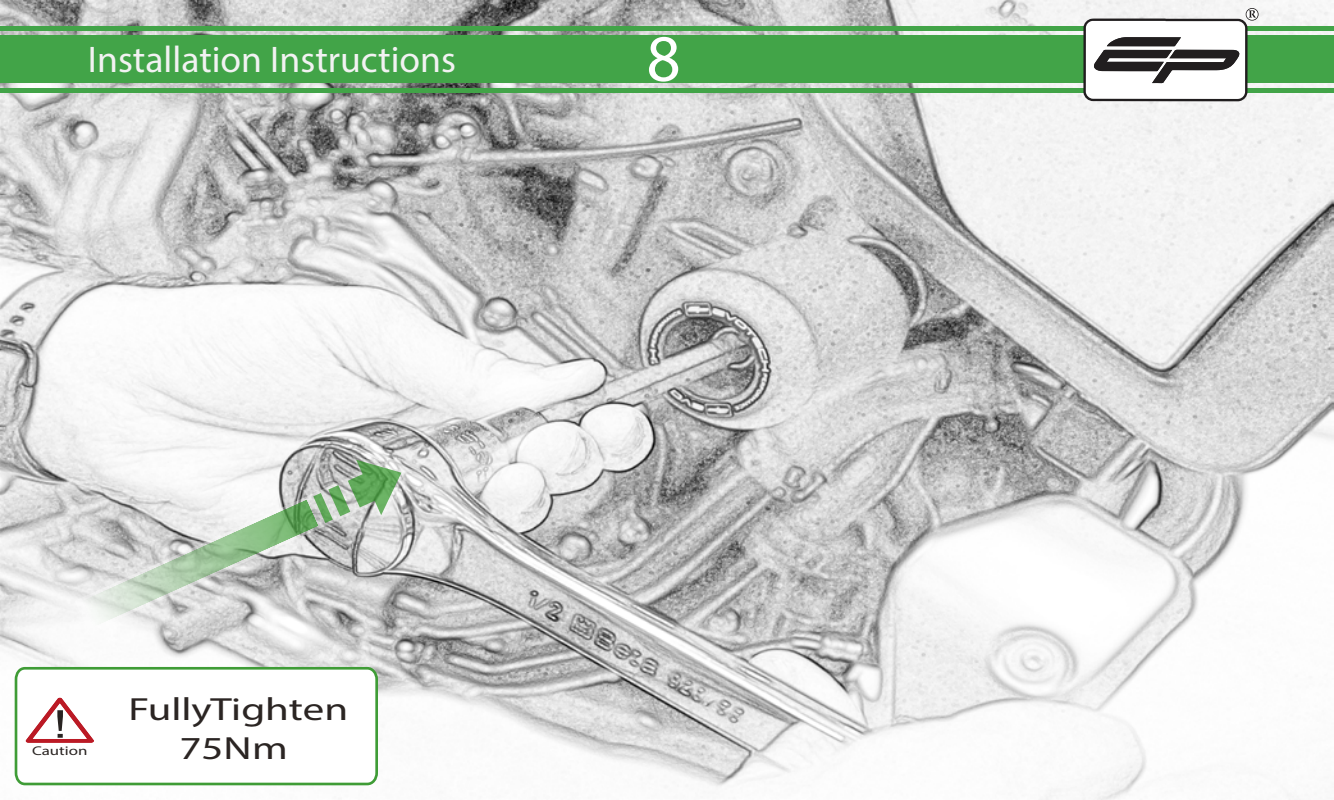

Caution

FullyTighten  
75Nm

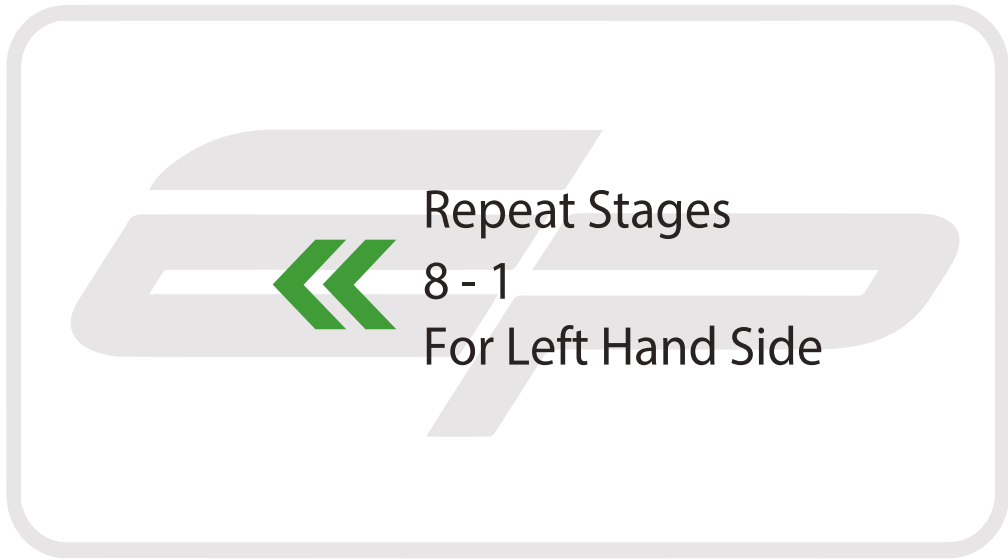



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced