







Kit Contents PRN015749


- (A) 1 x Cable Tie
- (B) 1 x Rubber Pad
- (C) 1 x Retro Light
- (D) 1 x Connector No.5
- (E) 1 x Light Block
- (F) 2 x M4 x 10 Button Head Bolts
- (G) 2 x M6 x 20 Button Head Bolts
- (H) 2 x M6 x 25 Button Head Bolts
- (I) 2 x M4 Flange Nut
- (J) 4 x M6 Flange Nut

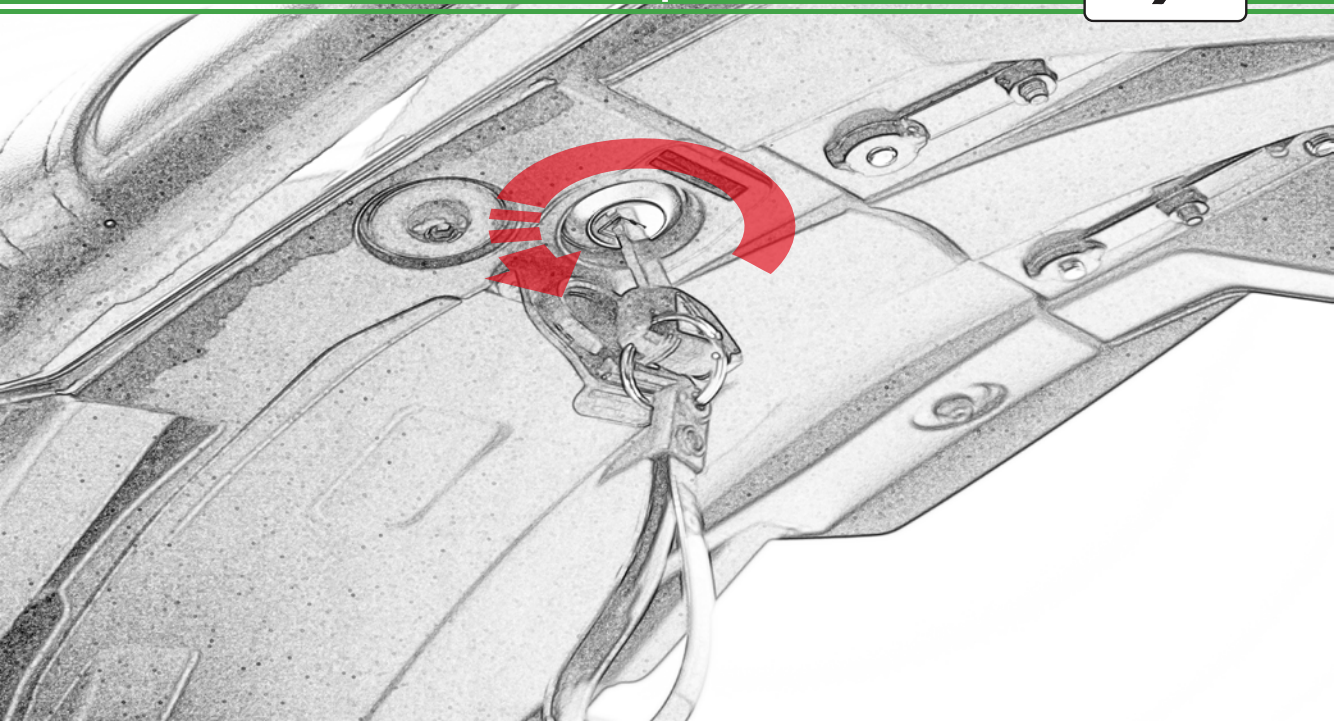



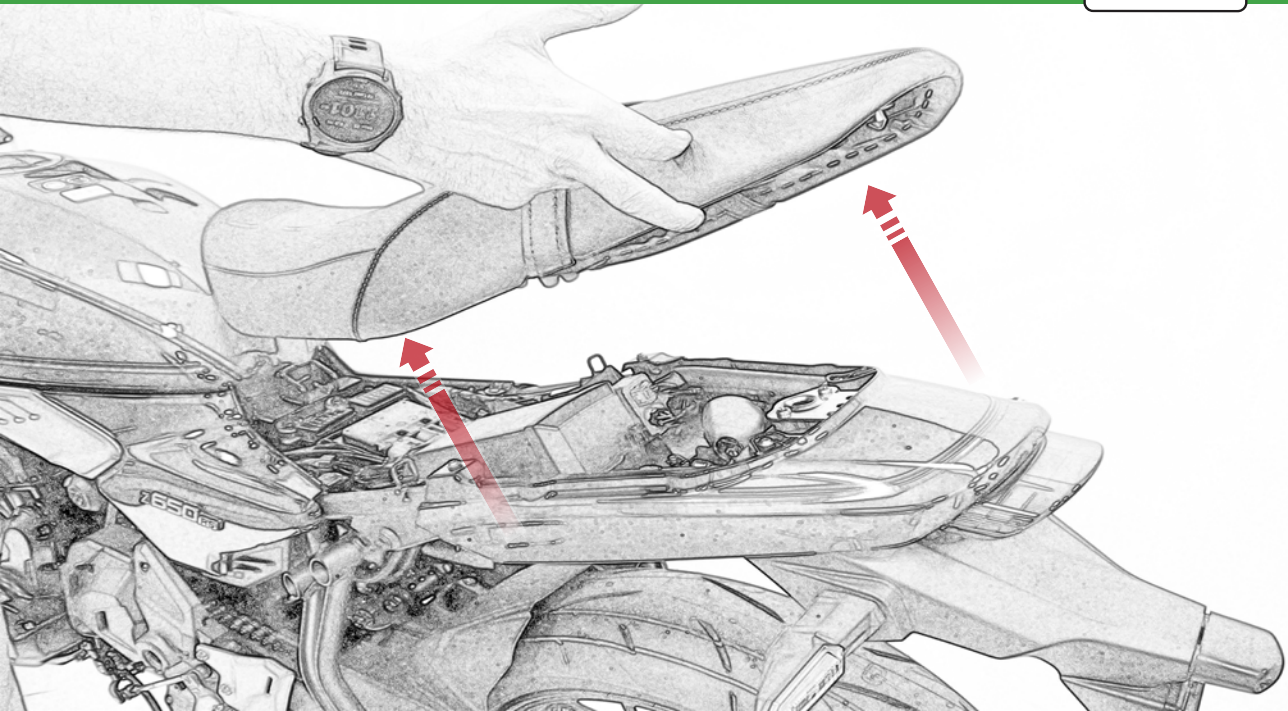


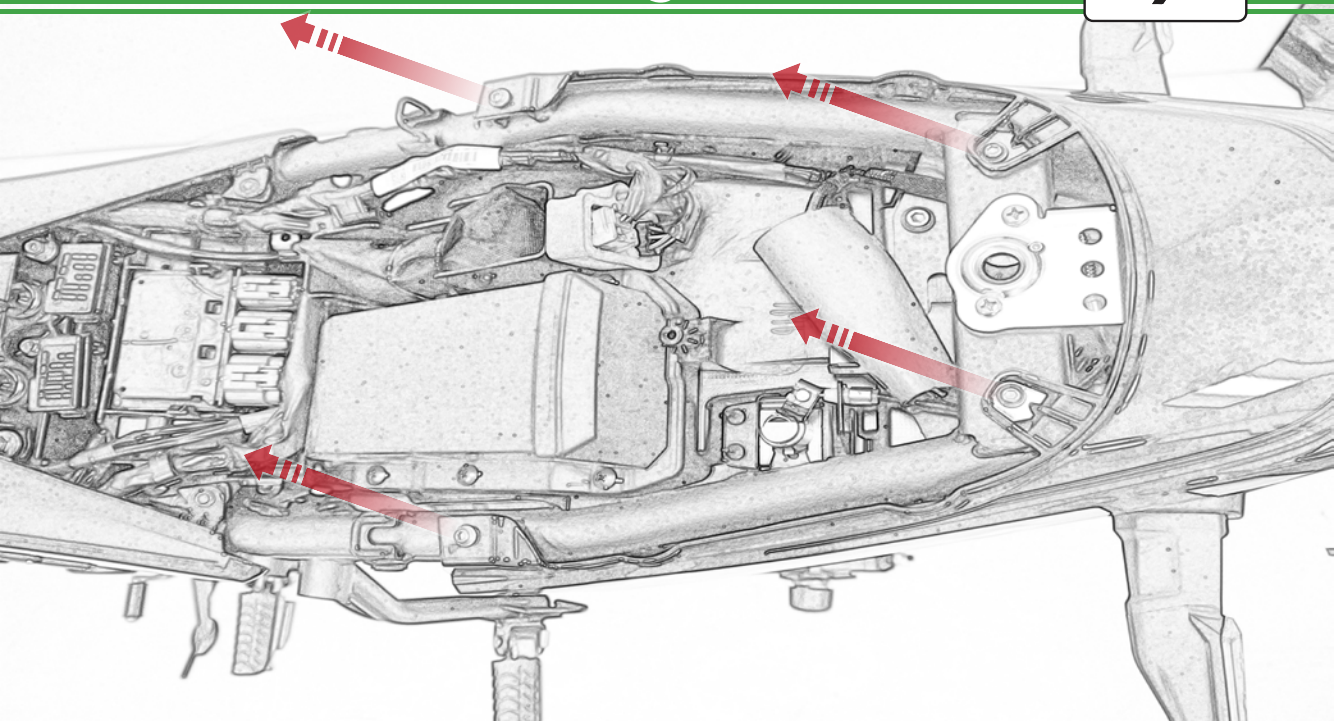


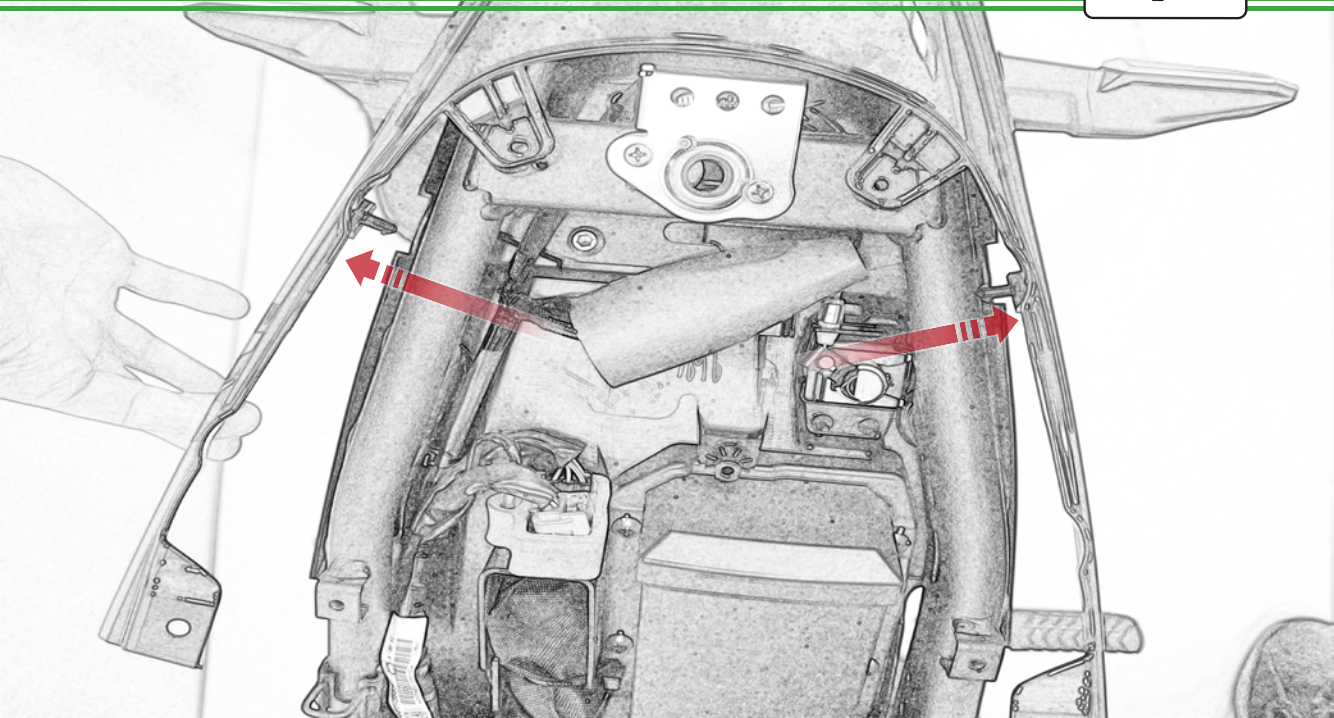

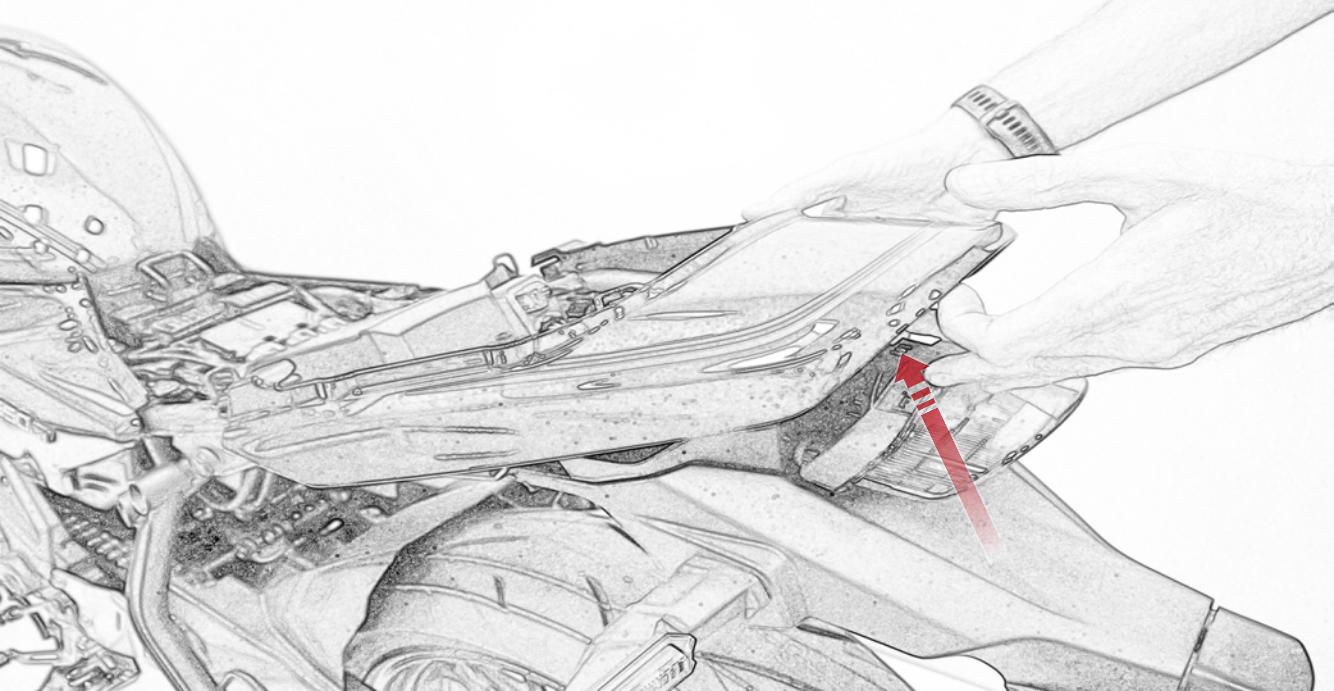


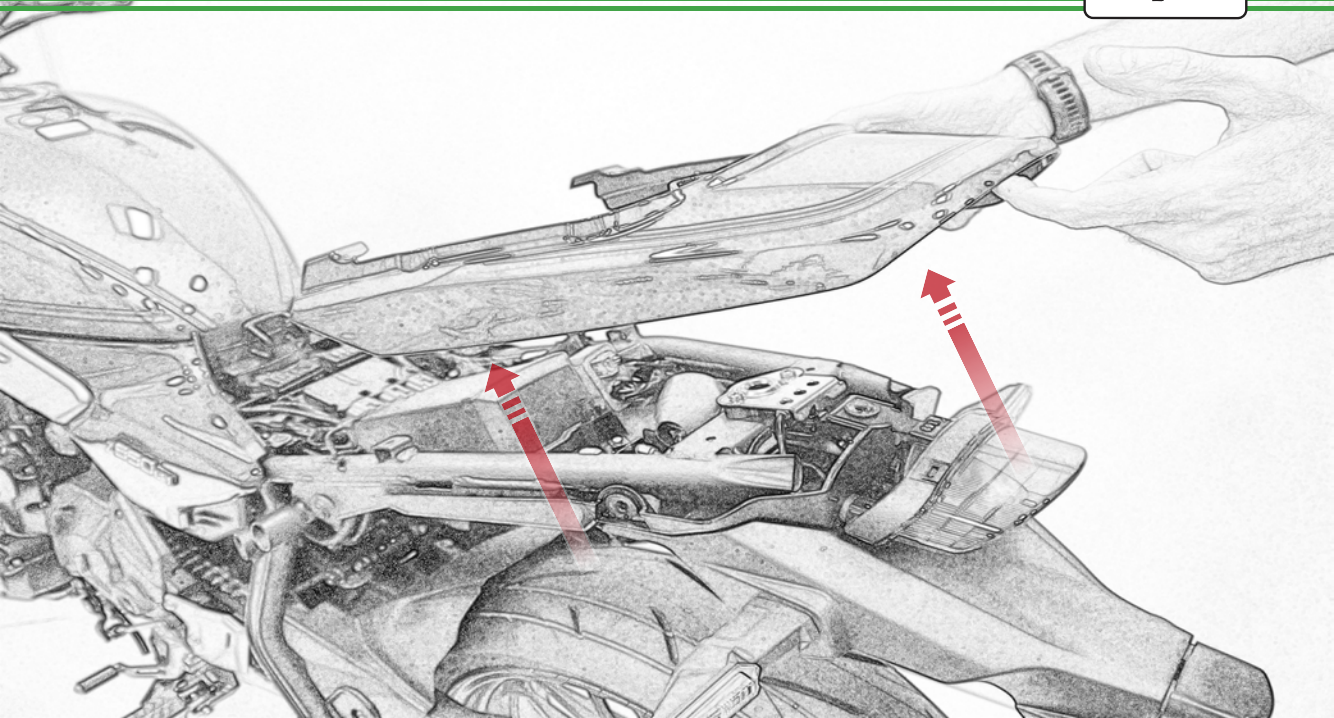


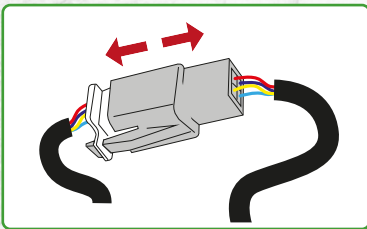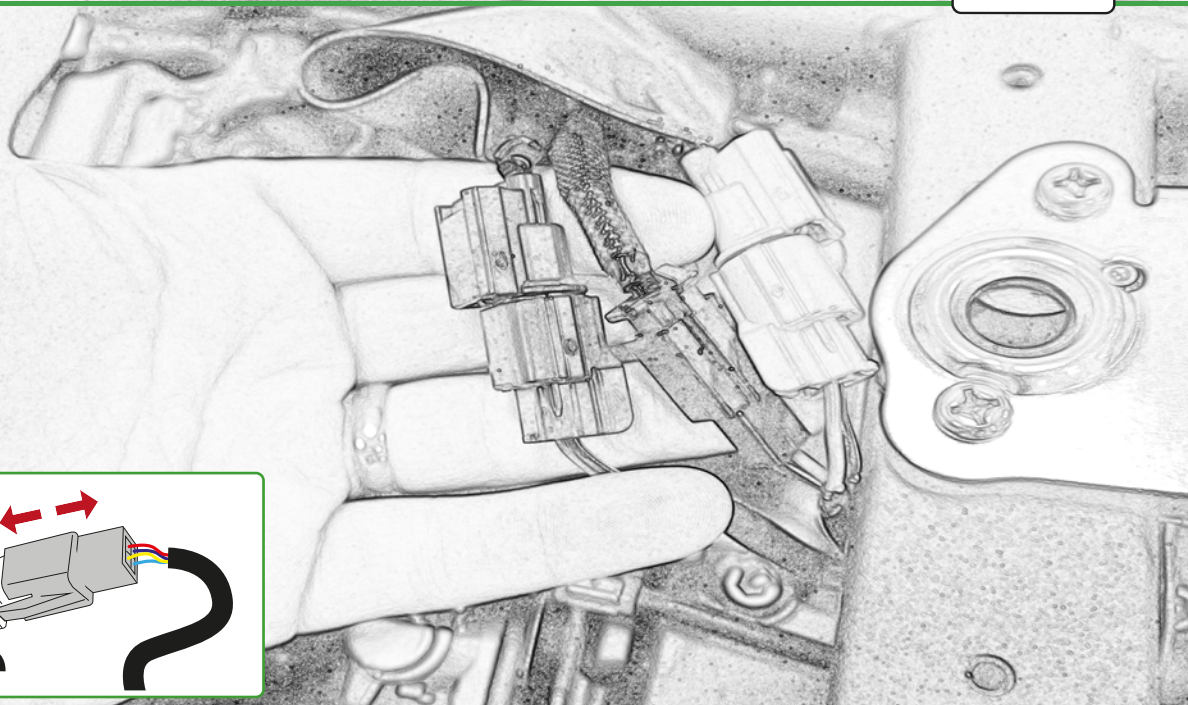


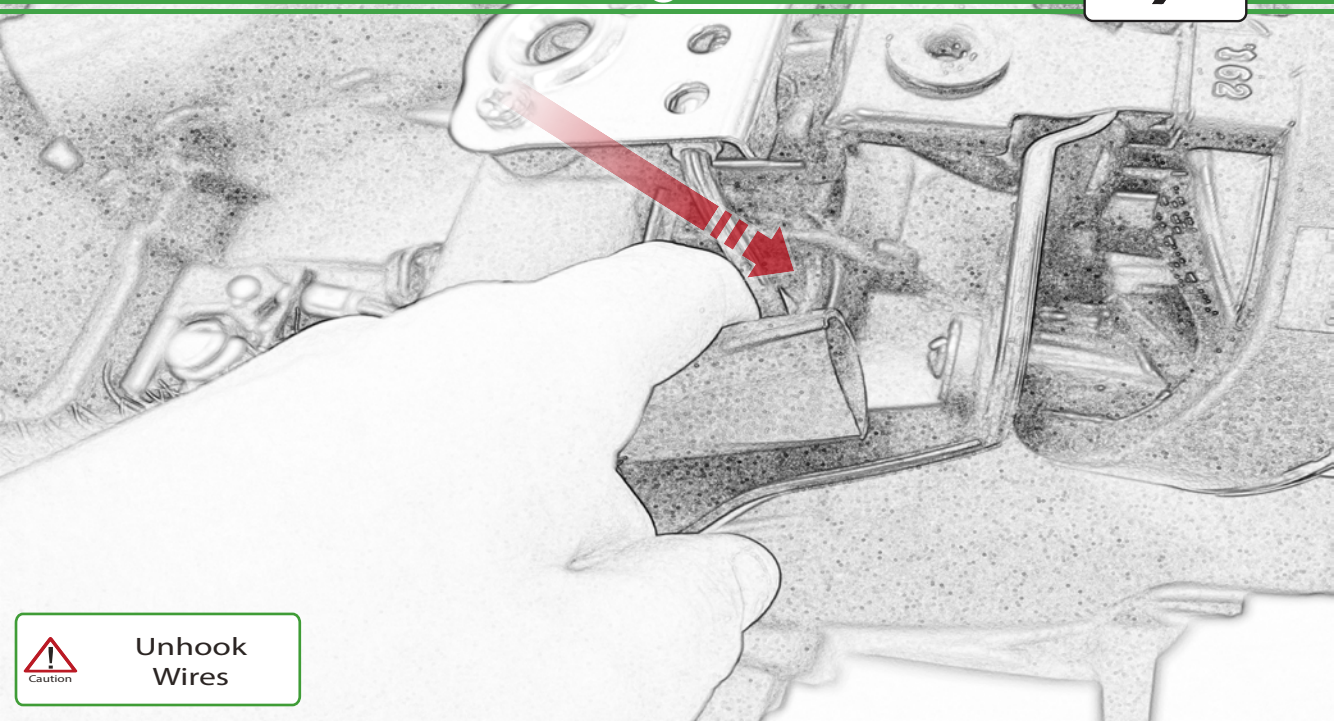



Unhook
Wires

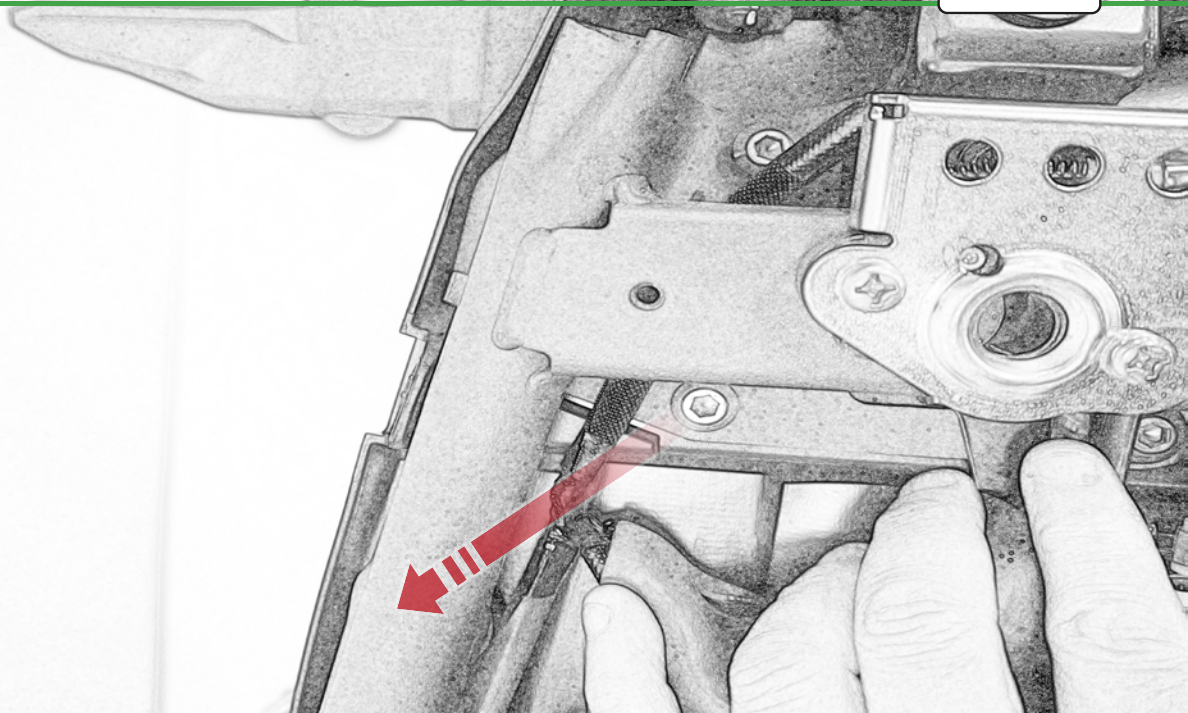


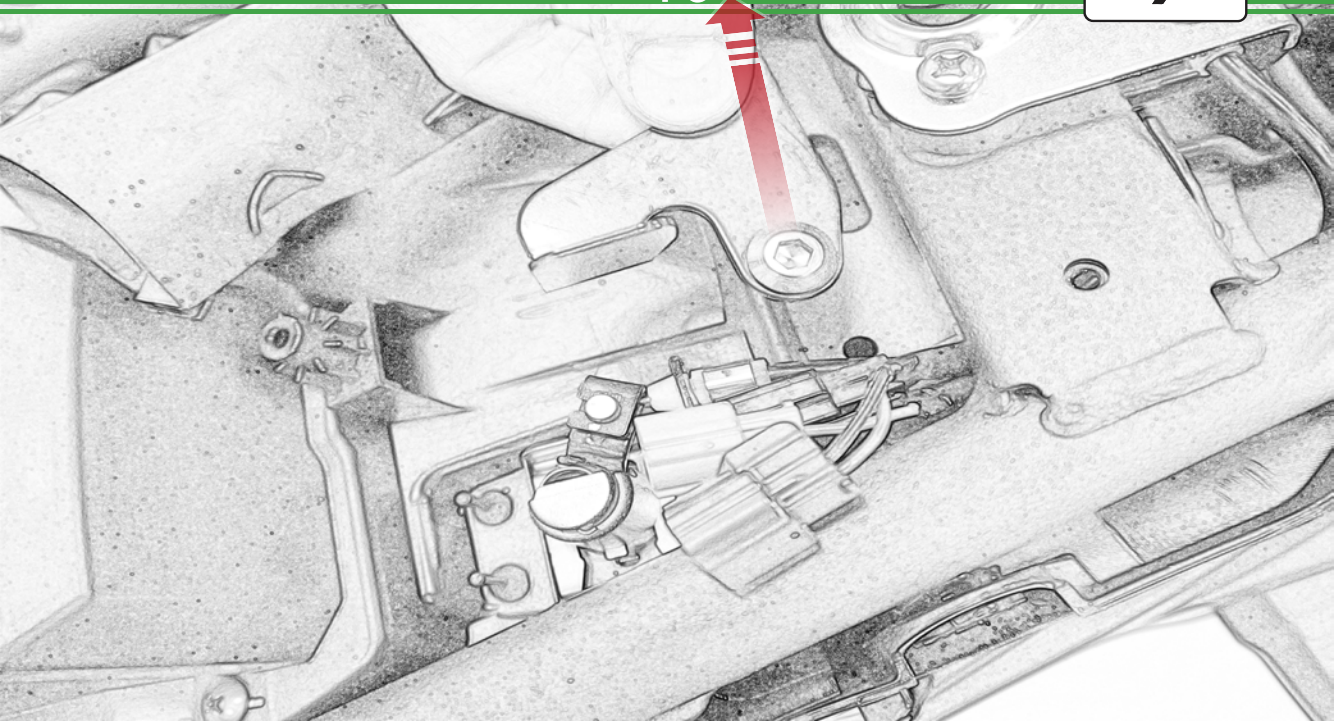


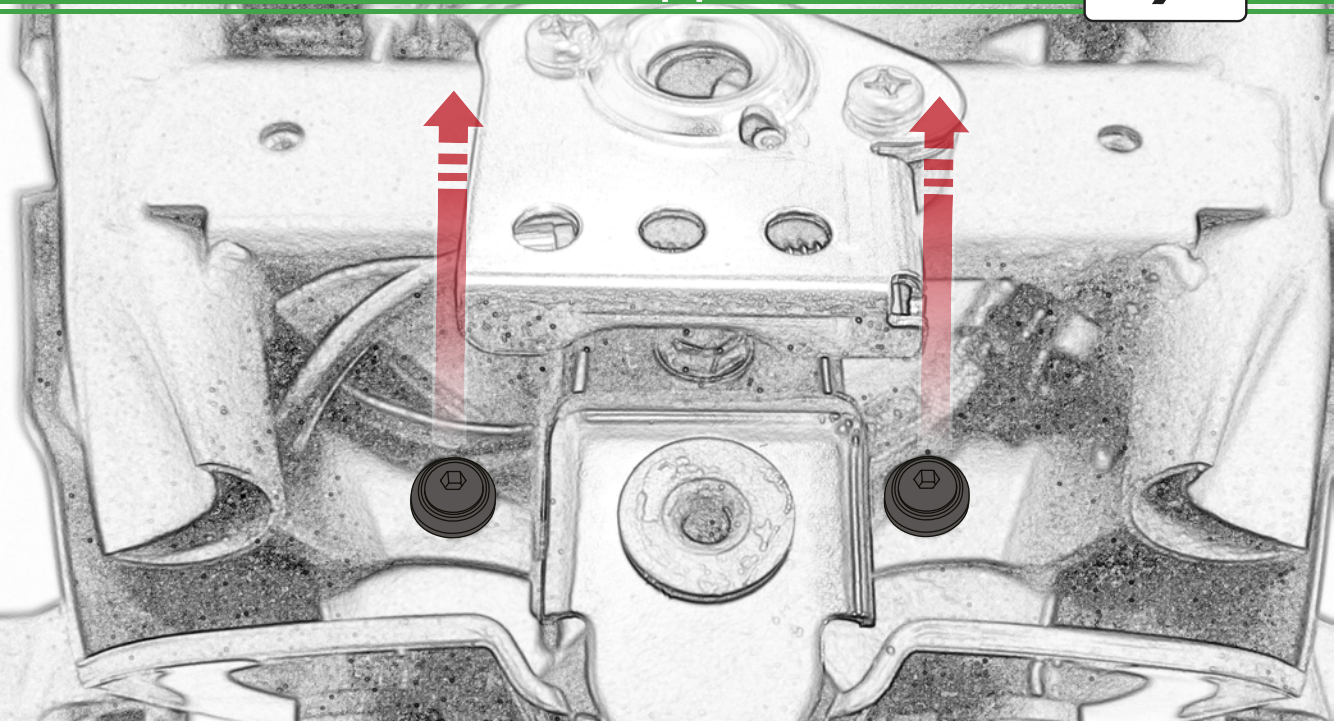


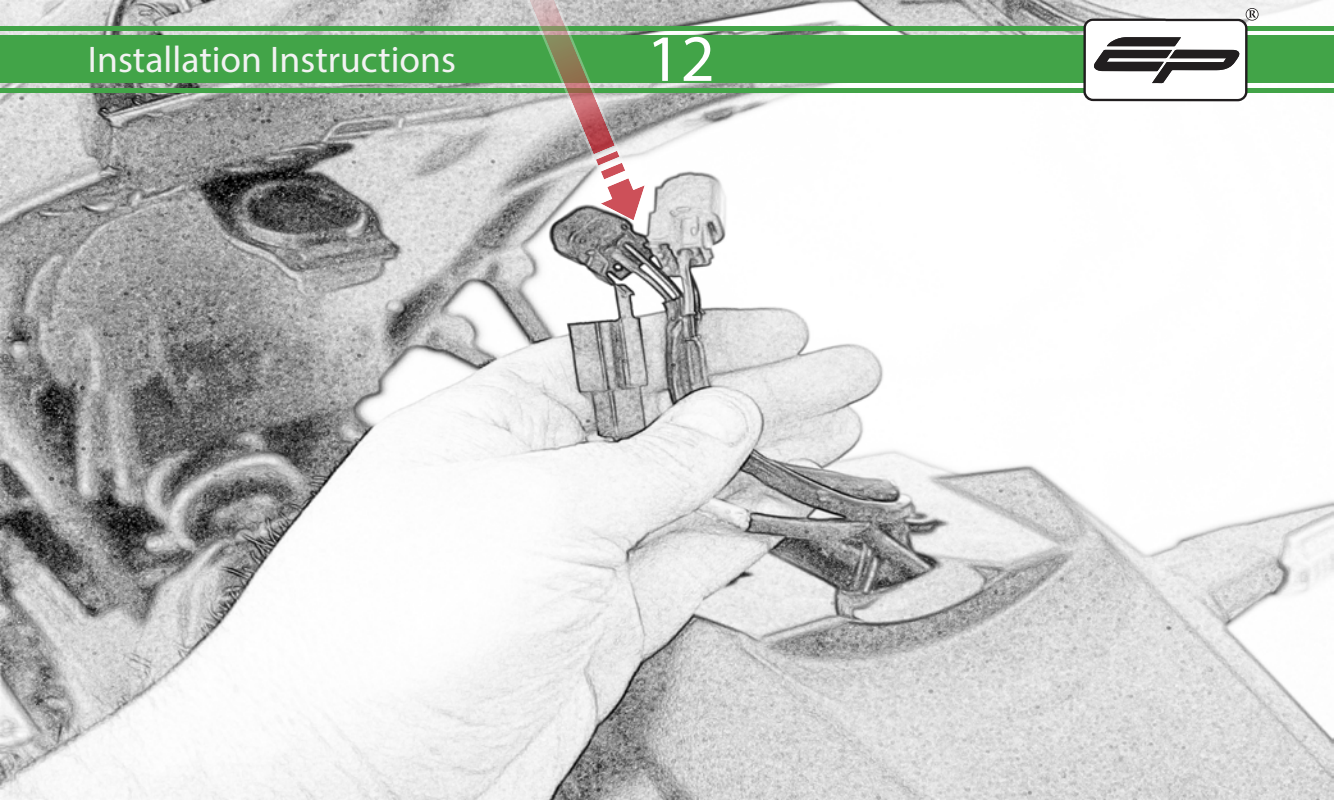

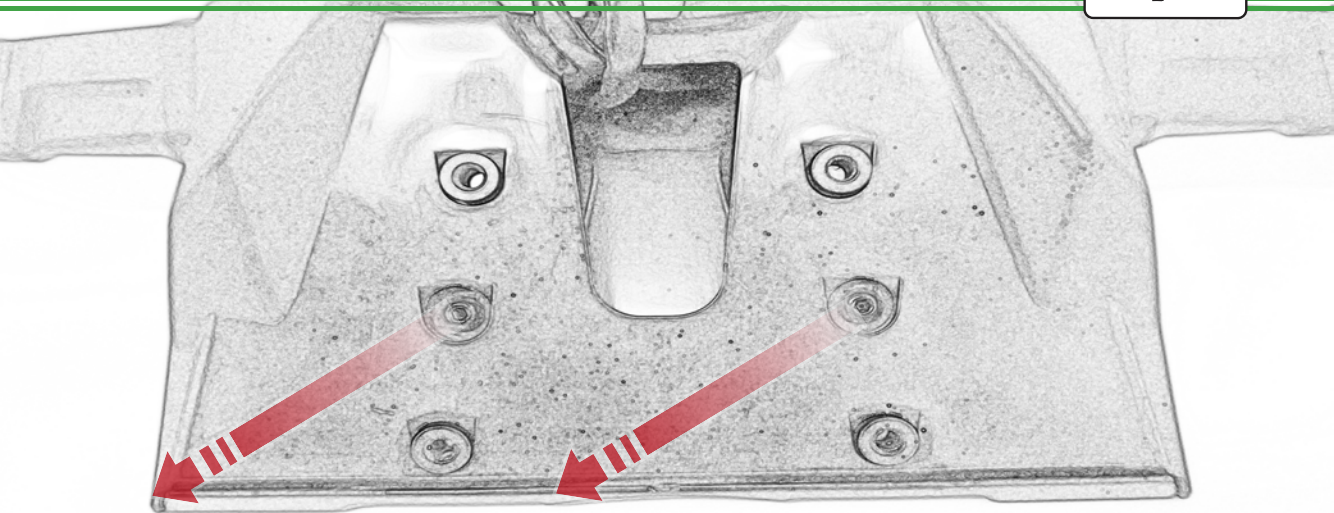


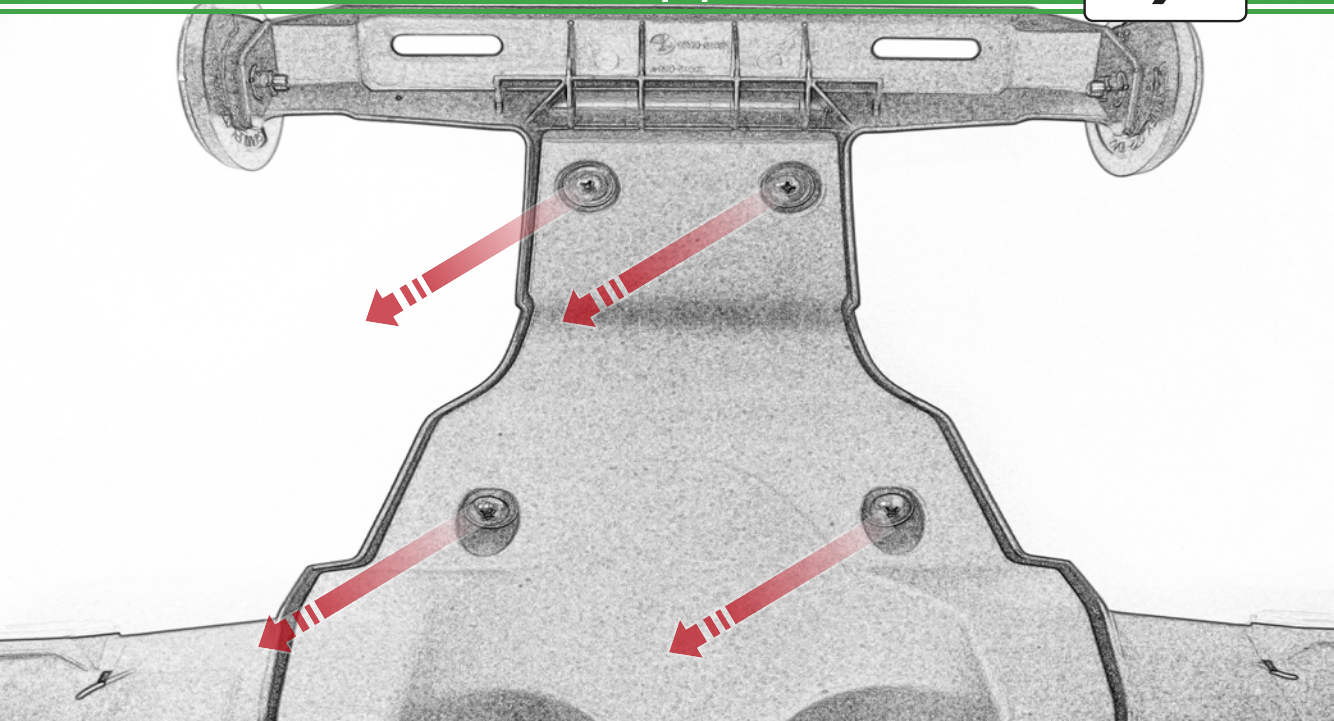

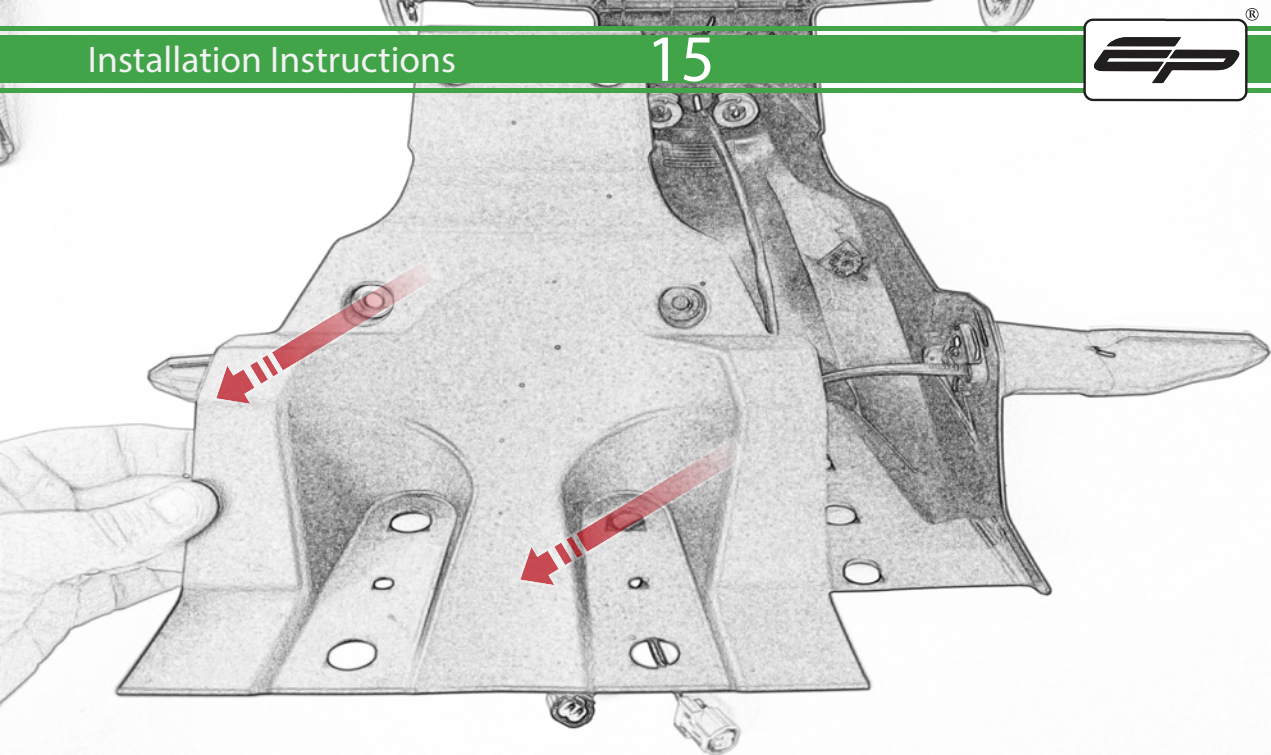


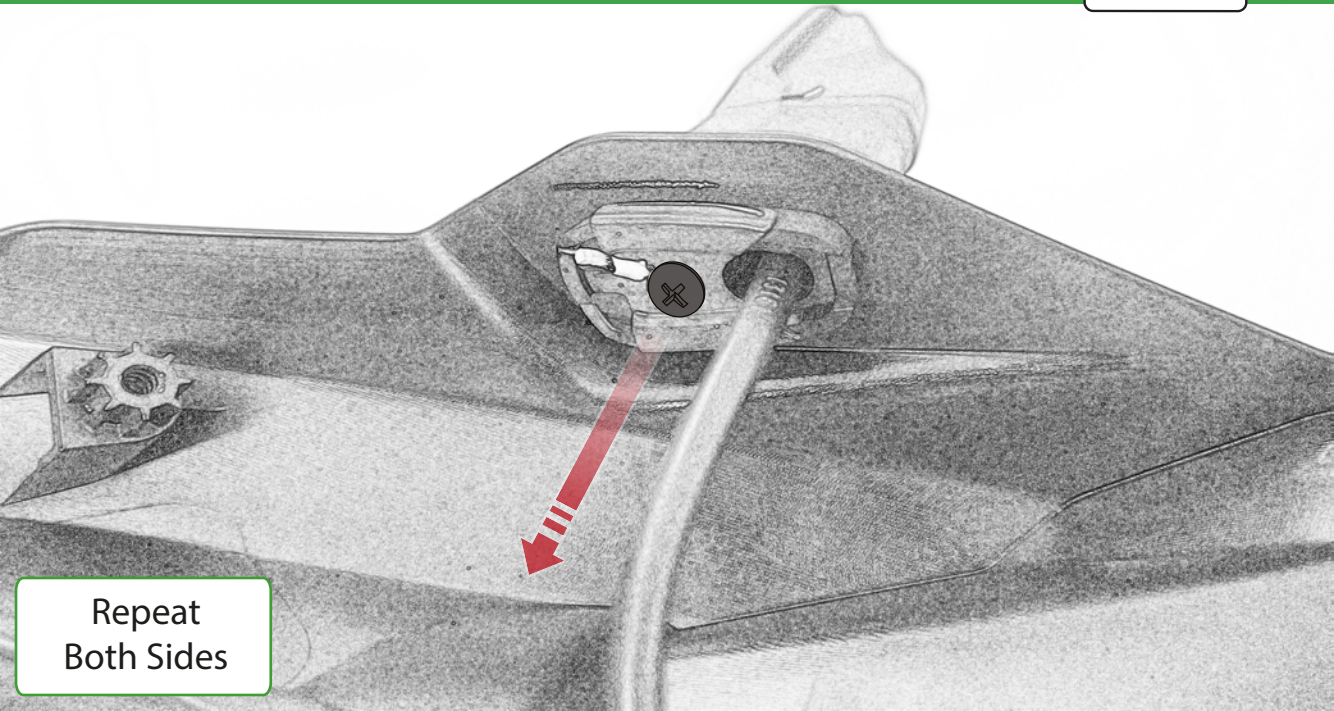


Repeat
Both Sides

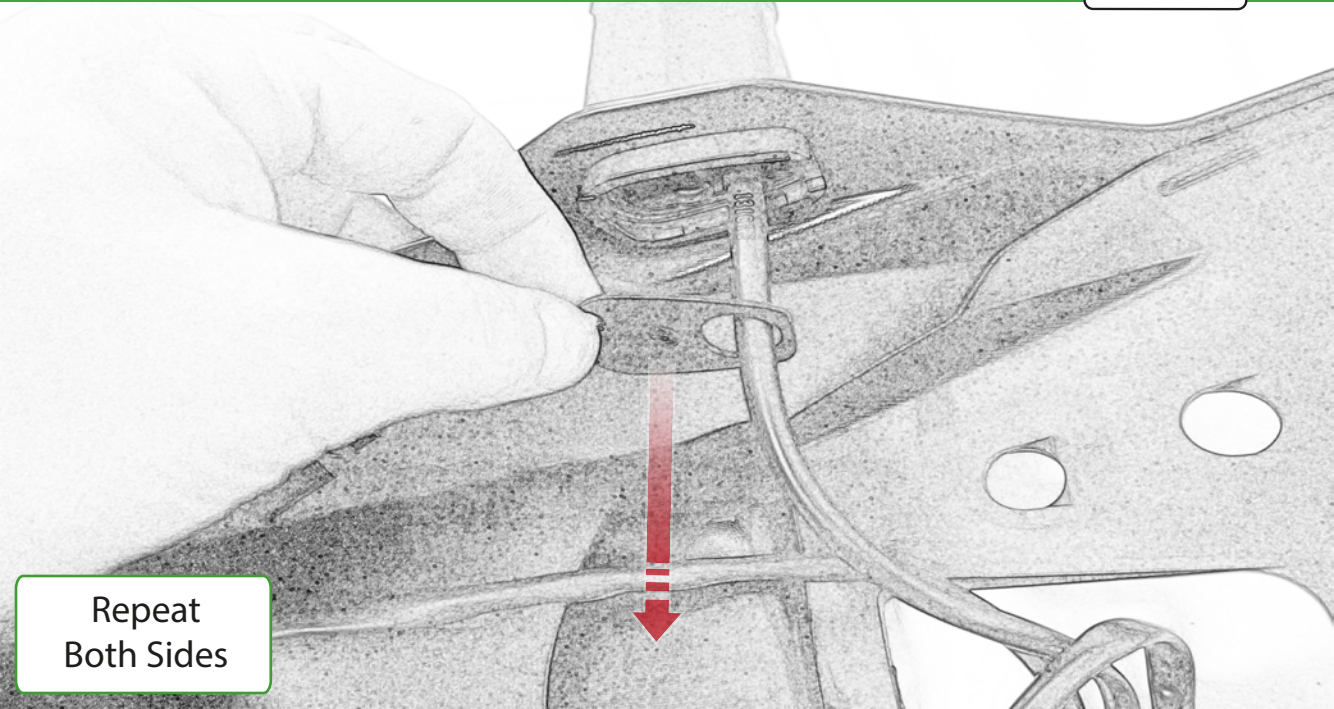


Repeat
Both Sides

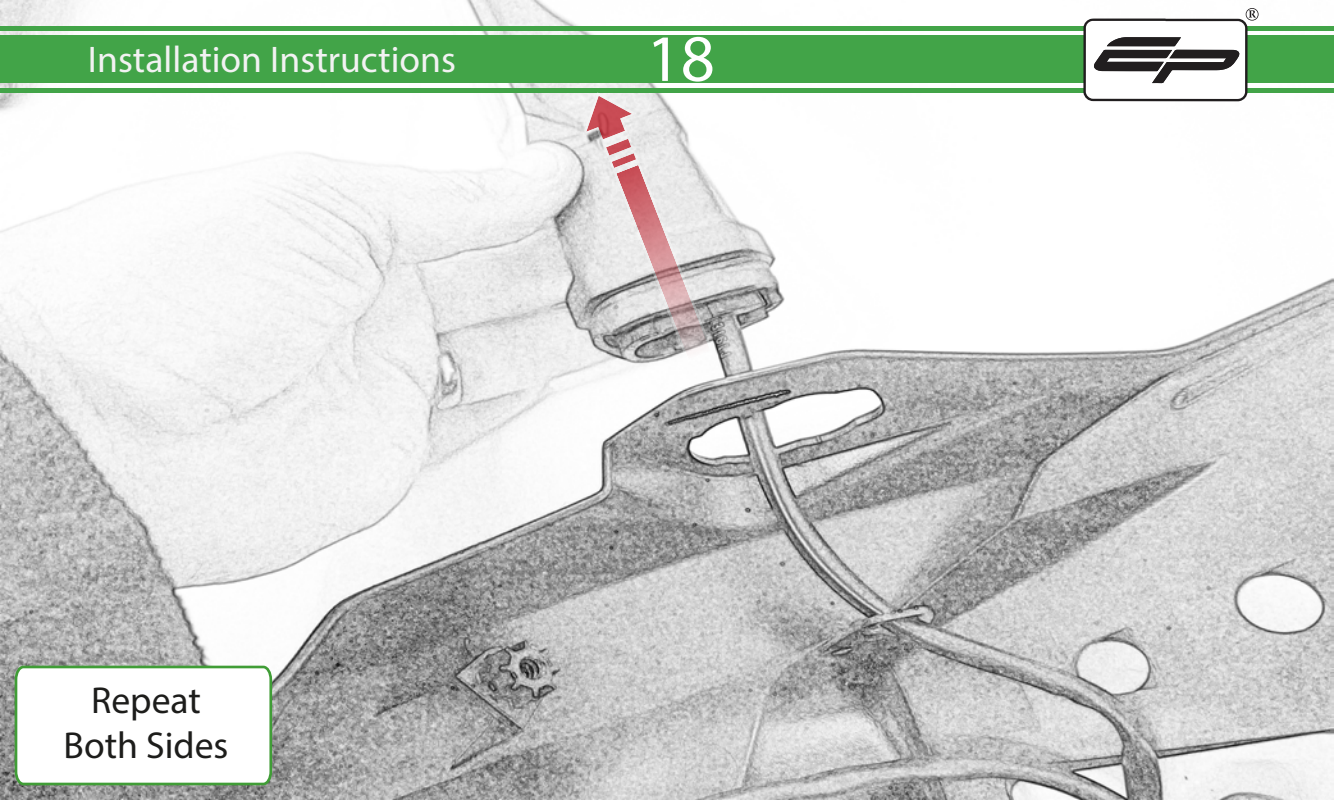



Repeat
Both Sides

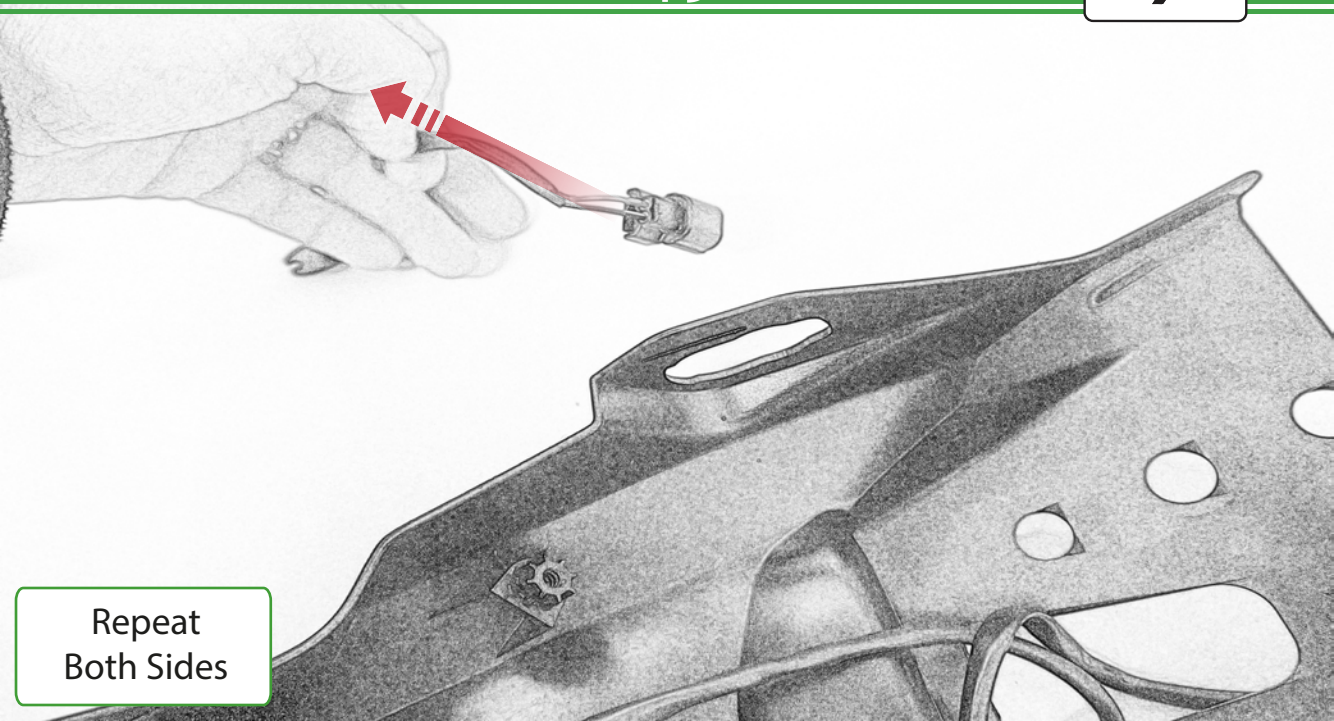



Repeat
Both Sides

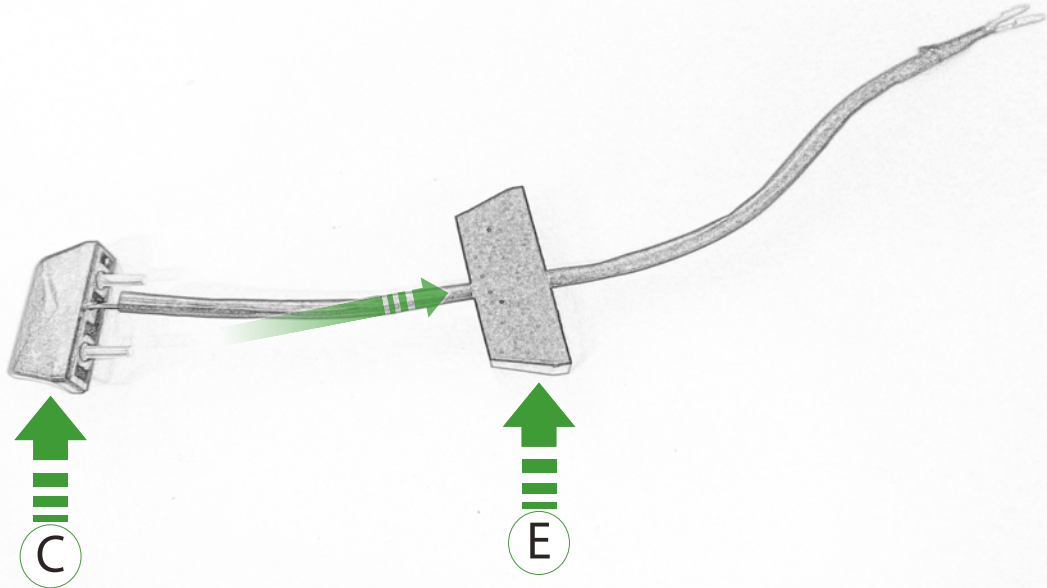


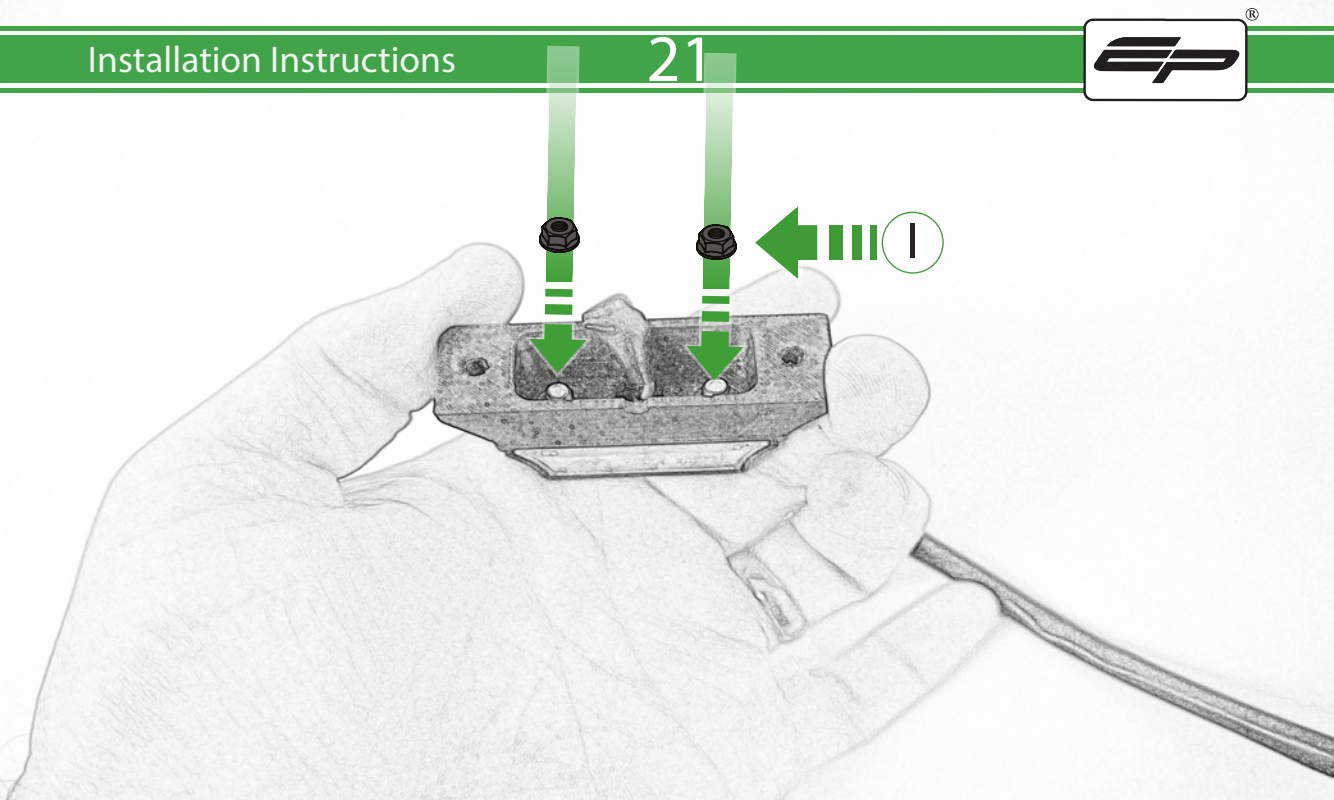

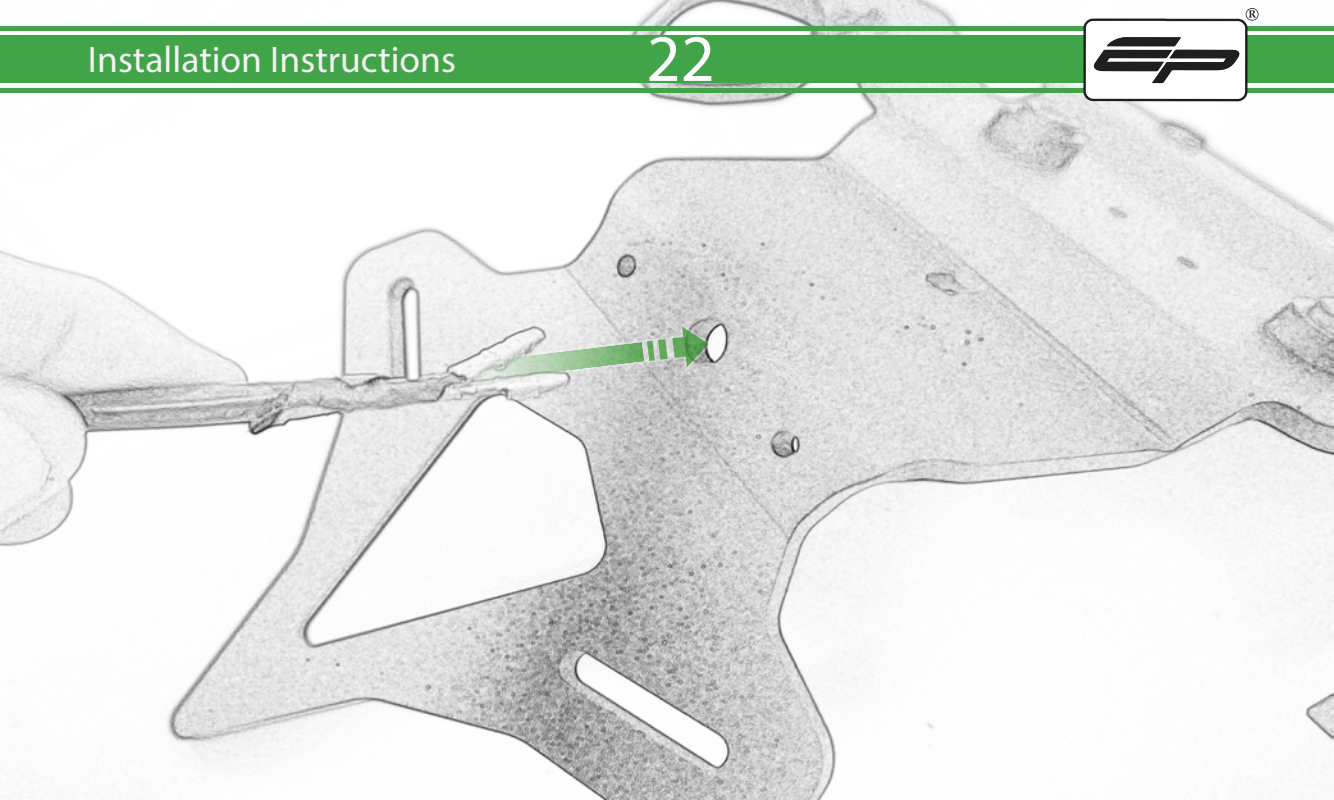


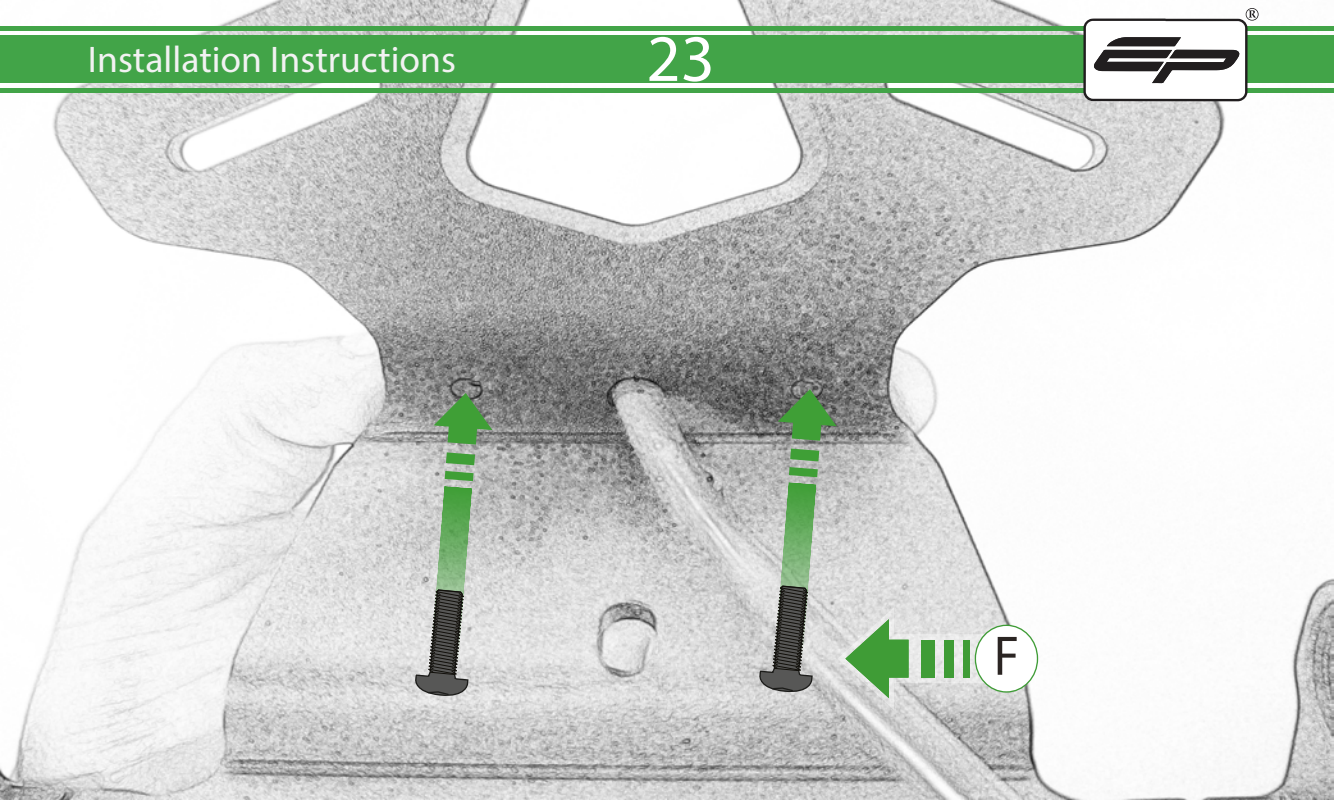

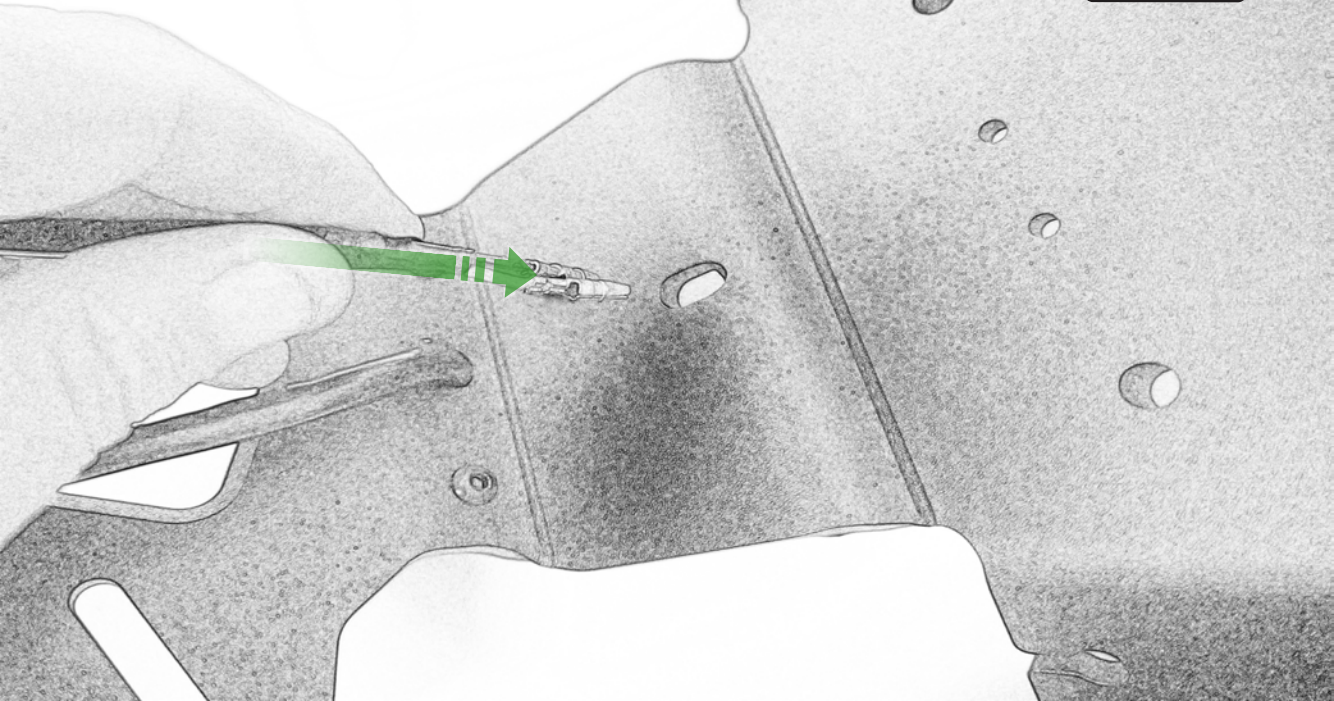


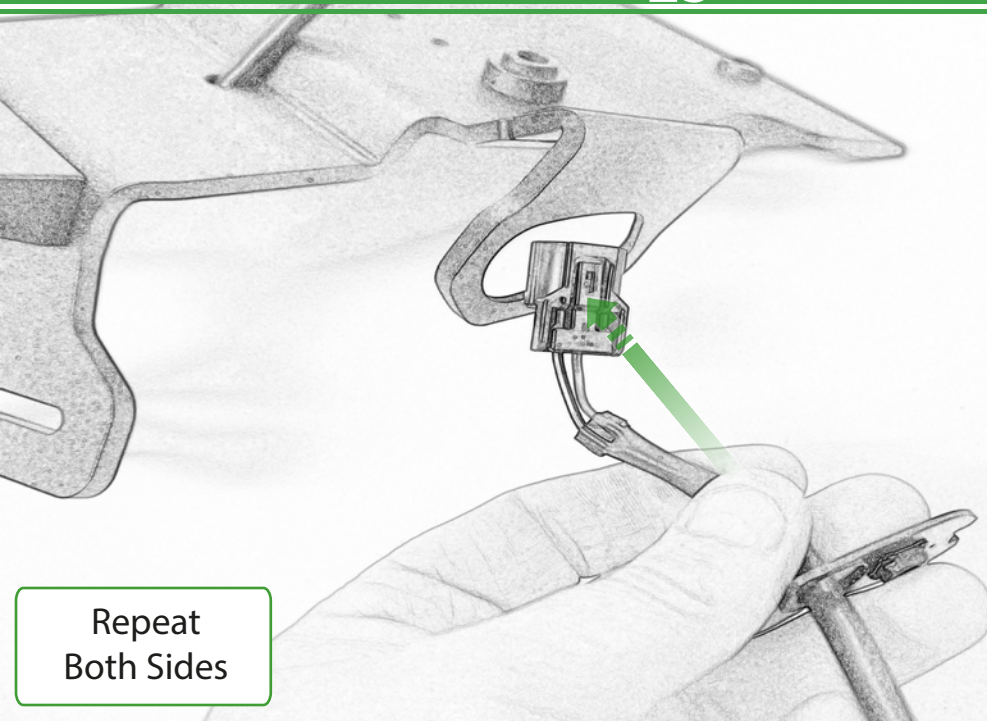

Repeat
Both Sides

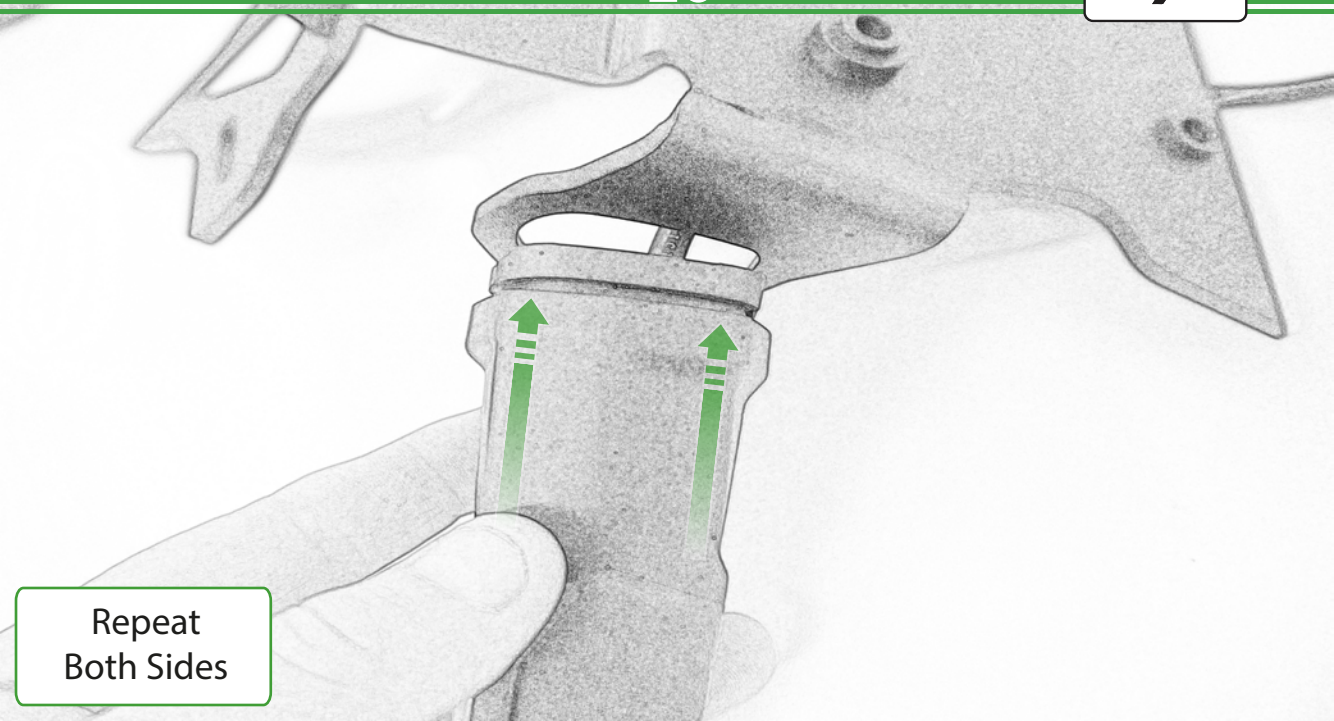


Repeat
Both Sides

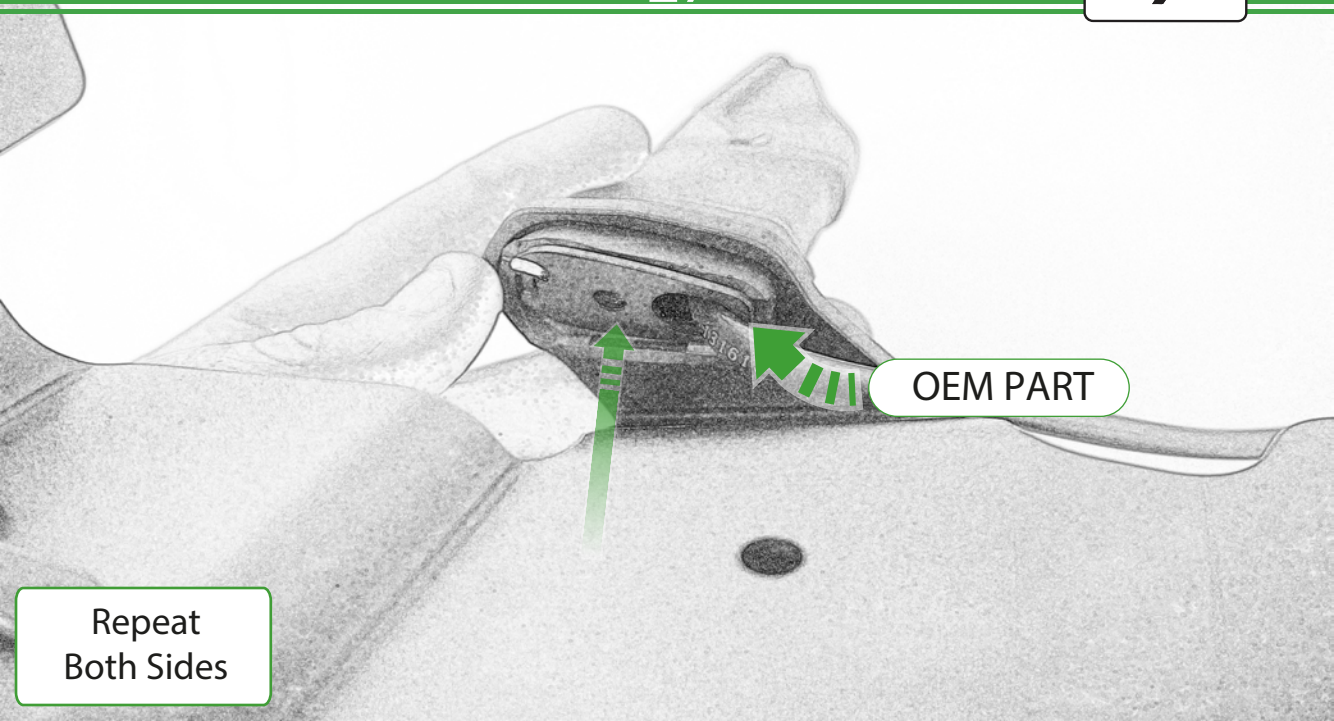


OEM PART

Repeat
Both Sides

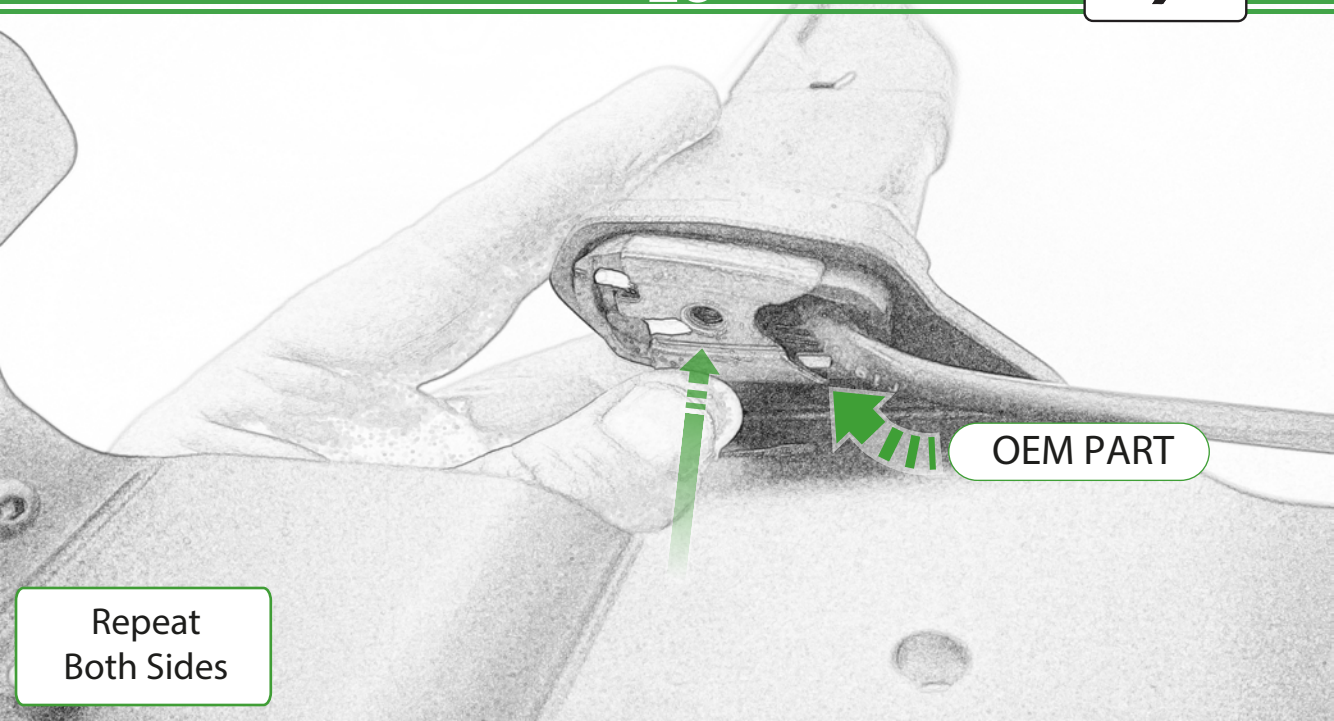


OEM PART


Repeat
Both Sides

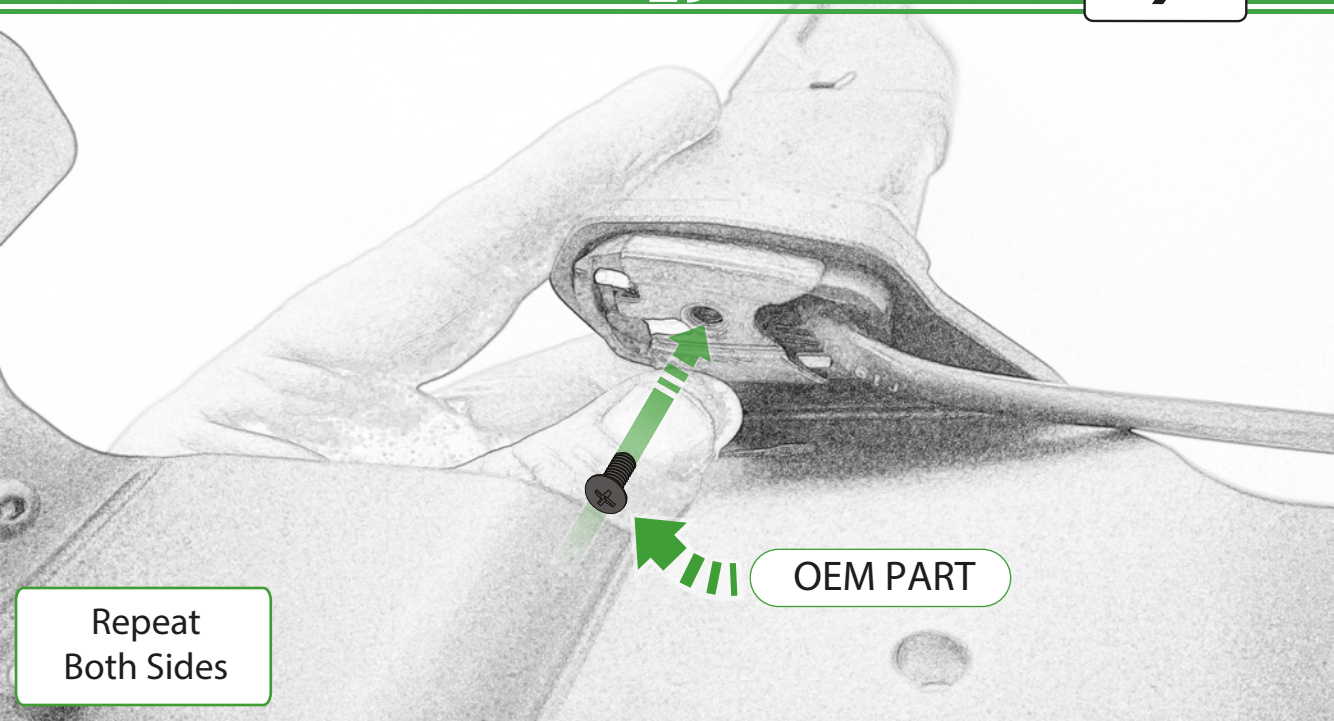

OEM PART

Repeat
Both Sides


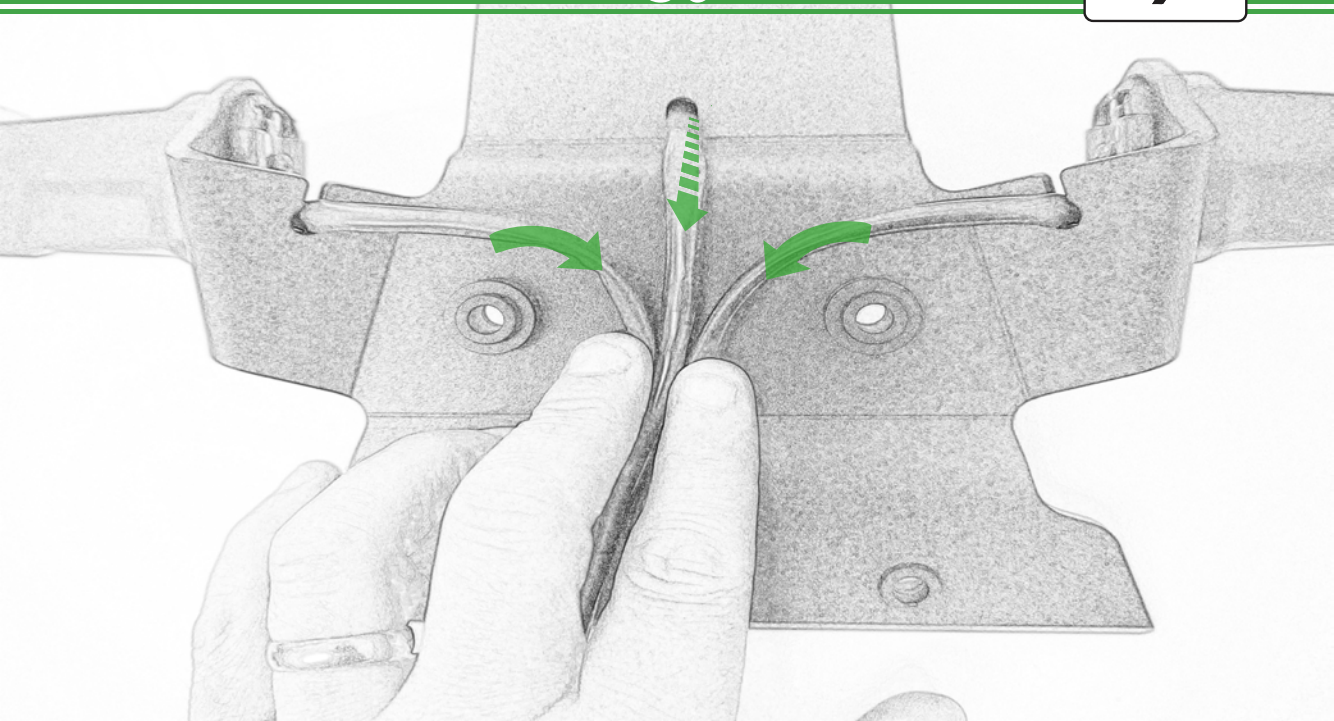


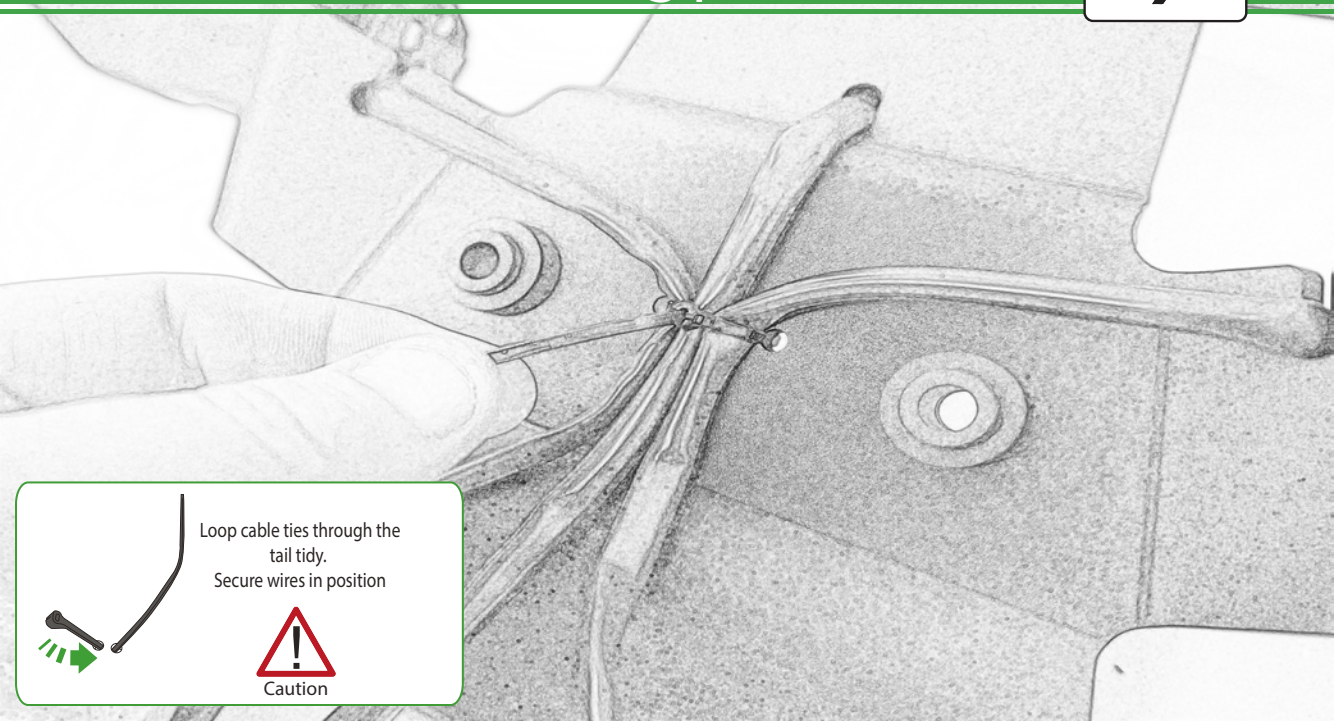


Loop cable ties through the
tail tidy.
Secure wires in position





Caution

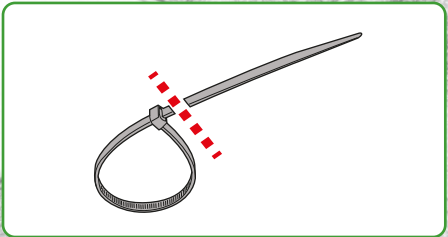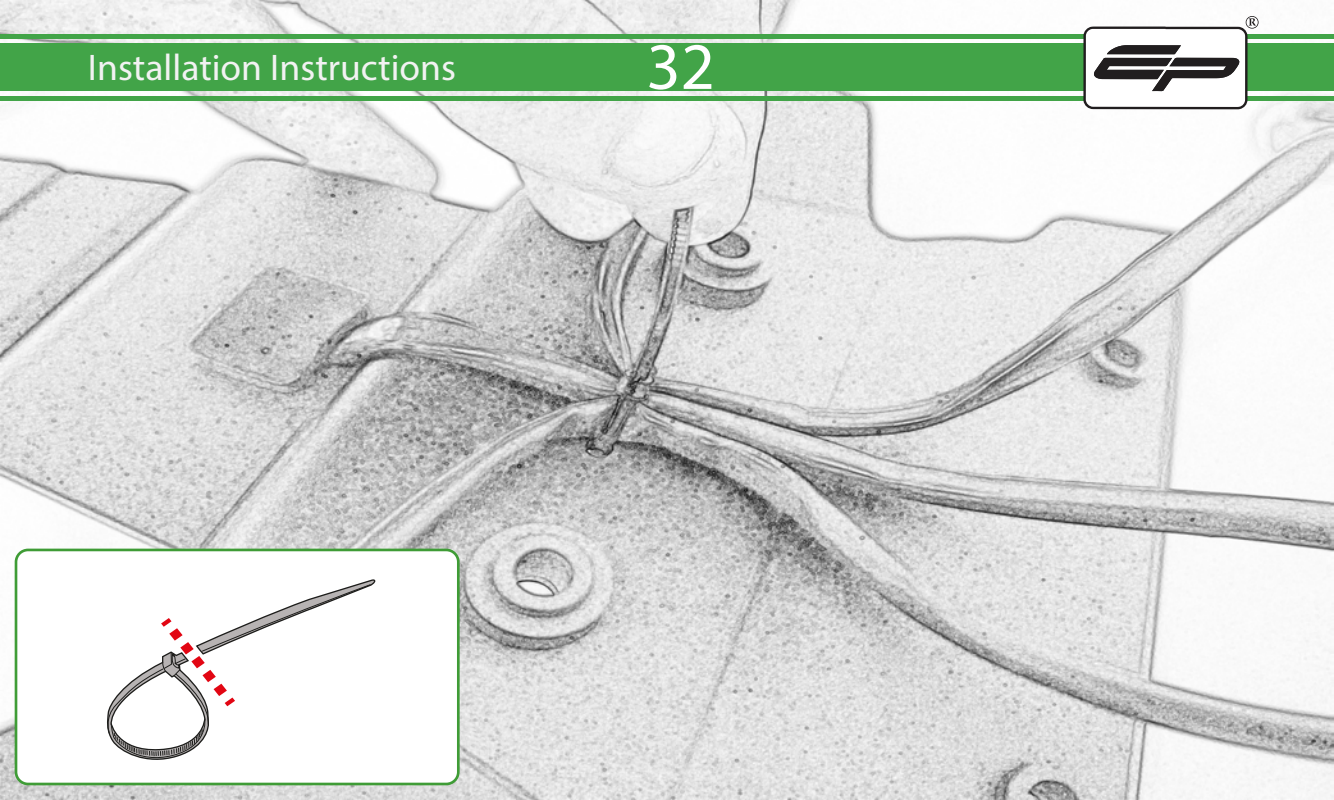


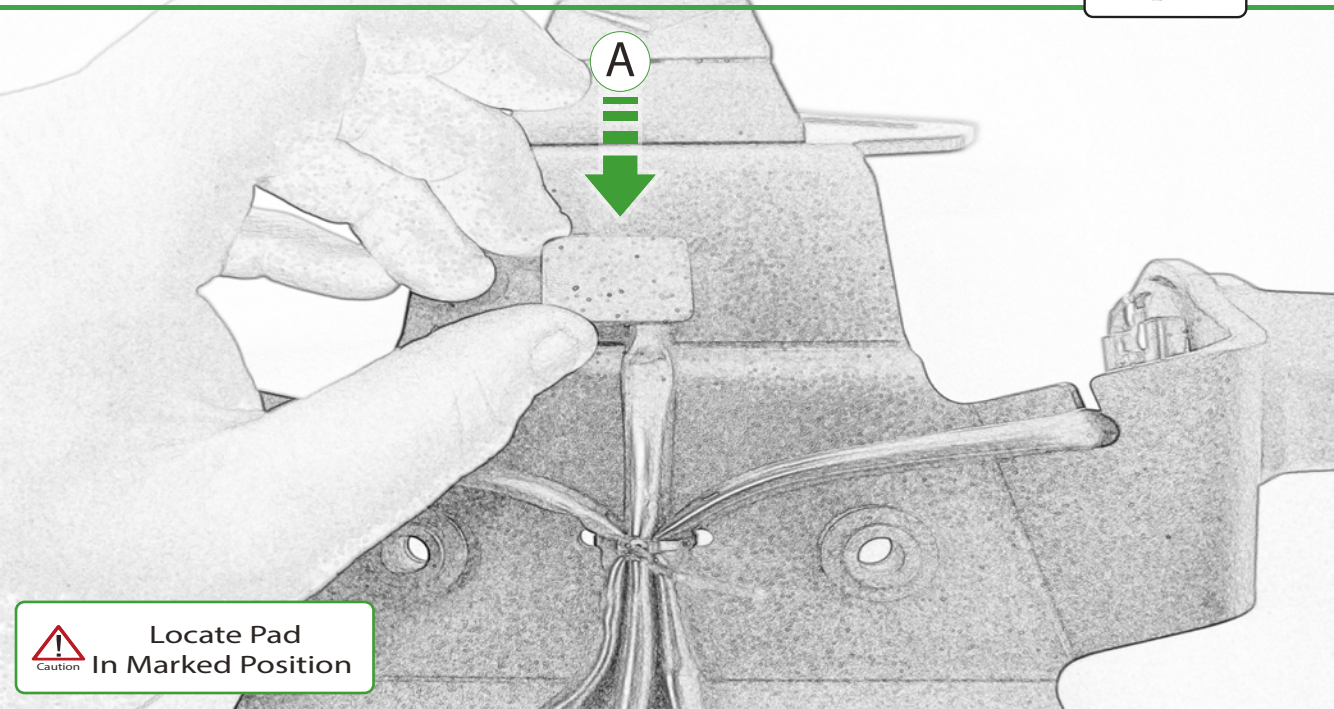


Caution


Locate Pad
In Marked Position

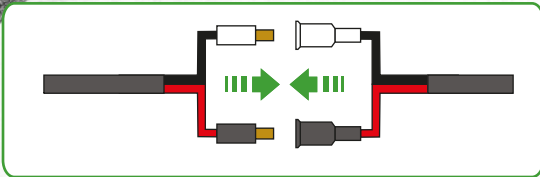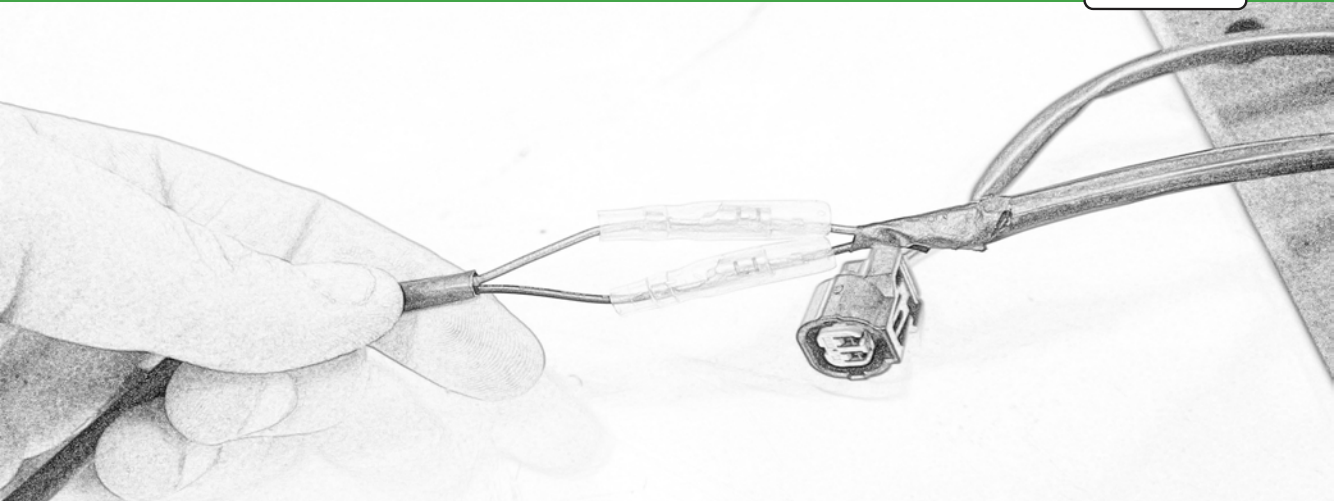


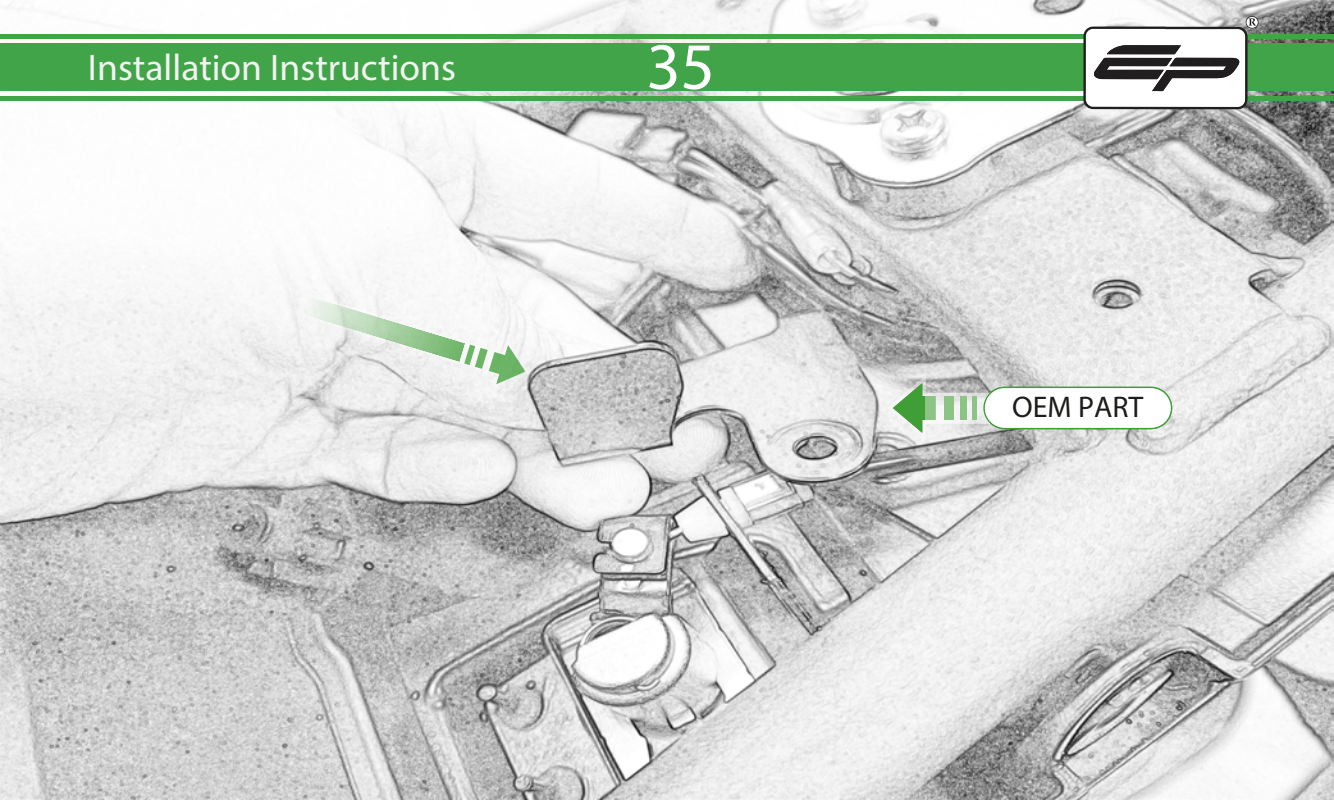



OEM PART

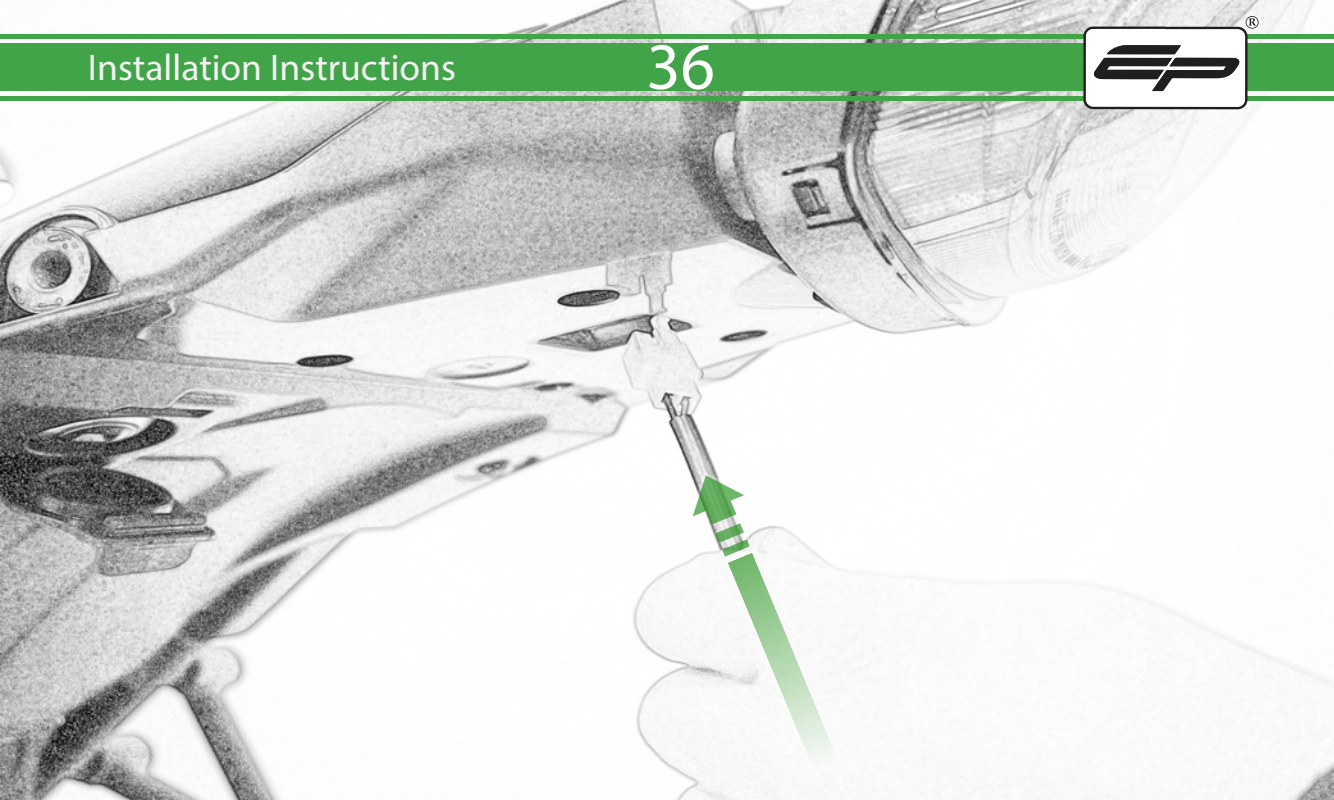


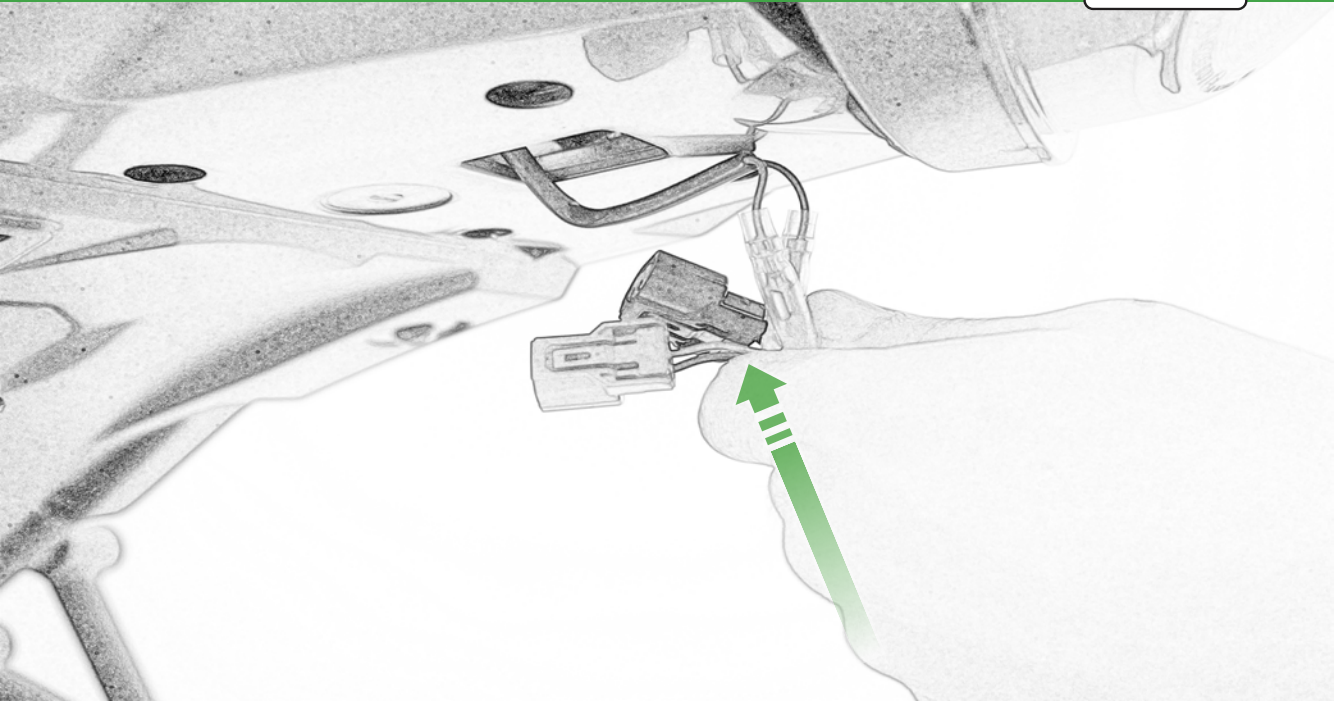



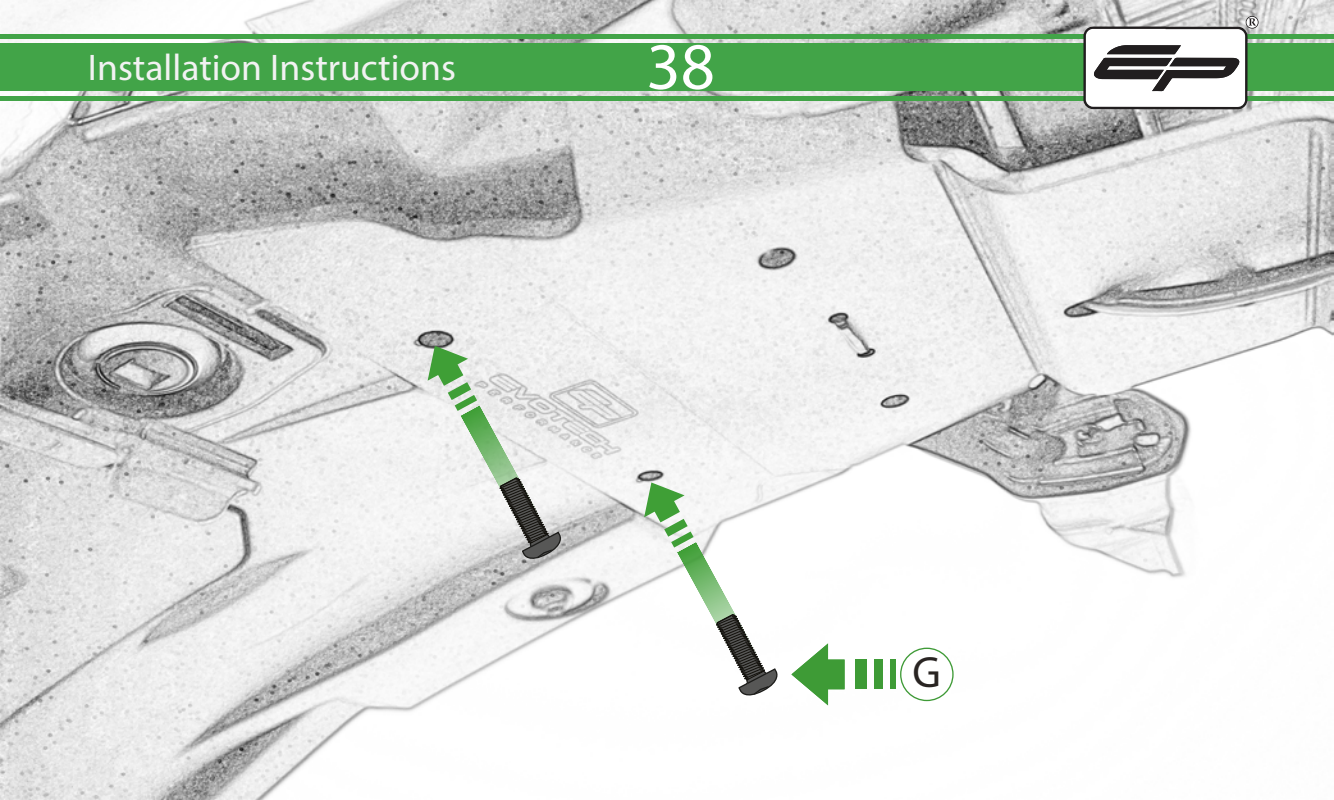


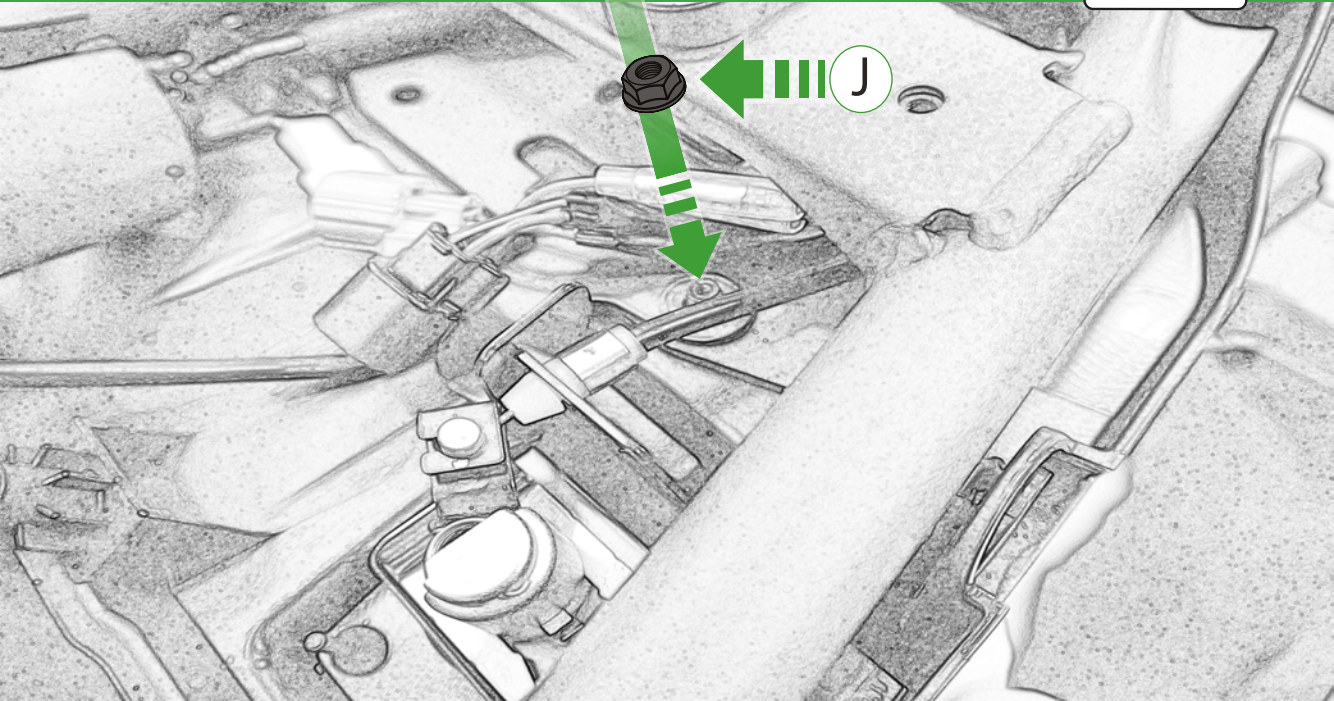


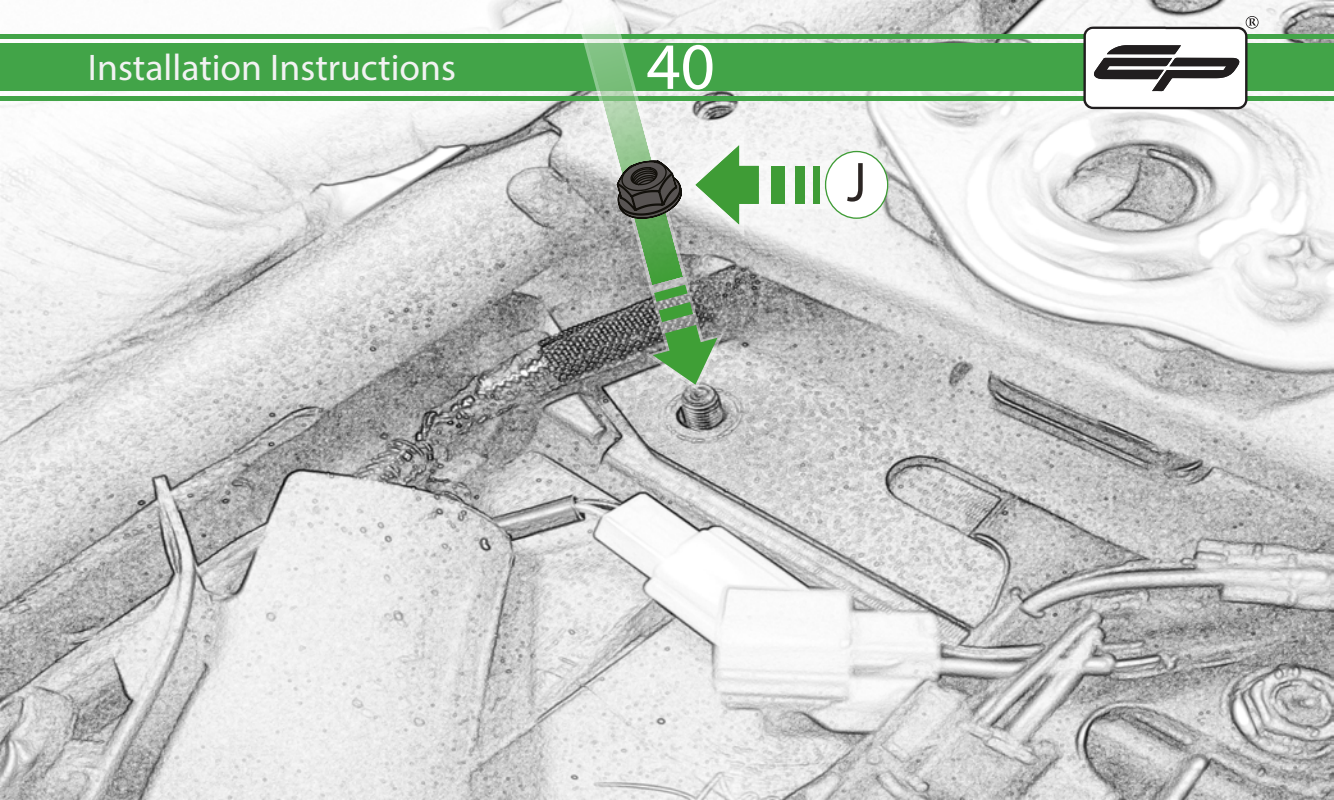


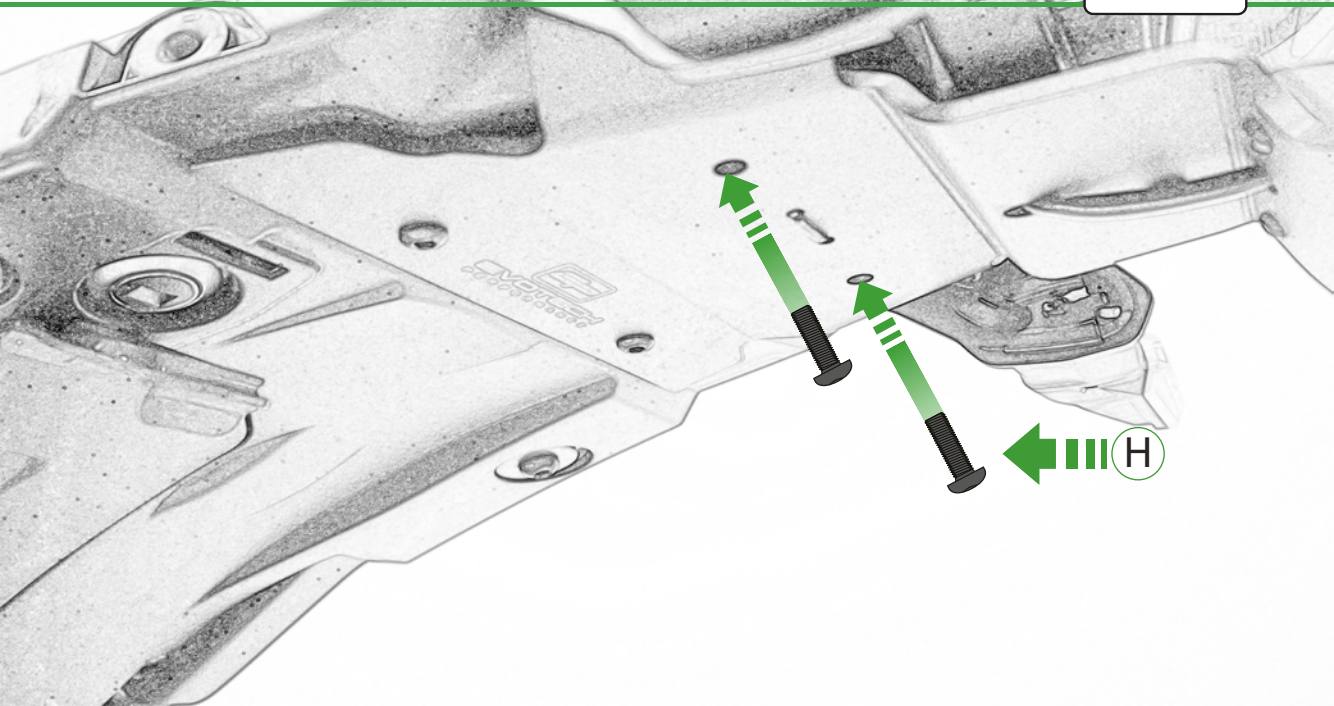


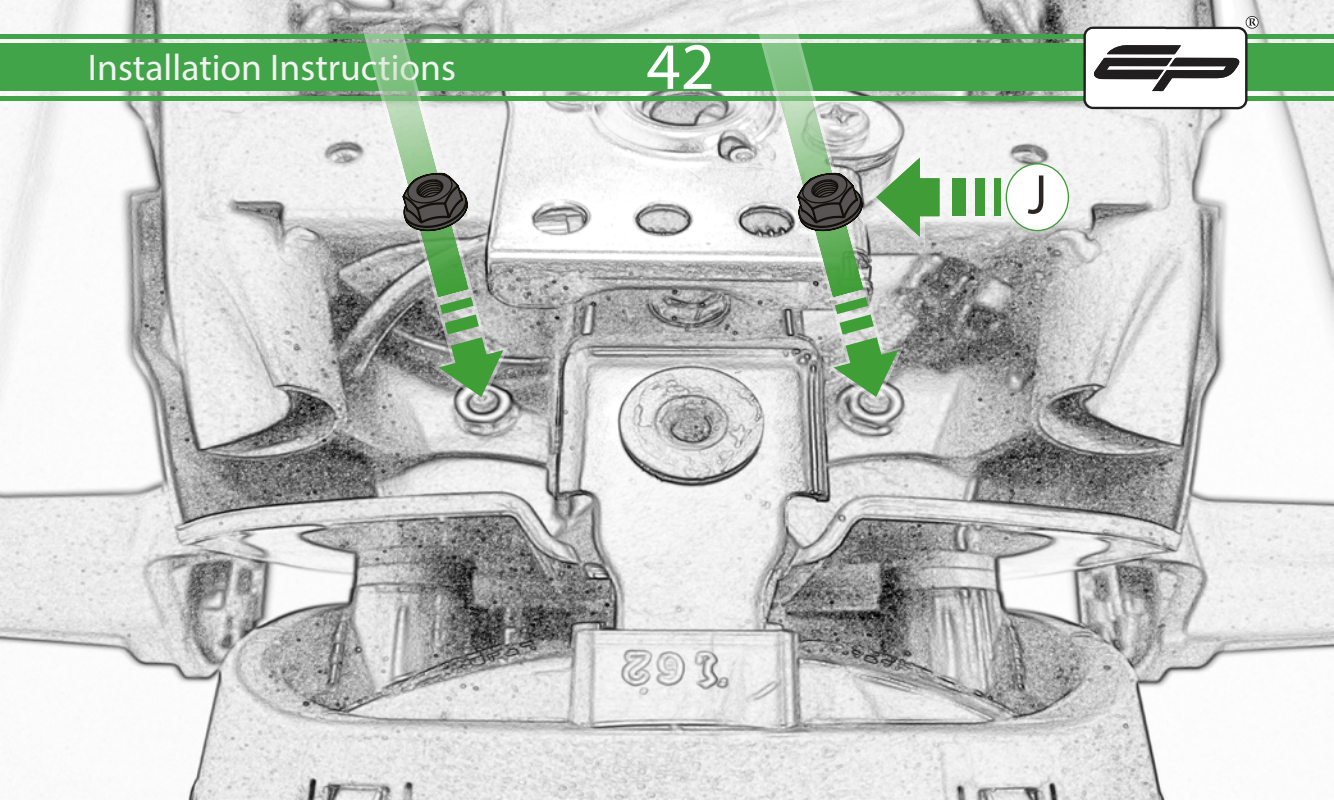

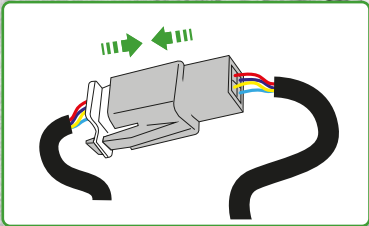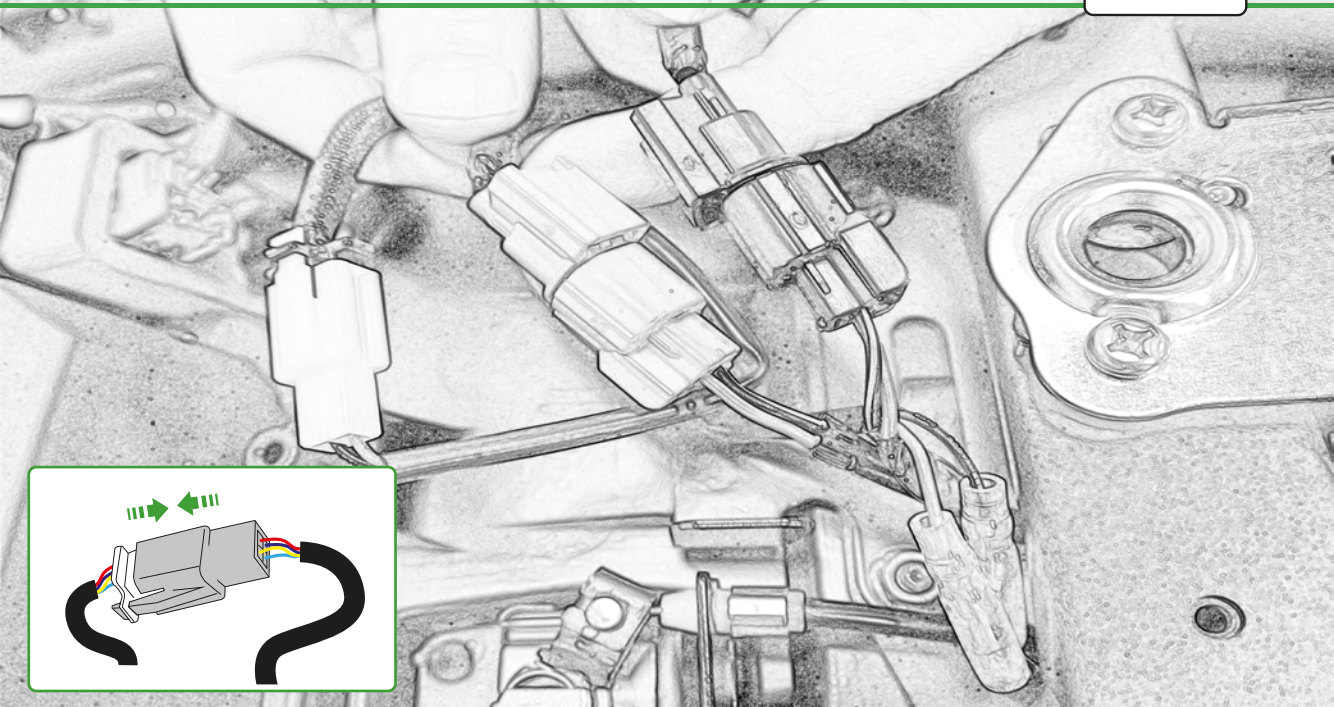

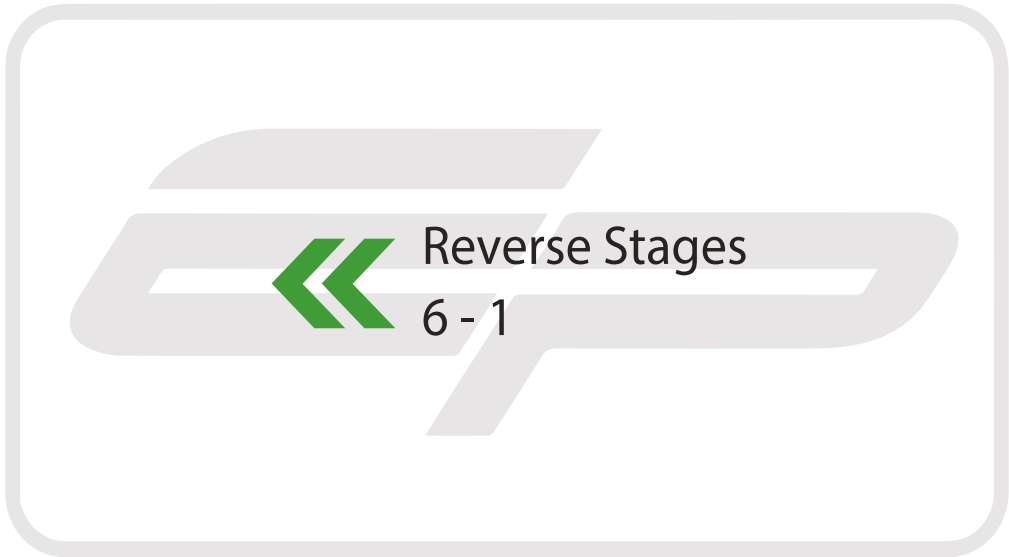

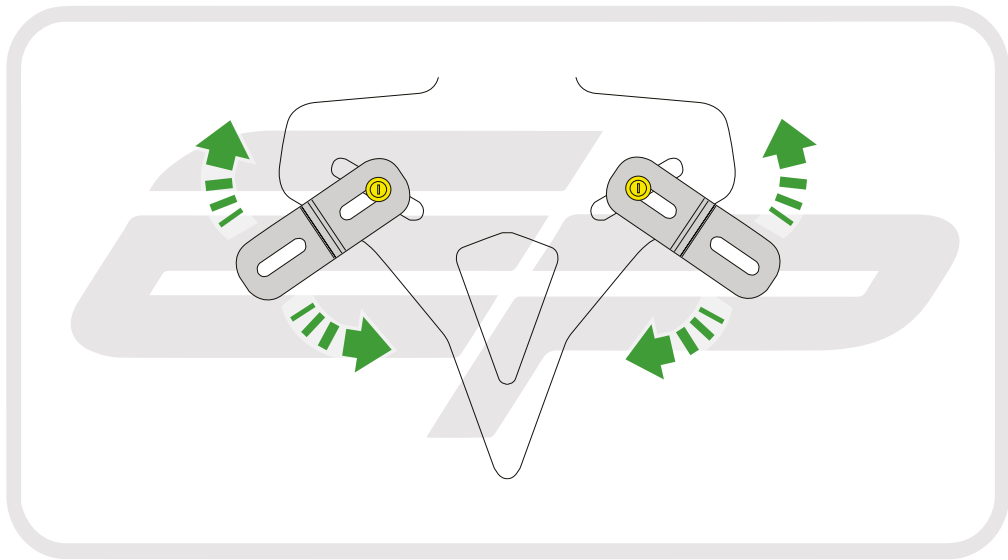

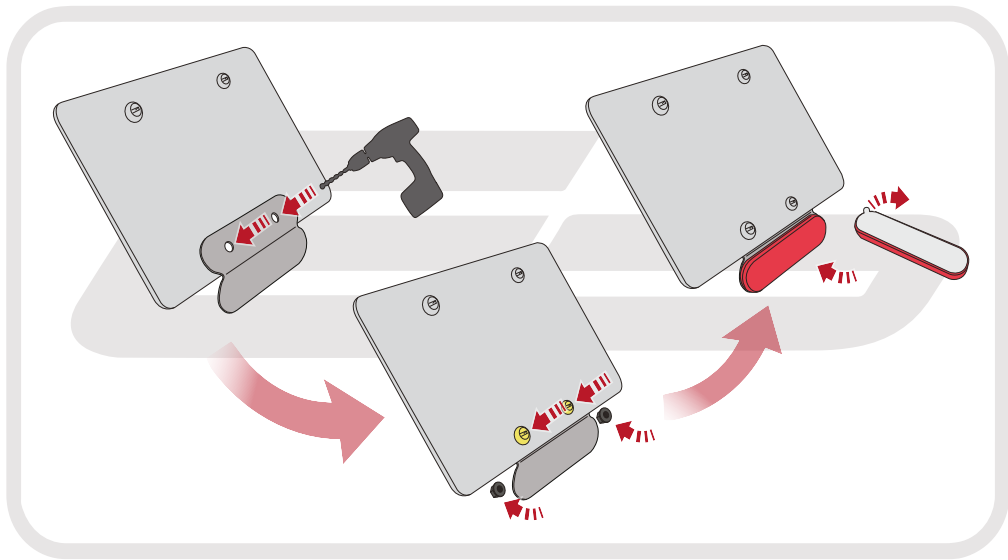



ESSENTIAL CHECKS

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.