



NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

KTM SUPER DUKE 1290/R

FRONT TURN SIGNALS

- 1 Remove T30 torx bolt from top of headlight (picture 1)
- 2 Remove (3) torx bolts behind headlight. Two top bolts are T25 torx and lower bolt is T20 torx. Then pop off plastic cover (picture 2)
- 3 Unplug (2) white turn signal connectors (picture 3)
- 4 Each signal has (1) T25 torx bolt that needs to be removed so take off stock signals (picture 4)
- 5 Take new blinker and unscrew top plate from lens (picture 5)
- 6 Bolt on top plate with supplied Philips head screw and acorn nut (picture 6)
- 7 Screw on lower plate/lens (picture 7)
- 8 Plug connectors into harness and test your connections before tidying up

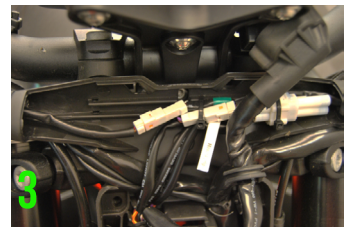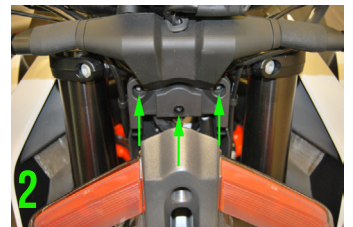

NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

FRONT TURN SIGNALS

- 9 Reinstall plastic shield
- 10 Reinstall bolt on headlight

