

FRONT FORK SPRING KIT

FOR KAWASAKI VN900 CLASSIC

⚠ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.



- 1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.

⚠ WARNING!

Make sure that the vehicle is securely supported so that it will not tip.

- 2 Remove the fork leg (rubber) caps. Press down the top cap while removing the circlip. Remove the top cap.


- 3 Remove the original spacer, washer and spring. *Note! You will **not** need the original spacer, washer or spring for the installation of the Öhlins front fork spring.*

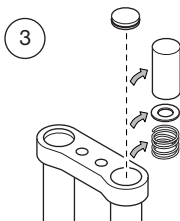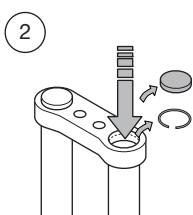

- 4 Check the oil level and the quality of the oil.

Recommended oil level: 160 mm

Note! Measure the oil level when no springs are installed with the front fork fully compressed.

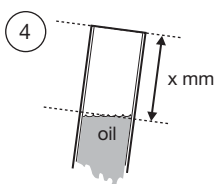

- 5 Install the Öhlins spring. There are two options regarding the spacer:

Standard ride height	
Fork leg cap	
Circlip	
Top cap	
Install Spacer	
Spring	

25mm lowered ride height	
Fork leg cap	
Circlip	
Top cap	
No spacer!	
Spring	

Spring kit 08858-01 20070921

Öhlins Racing AB, Box 722,
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00, Fax +46 8 590 025 80,
E-mail: info@ohlins.se, www.ohlins.com

Part no. 01200-05

