

Note!

Before installing this product, check the contents of the kit. If anything is missing, please check an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	TR 729	1
Sticker set "ÖHLINS"	10207-01	1
Tool preload adjuster	03199-03	1
Owners manual road & track	07241-02	1

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Triumph Bobber

TR 729

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

👁 Note!


Before mounting this product clean the vehicle thoroughly.

👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.



1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.

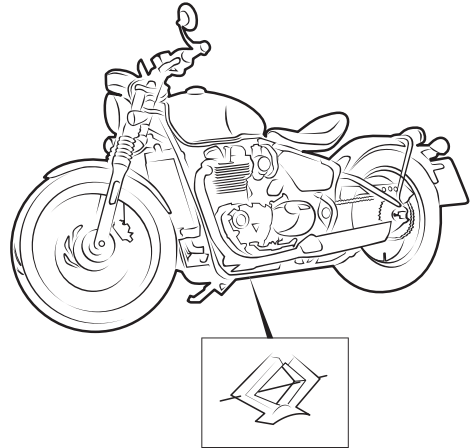

2



On LH&RH side : Loosening the screw (1) to remove the cover and remove the plastic cover by unlocking plastic clip lock (2).

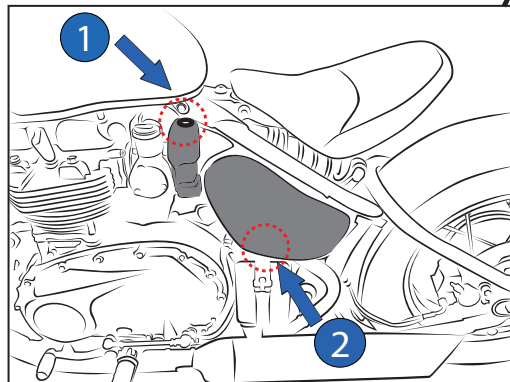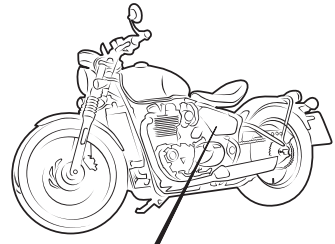

MOUNTING INSTRUCTIONS


3

On LH&RH side : Remove the plastic cover (1) by loosening 3 screws, for access to the shock absorber.

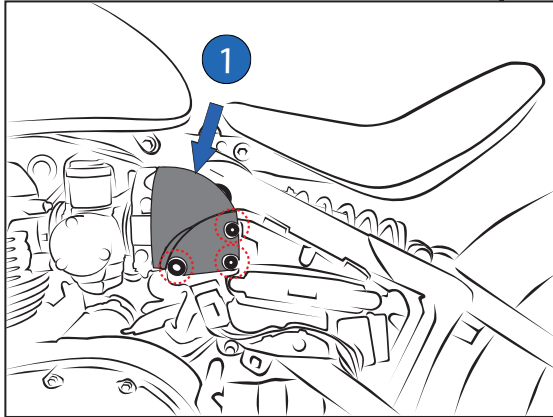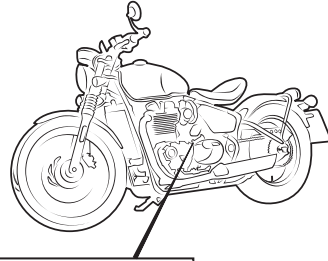

4

Uninstall the original shock absorber by loosening the upper and lower mounting bolts (1) (2).

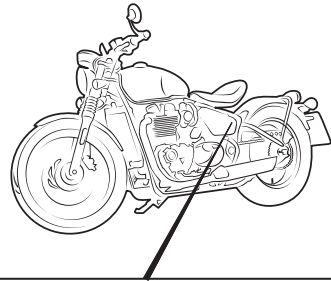

5

Install the Öhlins shock absorber, by using the original bolts.


Tighten at a torque value as specified in the service manual and reverse all procedures.

Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.

Caution!


Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

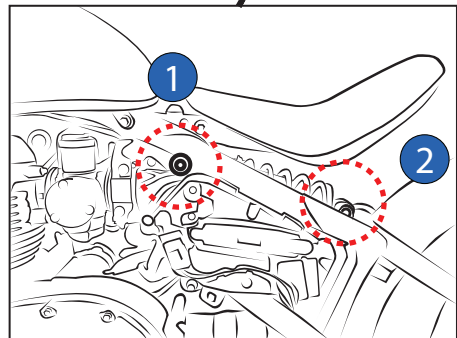

ADJUSTMENTS

Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

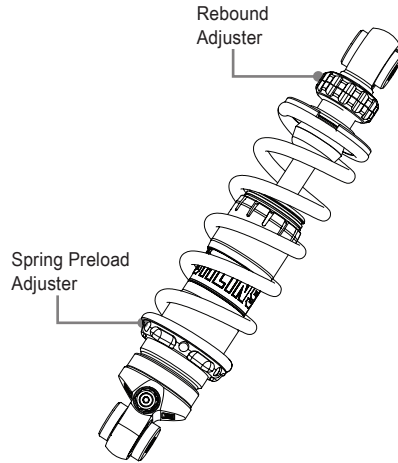

SET-UP DATA

Recommended set-up

Spring Preload..... 40 mm.
Rebound adjuster 18 Clicks

Shock absorber data


Length 270 mm.
Stroke 54 mm.

Spring

Part No 60282-11
Free spring length 200 mm.
Spring rate 36 N/mm
Preload adj.range [0-54] mm

Note!

Bump stop discoloration is a normal consequence of the material being exposed to UV light. This however does not affect in any way the material performances and durability, maintaining over time the best cushioning effect as it was designed

 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_TR 729_EN_1
Issued 2017-10-30

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com