



KAWASAKI VULCAN S 650




PR2572 FITMENT



PACKING LIST:

1X SET OF HEADER PIPES
2X CYLINDER PORT GASKETS
1X SILENCER CLAMP
1X SILENCER OF CHOICE AND STRAP
1X MOUNTING SPACER
1X 130MM CAP SCREW
2X M8 WASHERS
1X NYLOC NUT


- **Fitting Instructions**
- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove outer side panel**

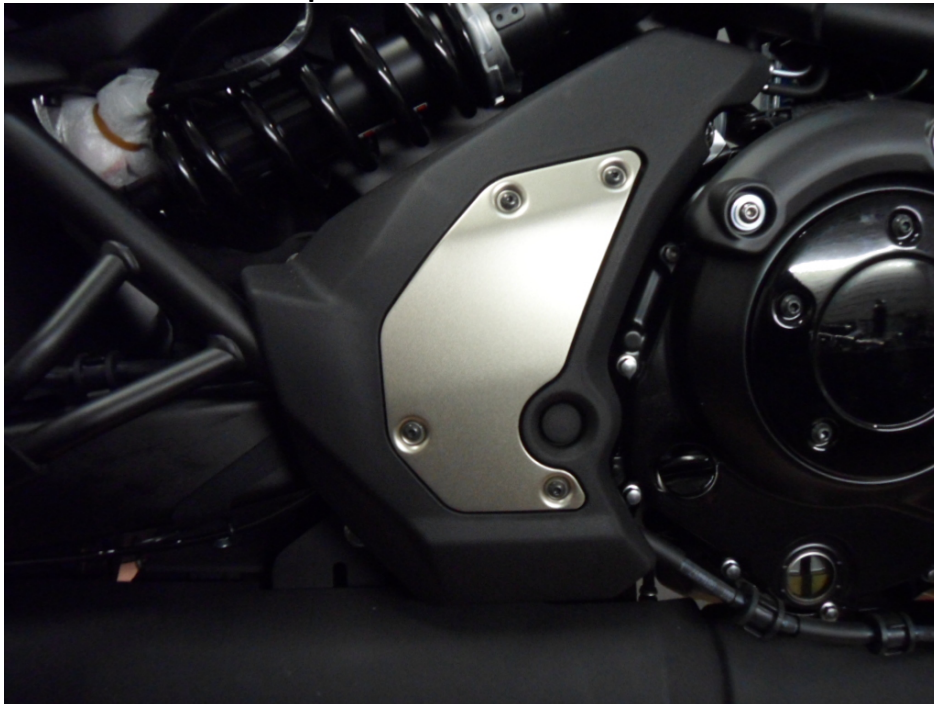

- **Remove inner side panel**



- **Disconnect sensor plug and remove standard exhaust.**

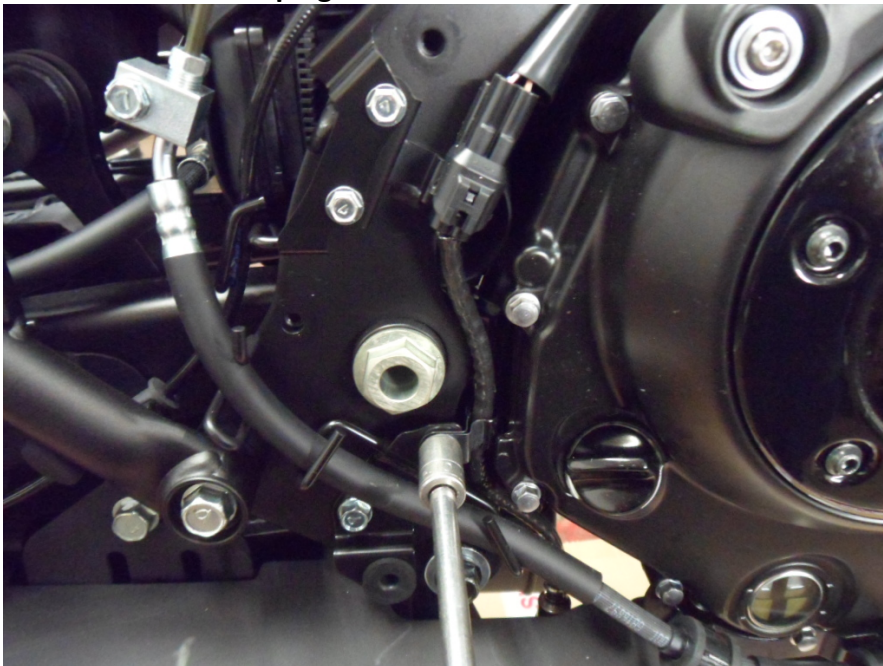

- **Clean cylinder ports of old gasket material, dirt and carbon deposits.**
- **Fit new port gaskets**

- **Fit the sensor to the collector**




- **Fit the header pipes**



- **Fit clamp to the silencer and insert on to the collector.**

- **Fit the strap around the silencer and to the frame using the spacer and bolt.**

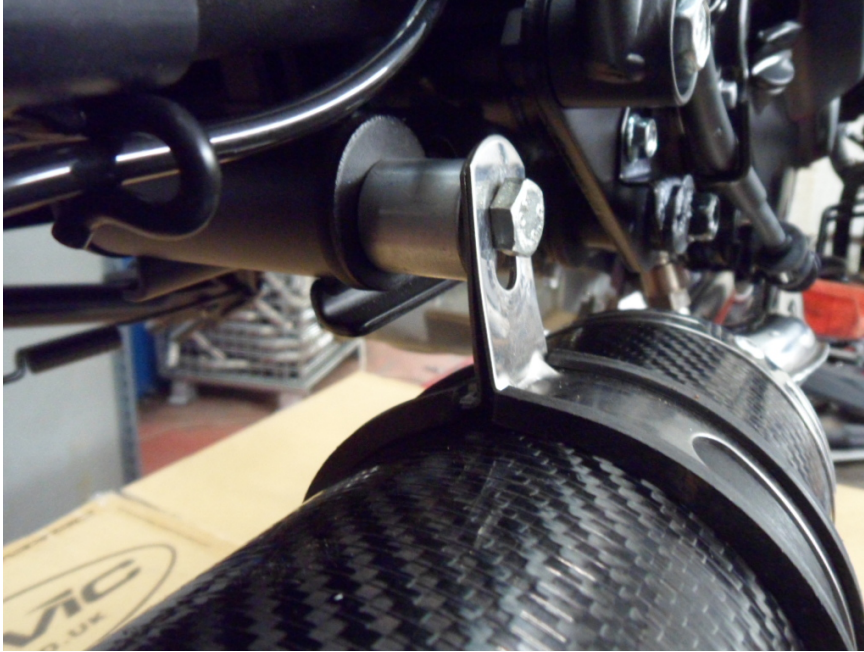

- **Starting from the front, working rearwards tighten all clamps and fasteners.**
- **Start the engine and check for leaks.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**