

Z1000




- PACKING LIST:
- 1X DOWN PIPE AND COLLECTOR SET
- 4X CYLINDER PORT GASKETS
- 1X SILENCER
- 1X SILENCER MOUNTING BRACKET
- 1X STAND STOP BRACKET
- 4X COLLECTOR SPRINGS
- 1X TUBE OF SILICON SEALANT

- IMAGES ARE FOR ILLUSTRATIVE PURPOSES ONLY.
- THE FITTING PROCEDURE IS THE SAME.
- Fitting Instructions
- We advise that this product is fitted by an experienced motorcycle mechanic.
- Please check packing list before you start.
- Secure motorcycle on level ground using a paddock stand. Recommended!
- Remove existing exhaust system.
- Clean the cylinder ports of old gasket material, dirt and carbon deposits.
- Insert new port gaskets, holding in place with a smear of silicon.
- Fit the outer 1 and 4 downpipes loosely and attach the collector.



• Fit the number 3 downpipe.

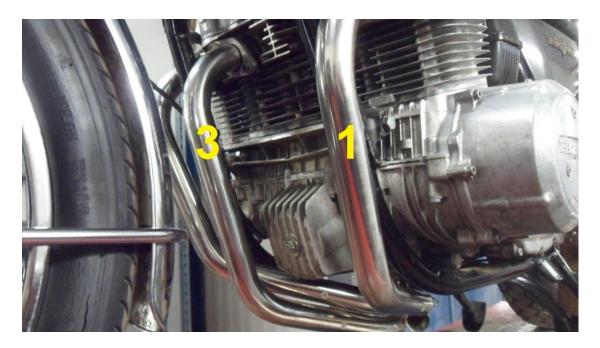

• Followed by the number 2 downpipe.



• Fit the brackets to the silencer.



• Attach the silencer to the collector and fit the bracket behind the frame.



- Starting from the front, working rearwards tighten all clamps and fasteners.
- Lastly, fit the collector springs.
- Start the engine and check for leaks.
- After your first ride out, check all fasteners for tightness, especially the baffle bolt.