



KAWASAKI Z650



- **PACKING LIST:**
- **1X DOWNPIPE SET**
- **1X LINK PIPE**
- **2X CLAMPS**
- **1X SILENCER AND STRAP WITH RUBBER INSERT**
- **2X CYLINDER PORT GASKETS**
- **1X CARBON GASKET**
- **1X M8x 40MM CAP SCREW**
- **1X M8 NYLOC NUT**
- **2X M8 WASHERS**
- **1X TUBE OF SILICON SEALANT**

- **Fitting Instructions**


- We advise that this product is fitted by an experienced motorcycle mechanic.
- Please check packing list before you start.
- Secure motorcycle on level ground using a paddock stand. Recommended!
- Remove existing exhaust.
- Fit the new cylinder port gaskets and the header pipes finger tight, checking clearances to the plastics.



- Fit the carbon gasket on to the collector.
- Fit the clamp and insert the pipe on to the collector.




- Fit the silencer with clamp on to the link pipe and fit the strap around the silencer and to the frame.

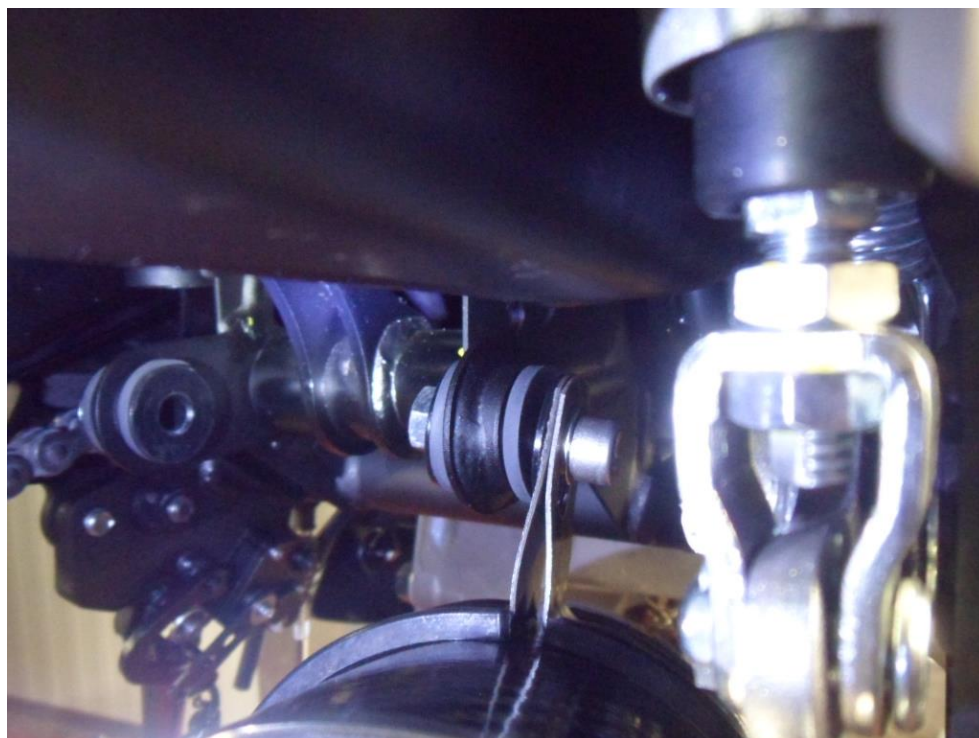

- **Fit the O2 sensor, (if required).**



- **Starting from the front, working rearwards tighten all clamps and fasteners, double checking clearances to the plastics.**

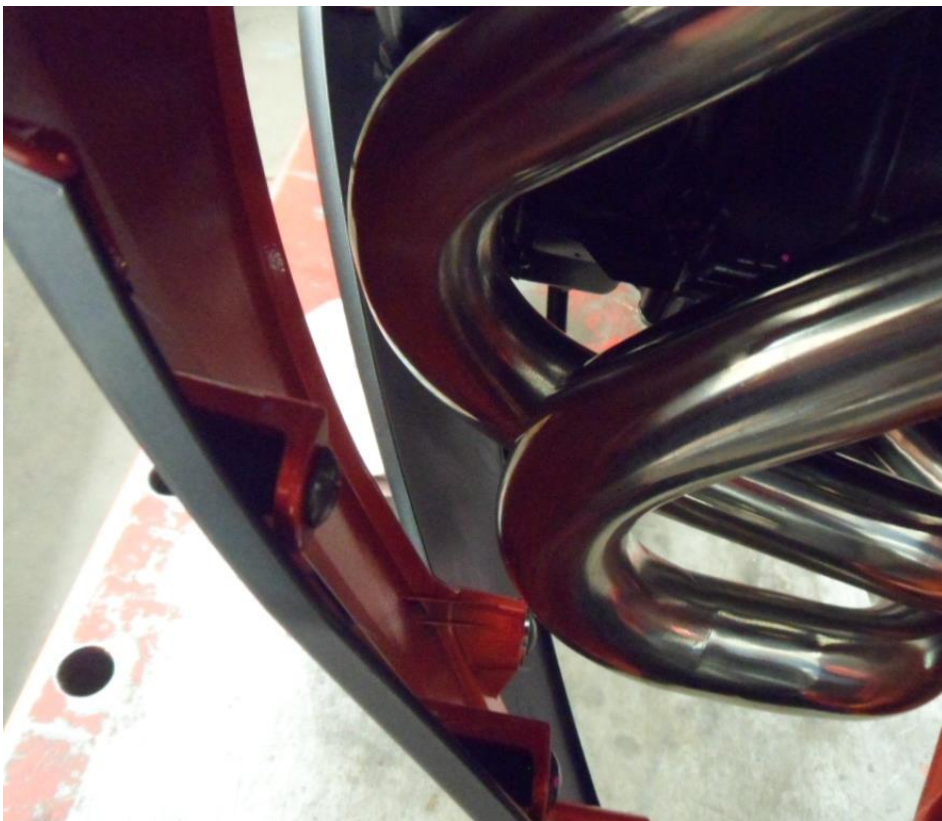

- **Start the engine and check for leaks.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**