



Z900 2017



- **PACKING LIST:**
- **1X DOWN PIPE SET**
- **4X CYLINDER PORT GASKETS**
- **4X COLLECTOR SPRINGS**
- **3X CLAMPS**
- **1X SILENCER AND STRAP WITH RUBBER INSERT**
- **1X MOUNTING BRACKET**
- **2X SOLID MOUNT SPACERS**
- **MOUNTING HARDWARE**
- **1X TUBE OF SILICON SEALANT**

- **Fitting Instructions**
- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove existing exhaust.**
- **Clean cylinder head ports of old gasket material, dirt and carbon deposits.**
- **Fit new cylinder port gaskets and the header pipes 1 and 4 finger tight.**



- **Attach the collector.**
- **Fit the lambda sensor (if used).**



- Fit header pipes 2 and 3 finger tight.




- Fit the clamp and insert the link pipe on to the collector attaching to the frame.




- Remove the OEM rubber bushes.



- And replace with solid mount spacers.

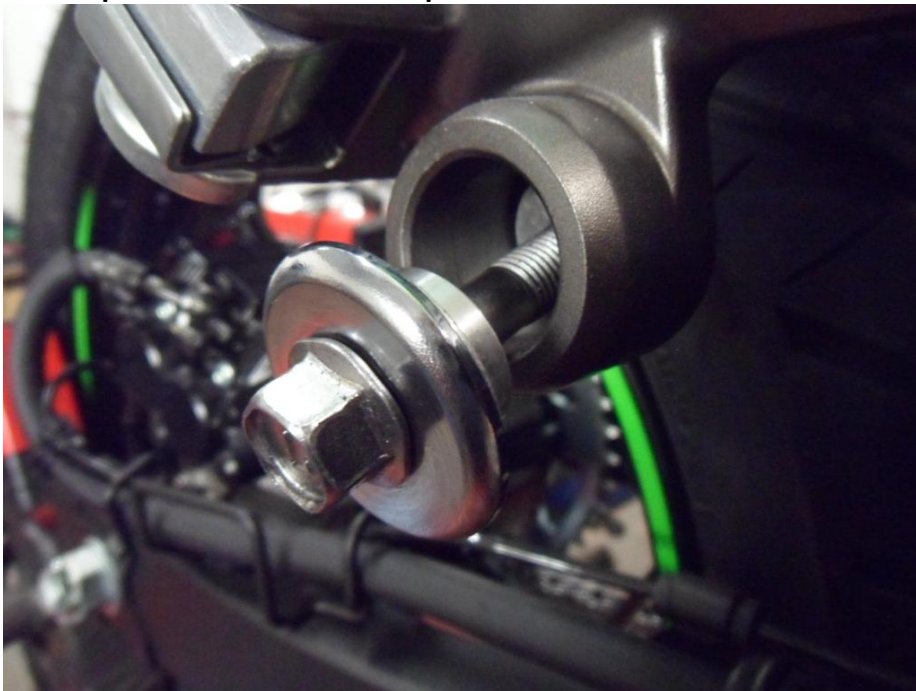

- **Fit the silencer with clamp on to the link pipe and fit the strap around the silencer and to the bracket.**

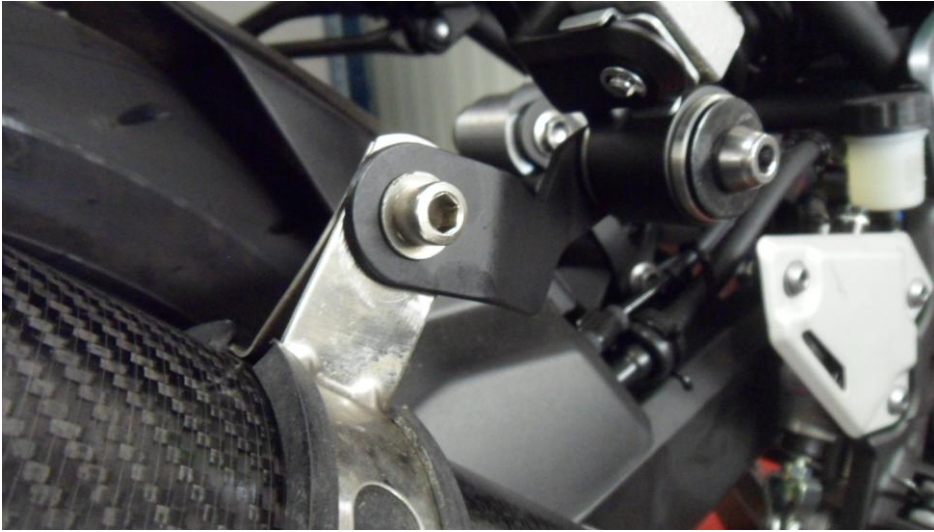

- **Starting from the front, working rearwards tighten all clamps and fasteners.**
- **Start the engine and check for leaks.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**