




**FITTING INSTRUCTIONS FOR CG0002 INFILL CHAIN GUARD**  
**KTM 1190 ADVENTURE 2013**



**THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.**  
**DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.**

**Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike**

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

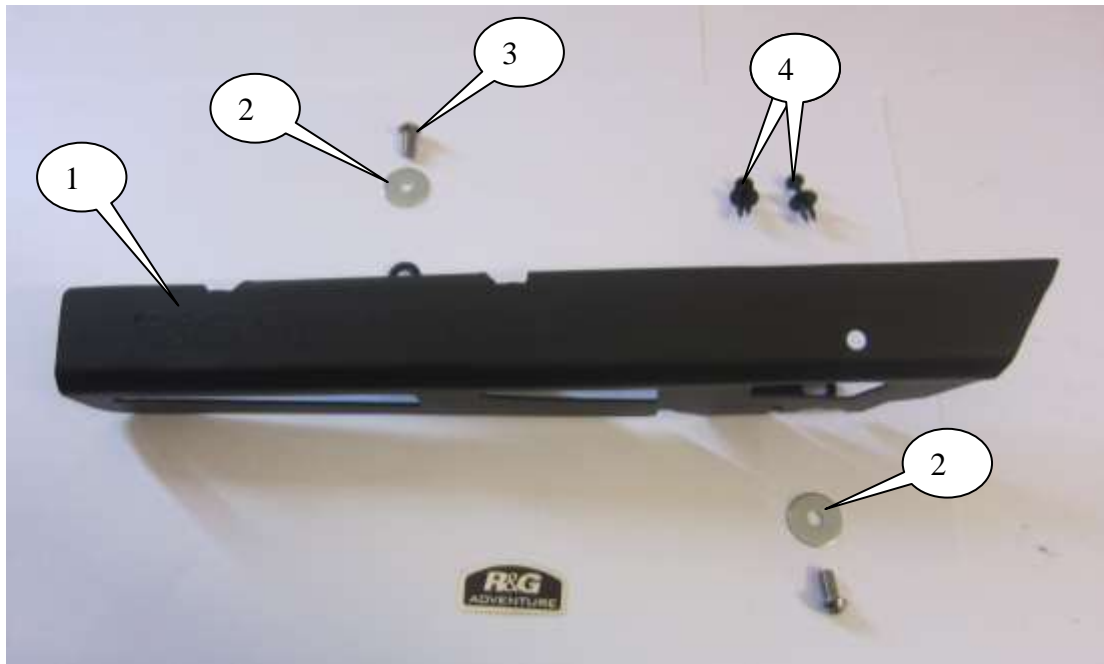

**TOOLS REQUIRED**

- Set of allen key's.
- Socket set to include 8mm A/F socket.



## **LEGEND**

ITEM 1 = ALUMINIUM INFILL CHAIN GUARD (SMW0025) (x1).

ITEM 2 = M6 LARGE DIA WASHERS (x2).

ITEM 3 = M5x16mm LONG BUTTON HEAD BOLTS (x2).

ITEM 4 = PLASTIC SCRIVETS (x2).

ITEM 5 = STICK ON LABEL (x1).



Picture 1



Picture 2

## **FITTING INSTRUCTIONS**

### **Left-hand side (as you sit on bike)**

- Remove the original bolts arrowed in pictures 1 and 2.
- Place the infill chain guard into position as shown in the top picture.
- Place the washers from kit between the original mounts and the new infill chain guard and secure using the new button head bolts.
- Use one of the plastic rivets to fill the access hole.
- If not already fitted, fit the label.
- Please ensure the chain will not hit the chain guard in operation.

ISSUE 1 27/06/2013 (NSY)

### **CONSUMER NOTICE**

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

### **R&G RACING RETURNS POLICY (NON-FAULTY GOODS)**

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)




## INSTRUCTIONS DE MONTAGE POUR CG0002 PROTECTION CHAINE



Le kit contient les articles exposés ci-dessous, vérifier que toutes les pièces soient présentes avant de procéder au montage.

La façon dont le kit est emballé ne correspond pas forcément à la façon de monter les pièces sur la moto.

Les pièces présentées peuvent n'être que représentatives, afin de faciliter et clarifier les instructions de montage.

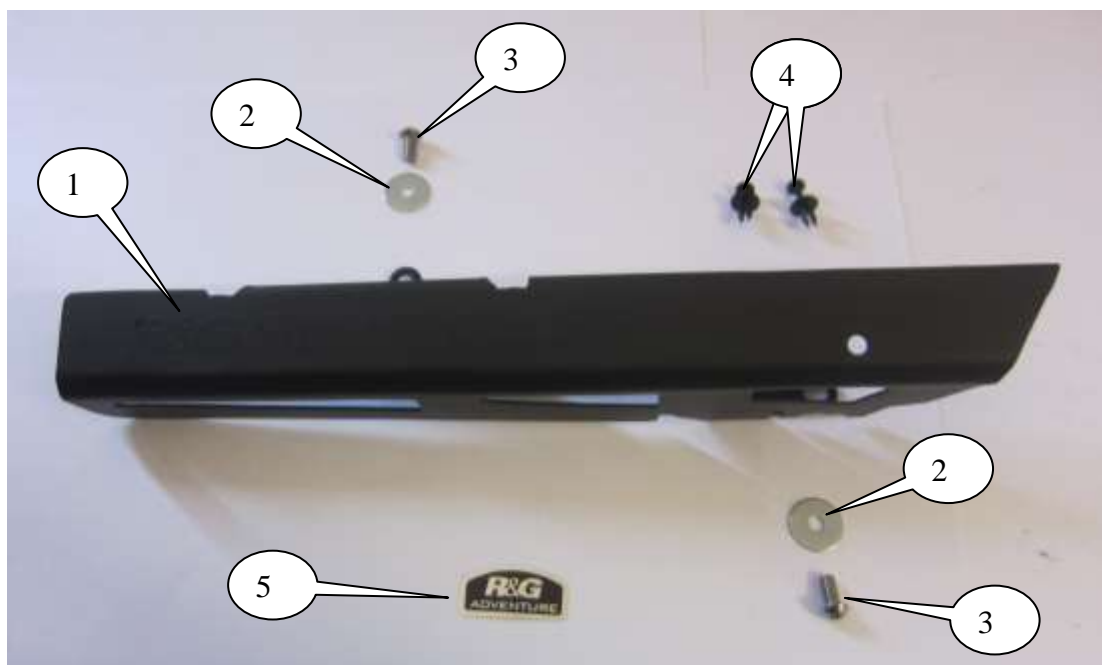

### OUTILS REQUIS

- Jeu de clés Allen
- Jeu de clés 8mm.



## **LEGENDE**

ARTICLE 1 = PROTECTION CHAINE EN ALUMINIUM (SMW0025) (x1).

ARTICLE 2 = M6 RONDELLES (x2).

ARTICLE 3 = M5x16mm BOULONS (x2).

ARTICLE 4 = RIVETS PLASTIC (x2).

ARTICLE 5 = ETIQUETTE (x1).



Photo 1



Photo 2

## **INSTRUCTIONS DE MONTAGE**

### **Coté gauche assis sur la moto :**

- Enlever les boulons d'origine indiqués sur la photo 1 et 2.
- Placer la protection chaine en position comme indiqué sur la photo du haut.
- Placer les rondelles du kit entre les supports d'origine et la nouvelle protection chaine puis fixer en utilisant les boulons.
- Utiliser un des rivets plastic pour boucher les trous visibles.
- Si cela n'a pas déjà été fait, collez l'étiquette.
- Assurez vous que la protection ne rentrera pas en contact avec la chaine lorsque la moto sera en cours d'usage.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)