

HOW TO FIT YOUR TIPPERARY HELMET

WHAT YOU NEED

- A soft fabric measuring tape with inches or centimeters.
Don't have one? You can download and [make your own here](#).
All you need is some scissors and clear tape.

HOW TO MEASURE

Place the tape measure snugly around your head at the widest point which is about 1" or 2.5 cm above your eyebrows. Make sure the tape goes over the bump at the back of your head and that it is just above the top of your ears.

Take that measurement and refer to the size chart for the helmet of your choice:



SPORTAGE			
SIZE	HEAD CIRCUMFERENCE		HAT SIZE
	IN	CM	
XS	19 ¹ / ₂ - 19 ⁷ / ₈	50 - 51	6 ¹ / ₄ - 6 ³ / ₈
S	20 ¹ / ₄ - 20 ³ / ₄	52 - 53	6 ¹ / ₂ - 6 ⁵ / ₈
M	21 ¹ / ₈ - 21 ¹ / ₂	54 - 55	6 ³ / ₄ - 6 ⁷ / ₈
L	21 ⁷ / ₈ - 22 ¹ / ₄	56 - 57	7 - 7 ¹ / ₈
XL	22 ⁵ / ₈ - 23 ⁷ / ₈	58 - 61	7 ¹ / ₄ - 7 ⁵ / ₈

SPORTAGE HYBRID			
SIZE	HEAD CIRCUMFERENCE		HAT SIZE
	IN	CM	
XS	19 ¹ / ₂ - 19 ⁷ / ₈	50 - 51	6 ¹ / ₄ - 6 ³ / ₈
S	20 ¹ / ₄ - 20 ³ / ₄	52 - 53	6 ¹ / ₂ - 6 ⁵ / ₈
M	21 ¹ / ₈ - 21 ¹ / ₂	54 - 55	6 ³ / ₄ - 6 ⁷ / ₈
L	21 ⁷ / ₈ - 22 ¹ / ₄	56 - 57	7 - 7 ¹ / ₈
XL	22 ⁵ / ₈ - 23 ⁷ / ₈	58 - 61	7 ¹ / ₄ - 7 ⁵ / ₈

SPORTAGE TODDLER			
SIZE	HEAD CIRCUMFERENCE		HAT SIZE
	IN	CM	
XXS	18 - 19 ¹ / ₂	46 - 50	5 ⁷ / ₈ - 6 ¹ / ₄



HOW TO FIT YOUR TIPPERARY HELMET




OVERALL FIT

A correct fit is one that is snug and comfortable, but not loose. With a proper fit there will not be any excessive up and down rocking movements. If the fit is too tight, it will not be comfortable.



CHECK THE BRIM


The brim should not be more than two finger's width above your eyebrows. If it is any lower it may block your vision.

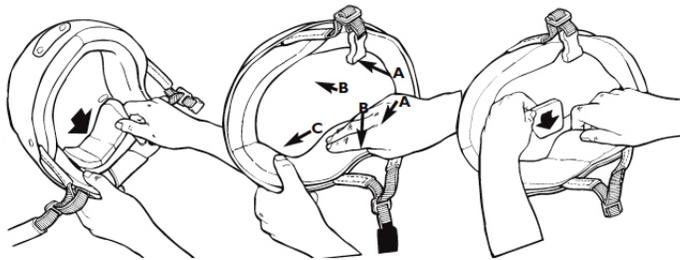

SIZING PADS

When you first put on your helmet make sure the thicker rear pad is in place at the back of the helmet. Check the fit. If it is too snug, remove the thicker rear pad and replace with the thinner rear pad. Check the fit. If additional padding is required to snug the fit, use the padding supplied. You may need to cut this additional padding to help the helmet fit correctly. For the Sportage and Sportage Toddler, insert the padding under the rim liner. For the Sportage Hybrid, remove the liner and insert the padding.

The helmet should stay in place without doing up the harness.

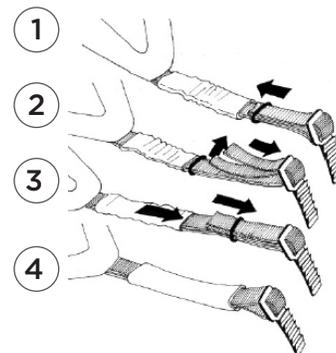

CHIN STRAP

The harness must be comfortable around your ears. Lengthen or shorten the strap by sliding the adjusting buckle. The chin strap should fit snugly. It needs to be tight enough to hold your helmet in place but not so tight that it is uncomfortable or you feel like you cannot swallow.

To tighten or loosen the chin strap:

- Remove the chin strap cover
- Slide the o-rings from the straps
- Loosen the chin straps through the buckle and adjust the length
- Try on the helmet and do up the buckle. Keep adjusting until you have the right fit
- Place the o-rings back over the web straps
- Replace the chin strap cover.



TIPPERARY
EQUESTRIAN